


INSTRUCTION MANUAL

MNBX6

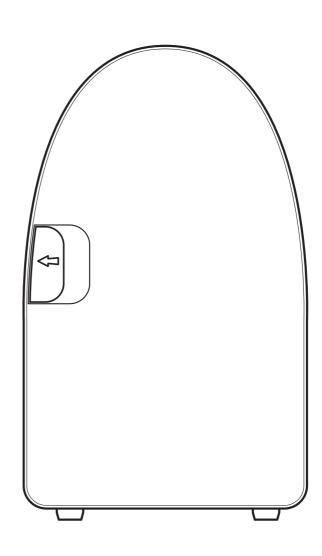

Safety information

Important - Please read these instructions fully before installing or operating

Power source

- The appliance can be connected to a 220-240 volt 50/60Hz AC supply by means
 of a three pin socket (mains adaptor sold separately).
- When using the 12V in-car adaptor the compact fridge should not be left connected for long periods of time when the engine is not running.
- DO NOT connect directly to a 24V lighter socket of a heavy duty vehicle.
- Unplug this apparatus during lightning storms or when unused for long periods of time to prevent damage to this product.



 Opening or removing covers may expose you to dangerous voltages or other hazards



- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use suitable power sources Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- In order to disconnect the apparatus from the mains completely switch off the outlet and remove the mains plug completely.



- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- When installed, the power socket must be within easy reach.

Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, wash-bowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, outdoors, or anywhere else that water or moisture is present.



Safety information

Important - Please read these instructions fully before installing or operating

Heat sources and flames



 To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Ventilation and location

 Avoid using locations where dust or other airborne contamination may be drawn into the fan.



- Allow at least 10cm distance from the back and sides of the compact fridge to allow the withdrawn heat to disperse.
- Never leave the fridge running in poorly ventilated areas e.g. a car boot.

Servicing and repairs

- · Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid
 has been spilled or objects have fallen into the apparatus; the apparatus has been
 exposed to rain or moisture, does not operate normally, or has been dropped

General

- This item cools to 15-20°C below room temperature. If left in a cool room this may freeze
 contents.
- DO NOT use your compact fridge to store medication or anything that must be stored at a constant temperature.
- Allow 30 minutes for the compact fridge to return to room temperature before attempting to switch from heating to cooling mode, or visa versa.
- Do not sit on the fridge.


Introduction

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

Accessories

- 1. 6L compact fridge
- 2. In-car mains adaptor

Features

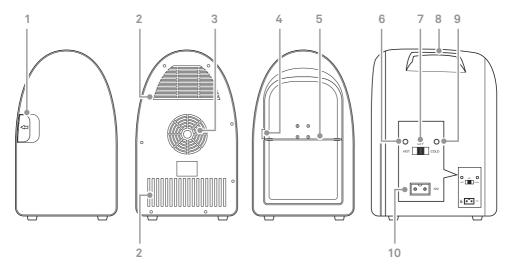

- 1. Door handle
- 2. Air vent
- 3. Fan
- 4. Door catch
- 5. Internal shelf


- 6. HOT LED indicator (RED)
- 7. MODE switch
- 8. Carry handle
- 9. COLD LED indicator (GREEN)
- 10. POWER DC socket

Operating instructions

Connecting the power (in-car only)

Set the MODE switch (7) to the OFF position before connecting to the car power supply.

1. Insert the smaller end of the power cable into the POWER DC input (10) on the rear of the fridge.

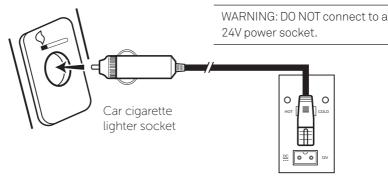

2. Secure the fridge in place and insert the larger end of the power cable into the cigarette lighter socket of the vehicle.

WARNING: You risk running the car battery flat if you leave the fridge connected for a long period of time.

NOTE: The mains AC adaptor is available separately.

Operating the fridge

- Switch to COLD mode (cooling begins and the green LED illuminates). Switch to HOT mode (the warming function begins and the red LED illuminates).
- **2.** When the switch is set to OFF neither function is active (no LED is illuminated).





Product support

Cooling tips

- To achieve the quickest cooling operation, fill the fridge with beverages which have already been refrigerated. They will then stay cool and become even cooler providing the fridge remains switched on.
- The temperature at which the fridge operates depends on the surrounding ambient temperature. Cooling will be more efficient in a colder environment.

Warming tips

- The box is designed and used for the purpose of keeping warm items warm. And not for warming up items.
- Hot items stays hot for a number of hours after the fridge has been switched off, providing the door is closed properly.

Care and maintenance

- Ensure you disconnect the plug fully before performing regular maintenance.
- Use a vacuum cleaner or brush to clean the fan monthly.
- Clean the case with a wet cloth and neutral cleanser.
- Ensure the inside is fully dry before storing when not in use.

Please note:

- Cool air from inside the compact fridge draws moisture out of nearby warmer air, which
 condenses on the inner surface. Wipe away any moisture build up with a soft cloth and
 avoid opening the fridge door regularly to reduce excessive condensation build-up.
- If the mini fridge is powered off after an extended period then condensation may collect underneath the unit. This is normal, so steps should be taken to protect the surface the mini fridge is placed on.




Product support

Technical specification

Specification	Rating
Dimensions	H37.5. W22. D29cm
Volume	6L
Net weight	2.7KG (Fridge only)
DC voltage	12V DC === 4A
Power consumption	COOL: 60W MAX HEAT: 45W MAX
Heating capability	55°C - 65°C @ 25°C ambient temp
Cooling capability	15°C - 20°C @ below ambient temp @ 25°C

Disposal

- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

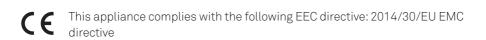

Product support

Troubleshooting

 $\ensuremath{\mathsf{NOTE}}. \ensuremath{\mathsf{The}}$ fan will periodically stop when the fridge is in WARM mode. This is normal operation.

Problem	Solution
The fridge is not functioning and the fan is not spinning.	Check the power cable is connected correctly and the MODE switch is set to either HOT or COLD
	The in-car adaptor (cigarette lighter end) may have debris preventing the contact. If necessary clean with a non metal brush and solvent.
	The mains power socket is not switched on (mains adaptor sold separately).
	There may be debris preventing the fan from spinning. Use a vacuum to remove the dust/debris.
	Check the mains socket with another device. You may have a faulty socket.
The fridge is making a whirring noise	This is normal when the fridge is cooling down.

Product support

The compact fridge is not cooling sufficiently.	Check the MODE switch is set to COLD (the green LED is illuminated).
	Check the fan is free of dust and is spinning freely. (NOTE: cooling is effected by the external ambient temperature.
	Allow 30 minutes for the compact fridge to return to room temperature before attempting to switch from heating to cooling mode, or visa versa.
	Allow at least 10cm distance from the back and sides of the compact fridge to allow the withdrawn heat to disperse.
	To achieve the quickest cooling operation, fill the fridge with beverages which have already been refrigerated. They will then stay cool and become even cooler providing the fridge remains switched on.
	The temperature at which the fridge operates depends on the surrounding ambient temperature. Cooling will be more efficient in a colder environment.
The compact fridge is not warming sufficiently	Check the MODE switch is set to HOT (the red LED is illuminated).

Product support

Help and assistance

If you require any technical guidance or find that your compact fridge is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.argos-support.co.uk**

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	MNBX6	You can find these on the rating plate - a small information
Serial number		panel (usually a sticke or metal plate) on the rear of your product.
Date of purchase		This will be shown on your receipt
		'

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.



Product support



Your Argos Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Alba disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.



Contact:

www.argos-support.co.uk Helpline: 0345 600 3021 Rev 1.2