



Instruction manual

Model: SR210-12



You'll soon be enjoying your new Soundbar.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Soundbar. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Contents

1. Safety information

Power source	8
Moisture and water	8
Heat sources and flames	9
Ventilation	9
Care and cleaning	9

2. Getting to know your Soundbar

Accessories	12
Soundbar	13
Remote control	14
Inserting batteries	15
Positioning the Soundbar	15
Making the Soundbar connections	16

3. Using your Soundbar

Power on	20
Standby mode	20
Change the mode (Audio source)	20
Adjusting the volume	21
Bass or Treble enhancement	21
Pairing with a Bluetooth device	21
Controlling a paired device	22
USB mode	22
Line in mode	23
Aux in mode	23
Optical mode	24

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on **0345 600 3021**.

Contents

HDMI ARC Mode	24
Wall mounting your Soundbar	25
4. Other information	
Technical specification	30
5. Product support	
Troubleshooting	34
Help and assistance	35
Disposal	36

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 
This page is left intentionally blank

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on 0345 600 3021.

BUSH

Safety information

1

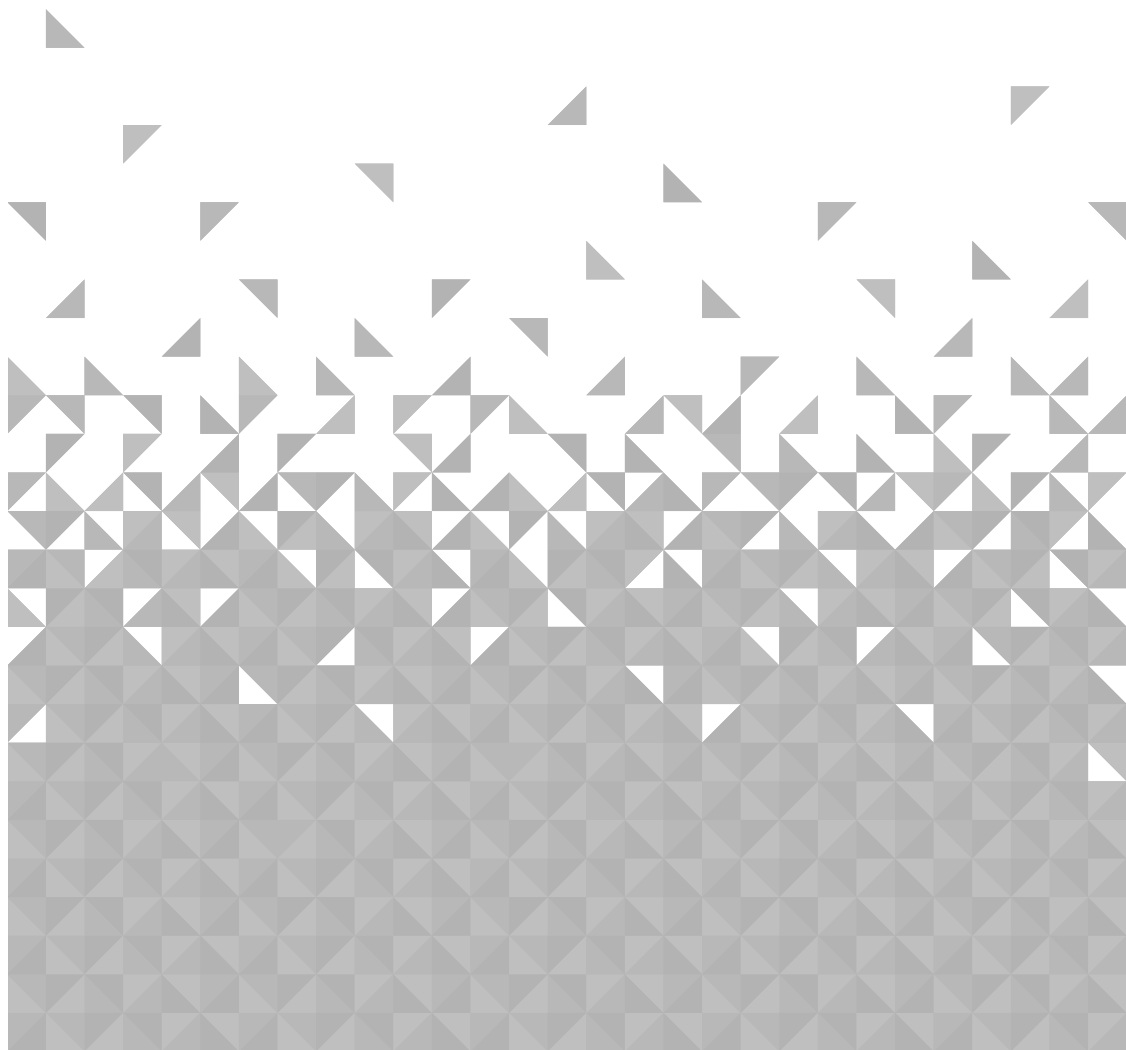



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your soundbar from the mains power supply during thunderstorms.
- Always check that you have completely switched off your soundbar, before you change or disconnect the power supply.
- When installed, the power socket must be within easy reach.
- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the product may damage it and will void your warranty.
- Switch the soundbar off at the mains power socket and unplug it if you are leaving it unattended for a long period of time (holidays etc).
- Remove the batteries from the remote control if it will not be used for an extended period of time.
- Only use recommended batteries or those of the same or equivalent type in the remote control.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.

Moisture and water

- Do not use this product near water or moisture.
- Do not use this product near a bath or sink, near a swimming pool or anywhere else that water or moisture is present.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Heat sources and flames

- Do not leave this product in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.

Ventilation

- Do not install this product in a confined space.
- Allow adequate ventilation to prevent heat build-up.
- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- For indoor use only.

Care and cleaning

- All care and cleaning operations should be carried out with the Soundbar unplugged from the mains power.
- Occasionally wipe the cabinet with a lint free cloth.
- Never clean the unit with liquids or solvents.

 


This page is left intentionally blank



Getting to know your Soundbar

2

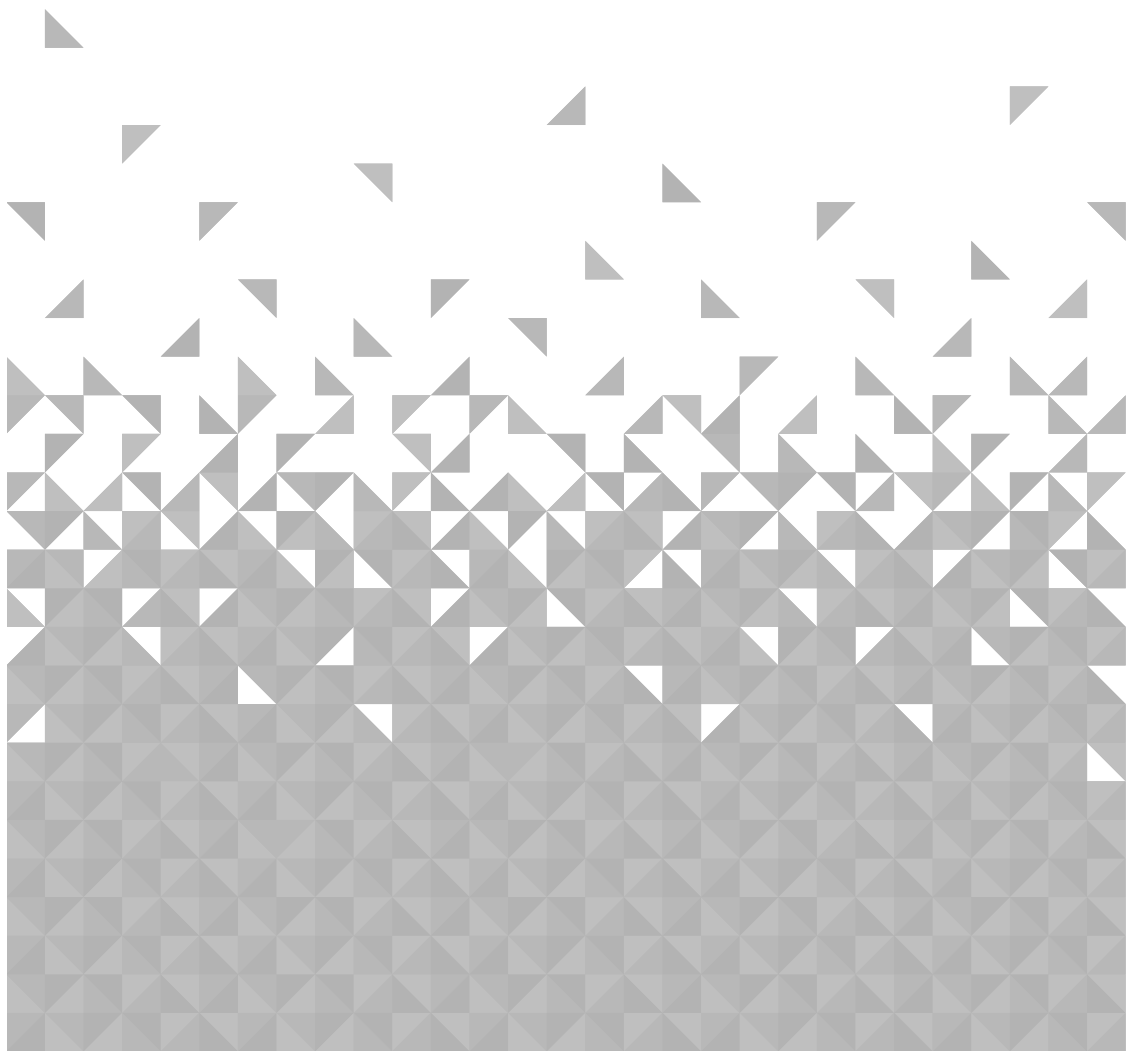

Getting to know your Soundbar

You'll be up and running in no time

 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories


Remote control (requires 2 x AAA batteries included)

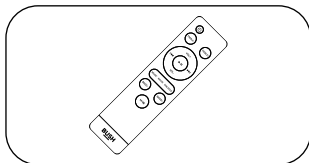


Mains power adapter

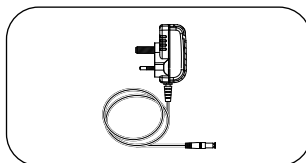 

 3.5mm to RCA cable

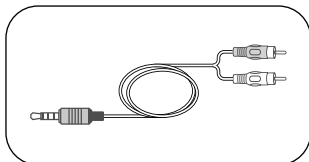

Rawl plugs and screws

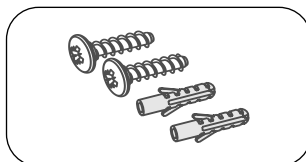 


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Soundbar

You'll be up and running in no time

 Soundbar

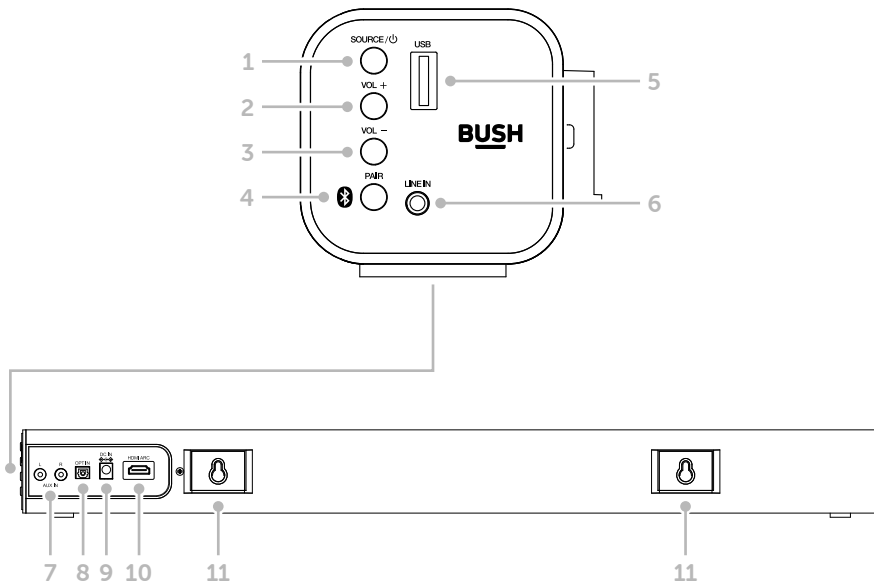


- | | |
|---|-------------------------------|
| 1. Power on/Audio source (Bluetooth/USB/Line in/Aux-in/Optical/HDMI ARC)) | 6. LINE IN socket |
| 2. Volume + | 7. RCA inputs |
| 3. Volume - | 8. Optical input |
| 4. Bluetooth Pair/Disconnect | 9. Power input socket (DC in) |
| 5. USB socket | 10. HDMI ARC connection |
| | 11. Wall mounting brackets |

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on 0345 600 3021.

Getting to know your Soundbar

You'll be up and running in no time

 Remote control

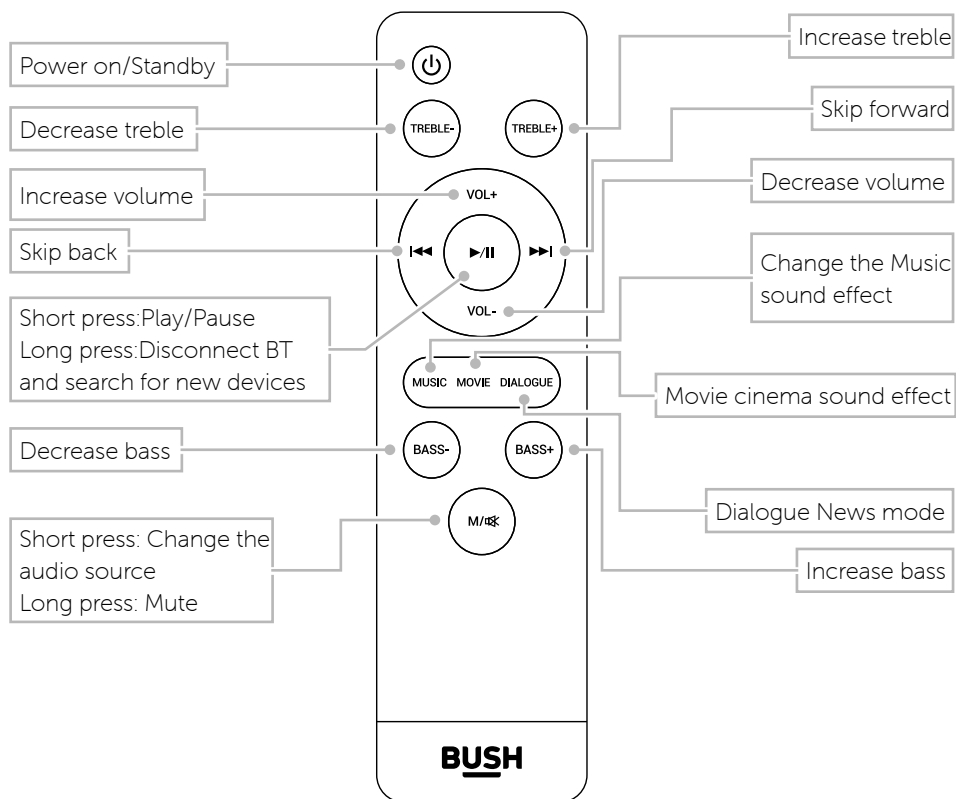


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Soundbar

You'll be up and running in no time

Inserting batteries

1. On the back of the remote control, press in the tab on the battery compartment cover to remove it.
2. Insert the 2 x AAA batteries supplied, making sure to note the '+' and '-' markings and position the batteries the correct way around.
3. Replace the battery cover, making sure that it 'clicks' shut.

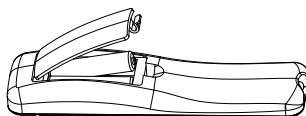

Positioning the Soundbar

It's important that you consider carefully in advance where your Soundbar will be situated and make sure that it is:

- on a flat and stable surface or securely wall mounted
- within 1.4 metres of a power socket. Please ensure that the mains power lead is not a trip hazard.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. TV/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less)) in line of sight.
- never place your Soundbar directly onto antique or polished surfaces.

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on 0345 600 3021.

 
Getting to know your Soundbar

You'll be up and running in no time

Making the Soundbar connections

Note: Please **do not** switch on the mains power until ALL the required connections have been made.

1. Decide which connections and cables you will use with your Soundbar.
2. After the required connections have been made, plug the mains power lead into the socket on the back of the Soundbar and then plug the power adaptor into the mains power wall socket and switch on.

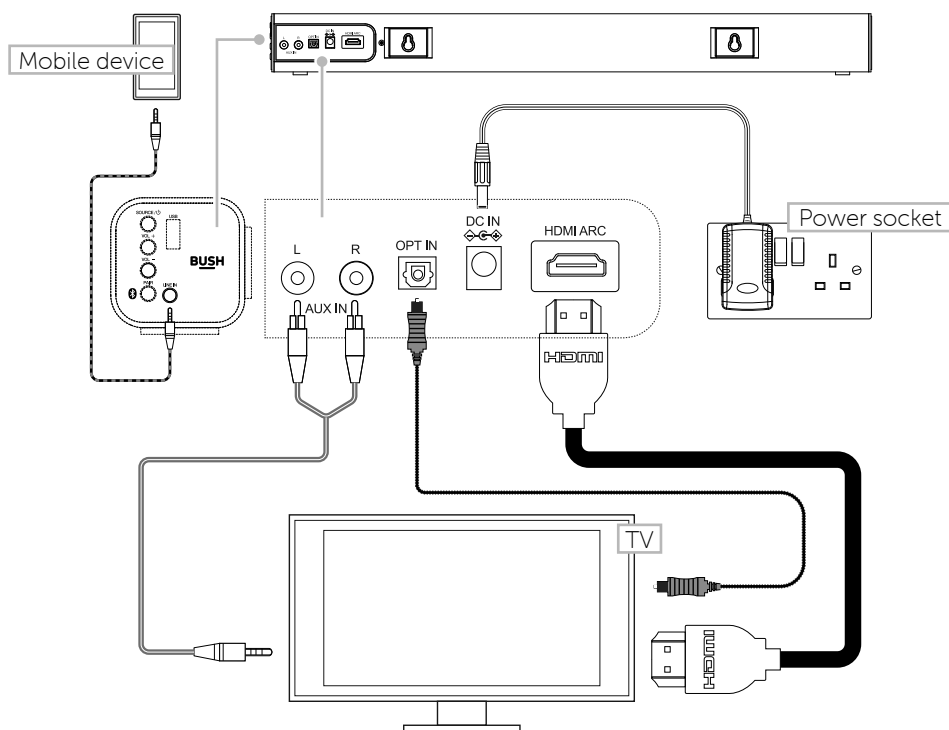

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on 0345 600 3021.

BUSH

 


This page is left intentionally blank



Using your Soundbar

3

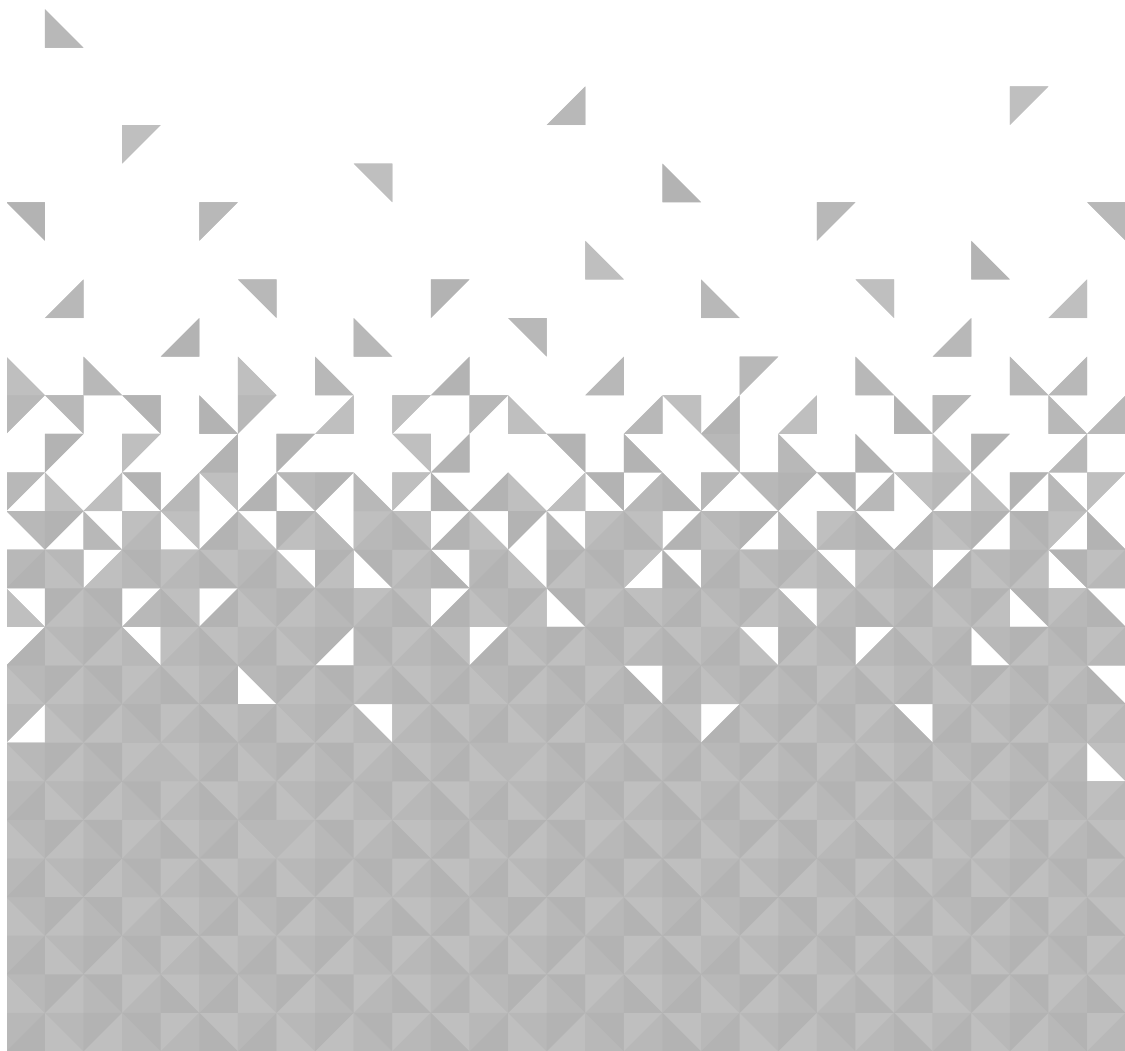

Using your Soundbar

Let's get started

Power on

Press and release the Power button on the end of the product or on the remote control. Your Soundbar will switch on in Bluetooth mode and will search for Bluetooth devices.

Note: This Soundbar has a 'last function used' memory. It will turn on in the last mode used before it was turned off if the product has not been unplugged.

Standby mode

Press and hold the Power button on the end of the product or press and release the Power button on the remote control. Your Soundbar will go to Standby mode.

Note: This product is designed to go to STANDBY mode automatically after 15 MINUTES (approximately), if it does not receive an audio signal. Press and release the Power button on the Soundbar or on the remote control to switch your product back on again.

Change the mode (Audio source)

Press and release the Power/Source button on the end of the Soundbar or the **M/** button on the remote control to change between Bluetooth/USB/Line in/Aux-in/Optical and HDMI ARC modes. Connect a USB stick in to the USB socket on the end of the Soundbar to switch directly to USB mode.

Check the display which will confirm the current mode

- bt** - Bluetooth
- LINE** - Line In
- USB** - USB Playback
- ARC** - HDMI ARC
- OPT** - Optical
- AUX** - L & R Aux In

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Soundbar

Let's get started

Adjusting the volume

Vol- on the soundbar and the remote

- Press and release to decrease the volume in steps.
- Press and hold to progressively decrease the volume.

Vol+ on the soundbar and the remote

- Press and release to increase the volume in steps.
- Press and hold to progressively increase the volume.

Bass or Treble enhancement

The Bass and Treble settings each range from -3 to +3.

1. Press and release the Bass or Treble + or - button on the remote control to adjust the Bass or Treble as appropriate.

Pairing with a Bluetooth device

Before you can use your Sound bar in Bluetooth mode with your TV or other Bluetooth capable device, you need to 'pair' it.

1. When you first power on your Soundbar or when you change the mode to Bluetooth, the product will search for Bluetooth devices and you will see 'bt' flashing on the front of the Soundbar.
2. On the device that you would like to connect to your Soundbar via Bluetooth (e.g. TV/ iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

Using your Soundbar

Let's get started

3. When found, your Soundbar will be displayed as 'BUSH SR210-12'. Select the device name to begin pairing.

Note: If your device requests a password, please enter '0000' to complete the device pairing.

4. Check the Soundbar, 'bt' will stop flashing when pairing has been successful.
5. Now that you have paired your device with the Soundbar, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
6. Your device will remain paired with the Soundbar unless you decide to disconnect or 'unpair' it.

Note: You can press and hold the Bluetooth/Pair button on end of the Soundbar to unpair your current device and search for new devices.

Controlling a paired device

Once paired you can either use the controls on the connected audio device to play/pause, skip tracks etc., or you can use the control buttons on the Soundbar remote control.

▶/|| Play/Pause

▶▶| Press and release to skip forward

|◀◀ Press and release to skip back

USB mode

Insert the USB stick which has the music files you wish to play, into the USB socket on the end of the Soundbar. Check that you line up the USB stick with the USB socket and that it is the right way around. When connected correctly, USB will be displayed.

Note: Your Soundbar will support both mp3 and wma audio formats.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Soundbar

Let's get started

You can use the remote control to play/pause and skip tracks on the USB.

▶/|| Play/Pause

▶▶ Press and release to skip forward

◀◀ Press and release to skip back

Note: Remember to unplug the USB stick after use to access the other modes on your Soundbar.

Line in mode

Check that your Soundbar is in Line in mode. If you are not already in Line in mode, press and release the Source button on the Soundbar or the **M/🔊** button on the remote control to go to Line in mode. Line will be displayed on the front of the Soundbar.

1. Connect one end of a 3.5mm audio cable (not supplied) to the headphone (or auxiliary out) socket of your secondary device.
2. Connect the other end to the Line in socket on the end of your Soundbar.
3. Press the Play button on your external device to start playback through the Soundbar.

To gain optimal volume levels, adjust the volume level on both the secondary device and on the Soundbar.

Note: It is recommended that you unplug the audio cable from the Line in socket on the end of the Soundbar, after you have finished listening to your external device.

Aux in mode

Check that your Soundbar is in Aux in mode. If you are not already in Aux in mode, press and release the Source button on the Soundbar or the **M/🔊** button on the remote control to go to Aux in mode. AUX will be displayed on the front of the Soundbar.

1. Connect the Left (white) and Right (red) plugs supplied to the Left (white) and Red (right) sockets on the back of the Soundbar.

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on 0345 600 3021.

Using your Soundbar

Let's get started

2. Connect the other end of the cable to the Audio out socket on your TV.

The sound output from your TV, will now be via your Soundbar.

To gain optimal volume levels, adjust the volume level on both the TV and on the Soundbar.

Optical mode

Check that your Soundbar is connected to the TV or other audio device using an Optical cable (not supplied) and is in Optical mode.

If you are not already in Optical mode, press and release the Source button on the Soundbar or the **M/** button on the remote control to go to Optical mode. Opt will be displayed on the front of the Soundbar.

HDMI ARC Mode

Check that your Soundbar is connected to the TV using an HDMI cable (not supplied) and that this is plugged into the HDMI ARC socket on the back of the Soundbar.

If you are not already in HDMI mode, press and release the Source button on the Soundbar or the **M/** button on the remote control to go to HDMI mode. ARC will be displayed on the front of the Soundbar.

Note: Ensure that the HDMI ARC function is selected on your TV and the digital output is set to PCM.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 
Using your Soundbar

Let's get started

Wall mounting your Soundbar

You can wall mount your Soundbar. You will need:

- 2 x rawl plugs of a type and size that are suitable for the wall that you will hang the Soundbar on. 2 rawl plugs have been supplied but please check that these are suitable for the wall surface that you will use.
- 2 x screws that are the correct size for the rawl plugs. 2 screws have been supplied which are the correct size for the rawl plugs provided, but you will need to check that they will be sufficient for the wall surface that you will use.

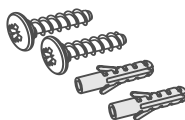

You will also need to check that the screw heads fit and hold well into the wall mount points on the back of the Soundbar.

Notes:

- Make sure that the screws and rawl plugs you use are suitable for supporting the Soundbar.
 - To avoid damage to the Soundbar and personal injury, you should get a qualified person to drill the fixing surface and fit the appropriate wall fixings.
 - When drilling into walls, always check that there are no hidden wires or pipes etc.
 - Before wall mounting your product, check the wall strength. If this is not clear, then consult relevant qualified personnel.
 - Take care not to allow the Soundbar to fall whilst attempting to hook it onto the screws you have fitted to hang the product onto.
1. Align the Soundbar in your chosen location and use a pencil to mark the drilling positions of 337 mm apart.
 2. Drill the holes as marked in point 1 above.

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on 0345 600 3021.

 
Using your Soundbar

Let's get started

3. Push 2 rawl plugs into the holes. Insert 2 screws into the holes and tighten. Take care to leave enough space between the screw heads and the wall.

Note: You will need to ensure that the screws heads can fit into the wall mount points on the back of your Soundbar and that they are long enough to sufficiently grip into the rawl plugs and wall. You must also leave enough space between the screw head and the wall for the screw head to fit into the mounts.

4. Hang the Soundbar onto the screws. For secure mounting ensure the screw heads slide firmly into the narrow part of the wall mount fixings on the back of the Soundbar.

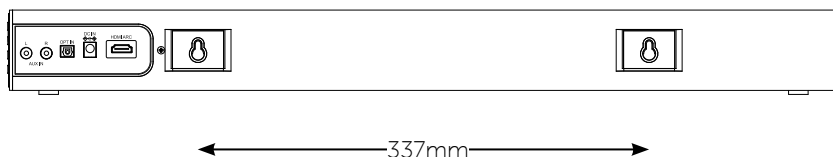

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 
This page is left intentionally blank

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on 0345 600 3021.

BUSH

Other information

4

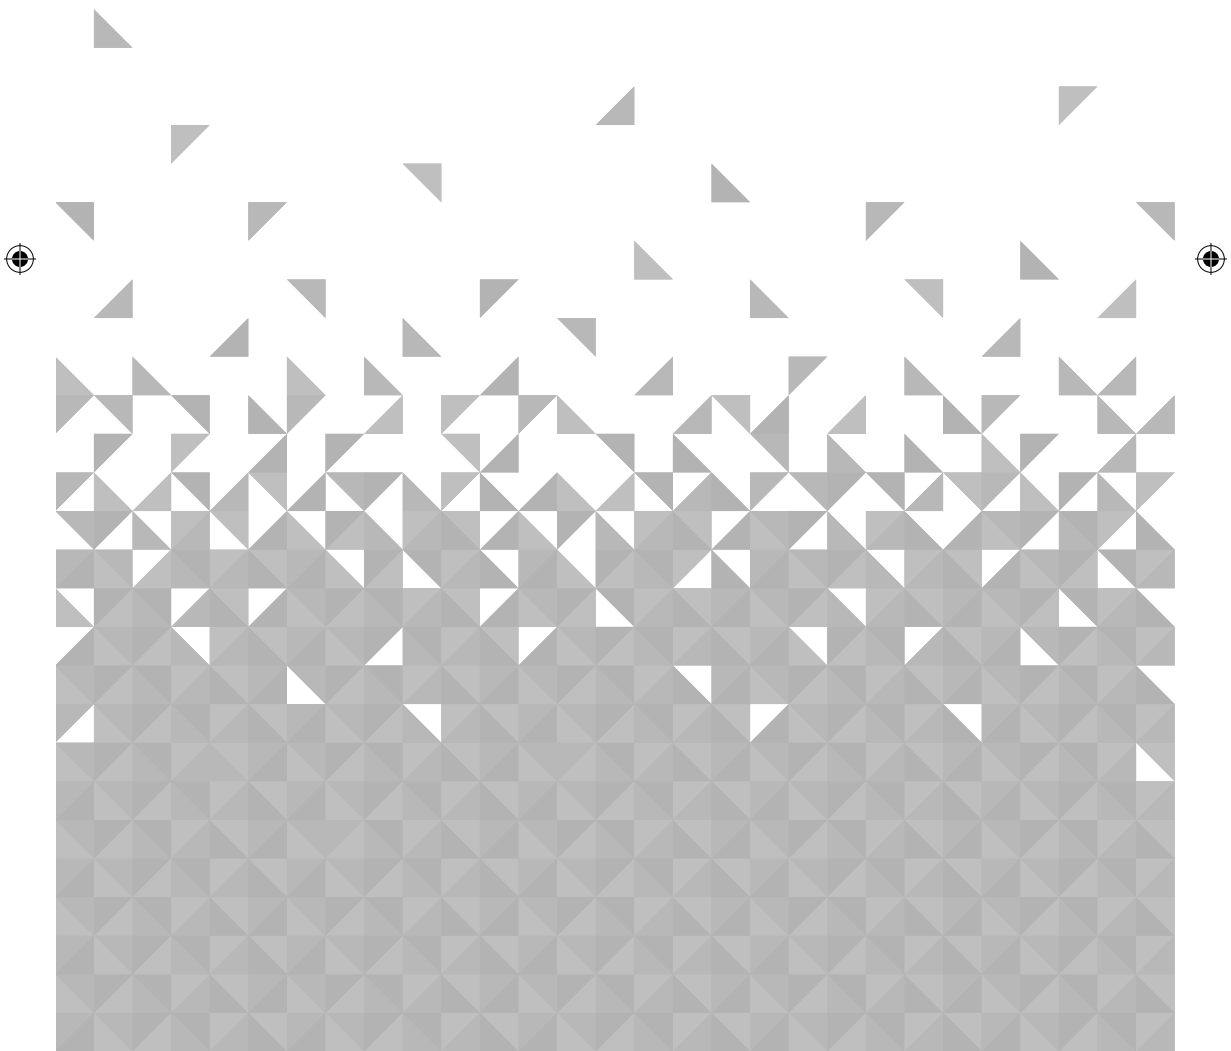

Other information

Helpful technical information

Technical specification

Power output	2 x 12W
Frequency response	20Hz - 20kHz +/- 4dB
Input sensitivity	Line in: 800mW, Aux in 1000mV
Main unit	
Power supply	Input: 100-240V ~ 50-60Hz Output: 14V 1.2A
Power adapter make and model	Dongguan Yingna Electronic Technology Co. Ltd. YN-24WA140120UK
Power consumption	38.69W
Standby power consumption	≤ 0.5W
Dimensions	Soundbar: 620 x 70 x 63mm
Mains cable length	1.5M
Remote control	
Battery	2 x AAA
Bluetooth	
Bluetooth compatibility	A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, L2CAP
Bluetooth version	V5.1
Pairing name	BUSH SR210-12

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Other information

Helpful technical information



This product is intended for use within the UK.

Declaration of Conformance

Hereby, Argos Ltd, declares that this SR210-12 Soundbar is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU and UK Radio Equipment Regulations 2017. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>



This page is left intentionally blank



Product support

5



Product support

Help is always at hand

Troubleshooting

No power:

- Check the power plug connection at the back of the Soundbar and at the wall socket.
- Check that you are not in Standby mode. Press and release the Power button on the Soundbar or on the remote control.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Soundbar for Bluetooth functionality, 10 metres or less (33 feet or less).
- Check that the device you are attempting to pair with supports A2DP stereo audio transmission.
- Move any other unnecessary Bluetooth devices/electrical equipment away from the Soundbar and if possible, turn them off or disable their Bluetooth functionality.

No sound / Sound distortion:

- Adjust the volume
- Increase the volume on the secondary device and on your Soundbar.
- Check that you are in the correct mode for the music that you wish to listen to.

Remote control does not work:

- Reduce the distance between the remote control and the Soundbar.
- The remote control batteries may be exhausted. Replace the remote control batteries.
- The remote control needs clear line of sight, without obstacles, to function correctly. Direct sunlight or other bright light sources shining on the remote sensor may affect the performance.

Soundbar powers off:

- Your Soundbar has been designed to automatically go to Standby mode after approximately 15 minutes without an audio signal, to save power. Press the Power button on the Soundbar or on the Remote control to turn your Soundbar back on again.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Soundbar is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.bush-support.com**

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at **www.bush-support.com** If you still require further assistance, call one of our experts on **0345 600 3021**.

Product support

Help is always at hand

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd - Milton Keynes - MK9 2NW

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at www.bush-support.com. If you still require further assistance, call one of our experts on **0345 600 3021**.

BUSH

Contact:

www.bush-support.com

Helpline: 0345 600 3021