

Beldray^{est 1872}[®]



**No drips, no streaks,
quick & easy**

CORDLESS
WINDOW VAC
INSTRUCTION MANUAL



www.beldray.com

Please read all of the instructions carefully before use and retain for future reference.

This appliance is not designed to pick up spills.



Only use this appliance in a vertical position; do not use it in a horizontal position.

If the appliance is used in a horizontal position, water may leak out of the vents. This could cause injury to the user or damage to the appliance.

Using the appliance in a horizontal position will void the warranty.



Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning

or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power adaptor out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit/use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not use this appliance outdoors.

Do not use the appliance with hot water or caustic cleaning detergents.

Do not use the appliance for anything other than its intended use.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not pull or carry the appliance by its power supply cord.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use this appliance outdoors.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance if it has been dropped, if there are

visible signs of damage or if it is leaking.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

The use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

This appliance is intended for wet pick up only. Do not use for picking up dust or other dry materials.

Battery Safety

If batteries become exhausted, they should be removed from the appliance to avoid leakage.

In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Secondary batteries need to be charged before use.

After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.

Do not leave batteries on charge for prolonged periods of time.

Do not use any charger other than that specifically provided for use with the appliance.

The supply terminals are not to be short-circuited.

Do not store batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.

Do not store above 60 °C. Avoid storing in direct sunlight.

Do not use any batteries that are not designed for use with the appliance.

Do not dispose of batteries in a fire.
Do not crush, puncture, dismantle or otherwise damage batteries.
Do not dismantle, open or shred secondary batteries.
Do not expose batteries to heat or fire as they may explode.
Do not subject batteries to mechanical shock.
Do not dispose of exhausted batteries in household waste.
To dispose of any batteries, take them to a local recycling station.
Contact the local government offices for further details.
This appliance is fitted with a 3.7 V 2000 mAh Li-ion secondary (rechargeable) battery.

Care and Maintenance

Always switch off and unplug the window vac from the mains power supply before attempting any cleaning or maintenance.

STEP 1: Release the squeegee vacuum head by pressing the squeegee vacuum head locking tab/release button whilst pulling it upwards and away from the window vac main body.

STEP 2: Wipe the window vac main body, squeegee vacuum head and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.

Note: The window vac should be cleaned after each use. Do not use harsh or abrasive cleaners or detergents. Never immerse the window vac main body in water or any other liquid.

Getting Started

Remove the window vac from the box.
Remove any packaging from the window vac.
Place the packaging inside the box and either store or dispose of safely.

In the Box

Cordless Window Vac main body
Squeegee vacuum head

5 V 0.7 A DC power adaptor
Instruction manual

Features

Lightweight and compact
60 ml water tank
3.7 V lithium-ion battery
Up to 30 minutes operating time

Charge time: 2-3 hours

Description of Parts



- | | |
|--|---------------------------|
| 1. Cordless Window Vac main body | 6. Charging port |
| 2. Squeegee vacuum head | 7. Charging port cover |
| 3. Squeegee vacuum head locking tab/release button | 8. Water tank |
| 4. On/Off button | 9. Water tank plug |
| 5. Charging indicator light | 10. Handle |
| | 11. 60 ml max. fill level |

Instructions for Use

Before First Use

Before using the window vac for the first time, wipe it with a soft, damp cloth and dry thoroughly.

Do not immerse the window vac in water or any other liquid.

Check that the squeegee vacuum head is free from any debris (e.g. hair), as this could ruin the streak-free finish or damage the surface of the glass.

Assembling the Cordless Window Vac

STEP 1: Attach the squeegee vacuum head by pushing the squeegee vacuum head locking tab/release button and inserting it onto the top of the window vac main body, until it locks into position. The screws on the underside of the squeegee vacuum head should be facing downwards.

STEP 2: Make sure that the water tank plug is firmly in place; failure to do so will result in water leaking from the unit, which could cause damage to the appliance or injury to the user.

Note: The squeegee vacuum head will only clip onto the window vac main body one way.

Charging the Cordless Window Vac

Before first use, the window vac must be charged for approx. 3 hours. Subsequent charging times will take approx. 2-3 hours.

STEP 1: Connect the lead from the mains power adaptor to the charging port on the window vac.

STEP 2: Plug the mains power adaptor into the mains power supply; the charging indicator light will flash blue to signal that the battery is charging. Once the battery is fully charged, the charging indicator light will stop flashing and remain constantly lit.

Note: Whilst charging, the window vac may become warm.

Caution: Exercise caution when charging the window vac; it must be stood upright on a dry, stable surface, away from other appliances.

Warning: Do not leave the window vac unattended whilst it is charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the window vac from the mains power supply immediately.

Do not use any mains power adaptor other than that supplied, as this could cause a hazard.

Using the Cordless Window Vac

STEP 1: Switch off and unplug the window vac from the mains power supply and then disconnect the mains power adaptor from the window vac main body.

STEP 2: Dilute window cleaning concentrate following the manufacturer's instructions; apply to the window and loosen the dirt using a damp cloth.

STEP 3: To turn on the window vac, press the 'On/Off' button.

STEP 4: Place the squeegee vacuum head against the window surface in a vertical position.

STEP 5: Clean the window from top to bottom using long, straight, downward movements. This will avoid leaving drip marks or smears and leave the window with a streak-free finish.

STEP 6: The window vac can be used to remove any excess water that remains on the window surface. Whilst switched on, hold the window vac vertically where the excess water has collected and allow it to suck up the liquid.

STEP 7: Turn off the window vac by pressing the 'On/Off' button.

Note: Check that the water tank plug is firmly in position to avoid leakage of water from the tank.

Warning: Do not use the window vac to pick up anything other than water or diluted window cleaning concentrate. It is recommended to use conventional window cleaning concentrate as opposed to spirit or foam detergents, as these can damage the window vac and could result in injury to the user. Window cleaning concentrate is available from all leading retailers.

Emptying the Water Tank

STEP 1: Switch off and unplug the window vac from the mains power supply.

STEP 2: Detach the water tank plug from the front of the water tank and tilt it to drain away any excess water.

STEP 3: Fix the water tank plug back onto the water tank.

Note: The water tank should be emptied after each use.

Warning: Do not allow the water tank to fill beyond the 60 ml max. fill level, as this may cause water to leak from the vents and could damage the window vac.

Storage

Check that the window vac is cool, clean and dry and that the water tank is empty before storing in a cool, dry place.

Note: If the battery is exhausted, it is recommended to charge the window vac slightly before storage. This will help to prolong the life of the battery. The window vac may need to be recharged after storage, before the next use.

Troubleshooting

Symptom	Cause	Solution
The window vac will not turn on.	The window vac has run out of charge.	Charge the window vac following the instructions in the section entitled 'Charging the Cordless Window Vac'.
Water is leaking from the air vents.	<p>The water has exceeded the 60 ml max. fill level.</p> <p>Spirit or foam detergent has been used to clean the surface of the mirror or window.</p> <p>The window vac has been used horizontally.</p>	<p>Empty the water tank following the instructions in the section entitled 'Emptying the Water Tank'.</p> <p>Use conventional window cleaning concentrate as opposed to spirit or foam detergents.</p> <p>The window vac must only be used in a vertical position during operation.</p>
The window vac is leaving streaks on the surface.	<p>The squeegee vacuum head is dirty.</p> <p>There is too much window cleaning concentrate on the surface of the mirror or window.</p>	<p>Clean the squeegee vacuum head with a soft, damp cloth and leave to dry naturally.</p> <p>Adjust the dilution of the window cleaning concentrate.</p>

Specifications

Product code: BEL0749N
 Battery: 3.7 V 2000 mAh Li-ion battery (included)
 Adapter Input: 100-240 V ~ 50-60 Hz
 Adapter Output: 5 V DC 700 mA
 IPX 4

UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday-Friday, 9 am-5 pm (Closed Bank Holidays)

Email: customersupport@beldray.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

 **3 YEAR**
GUARANTEE*

*To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD140119/MD201119/V2

