

# BUSH

## Instruction manual

WO378





You'll soon be enjoying your new CD Micro HiFi All in One System.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



## Help and Guidance

We're here to help you get the most from your CD Micro HiFi All in One Micro System. Should you require any guidance, a simple solution can often be found online at:

**[www.bush-support.com](http://www.bush-support.com)**

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

**BUSH**



# Contents

## 1 Safety information

Power source	8
Moisture and water	8
Heat sources and flames	8
Ventilation	8
Positioning the CD Micro HiFi All in One Micro System	9
General safety information	9

## 2 Getting to know your CD Micro HiFi

Power connection	17
Initial set-up	17
Change the mode	17
Adjusting the volume	17
Equaliser or EQ setting	18
Using the Menu	18

## 3 Using your CD Micro HiFi

DAB radio mode	22
Telescopic radio aerial	22
Changing DAB stations	22
Scanning for DAB stations	22
Prune DAB stations	23
Storing a DAB station preset	23
Tune to a DAB station preset	24
DAB display information	24
Dynamic range control (DRC)	25
FM Radio mode	26

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021

# Contents

Telescopic radio aerial	26
Tuning to an FM station	27
Changing the scan setting	27
Audio mode	28
Storing an FM station preset	28
Tune to an FM station preset	29
FM display information	29
Bluetooth mode	30
Connect to a Bluetooth device	30
Listening to Music/Audio using Bluetooth	31
Controls available on your HiFi are:	31
Delete current Bluetooth device	32
CD Mode	32
Play a CD	32
CD controls	32
Programmed play mode	33
Random/Repeat mode	34
Remove the CD	34
Caring for compact discs	34
Auxiliary Input mode	35
Setting an alarm	36
Stop the Alarm	36
Snooze	37
Sleep timer	37

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Contents

## 4 Other information

Technical specification 40

## 5 Product support

Troubleshooting 44

Help and assistance 46

Disposal 47

Your Bush Guarantee 48

Important Data Protection Information 48

 


This page is left intentionally blank



# Safety information

1

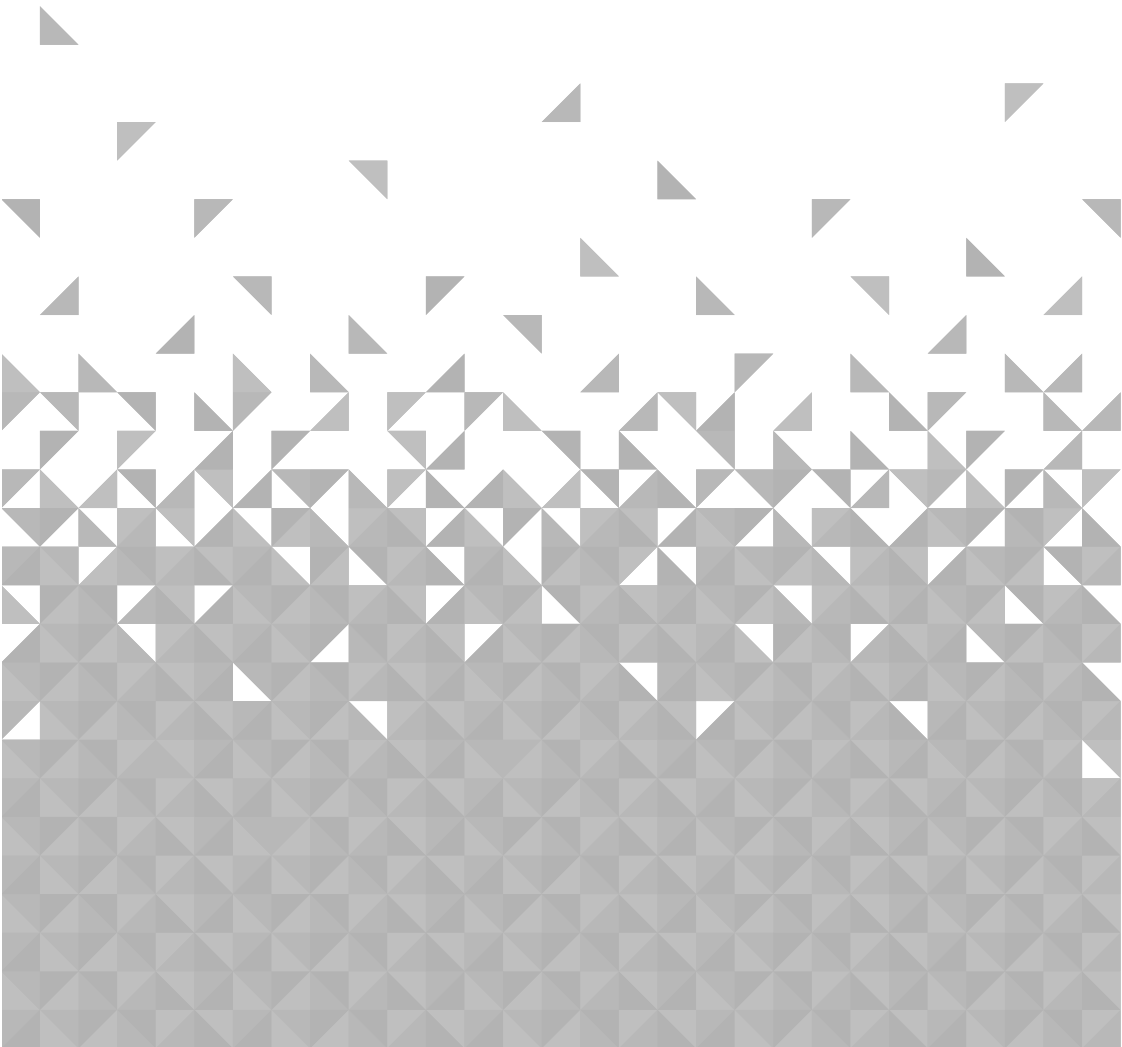



## Safety information

**Important** - Please read these instructions fully before installing or operating

### Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your HiFi from the mains power supply during thunderstorms.
- Always check that you have completely switched off your HiFi System, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the HiFi System will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged.

### Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

### Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.
- No naked flame sources, such as lit candles, should be placed on or near the product.

### Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- The underneath and sides of this product may become warm after a long period of use. This is normal.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





## Safety information

**Important** - Please read these instructions fully before installing or operating

### Positioning the CD Micro HiFi All in One Micro System

It is important that you consider carefully in advance where your HiFi System will be situated and make sure that it is:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead is not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- where there is enough height for the HiFi System telescopic radio aerial.
- Never place your HiFi System directly onto antique or polished surfaces.



**CAUTION:** To avoid possible hearing damage, do not listen to this HiFi System at high volume levels for long periods of time. Always keep the volume within reasonable limits.

### General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do NOT place foreign objects into the CD compartment.
- **CAUTION:** Never touch or look into the optical lens within the CD compartment.



## Safety information

**Important** - Please read these instructions fully before installing or operating



### **This is a CLASS-1 laser product.**

Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure. Do NOT open the cover and do NOT attempt to repair it yourself. Refer servicing to qualified personnel. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

**BUSH**

 


This page is left intentionally blank



Getting to know your CD Micro  
HiFi

2

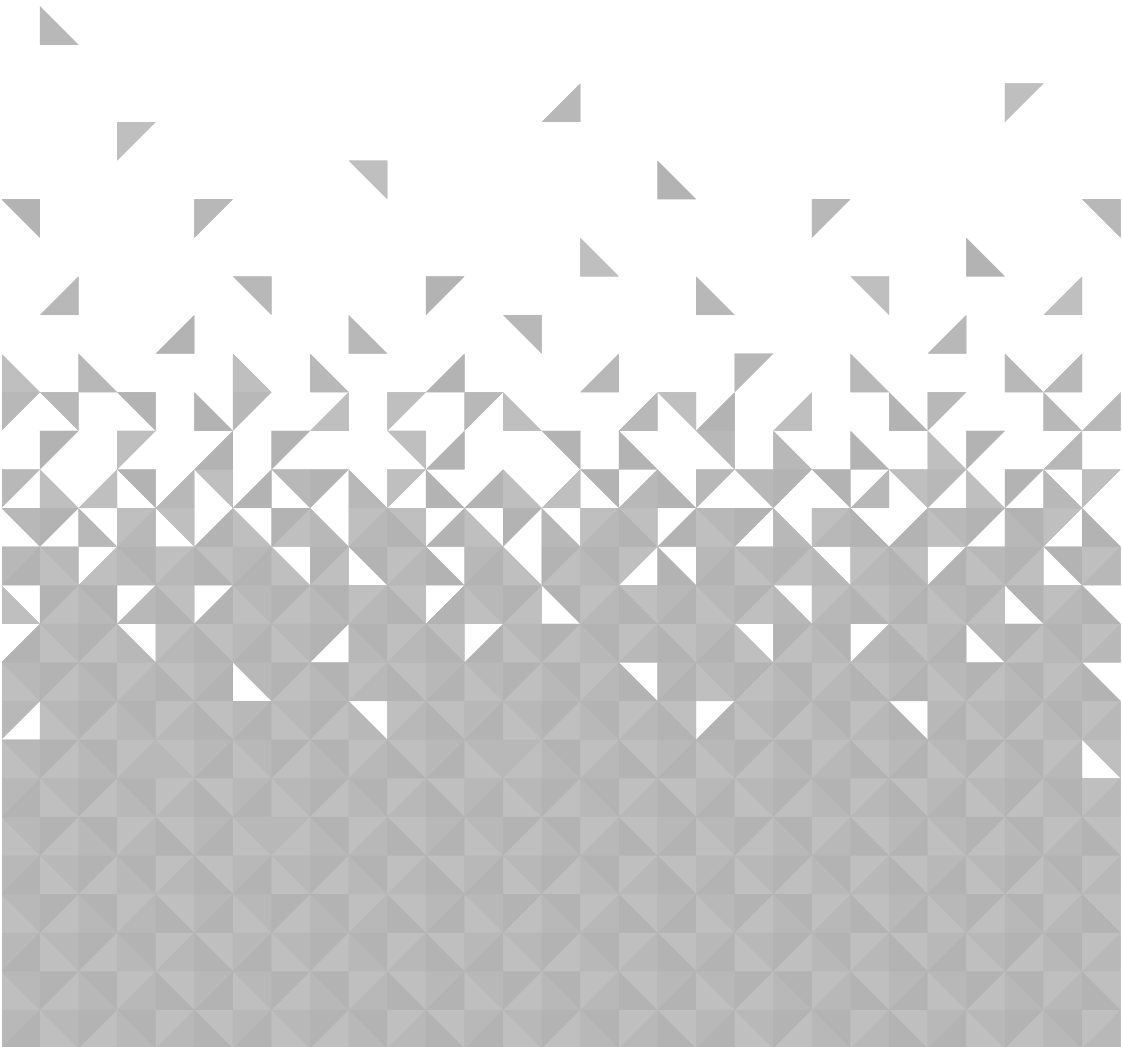

# Getting to know your CD Micro HiFi

You'll be up and running in no time

Fig 1.


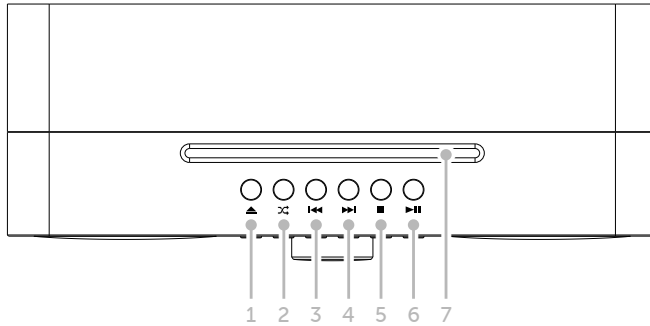 


Fig 2.

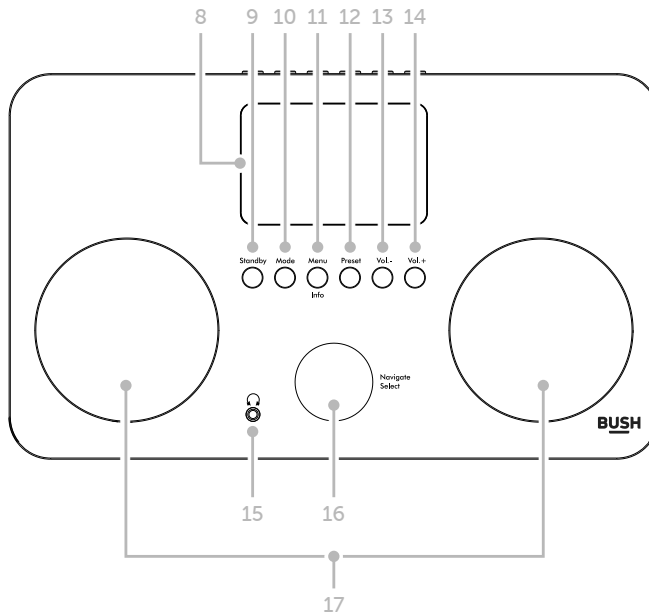 


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Getting to know your CD Micro HiFi

You'll be up and running in no time

 Fig 3.

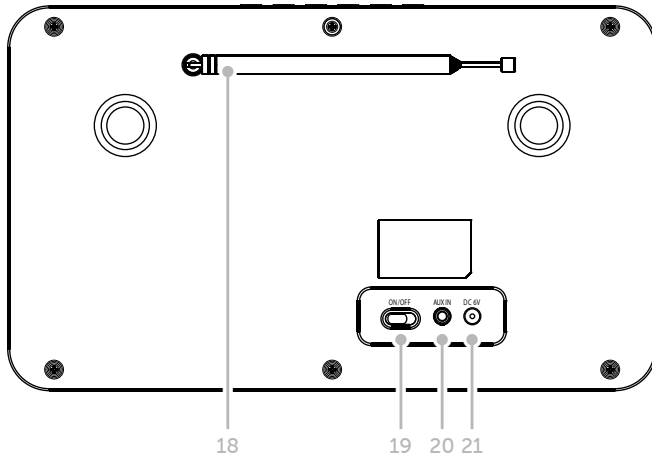


1. Eject (CD mode)
2. Random/Repeat (CD mode)
3. Skip back
4. Skip forward
5. Stop
6. Play/Pause
7. CD slot
8. Backlit colour display
9. Standby (On/Off)
10. Mode (DAB/FM/BT/CD/Aux)
11. Menu/Info (Radio station information)
12. Preset (40 DAB/40 FM)
13. Vol-
14. Vol+
15. Headphone socket
16. Navigate / Press to Select / Press to Snooze
17. Speakers
18. Telescopic aerial
19. On/Off switch
20. Aux in
21. Power socket

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

# Getting to know your CD Micro HiFi

You'll be up and running in no time

 Fig 4.

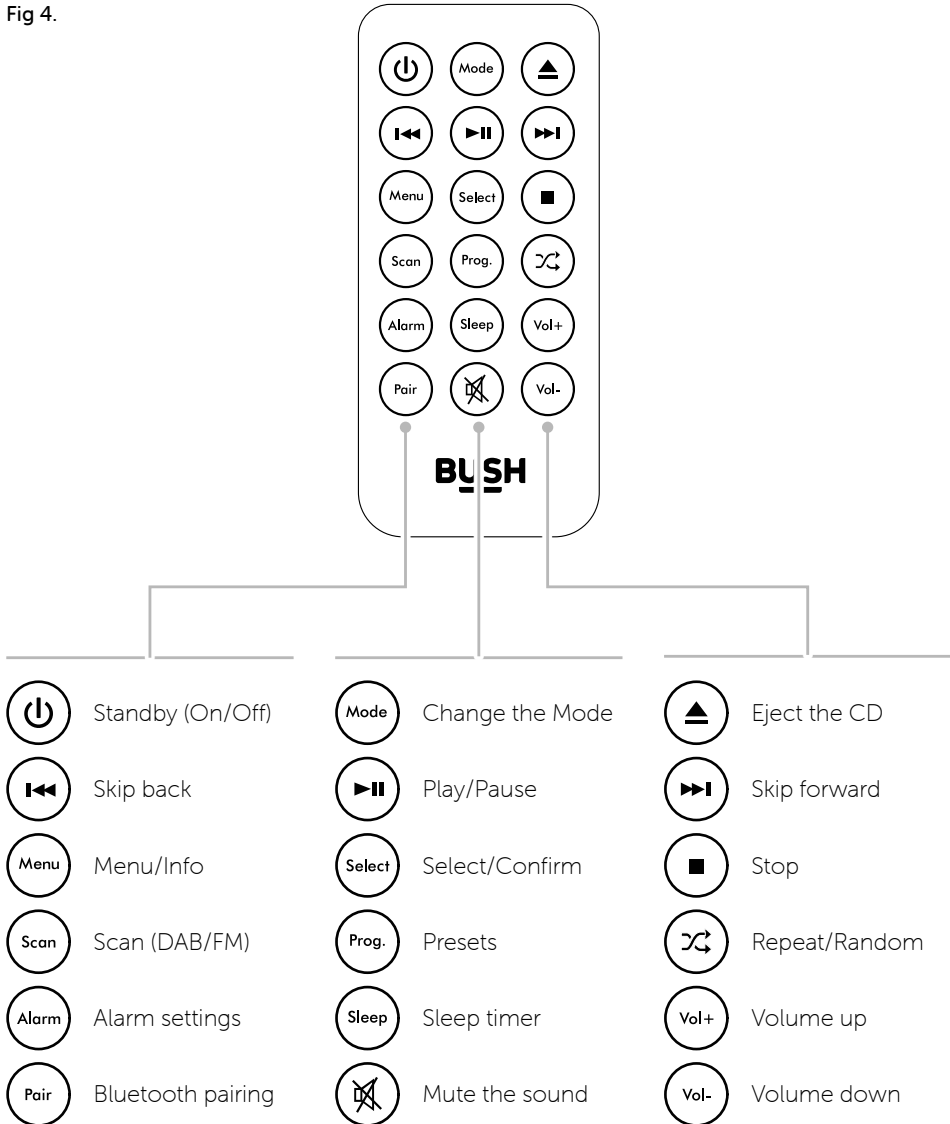

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



# Getting to know your CD Micro HiFi

You'll be up and running in no time

## Power connection

1. Fully extend the telescopic radio aerial on the back of the HiFi to receive the best possible radio reception and sound quality.
2. Plug the mains power plug into the mains power wall socket and switch on. Slide the ON/OFF switch on the back of the HiFi to ON.
3. The BUSH logo is displayed followed by the Language display options available with 'English' highlighted. Use the rotary navigation control to scroll to the display language you would like and then press the navigation control to Select.
4. Your HiFi will go to Standby mode with a clock display.

## Initial set-up

Press and release the Standby button on the front of your HiFi System. The first time you switch on your HiFi or if the station list is empty, your HiFi will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your HiFi will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

## Change the mode

Press and release the Mode button to change between DAB radio, FM radio, Bluetooth, CD and Aux in modes. Please check the display, which will confirm the mode.

## Adjusting the volume

Use the Vol- and Vol+ buttons to adjust the volume, there are 32 volume levels available. Check the display, which will confirm the volume setting.

# Getting to know your CD Micro HiFi

You'll be up and running in no time

## Equaliser or EQ setting

You can change the sound of your HiFi using the EQ setting.

1. Press and hold the Menu button. Use the rotary navigation control to scroll to System Settings and press to Select.
2. Use the rotary navigation control to scroll to Equaliser and press to Select. The EQ options will be displayed.
3. Use the rotary navigation control to scroll up and down the options available.
4. When the EQ option you would like is highlighted, press the rotary navigation control on the HiFi to Select.
5. Press and release the Menu button until you exit from the Menu.

## Using the Menu

You can change the System settings, such as the Backlight brightness and timeout, manually set the time and date, change the time format and display language for your HiFi, as well as setting an Alarm or a Sleep time within the Menu, under System settings.

1. Press and hold the Menu button. Use the rotary navigation control to scroll to System Settings and press to Select.
2. You can now use the rotary navigation control to scroll and push to select to change the System Settings on your HiFi.
3. Press and release the Menu button until you exit from the Menu.

## Using headphones

You can connect headphones with a 3.5mm plug (not included) into the socket on the front of the HiFi. When you have headphones connected the HiFi speakers are switched off and all sound is via the headphones.

---

**Note:** Always keep the volume within reasonable limits.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Getting to know your CD Micro HiFi

You'll be up and running in no time

## Connect to a Bluetooth device

Check that your HiFi is in Bluetooth (BT) mode. If you are not already in BT mode, press and release the Mode button until you are in BT mode (check the display). 'Bluetooth Searching' will be displayed, whilst your product searches for Bluetooth devices.

In Bluetooth (BT) Mode:

1. 'Bluetooth Searching' will be displayed whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your HiFi via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

---

**Note:** If necessary, refer to the instructions for your device to add or set up Bluetooth.

---

3. Select to 'Add new device', if necessary.

---

**Note:** Some products will automatically search for a new device and so the 'Add new device' option is not available.

---

4. When found, your HiFi will be displayed as 'BUSH WO378'. Select the device name to begin pairing.
5. When pairing is complete 'Bluetooth Connected' will be displayed.
6. Now that you have paired your device with the HiFi, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the HiFi unless you decide to disconnect or 'unpair' it.

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

 


This page is left intentionally blank



# Using your CD Micro HiFi

3

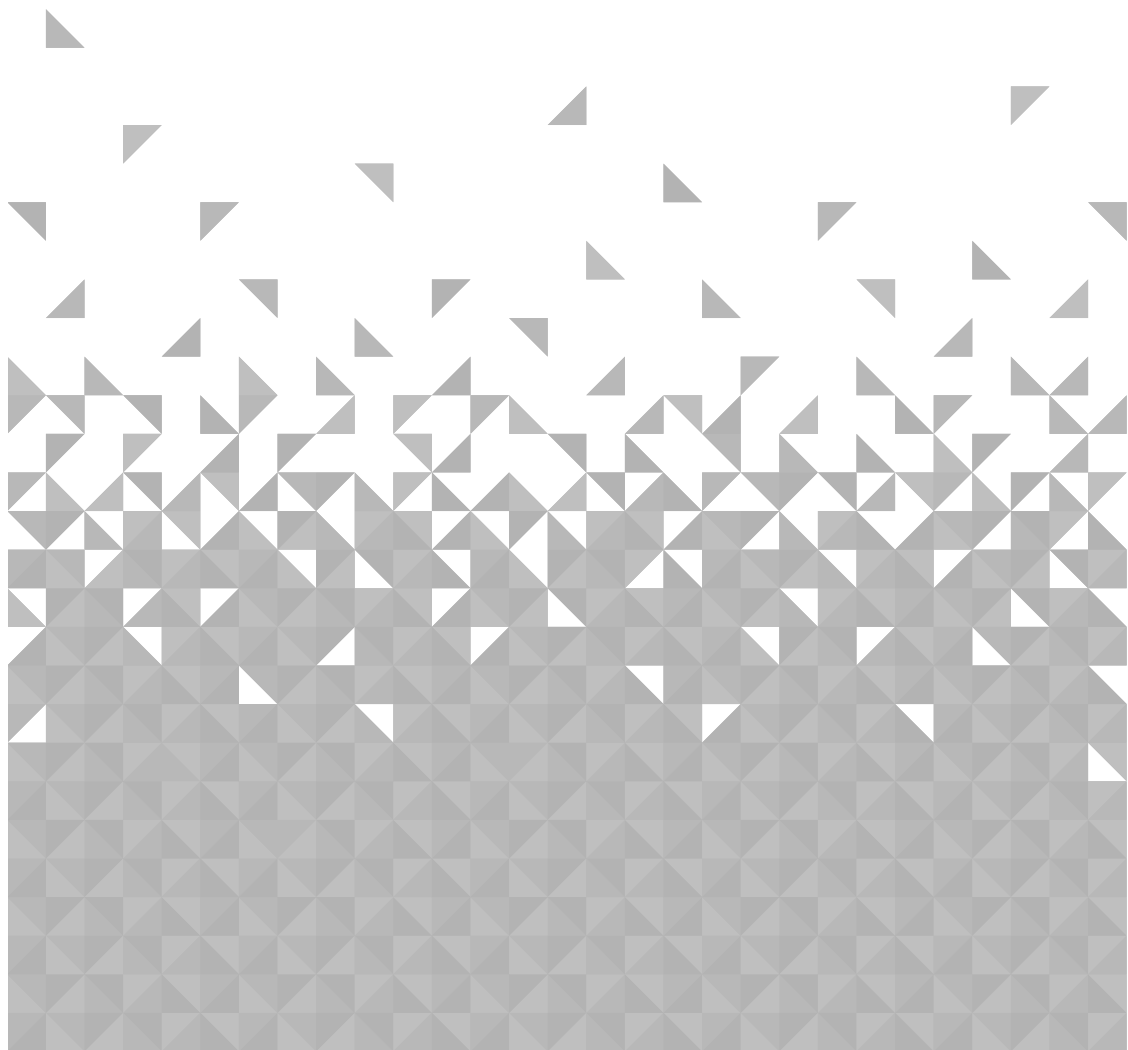

# Using your CD Micro HiFi

Let's get started

## DAB radio mode

Check that your HiFi is in DAB radio mode. If you are not already in DAB mode, briefly press and release the Mode button on the front of the HiFi, until you are in DAB mode (check the display).

The first time you use the Radio or if the station list is empty, your HiFi will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your HiFi will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

## Telescopic radio aerial

Please make sure that the telescopic aerial on the back of the HiFi is fully extended and adjusted before you attempt to tune to a DAB radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the HiFi begins to scan. Extending the aerial also ensures the best possible sound quality.

## Changing DAB stations

In DAB mode:

1. Use the rotary navigation control to scroll through the available stations in the station list.
2. When the station that you would like to listen to is displayed press the rotary navigation control to Select. There will be a short delay whilst your HiFi tunes to your selected station.

## Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your HiFi.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Using your CD Micro HiFi

## Let's get started

If you have moved your HiFi to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

In DAB mode:

1. Press and hold the Menu button. Use the rotary navigation control to highlight 'Full Scan'. Press to Select. and begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

## Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

1. Press and hold the Menu button. Use the rotary navigation control to scroll to Prune Invalid. Press the rotary navigation control to Select.
2. 'Proceed to prune the invalid stations Yes No' is displayed. Use the rotary navigation control to move to 'Yes'. Press the rotary navigation control to Select and prune the invalid stations from the station list. Stations with a '?' prefix will now no longer be displayed.
3. Press and release the Menu button until you exit from the Menu.

## Storing a DAB station preset

Your HiFi can store up to 40 DAB radio stations in its preset memories for instant access to your favourite stations.

1. Tune the HiFi to the DAB radio station that you wish to preset.
2. Press and hold the Preset button for approximately 2 seconds until 'Save to Preset' is displayed.
3. Use the rotary navigation control to scroll to the preset location that you would like to store the radio station to (1-40).
4. Press the rotary navigational control to Select. The display will confirm 'Preset X saved', where 'X' is the number of the preset (1-40).

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

# Using your CD Micro HiFi

Let's get started

---

**Note:** If there is already an existing DAB station stored under a preset, it will be overwritten when you store the new station.

---

## Tune to a DAB station preset

In DAB mode:

1. Press and release the Preset button. 'Preset Recall' is displayed together with the preset list.
2. Use the rotary navigation control to scroll to the Preset location and station that you would like to listen to (1-40).
3. Press the rotary navigation control to Select. The HiFi will instantly tune to that station and begin to play.

---

**Note:** If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed, then the HiFi will revert to the previously selected radio station after a few seconds.

---

## DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- **Dynamic Label Segment (DLS)**

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

- **Program Type (PTY)**

Such as 'Rock', 'Pop', 'Talk' or 'News'

- **Multiplex Name**

Displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



# Using your CD Micro HiFi

Let's get started

- **Channel and Frequency**

e.g.: 12B 225.648 MHz

- **Signal Strength**

A row of solid rectangles will be displayed to indicate the actual signal strength that you are receiving. Two black lines within the row of solid rectangles will indicate the minimum signal strength for acceptable listening. The stronger the signal, the further to the right the row of solid rectangles will be.

- **Signal information**

The data rate at which the signal is being transmitted.

- **Day and date - supplied by the broadcaster.**

1. Repeatedly press and release the Menu/Info. button to cycle through the different information options.

## Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

# Using your CD Micro HiFi

Let's get started

There are 3 levels of compression:

- **DRC off:** No compression. This is the default setting.
  - **DRC low:** Medium compression.
  - **DRC high:** Maximum compression.
1. Press and hold the Menu button. Use the rotary navigation control to scroll to DRC.
  2. Press the rotary navigation control to Select. The current DRC setting will have a tick next to it.
  3. Use the rotary navigation control to move through the options and press the rotary navigation control to confirm.
  4. Press and release the Menu button until you exit from the Menu

## FM Radio mode

Check that your HiFi is in FM radio mode. If you are not already in FM mode, briefly press and release the Mode button until you are in FM mode (check the display). When your HiFi is in FM mode it can receive Radio Data System or 'RDS' information if this is being transmitted by the broadcaster. RDS information will often include the station name, detail about the programme and the current time.

If you were listening to an FM station when you switched the HiFi off then this station will be automatically selected when you switch the HiFi back on.

## Telescopic radio aerial

Please make sure that the telescopic aerial on the back of the HiFi is fully extended and adjusted before you attempt to tune to an FM radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the HiFi begins to scan. Extending the aerial also ensures the best possible sound quality.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Using your CD Micro HiFi

Let's get started

## Tuning to an FM station

In FM mode:

1. Press and hold the **▶▶** button to scan up the frequency band. Press and hold the **◀◀** button to scan down the frequency band. Your HiFi will search for the next available station and then stop on that station.
2. Press and release the **▶▶** and **◀◀** buttons to fine tune each frequency in 0.05MHz steps, if necessary.

---

**Note:** If reception is still poor check that the telescopic aerial is fully extended or try moving the HiFi to another location.

---

## Changing the scan setting

In FM mode:

1. Press and hold the Menu button. Scan setting will be displayed and highlighted. Press the rotary navigation control to Select. There are now two different options to choose from and the current setting will have a tick next to it.

- **Strong Stations Only**

The scan will only stop when a strong signal strength is received which should also result in a better audio quality. It is possible that the station you are scanning for may be missed using this option.

- **All Stations**

The scan will stop for every station it receives, even if the signal strength is poor.

2. Use the rotary navigation control to move to and choose from the two options available. Press the rotary navigation control to confirm.
3. Press and release the Menu button until you exit from the Menu.

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

# Using your CD Micro HiFi

Let's get started

## Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

---

**Note:** You may wish to select 'Stereo' if you are listening to your HiFi using headphones.

---

1. Press and hold the Menu button. Use the rotary navigation control to scroll to Audio Setting. Press the rotary navigation control to Select.  
There are now two different options of 'Forced Mono' and 'Stereo Allowed' and the current setting will have a tick next to it.
2. Use the rotary navigation control to move to and choose from the two options available. Press the rotary navigation control to confirm.
3. Press and release the Menu button until you exit from the Menu.

## Storing an FM station preset

Your HiFi can store up to 40 FM radio stations in its preset memories for instant access to your favourite stations.

1. Tune the HiFi to the FM radio station that you wish to preset.
2. Press and hold the Preset button for approximately 2 seconds until 'Save to Preset' is displayed.
3. Use the rotary navigation control to scroll to the preset location that you would like to store the radio station to (1-40).
4. Press the rotary navigation control to Select. The display will confirm 'Preset X saved', where 'X' is the number of the preset (1-40).

---

**Note:** If there is already an existing FM station stored under a preset, it will be overwritten when you store the new station.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Using your CD Micro HiFi

Let's get started

## Tune to an FM station preset

In FM mode:

1. Press and release the Preset button. 'Preset Recall' is displayed together with the preset list.
2. Use the rotary navigation control to scroll to the Preset location and station that you would like to listen to (1-40).
3. Press the rotary navigation control to Select. The HiFi will tune to that station and begin to play.

---

**Note:** If no FM station has been stored under the preset button, 'Preset Empty' will be displayed, then the HiFi will revert to the previously selected radio station after a few seconds.

---

## FM display information

When listening to an FM station you can change the information that will appear on the second line of the display. There are several different types of information that are sent by the broadcaster.

- **Radiotext (RT)**

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

- **Program Type (PTY)**

Such as 'Rock', 'Pop', 'Talk' or 'News'

- **Station name or frequency**

Such as BBC R4 or 92-95MHz

- **Audio mode**

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'. Please refer to 'Audio Mode' on page 28.

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

# Using your CD Micro HiFi

Let's get started

- **Day and date - supplied by the broadcaster.**
1. Repeatedly press and release the Menu/Info. button to cycle through the different information options.

## Bluetooth mode

Check that your HiFi is in Bluetooth (BT) mode. If you are not already in BT mode, press and release the Mode button until you are in BT mode (check the display). 'Disconnected' will be displayed, whilst your product searches for Bluetooth devices.

## Connect to a Bluetooth device

Check that your HiFi is in Bluetooth (BT) mode. If you are not already in BT mode, press and release the Mode button until you are in BT mode (check the display). 'Bluetooth Searching' will be displayed, whilst your product searches for Bluetooth devices.

In Bluetooth (BT) Mode:

1. 'Bluetooth Searching' will be displayed whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your HiFi via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

---

**Note:** If necessary, refer to the instructions for your device to add or set up Bluetooth.

---

3. Select to 'Add new device', if necessary.
- 

**Note:** Some products will automatically search for a new device and so the 'Add new device' option is not available.

---

4. When found, your HiFi will be displayed as 'BUSH WO378'. Select the device name to begin pairing.
5. When pairing is complete 'Bluetooth Connected' will be displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Using your CD Micro HiFi

Let's get started

6. Now that you have paired your device with the HiFi, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the HiFi unless you decide to disconnect or 'unpair' it.

---

**Note:** If your device should be come unpaired for any reason, follow the steps above to 'pair' it again.

---

## Listening to Music/Audio using Bluetooth

In Bluetooth (BT) Mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the HiFi speakers. Adjust the volume on the connected device and/or your HiFi.




---

**Note:** If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select 'BUSH WO378' to reconnect.

---

2. You can use the controls on your paired Bluetooth device as well as those on the top of the HiFi when listening to music via Bluetooth.

## Controls available on your HiFi are:


- Play/Pause  
 Press and release to play/pause.
- Skip back  
 Press and release to skip back to the previous track.
- Skip forward  
 Skip forward. Press and release to skip forward to the next track.

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

# Using your CD Micro HiFi

Let's get started

## Delete current Bluetooth device

Press and hold the  button to disconnect the current Bluetooth device and search for a new Bluetooth device.

---

**Note:** If you do not use or pause your HiFi for approximately 20 minutes and no audio signal is received, it will automatically go to Standby mode.

---

## CD Mode

Check that your HiFi is in CD mode. If you are not already in CD mode, briefly press and release the Mode button until you are in CD mode (check the display). The display will show 'Open', if the CD compartment is empty.

## Play a CD

---

**Note:** It is not possible to play DVD or computer CDs.


---

1. Press and release the Eject button. The CD drawer will open and 'Open' will be displayed.
2. Place an audio CD, label side facing forwards, into the CD slot on the top of the HiFi.
3. 'Reading' will be displayed and after a short delay, the number of tracks and total number of minutes and seconds on the CD.

## CD controls

You can use the following controls on your HiFi in CD mode.

- **Play**

Press and release the  button. After a short delay the first track will begin to play and the track number and the elapsed time of the track will be displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**




# Using your CD Micro HiFi

Let's get started


- **Pause**

Press and release the  button. The elapsed time of the track will flash in pause mode. Press and release the  button again to continue to play the track/CD.


- **Next track:**

Press and release the  button.

- **Previous track:**

Press and release the  button.


- **Fast forward within a track:**

Press and hold the  button.

- **Fast backward within a track:**

Press and hold the  button.

- **Stop**

Press and release the  button

## Programmed play mode



In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 20 tracks in total.

---

**Note:** To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

---



In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. Press and hold the Preset button to enter CD programmed play mode. 'P01 T01' will be displayed and the 'T01' will flash.
2. Use the  or  buttons to go to the track number that you would like to program to play first. Press and release the Rotary navigation control to confirm.


section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

# Using your CD Micro HiFi



Let's get started

3. 'P02 T01' will now be displayed and you can select the second track that you would like to programme. Continue to select each track as in Step 2 above, up to a total of 20 tracks.
4. Press and release the  button to play the programmed tracks.
5. To exit programmed play mode, press and release the  button twice.

## Random/Repeat mode

1. Press and release the Random/Repeat  button. A repeat icon with a digit 1 in the middle will be displayed. Continuously press and release the Repeat button to cycle through the available options of :
  - Repeat (current track)
  - Repeat all (all the tracks on the CD)
  - Randomly play the tracks on the CD
2. Press and release the Repeat button one more time to turn off Random/Repeat mode.

## Remove the CD

1. Press the  button to stop the CD. Press the Eject  button. The CD will be ejected from the CD compartment and 'Open' will be displayed.
2. Remove the CD from the CD tray.

---

**Note:** If you stop or pause playing a CD for approximately 20 minutes, your HiFi will go to Standby mode automatically.

---

## Caring for compact discs

- Do NOT touch the playback side of the CD. Do NOT attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Using your CD Micro HiFi

Let's get started

- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.

## Auxiliary Input mode

Check that your HiFi is in Auxiliary input mode. If you are not already in Auxiliary input mode, briefly press and release the Mode button until you are in Auxiliary input mode (check the display).

Using a 3.5mm audio input connection cable (not included), Auxiliary input allows for a quick and easy connection to an external sound source.

1. Connect one end of the 3.5mm audio connection cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket on the back of your HiFi.
2. Press the Play button on your external device to start playback through the HiFi speakers.

To gain optimal volume levels, adjust the output volume level on both the secondary device and on the HiFi.

---

**Note:** It is recommended that you unplug the Audio cable from the Aux in socket after you have finished listening to your external device.

---

# Using your CD Micro HiFi

Let's get started

## Setting an alarm

---

**Note:** Check that the HiFi has the correct time and date before you set an alarm.

---

1. Press and hold the Menu button. Use the rotary navigation control to scroll to System Settings and press to Select.
2. Use the rotary navigation control to scroll to Alarm and press to Select. Use the rotary navigation control to highlight Alarm 1 or 2 and press to Select.
3. 'Alarm 1 (or 2) Info' is displayed, together with a list of Alarm setting options. Use the rotary navigation control to scroll to each Alarm option, press the rotary navigation control to Select.
4. Use the rotary navigation control to change each Alarm setting option, then press the rotary navigation control to Confirm.
5. When you have completed your Alarm settings, just press and release the Menu button to return to the Alarm 1 and Alarm 2 display.

---

**Note:** You will not be able to set the alarm volume for less than volume level 10. When the alarm sounds, the volume will get progressively louder until it reaches the volume level that you have set.

---

6. Press and release the Menu button until you exit from the Menu settings.
7. When an alarm has been set, an alarm icon will be displayed for each separate alarm (Alarm 1 and Alarm 2). In standby mode, the alarm icon and the time set for each alarm will be displayed.

## Stop the Alarm

When the alarm sounds, press and release any button to stop the alarm, 'Alarm off' is displayed. Alternatively, you can press and release the rotary navigation control to Snooze (see Snooze function below).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Using your CD Micro HiFi

Let's get started

## Snooze

When the alarm sounds you can press and release the rotary navigation control to activate the snooze function. There are 4 snooze options available of 5, 10, 15 and 30 minutes.

1. Repeatedly press the rotary navigation control to cycle through the available snooze options and stop when the Snooze time you would like is displayed. The snooze time countdown will be displayed under the relevant alarm icon, until the alarm sounds again.

## Sleep timer

You can set your HiFi to switch to Standby Mode automatically using the sleep timer. You can choose from Sleep Off, 10, 20, 30, 45 and 60 minutes.

1. Press and hold the Menu button. Use the rotary navigation control to scroll to System settings. Press the rotary navigation control to Select.
2. Use the rotary navigation control to scroll to Sleep and press the rotary navigation control to Select.
3. Use the rotary navigation control to scroll through the available options of Sleep Off, 10, 20, 30, 45 and 60 minutes. Stop when the sleep time you would like is displayed and press the rotary navigation control to Select and Confirm.
4. Press and release the Menu button until you exit from the Menu. The HiFi will go to Standby Mode after the minutes you have set have elapsed.

---

**Note:** To cancel the sleep time, follow the steps to set the sleep time but stop when 'Sleep off' is displayed and press the rotary navigation control to Select and Confirm.

---



 
This page is left intentionally blank





# Other information

# 4

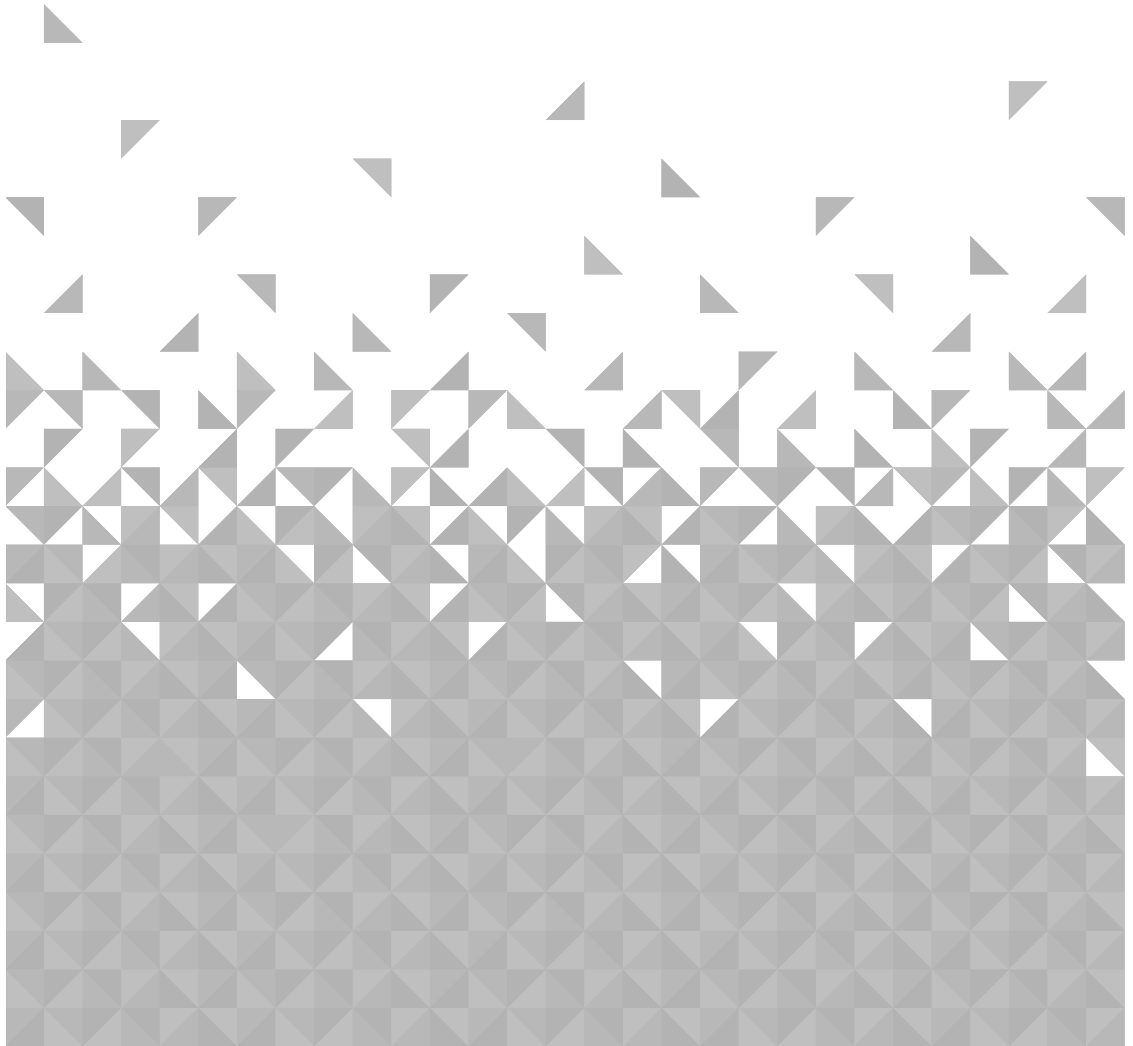

## Other information

Helpful technical information

### Technical specification

Power:	Input: 100-240V 50/60Hz
	Output: DC 6.0V 2.0A 12.0W
	Average active efficiency: 83.34%
	Efficiency at low load (10%): 76.16%
	No-load power consumption: 0.073W
Output:	2 x 3W RMS
Frequency range:	FM: 87.5 MHz to 108 MHz
	DAB: Band III, 174 MHz to 240 MHz
Bluetooth:	Version 5.0
	Profiles A2DP, AVRCP, AVCTP, AVDTP
	Frequency range: 2.4GHz-2.480GHz
Pairing name:	BUSH WO378

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



This page is left intentionally blank

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

**BUSH**

 


This page is left intentionally blank



Product support

5

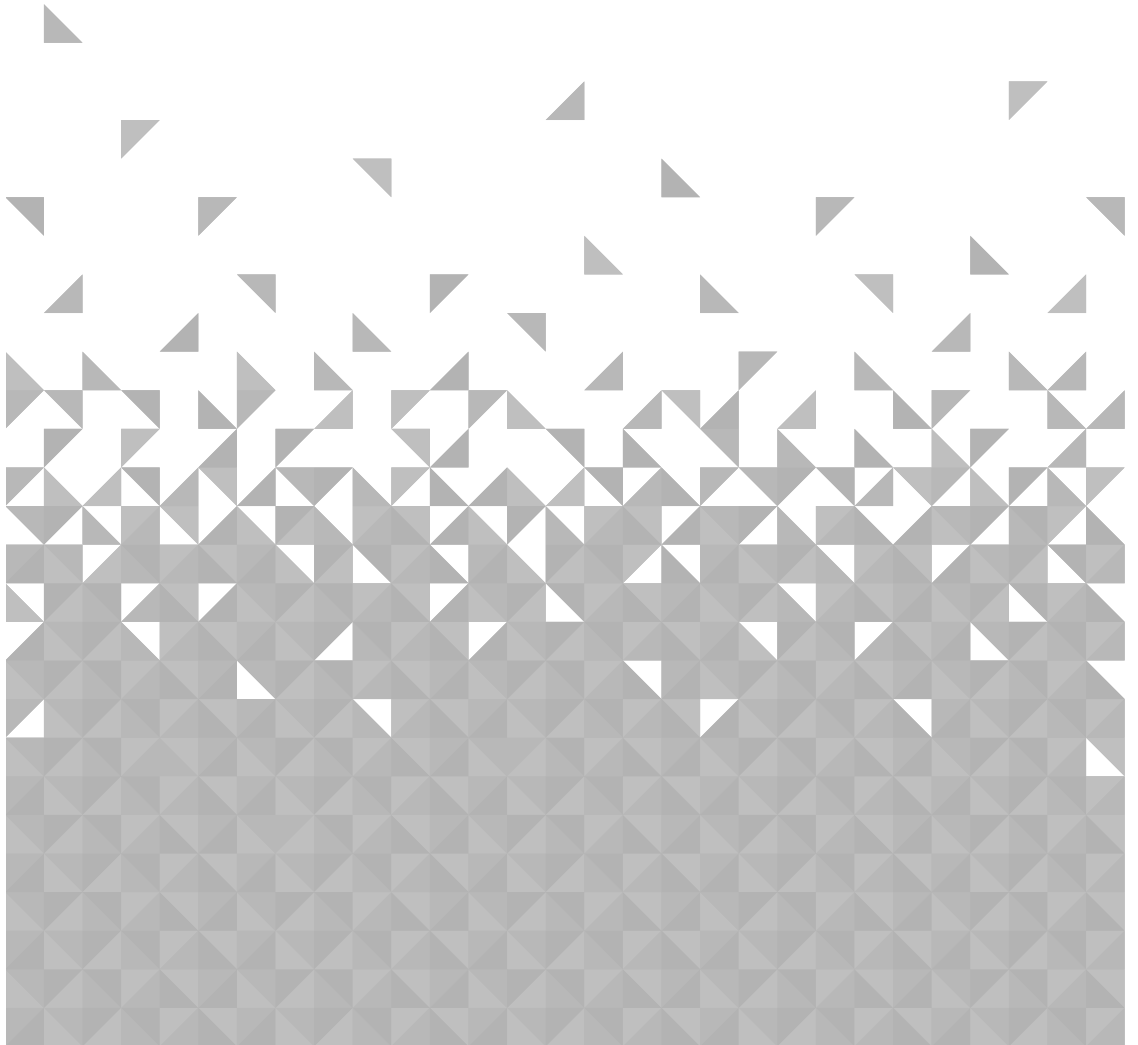

# Product support

Help is always at hand

## Troubleshooting

If you are experiencing problems with your HiFi, there are some quick and easy checks that you can do, which may help to solve the problem.

### CD Does not play:

Check that you are in CD mode. Press and release the Mode button to change the mode (check the display).

Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the HiFi or may skip or not rotate correctly.

Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

### No sound / power:

Adjust the volume using the Vol+ button.

Check that the mains power wall socket is switched on and that the HiFi is not in Standby mode.

You may have headphones connected. Either use the headphones to listen to your HiFi or unplug the headphones.

Check that you are trying to use the function buttons for the mode that you are in.

If you are using a Bluetooth connected device or an external sound source via Aux in. Increase the volume on the secondary device and on the HiFi.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Product support

Help is always at hand

## Radio reception is poor:

Fully extend the Telescopic aerial to get the best reception and sound quality.

Retune the radio station/s, see pages 22 & 27.

Try moving your HiFi to another location to see if reception improves.

Check that you do not have other electrical equipment too close to your HiFi, causing interference.

Visit [www.digitalradionow.com](http://www.digitalradionow.com) for information about DAB reception in your area.

## Unable to pair with a Bluetooth device:

Check that you are In Bluetooth (BT) Mode.

Ensure that you are within range of the radio for Bluetooth functionality, 10 metres or less (33 feet or less).

Move the HiFi and Bluetooth device away from other Bluetooth devices/electrical equipment.

If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

## The function buttons do not respond:

Check that mains power wall socket is switched on and that the HiFi is not in Standby mode.

Check that you are trying to use the function buttons for the mode that you are in.

# Product support

Help is always at hand

## Help and assistance

If you require any technical guidance or find that your CD Micro HiFi All in One System is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the base or rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Product support

Help is always at hand

## Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

## Declaration of Conformance

Hereby, Argos Ltd, declares that this CD Micro HiFi All in One System WO378 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

# Product support

Help is always at hand

# BUSH

## Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

### Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit [www.bushregistrations.co.uk](http://www.bushregistrations.co.uk).

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



This page is left intentionally blank

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

**BUSH**



This page is left intentionally blank





This page is left intentionally blank



# BUSH

Contact:

[www.bush-support.com](http://www.bush-support.com)

Helpline: 0345 600 3021

 DAB Digital  
**Radio**