

BUSH – Vented Tumble Dryer

Installation & User Instructions – Please keep for future reference


764/2382

764/2966

128/8010

481/0722

173/7901

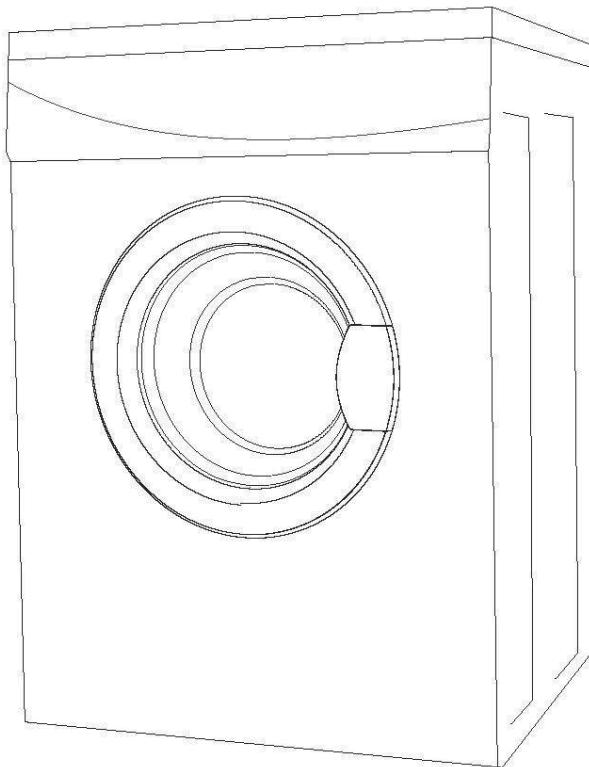


Important – Please read these instructions fully before installing or using

These instructions contain important information which will help you get the best from your appliances and ensure safe and correct installation, use and maintenance.

If you need help or have damaged or missing parts, call Customer Helpline: 0345 257 7271

Contents

Safety Information	2
Parts	3
Installation	4-6
Transportation	4
Installation	4
Hose Connection	5
Electrical Connection	6
User Instructions	7-8
Before first use	7
Garment suitable for drying in tumble dryer	7
Garment NOT suitable for drying in tumble dryer	7
Preparation for the clothes to the dried	7
Load capacity	8
Control panel	8
Operating steps for the machine	9
Full program chart & consumption table	10
Program Selection	10
Ending the program – Cancelled by customer	11
Child Safety Lock	11
Overheat safety device	11
Care and Maintenance	12
General	12
Clean the lint filter	12
Moving your appliance	12
Trouble Shooting	13
Technical Specifications	14
Disposal information	14
Guarantee	15

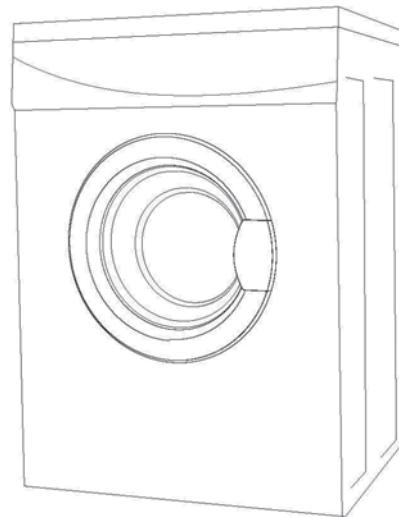

Product codes

TDV6W

TDV6S

TDV6B



Safety Information

Important – Please read these instructions fully before installation

Before use

The installation of this appliance is best carried out by 2 people.

- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for household use. **Do not** use the appliance for industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- For appliance with ventilation openings in the base, that a carpet **must not** obstruct the openings.
- Exhaust air **must not** be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The appliance **must not** be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- **Do not** allow children to play with the appliance to avoid the risk of entrapment and suffocation.
- Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.
- The lint trap has to be cleaned frequently, if applicable.
- Clean lint screen before or after each load.
- Never use the dryer without the lint filter.


During use

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Lint **must not** be allowed to accumulate around the tumble dryer.
- The adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- **Do not** dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber(latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads **should not** be dried in the tumble dryer.
- Fabrics softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.
- **WARNING** : Never stop a tumble dryer before the end of drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Children of less than 3 years should be kept away unless continuously supervised.
- **Do not** attempt to repair the appliance yourself. Contact the Customer Helpline: 0345 257 7271.

Parts

If you have damaged or missing parts,
call the **Customer Helpline: 0345 257 7271**

Please familiarize yourself with the parts and accessories listed below

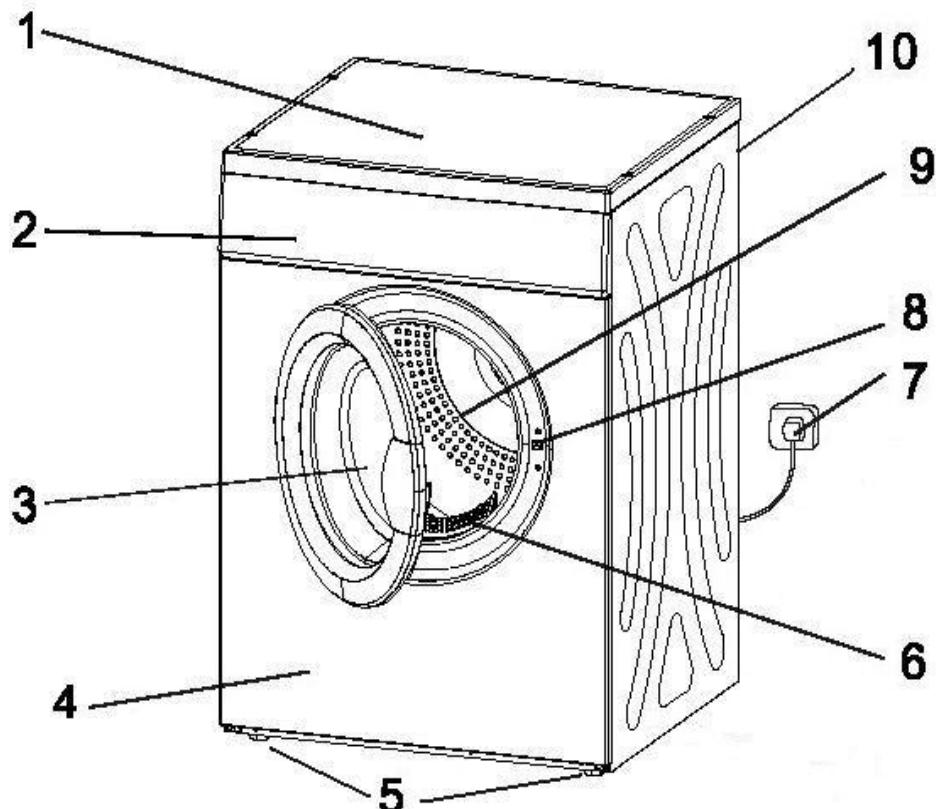


- 1. Top board
- 2. Control panel
- 3. Door
- 4. Front case
- 5. Adjustable feet

- 6. Lint filter
- 7. Plug
- 8. Door sensor
- 9. Tumble drum
- 10. Overheat Safety reset switch (back)

Accessories included

BUSH – Vented Tumble Dryer

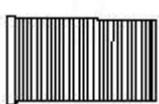

Instructions x 1

Hose (2.5M) x 1

Installation



Transportation

Caution: 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.

- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45°. The packaging as supplied must be intact during transportation.
- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.
- Ensure the supply cable is not caught under the appliance during and after moving.
- Carefully remove all packaging materials including the foam base, dispose of correctly.

Installation

- Ensure sufficient spacing is provided for the appliance to be installed. Leave space on back (10cm) to ensure proper ventilation.
- The room for putting the tumble dryer must be kept for proper ventilation.
- Make sure that your machine is not placed on the power cord.
- Do not place the appliance near a heat source or in direct sunlight.
- Do not put any heavy objects on top of the appliance. It will damage the appliance.
- Do not install the appliance in moist and wet place.
- Adjust the feet at front to level the appliance. It should be installed on a smooth surface to avoid excessive vibration and noise.
- Never unscrew the adjustable feet from their housings.
- Refer to section “User instructions” to prepare your appliance for use.

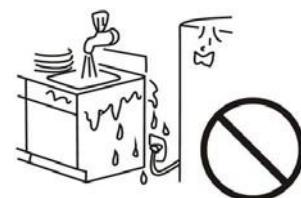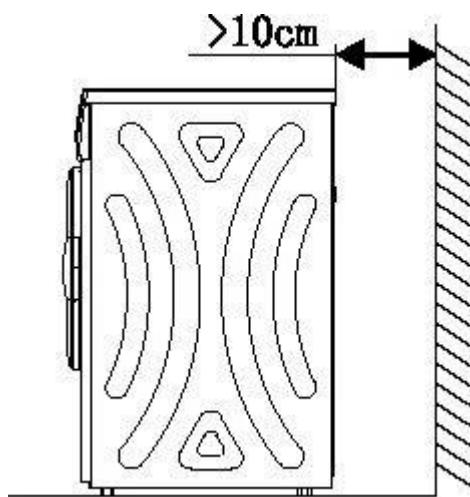

Installation

Hose connection

Warning: 2 people may be required to install the hose. It is recommended to wear the gloves.



NOTE : Ventilation hose assures exhausting of the air from the inside of the tumble dryer.

- Carefully remove all packaging materials including from the foam, dispose of correctly.
- Before installation, ensure that the unit is power off and unplug from the mains.

1. Connect hose to the air outlet of the machine.
2. Extended the hose to the suitable length.
3. Route the hose to the outdoors via a window or it can be connected to an outlet in the wall (see the diagrams).

- The air outlet hose must be extended directly to the outdoors. There must be in minimum number of elbows as not to hinder air ventilation.
- To prevent water accumulation in the hose, make sure the hose is not folded on the floor.
- In winter, the room temperature may be cold. The water may condense inside the hose. Period check is required to avoid hose damaged by the water.

Warning: Do not connect the hose to the chimney of a stove or fireplace.

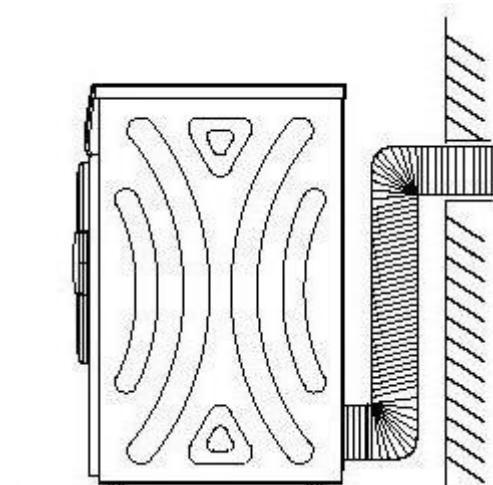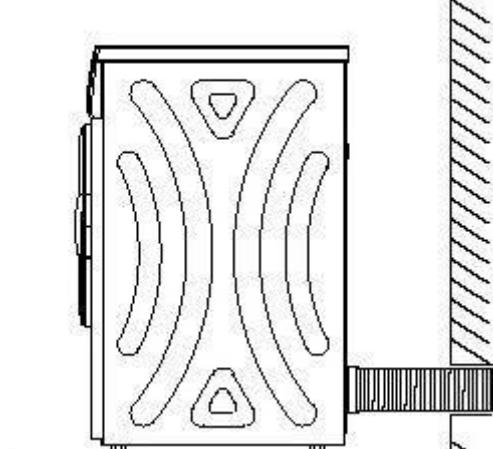

Installation

Electrical connection

Any electrical work that is required to install this appliance MUST be carried out by a qualified electrician.

Warning: THIS APPLIANCE MUST BE EARTHED

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house is in accordance with the related local regulations.
- Do not damage the refrigerant circuit.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Ensure the power socket is suitable for the maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- The use of adapters, multiple connectors or extension cables are not recommended.
- The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.
- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362/A must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

Plug replacement (UK & Ireland only)

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue – Neutral 'N'

Brown – Live 'L'

Green & Yellow – Earth 'E'


As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The green & yellow wire must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol.

The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

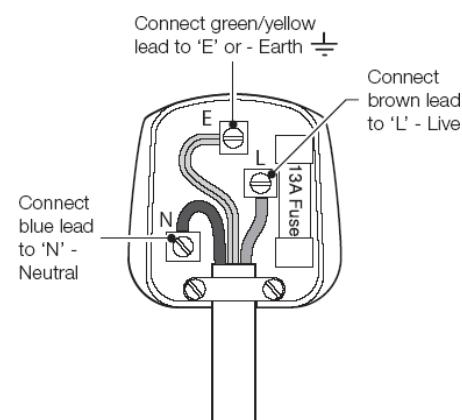

User Instructions


Before first use

Final checks before operating the appliance

1. Good air circulation around the appliance positioned.
2. The feet have been adjusted for perfect levelling.
3. Check the hose has been extended to the outdoors.
4. Plug in the appliance.

Garment suitable for drying in tumble dryer

Before using the tumble dryer, you have to ensure the laundry is suitable to dry in the tumble dryer. Always follow the advice on the garment labels. Dry only the laundry with the label stating they are suitable for drying in the dryer and select the appropriate program.

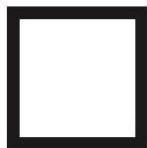

Dry



Do not dry




Do not tumble dry



Tumble dry, high heat



Tumble dry, middle heat

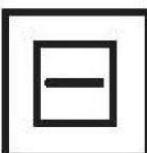


Dry horizontally



Hang without spinning



Dry on a hanger

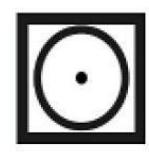

Tumble dry, low heat

Garment NOT suitable for drying in tumble dryer

- Do not dry articles that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not dry the articles containing rubber, plastic or similar elastic materials such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, raincoat plastic bags or pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.
- Do not dry clothes / articles made of foam or rubber as they may be deformed.
- Clothes / articles made of or contain metal, hard plastic and similar materials, such as belt buckles, jeans, bra wires, buttons and similar accessories will damage the machine and may cause breakdown. Do not place such item in the tumble dryer.
- Do not dry items such as woolen, silk articles and nylon stockings, delicate embroidered fabrics, garments with metal accessories and items such as sleeping bags.
- Too wet laundry or laundry with dripping water must not be put into the tumble dryer.

Preparation for the clothes to the dried

- Thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
- Separate your laundry before placing them into the tumble dryer.
- Sorting the laundry according to their types and thickness. Put the same type of laundry together.

User Instructions

Load capacity



Caution : Overload is not recommended. The drying performance will be degraded when it is overloaded. The machine and your clothes may get damaged.

Please refer to the program table to select the desire loading for each setting. Do not overload the machine.

- Following table can provide you the idea of the weight for different kind of clothes.

Articles / clothes	Approx. weight(g)
Cotton quit covers (single/double)	900/1500
Bed sheets (single/double)	600/900
Work clothes	1120
Large tablecloths	700
Small tablecloths	350
Tea napkins	100
Bath towels	700
Hand towels	300
Blouses	150
Cotton shirts	300
shirts	180
cotton dresses	500
Jeans	800
Jacket	800
Handkerchiefs	100
T-shirts	150
Short pants	70
Socks	50

- Place your clothes into drum loosely so that they have enough room during drying and will not get tangled.

Control panel

Power knob


- To turn on the machine press once.
- To turn off the machine press once again.

Start / pause knob

- To start the set program, press once.
- To pause the running program, press once. To continue the program, press once again.

Program

- Continue to press the program knob to select the desire drying program (Extra/middle/light/1 HR). The indicator next to the selected program will be laminated.

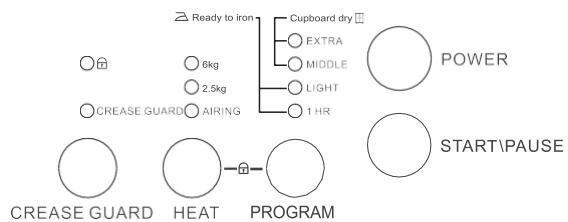

User Instructions

Heat

- Continue to press the heat knob to select the desire heat setting(6kg(full)2.5kg(partial)/airing) . The indicator next to the selected program will be laminated.

Crease Guard

- To turn on the crease guard, press this knob once. The crease guard indicator will be laminated. To turn it off, press the knob once again. The crease guard will be off and the indicator will go off.

Child safety lock ()

- It is to avoid the operation interrupted by the child.
- Lock : press both heat and program knobs for 3 seconds, the child safety lock indicator will be laminated denoting entering the child-lock state.
- Unlock : press both heat and program knobs for 3 seconds, the child safety lock indicator will go off denoting that the lock is released.

Operating steps for the machine



Caution

Before using the machine, you should study the program chart to select the desire program setting for your clothes.

1. Open the loading door.
2. Check the lint filter is installed. If not, please ensure to install it.
3. Load your clothes into drum loosely. Do not overload the machine.
4. Turn on your machine by pressing “POWER” knob. The “Middle” & “6kg” indicator lights will laminate.
5. Select the desire program for your clothes, i.e. Extra-Full-Crease Guard
- Continue to press “PROGRAM” knob until the indicator for “EXTRA” is laminated.
- Continue to press “HEAT” knob until the indicator for “6kg ” is laminated.
- Press “CREASE GUARD” once and the indicator is laminated.
6. Close the loading door.
7. Press “START/PAUSE” knob to start the drying cycle.
8. When the drying cycle is finished, it will beep one time.
9. Open the door and wait for several minutes in order to let the temperature inside the capacity to cool down.
10. Turn off the machine by pressing “POWER” knob. All the indicator lights will go off.
11. Remove all the clothes from the drum.
12. Clean the drum and pull out the lint filter to clean before next use.

Remark : The door is equipped with a sensor. When the door is opened during the operation, the program will change to pause mode immediately. You can close the door and press “START/PAUSE” to continue the operation. If you want to stop the operation, please press “POWER” to stop and switch off the machine.

User Instructions

Full program chart & consumption table

Choose the appropriate program in the below table which affect the time of the drying cycle.

Program	Details of program
Extra	For drying thick or multi-layered laundry such as towels and bedding, where the laundry is required to be dry at program end.
Middle	For drying laundry to a dryness level suitable to be put away into drawers and wardrobes.
Light	For drying all laundry to a moisture level that is ready to be ironed. A minimum level of moisture will be retained in the clothes to aid ironing.
1 Hour	A timed program of approximately 1 hour. Dryness level will be dependent on the amount of clothes within the machine.

Program Selection

Program	Heat setting	Customer expected result	Capacity (KG)	Washing machine spin speed (rpm)	Approx. amount of remaining humidity	Approx. Drying time (minutes)
Cotton 						
Middle**	6kg(full)	Cupboard dry	6	1000-1200	60%	125
Extra	6kg(full)	Cupboard dry	6	800-1000	70%	140
Middle	6kg(full)	Cupboard dry	3	800-1000	70%	75
Light	6kg(full)	Ready to iron	6	800-1000	70%	105
1Hr	6kg(full)	Ready to iron	3	800-1000	70%	60
Light	2.5kg(partial)	Ready to iron	1	800-1000	70%	45
Fiber 						
Middle	6kg(full)	Cupboard dry	6	800	40%	90
Light	2.5kg(partial)	Cupboard dry	3	800	40%	40
Delicates						
Light	6kg(full)	Cupboard dry	1	600	50%	35
Clothes equal or less than 1kg						
1Hr	6kg(full)	/	<=1	/	/	60
Energy consumption values						
Program	Heat setting	Customer expected result	Capacity (KG)	Tumble machine spin speed (rpm)	Approx. amount of remaining humidity	Energy consumption value kWh
Cotton 						
Middle***	6kg (Full)	Cupboard dry	6	50	0.02%	3.81
Middle	2.5kg(partial)	Cupboard dry	2.5	50	12%	2.05

***:This is the standard cotton program (EN61121:2012). It is suitable to dry normal wet cotton laundry and it is the most efficient programme in term of energy consumption for drying for drying wet cotton laundry.

- All values given in the table have been fixed according to EN61121:2012 Standard. These values may deviate from the table according to the laundry type, laundry spin speed, environmental condition and voltage fluctuation.
- Heat setting “Airing” – it can only use “1HR” program for drying the clothes. The heater will be off for this setting.
- Crease Guard is the anti-crease function. Once it is selected, the machine will rotate the laundry for 30 seconds after the drying program has been finished.
- When the weight of the clothes is less than 1kg, please use the “1HR” program with “6kg” heat setting.

User Instructions

Ending the program – Cancelled by customer

To cancel the program ;

1. Press “POWER” knob.
2. The machine will stop immediately.
3. Open the door and wait for five minutes to let the temperature inside to cool down.
4. Remove all the clothes.



Warning : The temperature inside the capacity may still be high. Take extra care when remove the clothes.

- Clean the drum and lint filter after each dying.

Child safety lock

This machine is equipped with a child safety lock (🔒) to prevent any program interruption due to the pressing of knobs during the drying operation. All the knobs on the panel are deactivated when the child safety lock is active except the Power knob.

- To active the lock : press both heat and program knobs for 3 seconds, the child safety lock indicator will be laminated denoting entering the child-lock state.
- To de-active the lock : press both heat and program knobs for 3 seconds, the child safety lock indicator will go off denoting that the lock is released.

Overheat Safety device

This machine is equipped with a overheat safety device that switches off the machine in the event of overheating. Should the machine stop heating, turn the machine off and inspect lint filter or exhaust outlet or ventilation of the laundry room.

Blockage on the filter & exhaust outlets (hose) and poor ventilation in laundry room will cause the overheating on the machine. Clean the blockage on filter & exhaust outlet and open the window in the laundry room to improve the situation. Wait for at least 10 minutes for the machine to cool down. Then press the reset key at the back of the machine before attempting to restart the machine.



Care and Maintenance

General



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Use luke warm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause a damage and fire hazard.
- Clean the exterior of the appliance, inner tube and door seal with a damp cloth. Open the door for aeration to dry the inner tube through.
- Avoid water goes in the control panel. Clean with a dry cloth only.
- Clean the lint filter after each use.

Clean the lint filter



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Clean the lint filter after each use.
- Pull it upward to remove the filter from the machine.
- Clean the filter with the damp cloth.
- Put it back to the machine after cleaning.



Moving your appliance

Moving

Refer to section “Transportation” under “Installation”

Trouble Shooting

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below. If the problem persists, contact the retailer if the machine is still under guarantee. If the machine is out of guarantee, contact an approved service agent on **0345 257 7271**.

Problem	Possible cause	Solution
Appliance does not start	<ul style="list-style-type: none">• The mains plug is not plugged in.• Protection devices or fuses of the electrical system at home open• Machine is overloaded.	<ul style="list-style-type: none">• Insert the mains plug.• Check the protection devices and fuses.• Remove the clothes until the weight of clothes is less than 6 kg.
Laundry has shrunk	<ul style="list-style-type: none">• Incorrect program is used• Clothes are not suitable for drying in dryer.	<ul style="list-style-type: none">• Review the advice on garments label to select the suitable program setting.• Dry only the clothes which is suitable for drying in the dryer.
Laundry not dry enough at the end of drying	<ul style="list-style-type: none">• Too many clothes put into the machine at the same time.• Lint filter is not dirty and not yet clean	<ul style="list-style-type: none">• Reduce the quantity of clothes for the drying each time. Do not overload• Clean the lint filter after each use.
Laundry too dry	<ul style="list-style-type: none">• Not taken out the clothes in time while the drying cycle is finished.• Incorrect program is used	<ul style="list-style-type: none">• Take out the clothes immediately while the drying cycle is finished.• Review the advice on garments label to select the suitable program setting.
Noisy appliance	<ul style="list-style-type: none">• Not position on even surface• Appliance is touching objects around	<ul style="list-style-type: none">• Install on even surface and leveling the appliance• Ensure spacing at both sides and above the appliance

Technical Specifications

Model	TDV6W TDV6S TDV6B
Energy efficiency class ①	
Energy consumption – per year ②	452 kWh
Rated capacity (max.)	6kg
Operating noise level dB(A)	
Net Weight	33kg
Rated power input	2000W
Rated voltage/Frequency	
Minimum operating temperature	5°C/41°F

NOTE :

- ① A+++ (most efficiency) to D (least efficiency)
- ② Energy consumption 452 kWh per year, based on Standard cotton program at full(6kg) and partial(2.5kg) load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.



This appliance complies with the following EEC directives:
2006/95/EEC Low voltage directive
2004/108/EEC EMC directive

Disposal information



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

Remember: Old machine must be disposed of carefully – Cut off the mains plug and /or remove the door to be unusable before disposed - if in doubt, contact your local council for details on how to dispose of an old dryer.

Guarantee



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the Customer Helpline on 0345 257 7271.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

