

工厂型号	客 户 型 号	改稿日期	制 稿 人
FH-15AT	FH-15AT	2024/7/20	myl
尺 寸	材 质		印 刷 颜 色
145x210mm	双胶纸，具体以采购合同为准		单色
备 注	/	/	
<div><div><div></div></div><div>注：印刷前请与此文件仔细核对。如有疑问，请及时与我联系！ (如未发源文件，请对照“改稿日期”“版本”信息，对上再进行安排)</div></div>			

BUSH

Instruction manual.

2kW Flat Fan heater.  
Model number FH-15AT



This product is only suitable for well insulated spaces or occasional use.  
Please read the instructions fully before use.

BUSH



Safety information important- please read the instructions fully before operating.  
For household and indoor use only.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
  - Use only the voltage specified on the rating plate of the heater.
- WARNING:** in order to avoid overheating do not cover the heater.  
**WARNING:** To reduce the risk of fire, keep textiles, curtains, or other flammable materials at least 1 m away from the air outlet.
- Only use this heater on a horizontal and stable surface.
  - Do not place the heater immediately below a socket outlet .
  - Do not use this appliance with a programmer, timer, separate remote-control system, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
  - To avoid risk of overloading your plug socket, the use of an extension lead with this heater is not recommended.
  - Important- this heater is intended for floor use only. Do not mount on ceiling's or walls.
  - Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
  - Do not leave the appliance unattended.
- WARNING:** Do not use this heater in small rooms, when they are occupied by people unable to leave the room alone, unless constant supervision is provided.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.
  - Children should be supervised to ensure that they do not play with the appliance.
  - Children less than 3 years should be kept away unless continuously supervised.
  - Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they

BUSH

2

have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**CAUTION- some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Always switch off the heater before removing the plug from the power socket.
- Do not remove the plug from the power socket by pulling on the cord, always grip the plug to remove.
- Always unplug the appliance when not in use, when moving the appliance or before cleaning.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not twist, kink or wrap the cord around the appliance as this may cause the insulation to weaken and split.
- Do not run the power cord under carpets, rugs etc.
- Do not cover or restrict the airflow to the inlet or exhaust grilles, restricted airflow can cause the appliance to overheat and become a fire risk.
- Do not insert or allow any foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage the appliance.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Do not use the heater on deep pile carpets or long hair type rugs. Keep combustible materials sch as drapes and other soft furnishings away from the heater.

BUSH

3

Before using your heater.

Make sure you have read and fully Understood the safety instructions before operating the fan heater.

- Choose a safe, horizontal, stable surface to place your heater and position the power cord so not to create a trip hazard.
- Make sure the On/Off/Fan/Heat control is switched to Off 'O'
- Plug the power cord into a suitable power socket.



1. Air outlet
2. Air intake
3. Thermostat control
4. Indicator light
5. On/Off/ Fan/ Heat control




**WARNING:** in order to avoid overheating do not cover the heater.

BUSH

4



Operating instructions.

Fan only mode.

- Turn the Fan on by turning the On/Off/Fan/Heat control (5) to  and rotating the thermostat dial to maximum position. Turn back to 'O' to switch off.
- You can use the fan without heat at any time during the year to circulate the air within the room.

Fan with heat mode.

There are 2 heat settings to select from Low (1Kw) and High (2kW)

- To select the low heat setting. Rotate the On/Off/Fan/Heat control (5) to the low heat position (). Turn back to 'O' to switch off.
- To select the high temperature setting, rotate the On/Off/Fan/Heat control (5) to the High heat position (). Turn back to 'O' to switch off.
- Rotate the Thermostat control (3) clockwise to increase the room temperature and anticlockwise to decrease the room temperature as desired.

Thermostat control.

Setting the temperature is easy to do.

- Select the heat setting as above, then rotate the thermostat control to maximum position. Once the desired room temperature has been reached, turn the thermostat control anticlockwise until it clicks off then turn the control clockwise slowly until it clicks back on. The thermostat will now maintain the set temperature.
- The heater will turn on and off automatically maintaining the room temperature that you have set.
- You may need to adjust the thermostat control to fine tune the ideal room temperature.

**Note:** for a more economic use of your heater, it is suggested to initially run the fan on High until the room temperature has been reached, then set the heater to the low heat setting.

Tip over switch.

The heater is fitted with a safety switch which cuts the heater off if it falls over. This switch is located under the base. The heater needs to be placed on a firm and level surface in order to operate. Standing the unit on the long pile carpet may not activate the switch.

BUSH

5

Overheat safety cut-out.

Your heater is fitted with a safety device the switches off the heater in the event of overheating. Should the heater stop working, turn the heater off and inspect for blockage of air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater. If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service center for examination or repair.

Care and Maintenance.

The heater requires regular cleaning to ensure trouble free operation:

- Always turn off unplug the heater from the mains supply before cleaning.
- Make sure the appliance has cooled down completely before cleaning.
- Use a slightly damp cloth to wipe the exterior of the heater to remove dust and dirt.
- Use a vacuum cleaner or compressed air to remove dust and fluff from the inlet and outlet grilles.
- Ensure the heater is dry before plugging back into the mains supply.
- If the heater has collected dust or dirt inside the unit or around the element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.

Storage

- Do not store appliance while it is still hot.
- When not in use, clean the heater before storing away in the original or similar sized box.
- Store the heater in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

Technical Specifications.

Bush 2kW Flat Fan Heater	
Model number	FH-15AT
Input rated voltage	220-240V 50Hz
Output rated wattage	1000/2000W
Weight	1.13kg
Dimensions	W270xD260xH120mm
Recommended room size	20m²

BUSH

6

Produced in China for Argos Limited, London, EC1N 2HT, UK.  
Argos (N.I.) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.



Recycling electrical products.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), click on "bank locator" and enter your postcode to find your nearest recycling site.

Plug and wiring advice.

The wires in this mains lead are coloured in accordance with the following UK electrical code:

Non-rewireable plug

This appliance may be fitted with a "non-rewireable" plug. If you need to change the fuse in a "non-rewireable" plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.


Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

BLUE = NEUTRAL

BROWN = LIVE

GREEN + YELLOW = EARTH

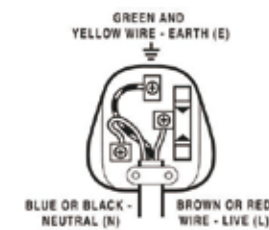

BUSH


7

Information requirement for electrical space heater.

Table	Model identifier for electric local space heaters			
Model number:	FH-15AT			
Item	Symbol	Value	Unit	
Heat output				
Nominal heat out-put	P <sub>nom</sub>	1.8-2.0	kW	
Minimum heat output (indicative)	P <sub>min</sub>	0.015	kW	
Maximum continuous heat output	P <sub>max,c</sub>	2.0	kW	
Auxiliary electricity consumption				
At nominal heat output	e <sub>l,nom</sub>	0	kW	
At minimum heat output	e <sub>l,min</sub>	0	kW	
In standby mode	e <sub>l,sb</sub>	0	kW	
Type of heat input, for electric storage local space heaters only (single select)				
manual heat charge control, with integrated thermostat			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
manual heat charge control with room and/or outdoor temperature feedback			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
electronic heat charge control with room and/or outdoor temperature feedback			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
fan assisted heat output			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
Type of heat output/room temperature control (single select)				
single stage heat output and no room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
Two or more manual stages, no room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
with mechanic thermostat room temperature control			<input checked="" type="checkbox"/> Yes <input type="checkbox"/> No	
with electronic room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
electronic room temperature control plus day timer			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
electronic room temperature control plus week timer			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
Other control options (multiple selections possible)				
room temperature control, with presence detection			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
room temperature control, with open window detection			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
with distance control option			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
with adaptive start control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
with working time limitation			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
with black bulb sensor			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	
Contact details	Produced in China for Argos Limited, London, EC1N 2HT, UK Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.			

BUSH

8

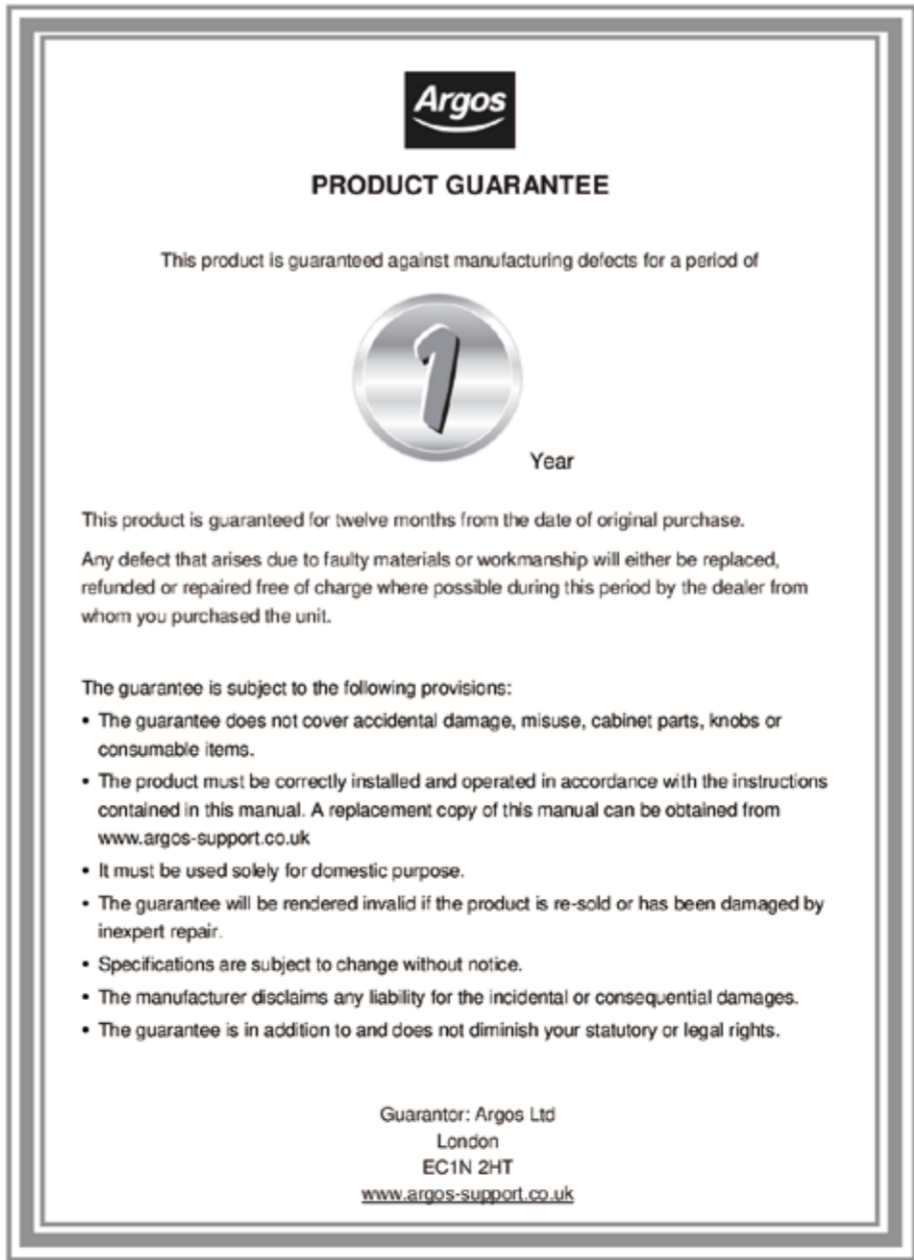

BUSH

9