

048-012

ENGLISH

rock  candy™



WIRED CONTROLLER for XBOX ONE™



# Congratulations on your purchase of the Rock Candy Wired Controller for Xbox One™!

## FEATURING

- Bright, fun colors
- Impulse triggers
- Rumble motors

## CONTENTS

- 1 Rock Candy Wired Controller for Xbox One™
- 1 8ft. removable USB cable

## IMPORTANT



- Not compatible with Xbox One™ Accessories that require an expansion port. For device compatibility see: [xbox.com/xboxone/controllercompatibility](http://xbox.com/xboxone/controllercompatibility).
- To chat use either the Kinect or a Wireless Xbox One™ Headset.

## Connecting your controller

- 1 Connect the **small (micro) USB** end of the cable into the **back of the controller**.




- 2 Connect the **large (standard) USB** end of the cable into the **Xbox One™ via a USB port**. Proceed to step 3 if the Xbox One™ is off, otherwise proceed to step 4.

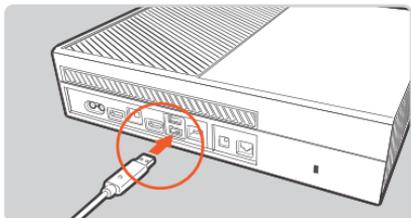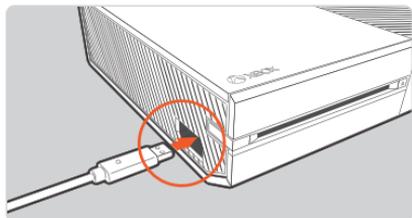

## Connecting your controller (continued)

- 3** Turn on the **Xbox One™** by either **touching the Xbox Button** on the **console** or **pressing the Xbox Button** on the **controller**.

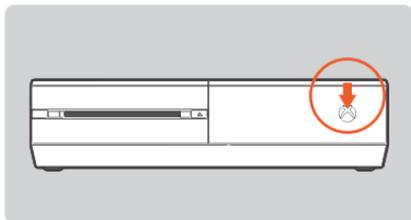


- 4** The **white LED indicator** above the Xbox Button will **light up**. **You are ready to play.**



## Troubleshooting

If the controller is not working there are several solutions:

- Is the **Xbox One™** turned on and running properly?
- Is the **TV** turned on and set to the **correct source**?
- Is the **cable plugged in on both ends** (the console and controller)?
- Is the **quick release connector** at the large (standard) USB end of the cable **connected**?

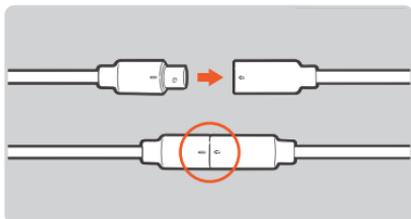

If all the above are true, and if any further issues arise, please contact PDP Customer Support at [www.pdp.com](http://www.pdp.com) or **1 (800) 331-3844** (USA and Canada only).


# Controller anatomy



Micro USB Plug

Quick Release Connector

USB Type A Plug

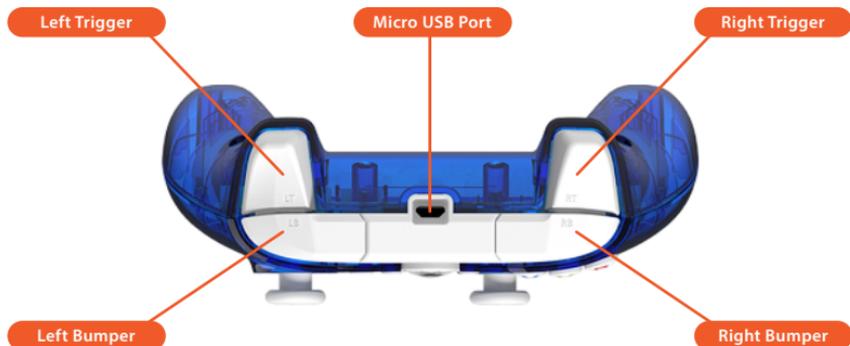

# Maintaining your controller

**Minimum maintenance is required.** Clean your controller with a microfiber cloth every other month.

## Warranty

2 year limited warranty. See [www.pdp.com](http://www.pdp.com) for details.

## Legal

© 2014 Performance Designed Products, LLC. Performance Designed Products, PDP, Rock Candy, Pick Your Flavor, Color is Expression, the flavor names and their respective logos are trademarks and/or registered trademarks of Performance Designed Products, LLC. TouchSense® Technology Licensed from Immersion Corporation. Protected under one or more of the U.S. Patents found at the following address [http://bit.ly/IMMR\\_patents](http://bit.ly/IMMR_patents). All other trademarks are the property of their respective owners. All rights reserved.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



[www.pdp.com](http://www.pdp.com)