

BUSH

Instruction manual

DF910





You'll soon be enjoying your new Digital Picture Frame.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Digital Picture Frame. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your Digital Picture Frame

Ready? Let's begin	10
Accessories	10
Features	11
Fitting and positioning the stand	12
Powering the picture frame	12

3 Using your Digital Picture Frame

Main menu	14
Selecting the input media	14
Photo mode	15
File browser mode	16
Deleting an image	16
Calendar	17
Security lock	17
Setup menu	18

4 Other information

Care & maintenance	22
Technical specification	22

 
Contents

5 Product support

Troubleshooting	24
Help and assistance	25
Disposal	26
Guarantee	27

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Safety information 1

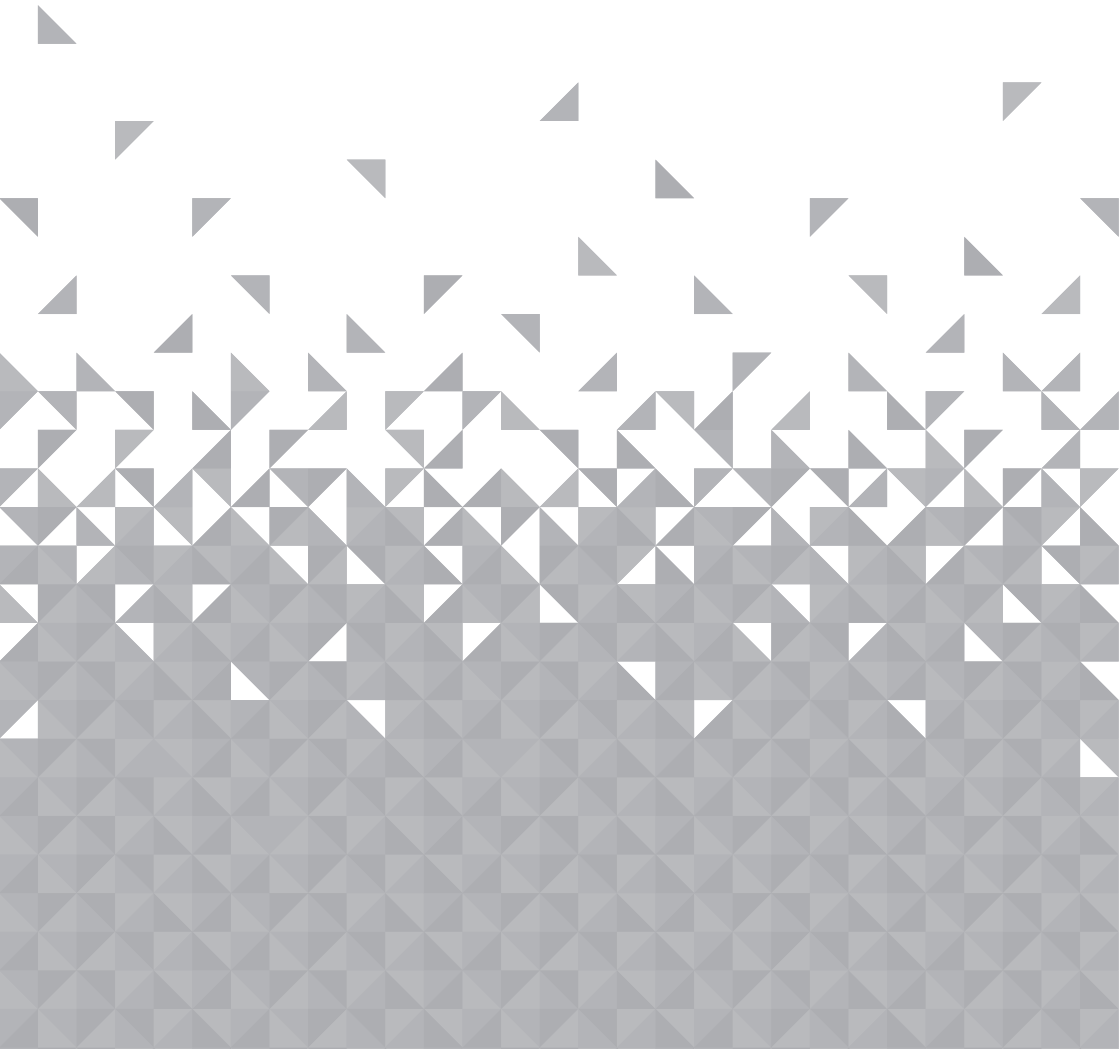



Safety information

Important - Please read these instructions fully before installing or operating

Power source



- This symbol means that this unit is double insulated. An earth connection is not required.
- The appliance must be connected to a 100-240 volt 50/60Hz AC supply by means of a three pin socket.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.



- Opening or removing covers may expose you to dangerous voltages or other hazards.



- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plug completely.



- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- When installed, the power socket must be within easy reach.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

Heat sources and flames



- Batteries shall not be exposed to excessive heat such as sun, fire or the like
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

 
Servicing and repairs

- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

This page is left intentionally blank

Getting to know your Digital Picture Frame

2

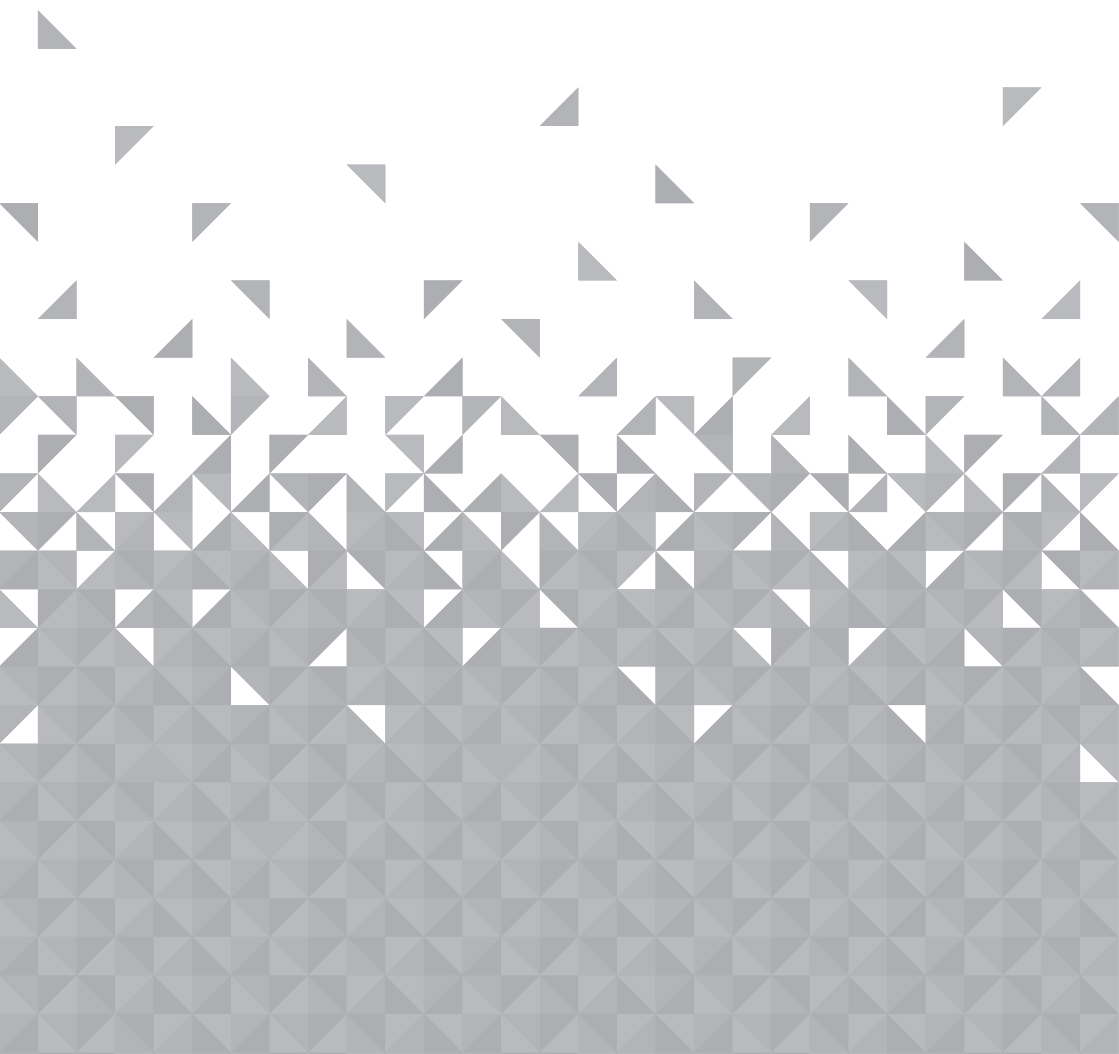

Getting to know your Digital Picture Frame

You'll be up and running in no time

 
 
 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories

1. Digital Picture Frame
2. Stand
3. Mains adaptor
4. Instruction manual

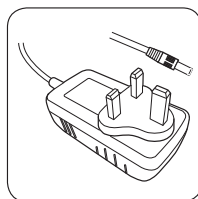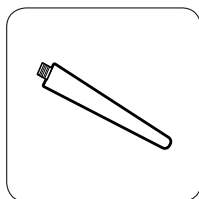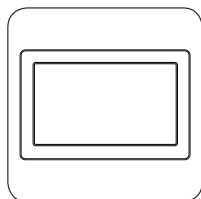


REMOVE THE CLEAR PLASTIC FILM FROM THE DISPLAY BEFORE USE.
SD CARD & USB FLASH DRIVE ARE NOT SUPPLIED.
AUDIO PLAYBACK IS NOT SUPPORTED.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Digital Picture Frame

 You'll be up and running in no time

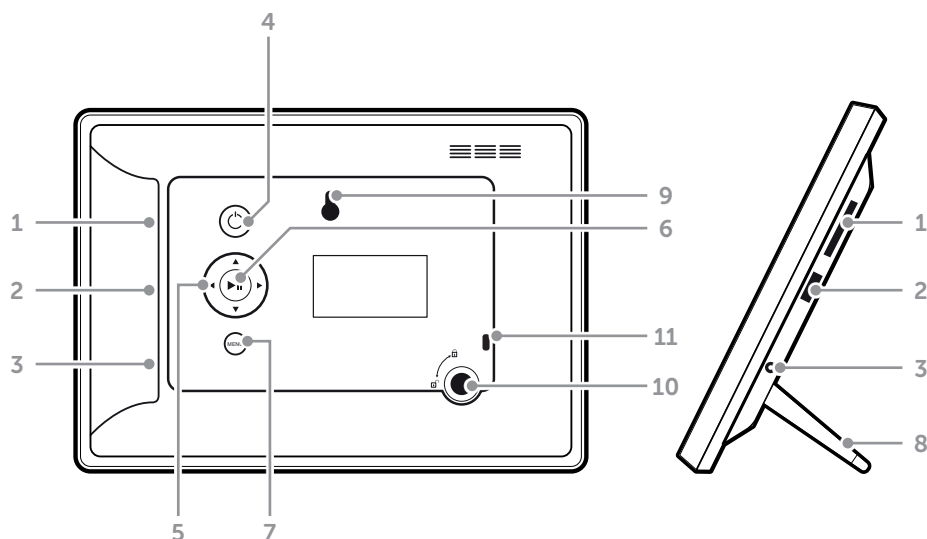

- | | |
|-------------------------|---------------------------|
| 1. SD/MS card input | 7. MENU button |
| 2. USB input | 8. Stand |
| 3. POWER input | 9. Keyhole hanging hook |
| 4. STANDBY POWER button | 10. Stand screw hole |
| 5. NAVIGATION buttons | 11. Security locking port |
| 6. PLAY/PAUSE button | |

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Getting to know your Digital Picture Frame


You'll be up and running in no time

Fitting and positioning the stand

Before powering on the device, you will need to fit the stand (8) in order for the frame to stand up un-assisted. Screw the stand into the hole provided (10), in a clockwise direction until you feel it is tight enough. **(Fig 1)**


The picture frame can be rotated 90 degrees and stood in a portrait orientation

 Fig 1.

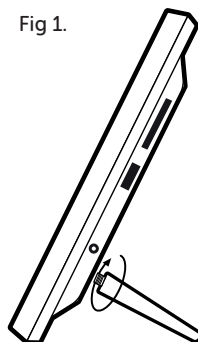

Powering the picture frame

 1. Connect the mains adaptor DC plug into the Power Input socket on the side of the picture frame (3) and insert the mains adaptor into mains socket.
2. Press the STANDBY POWER button (4); (press again to turn off the device).

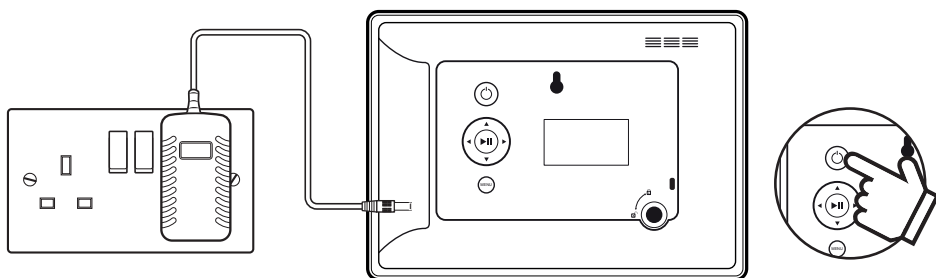


The Digital picture frame will now power up. If you have an SD card or USB flash drive inserted the device will detect images and automatically start a slide show. If no media is detected the main menu will appear.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Digital Picture Frame

 3

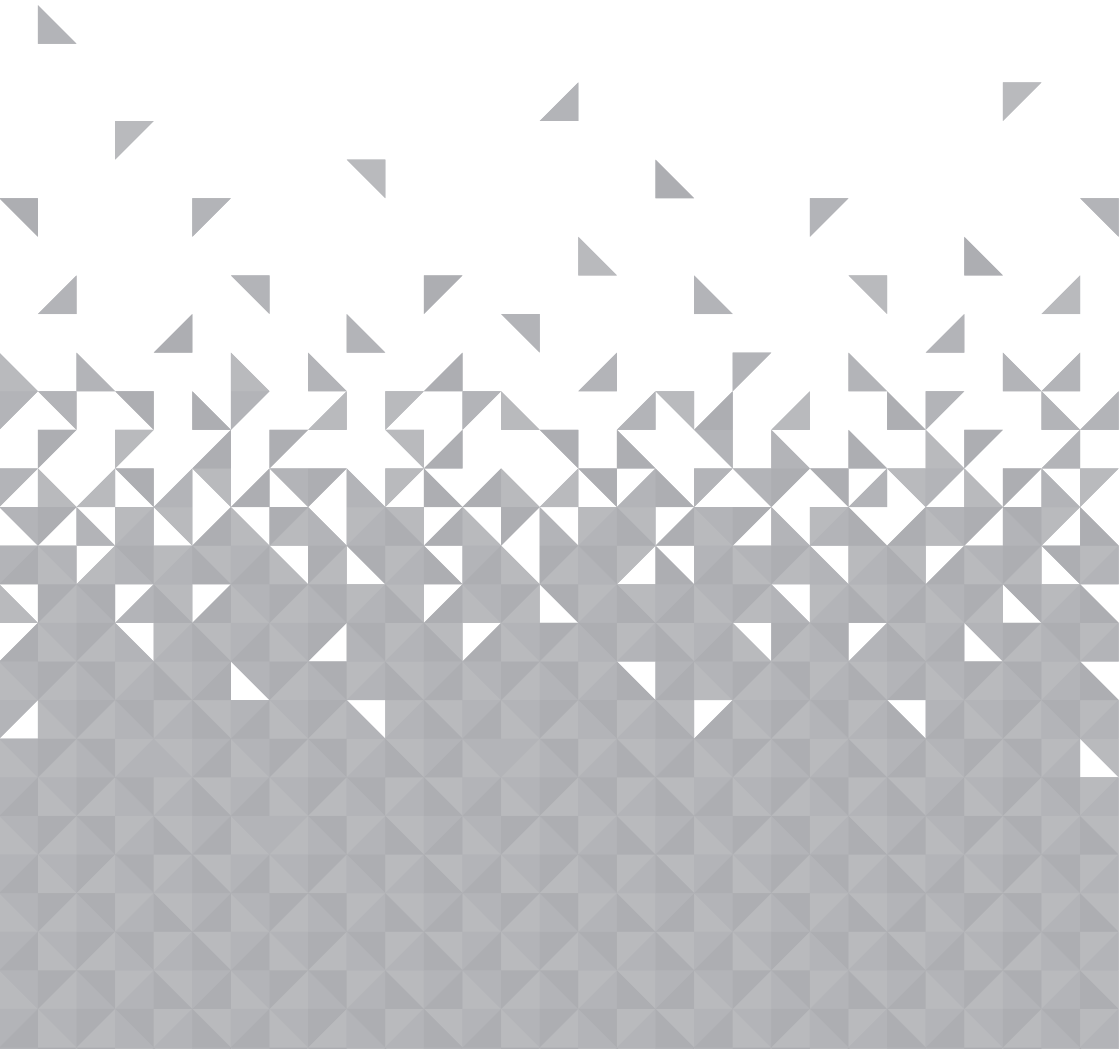


Using your Digital Picture Frame

Let's get started

Main menu

1. Access the main menu by pressing the MENU button (7). Navigate this menu using the ◀/▶ buttons (5), and the PLAY/PAUSE button as ENTER.
- The menu consists of : PHOTO, FILE (BROWSER), CALENDAR & SETUP.

 Selecting the input media

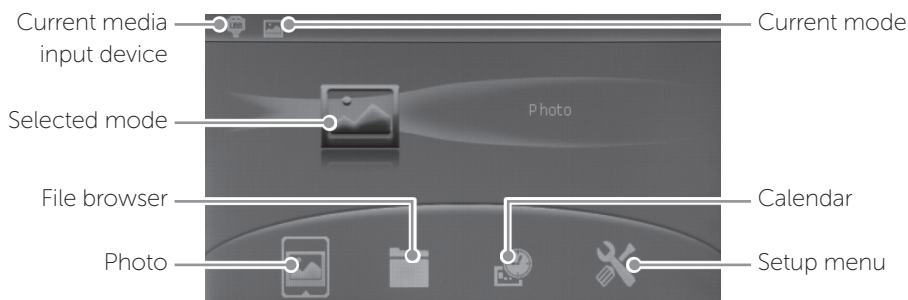

1. To select the active input media press the MENU button (7) until you reach the MAIN MENU.
2. Press the MENU button (7) once more to display the media selection screen.
3. Use the ▶ navigation button (5) to select the input required and press the PLAY/PAUSE button
4. After selecting the media input device you will see an icon appear on the top left of the MAIN MENU to indicate which media input is currently active. See below diagram for other features of main menu.


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Digital Picture Frame

Let's get started

Photo mode

When you activate the Photo function (by pressing the PLAY/PAUSE button) a screen displaying thumbnail images of the first 6 compatible files on the input media selected.

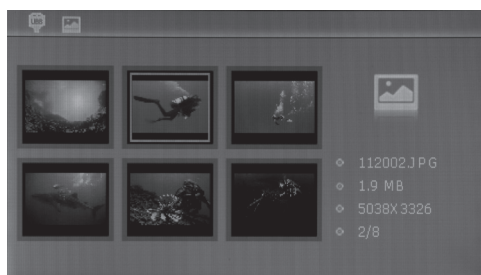 

- Navigate using the ◀ / ▶ / ▲ / ▼ buttons (5).
- Press PLAY/PAUSE (6) to select an image to view full screen.
- To begin the slideshow function press the PLAY/PAUSE (6) once more. You will see a Triangle appear in the bottom right corner to indicate the slideshow is active (this is only visible for 2 seconds).
- To PAUSE the slideshow on the currently displayed image press the PLAY/PAUSE (6) button. Press again to resume the slideshow.
- Use the ◀ / ▶ buttons (5) to skip to the next or previous image.
- Press the ▼ button to load the next 6 images when the 6th thumbnail is selected.
- Use the ▲ / ▼ buttons (5) to rotate the currently displayed image.
- Return to the photo menu by pressing the MENU button (7).

Using your Digital Picture Frame

Let's get started

File browser mode

This option when activated presents a screen split into two sections. The left hand side contains a list of folders & files.



- Scroll through these files and folders using the ▲ / ▼ buttons and the PLAY/PAUSE button (6) to either open a folder to view the files inside or to select a file for viewing.
- Return to the file menu after viewing an image by pressing the MENU button (7).

Deleting an image

Follow the below steps should you wish to delete an image from the current media input device.

1. Select the image, press and hold the MENU button (7).
2. Select DELETE FILE from the menu that appears using the ▲ / ▼ buttons.
3. Press the PLAY/PAUSE button (6) to delete the image.
4. If you decide not to delete the image navigate to the EXIT option and press the PLAY/PAUSE button (6) to exit the menu.

Details of the highlighted file can be viewed on the right hand section of the screen. These details include: Resolution, File size & number of images on the media input or current folder.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Digital Picture Frame

Let's get started

Calendar

 
Selecting the calendar option, displays a thumbnail slide show. A Calendar on the right hand side, and a large clock above the thumbnail slideshow.



- Use the ◀/▶ / ▲/▼ buttons (5) to navigate the calendar.

Calendar and time are set up in the SETTINGS menu

Security lock

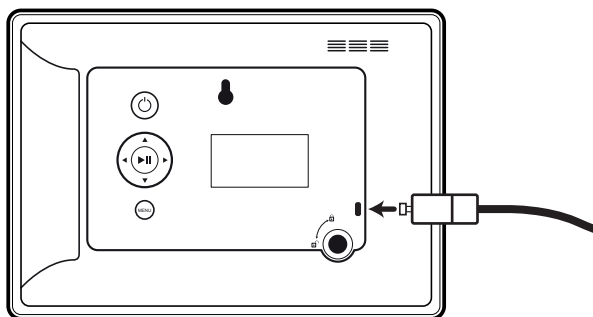


The security locking port allows the picture frame to be connected to a solid object such as a desk. You will need to purchase a 'kensington' style lock suitable for a pc or laptop.

Using your Digital Picture Frame

Let's get started

 Setup menu

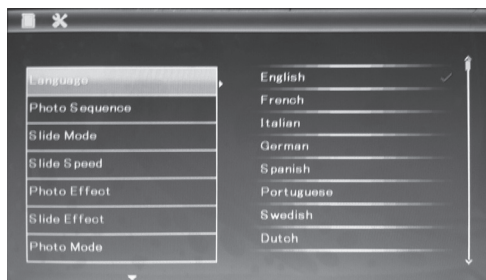

- Use the ▲ / ▼ navigation buttons (5) to scroll up & down the setting options.
- Press the PLAY/PAUSE button (6) to select and enter the setting options.
- Use the ▲ / ▼ navigation buttons (5) to select the setting option required.
- Press the PLAY/PAUSE button (6) to store the selected setting.
- Press the MENU button (7) once to return to SETUP list or twice to return to the MAIN MENU.

Language

Use this setting to set the user interface language.

Photo sequence

This setting will designate whether the photos are displayed in a random order or in sequence.

Slide mode

This setting will designate how many images will be displayed at the same time in slideshow mode.

For example Single would display only 1 full screen image at a time. Triple will display 3 images on screen at the same time (not full screen).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Digital Picture Frame

Let's get started

Slide speed

Specify how quickly the images change in slideshow mode.

Photo effect

Choose the setting colouration of the way the photos are displayed.

Slide effect

Choose from multiple transition effects. These affect how each image is transferred into the next.

Photo mode

Choose from Auto Fit (displays the entire image in the correct aspect ratio, but in most cases black bars will appear on the top or bottom depending on the aspect ratio of the image), Optimal (scales the image to fit, but some areas will appear 'off screen') & Full (stretches the image to fit the display).

Display

Each setting allows you to adjust the display image settings. Select from Contrast, Brightness, Saturation & Tint.

When a setting is selected the Value digits will appear in red. Use the ◀ / ▶ navigation buttons (5) to increase or decrease the values. Press the PLAY/PAUSE button (6) to store the settings.

Set time / date

Select each option and edit accordingly using the ◀ / ▶ navigation buttons (5) to increase or decrease the values. Press the PLAY/PAUSE button (6) to store the settings.

When complete navigate to the SAVE TIME option at the bottom and press the PLAY/PAUSE button (6) to store the Time & date settings.

Using your Digital Picture Frame

Let's get started

Set time format

Select from 12 or 24 hour clock format. Press the PLAY/PAUSE button (6) to store the settings.

Auto power on

Select a time for the picture frame from to automatically turn on. Set the status to ON to activate the function.

Auto power off

Select a time for the picture frame from to automatically turn off. Set the status to ON to activate the function.

Reset setting

 
Should you wish to restore the picture frame software to the default settings you can select this option.

Use the navigation buttons to select YES from the options and press the PLAY/PAUSE button (6) to perform the reset. Select EXIT should you wish to return back to the SETUP list.

All settings will be lost after performing the reset function.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Other information 4

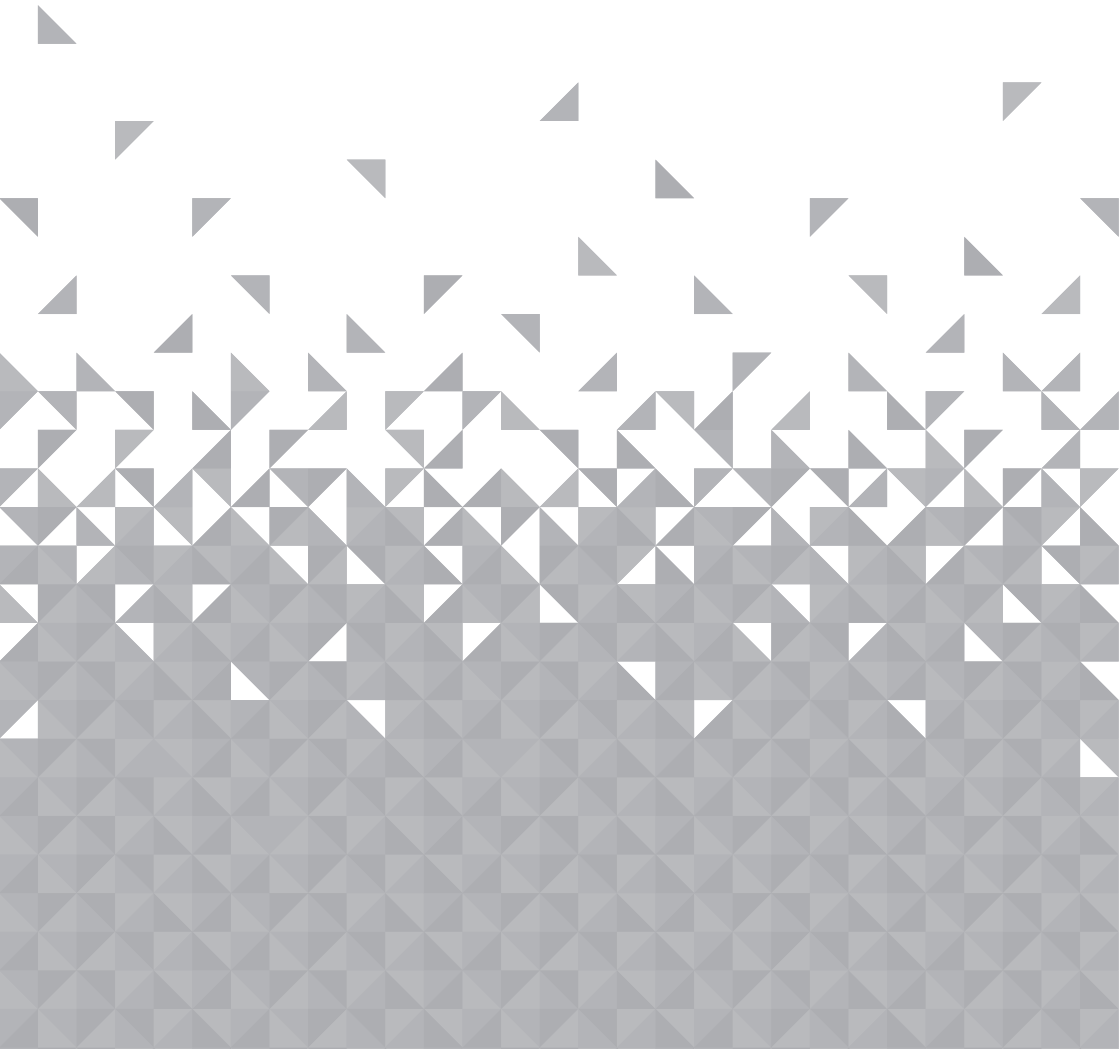

Other information

Helpful technical information

Care & maintenance

After using the Digital Picture Frame

- Set to Standby.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).

Care & cleaning


- All care and cleaning operations should be carried out with the unit unplugged from the mains power.
- Occasionally wipe the frame with a lint free duster. Never clean the unit with liquids or solvents.

Technical specification

Specification	Rating
Supply voltage	100-240V~50/60Hz
Adaptor Power Output	DC 5V 1A
Power Consumption	≤ 5W
Media Slots	USB flash drive V2.0 / SD(HC) max 32GB
Image Formats	JPG
File system supported	FAT16, FAT32
Display Type	9" 16:9 LCD
Display Resolution	800 x 480 pixels

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

 Product support 5

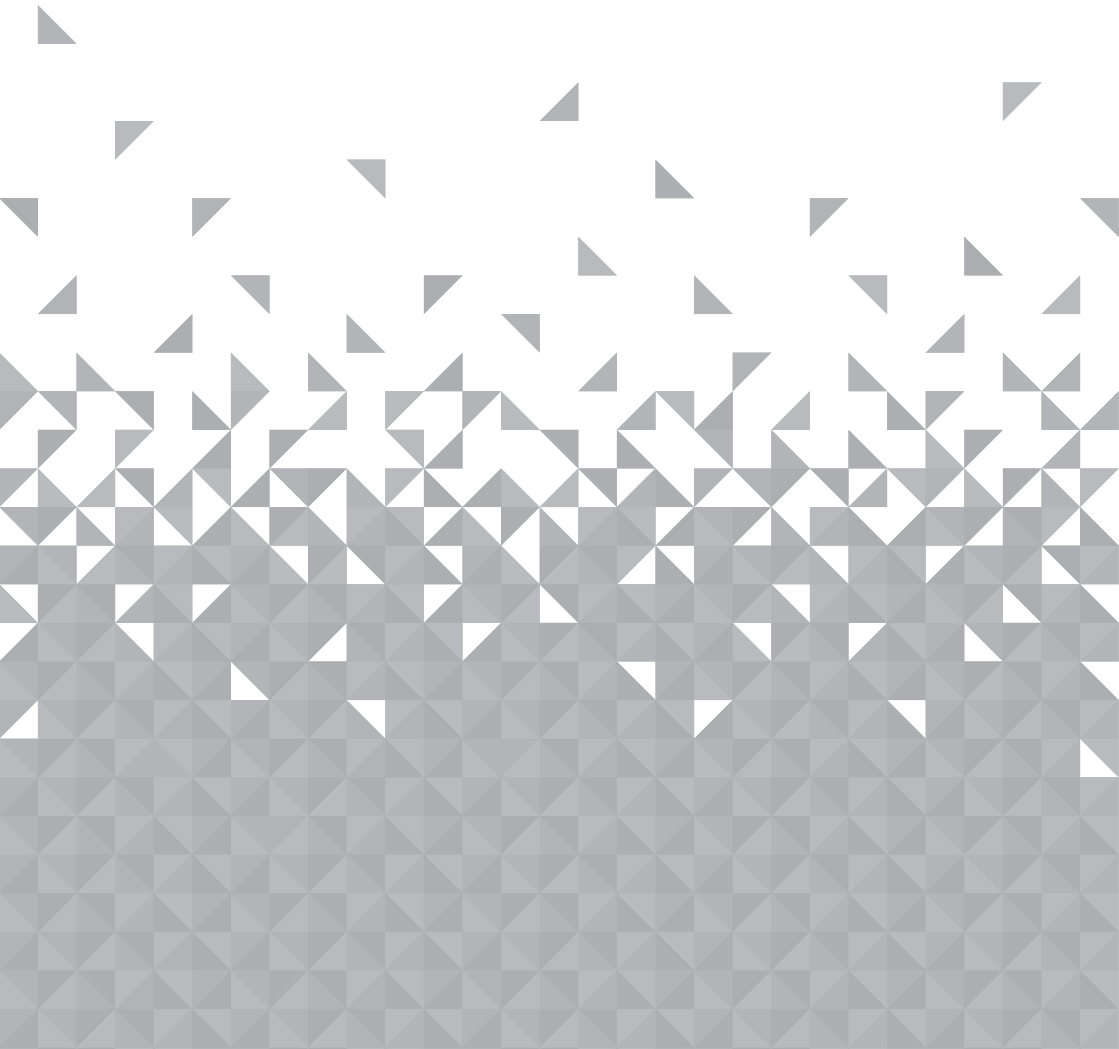

Product support

Help is always at hand

Troubleshooting

Problem	Reason(s)	Solution(s)
No power.	Power cable not connected to wall socket.	Make sure the plug is connected.
	Power socket is not switched on.	Switch the power on.
Some pictures not displaying.	They are not JPG format.	Use a computer and re-save the images as JPG.
Pictures load very slowly.	Not all flash drives & SD cards are the same read speed.	Purchase a high speed rated storage drive/card.
USB/ SD card not recognisable.	They are formatted in the wrong format.	Re-format the devices in either FAT or FAT32.
	The capacity is larger than 32GB.	Replace with a compatible device.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Digital Picture Frame is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.argos-support.co.uk**

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	<div>DF910</div>	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number	<div></div>	
Date of purchase	<div></div>	This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



This appliance complies with the following EEC directives: 2014/35/EU Low voltage directive / 2014/30/EU EMC directive

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 600 3021**.

BUSH

A decorative background pattern consisting of numerous gray and white triangles of varying sizes, arranged in a complex, overlapping geometric design that covers the entire page.

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021