



Safety information important- please read the instructions fully before operating.

For household and indoor use only. • This appliance must be used for its intended purpose only and

operated as instructed in this user manual. • Use only the voltage specified on the rating plate of the heater. **WARNING:** in order to avoid overheating do not cover the heater.

WARNING: To reduce the risk of fire, keep textiles, curtains, or other

- flammable materials at least 1 m away from the air outlet. • Do not place the heater immediately below a socket outlet.
- Do not use this appliance with a programmer, timer, separate remote-control system, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- To avoid risk of overloading your plug socket, the use of an extension lead with this heater is not recommended. IMPORTANT: this heater is intended for walls only. Do not mount
- on ceiling's or floor use. • Do not use this heater in the immediate surrounding of a bath,
- a shower or a swimming pool. Do not leave the appliance unattended.
- WARNING: Do not use this heater in small rooms, when they are occupied by people unable to leave the room alone, unless constant supervision is provided.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Children less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of

BUSH

Operating Instructions.

must be greater than 50cm.

1. Plug the heater into a suitable power outlet.

Note: the heater must be positioned upright with the control panel at the top.

3. Press button, the heater will start to run automatically.

4. Press **Temp+** button to increase the temperature setting.

same time to change the fan speed from Low to High.

Power off timer setting: when the heater running, press Timer, the digital display

changes from showing the temperature to showing the hours option for the timer.

Continue to press the timer button to change the number of hours you would like the

Power-on timer: when the heater is off, press Timer, the digital display shows the hours

8. To switch the heater off, Press Othe heater will stop producing heat but

the fan will continue to run for 1 minute in order to cool the heater

down. Then switch off the power button on the side of the heater and

heater to run before powering itself off. The hours options for the timer are from O-

options for the timer. Continue to press the timer button to change the number of

on. The hours options for the timer are from 0-12hrs (in 1hr increments).

hours you would like the heaters internal clock to count down before powering itself

5. Press **Temp-** button, to decrease the temp setting.

7. Press **Timer** to set the O-12hr timer

Note: the distance between the base of the heater and the floor must be greater than

30cm and the distance between the side of the heater and the wall or any other object

2. Press the On/Off switch on the side of the heater to 'On' position to turn

6. Press Speed button, by pressing both Temp+ and Temp- button at the

the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION- some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- Always switch off the heater before removing the plug from the
- Always unplug the appliance when not in use, when moving the appliance or before cleaning.
- Do not immerse the appliance in water or any other liquids. • Do not cover or restrict the airflow to the inlet or exhaust grilles, restricted airflow can cause the appliance to overheat and become a fire risk.
- Do not insert or allow any foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage the appliance.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Do not use the heater on deep pile carpets or long hair type rugs. Keep combustible materials sch as drapes and other soft furnishings away from the heater.

BATTERY WARNING

- CAUTION Danger of explosion if batteries are incorrectly fitted /
- Batteries should be installed by an adult. Keep new and used batteries
- Only use 'AAA' 1.5V batteries in this remote control.
- Be sure to insert correctly taking care to observe the correct polarity (+
- Use only batteries of the same or equivalent type as recommended.

<u>BUS</u>H

Do not recharge non-rechargeable batteries.

- Never mix old and new batteries (replace all batteries at the same time).
- Never try to crush. Puncture or dismantle batteries.
- Do not short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.
- Dispose of used batteries responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode.
- In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.



WARNING: in order to avoid overheating do not cover the

Before using your heater.

Make sure you have read and fully Understood the safety instructions before operating

- Make sure the On/Off control on the side is switched to Off '0' • Plug the heater into a suitable power socket. (do not use with an

IMPORTANT: The heater must be positioned upright with the control panel at the top. IMPORTANT Allow 30cm safe area around the top and bottom, 50cm safe area on the sides and 150cm safe area at the front.

IMPORTANT: The distance between the base of the heater and the floor must be greater than 30cm and the distance between the side of the heater and the wall or any other object must be greater than 50cm.

BUSH

Getting to know your heater.

- 1. Air Outlet
- 2. Air intake
- 3. Control panel
- 4. Power switch On/Off.



Control panel.



Speed Temp + Temp -


ON/Standby Fan mode selection (Low/High) Increase temperature setting. Decrease temperature setting. Timer setting function (0-12hrs)

Remote control.

BUSH

Contact details

BUSH

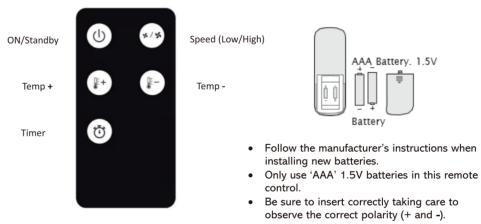

observe the correct polarity (+ and -). • Do not mix old and new batteries.

Overheat safety device.

unplug.

12hrs. (in 1hr increments).

Your heater is fitted with a safety device that switched off the heater in the event of overheating. Should the heater stop working, turn the heater off and inspect for blockages of the air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater. If the heater fails to operate or the safety device switches off again, return the heater to your nearest service centre for examination or repair.

BUSH

Care and Maintenance.

The heater requires regular cleaning to ensure trouble free operation:

- Always turn off unplug the heater from the mains supply before cleaning. • Make sure the appliance has cooled down completely before cleaning.
- Use a slightly damp cloth to wipe the exterior of the heater to remove dust and dirt.
- Use a vacuum cleaner or compressed air to remove dust and fluff from the inlet and outlet grilles.
- Ensure the heater is dry before plugging back into the mains supply.
- If the heater has collected dust or dirt inside the unit or around the element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.

Storage

BUSH

- Do not store appliance while it is still hot.
- When not in use, clean the heater before storing away in the original or
- Store the heater in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

Technical Specifications.

Bush 500W Wallable PTC Heater	
Model number	MH-04W
Input rated voltage	220-240V 50Hz
Output rated wattage	500W
Weight	0.42kg
Dimensions	W106xD114xH180mm
	•

Produced in China for Argos Limited, London, EC1N 2HT, UK. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.



Recycling electrical products.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Plug and wiring advice.

The wires in this mains lead are coloured in accordance with the BLUE = NEUTRAL following UK electrical code: BROWN = LIVE GREEN + YELLOW = EARTH

This appliance may be fitted with a "non-rewireable" plug. If you need to change the fuse in a "non-

rewireable" plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.



BUSH

The BLUE wire must be connected to the terminal marked with the letter

- The BROWN wire must be connected to the terminal marked with the
- The GREEN & YELLOW wire must be connecting to the terminal marked BLUE OR BLACK - BROWN OR RED With the letter E or the earth symbol

Information requirement for electrical space heater.

Model identifier for electric local space heaters

Table .	Wiodelide	illiner for en	ectric local space fleaters	
Model number:	MH-04W			
Item	1	Symbol	Value	Unit
Heat output				
Nominal heat out-put		P _{nom}	0.5	kW
Minimum heat output (indicative)		P _{min}	0.5	kW
Maximum contir output	nuous heat	P _{max,c}	0.5	kW
Auxiliary electi	ricity consu	mption		
At nominal heat	output	el _{max}	0	kW
At minimum hea	at output	el _{min}	0	kW
In standby mod	е	el _{SB}	0.00062	kW
Type of heat in	put, for elec	ctric storage	local space heaters only (single sel	ect)
manual heat charge control, with integrated thermostat		☐ Yes ⊠ No		
manual heat charge control with room and/or outdoor temperature feedback		☐ Yes ⊠ No		
electronic heat charge control with room and/or outdoor temperature feedback		☐ Yes ⊠ No		
fan assisted heat output			☐ Yes ⊠ No	
Type of heat or	utput/room	temperature	control (single select)	
single stage heat output and no room temperature control		☐ Yes ⊠ No		
Two or more manual stages, no room temperature control		☐ Yes ⊠ No		
with mechanic thermostat room temperature control		☐ Yes ⊠ No		
with electronic room temperature control		⊠ Yes ☐ No		
electronic room temperature control plus day timer		☐ Yes ⊠ No		
electronic room temperature control plus week timer			☐ Yes ⊠ No	
Other control of	ptions (mu	ltiple selecti	ons possible)	1
room temperature control, with presence detection		☐ Yes ⊠ No		
room temperature control, with open window detection		☐ Yes ⊠ No		
with distance control option		☐ Yes ⊠ No		
with adaptive start control		☐ Yes ⊠ No		
with working time limitation		⊠ Yes ☐ No		
with black bulb sensor			☐ Yes ⊠ No	

Produced in China for Argos Limited, London, EC1N 2HT, UK. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

Argos PRODUCT GUARANTEE This product is guaranteed against manufacturing defects for a period of This product is guaranteed for twelve months from the date of original purchase Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit. The guarantee is subject to the following provisions: . The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items. . The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk It must be used solely for domestic purpose. . The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair. · Specifications are subject to change without notice. · The manufacturer disclaims any liability for the incidental or consequential damages. . The guarantee is in addition to and does not diminish your statutory or legal rights. London EC1N 2HT

www.argos-support.co.uk

BUSH