

Beldray[®]

Est 1872

Nobody Does It Better

8 Inch Turbo Fan

Instruction Manual



THE **SCIENCE**
BEHIND COOL



www.beldray.com

Please read all of the instructions before use and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Always use the product on a flat, stable surface.

If the supply cord or plug is broken, do not use the product and ensure that a qualified electrician fixes it.

Keep the product and its power supply cord out of reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the product away from heat emitting products.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the product.

Keep the product free from dust, lint etc.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock and/or injury and

damage to the product.

Do not leave the product unattended whilst connected to the mains power supply.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use the product outdoors.

Do not use the product without the fan guard.

Do not attempt to move the product whilst it is in use.

This product should not be operated by means of an external timer or separate remote control system.

This product is intended for domestic use only. It should not be used for commercial purposes.

Always unplug the product after use and before any cleaning or user maintenance.

Use of an extension cord with this product is not recommended.

Warning: Do not cover this product.

Warning: If a bad odour is emitted from the product, turn it off and unplug it from the mains power supply.

Warning: Do not place foreign objects into the fan blade area, as this could damage the product and cause injury to the user.

Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside of the box and either store or dispose of safely.

In the Box

Beldray 8 Inch Turbo Fan

Instruction manual

Features

Adjustable tilting head

Polypropylene blades


Three speed settings

35 W

Wall mounted or free standing

Input: 220–240 V ~ 50 Hz

Description of Parts

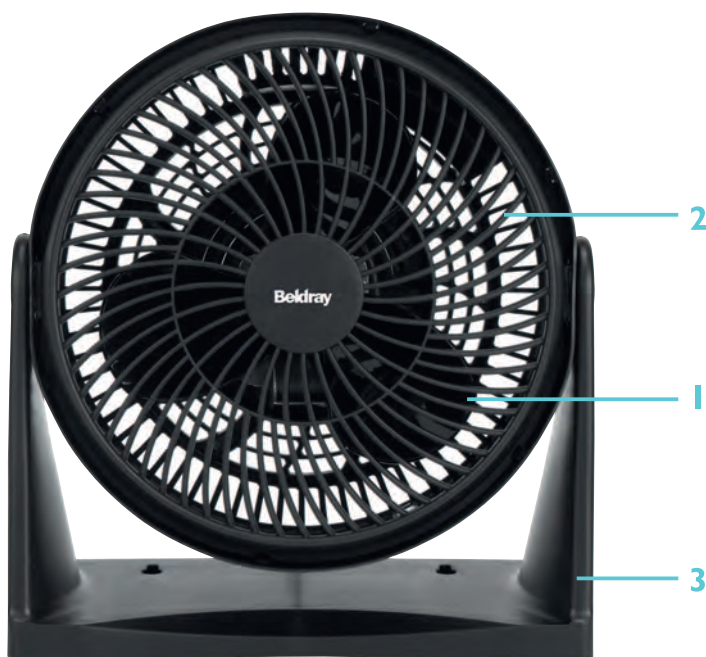

1. Fan blade unit
2. Grill
3. Stand
4. Adjustable cooling speed dial

Instructions for Use

The Turbo Fan can be used as a stand-alone unit or can be wall mounted.

Using the Turbo Fan as a Stand-alone Unit:

- STEP 1:** To use the Turbo Fan as a stand-alone unit, first ensure that it is unplugged from the mains power supply and that the adjustable cooling speed dial is set to the 'Off' position ('0').
- STEP 2:** Place the Turbo Fan on a flat, stable surface, ensuring that there is sufficient distance between the fan and any objects which might be damaged by the fan or objects that might get caught in the rotating fan blade unit.
- STEP 3:** Plug the Turbo Fan into the mains power supply. To turn on, select the desired cooling speed by turning the adjustable cooling speed dial to any one of the positions numbered 1–3, 3 being the strongest cooling speed setting.

Caution: Do not cover the fan head.

Using the Turbo Fan as a Wall-mounted Unit:

- STEP 1:** To use the Turbo Fan as a wall-mounted unit, first ensure that it is unplugged from the mains power supply and that the adjustable cooling speed dial is set to the 'Off' position ('0').
- STEP 2:** When selecting the height and position for the Turbo Fan to be mounted onto the wall, check that there is sufficient cable length for the power supply cord to reach the mains power socket.
- STEP 3:** The Turbo Fan base has two mounting holes. Hold the Turbo Fan base to the wall and using a pencil, mark the position for the fan to be mounted to the wall using the mounting holes as a guide.
- STEP 4:** Drill two holes into the wall where the marks have been made and insert wall plugs into the drilled holes.
- STEP 5:** Screw in 2 x 30 mm masonry screws (not included), leaving 16 mm of the masonry screw exposed.
- STEP 6:** Hook the Turbo Fan onto the exposed part of the masonry screws so that it hangs on the wall.
- STEP 7:** Plug the Turbo Fan into the mains power supply. To turn it on, select the desired cooling speed by turning the adjustable cooling speed dial to any one of the positions numbered 1–3, 3 being the strongest cooling speed setting.

Caution: Do not cover the fan head.

Using the Adjustable Tilting Head

To use the Turbo Fan's tilting function, simply adjust the tilting head manually to the desired angle. The Turbo Fan will make a clicking sound as it cycles through the different tilt positions.

Care & Maintenance

Disconnect the Turbo Fan from the mains power supply and wait until it has stopped completely before performing any cleaning or user maintenance.

Wipe the Turbo Fan with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the Turbo Fan in water or any other liquid.

Do not use harsh or abrasive cleaning solvents to clean the Turbo Fan, as these may damage the finish.

Storage

Store the Turbo Fan in a cool, dry place.

Specifications

Product code: EH1260

Input: 220–240 V ~ 50 Hz

Output: 35 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

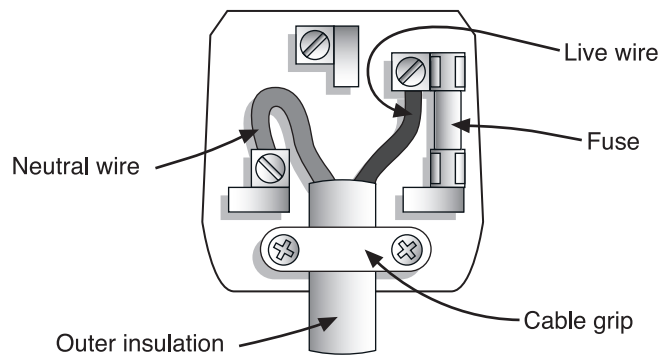

UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2240*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



