

Juice® SUPER 100W MAX

Contents

1. Juice® Super Max 100W power bank
2. USB-C to USB cable (for charging)
3. User Manual

Overview



Digital Display
x2 USB-C Ports
Power Button
x2 USB-A Ports

10hrs Charge Time (using a standard charger)

Note: Long press to turn on, press twice to turn off.

How to Charge the Power Bank

1. After connecting a general charger or PD adapter to the power bank, the charging mode will automatically start and digital display will light up to show the current battery level. The power bank will then enter normal charging mode with the output current and voltage parameters being displayed. If entering PD mode, the PD indicator will light up; When the powerbank is almost fully charged, the charging current will enter low current charging mode until it is fully charged.
2. When the power bank is fully charged, it will display 100%, and the screen will remain on.
3. To achieve the optimal charging power of 100W or 65W, an E-MARKER cable must be equipped, otherwise the maximum charging power is only 60W.

Note: Electrically Marked Cable (E-Mark): A USB Type-C active cable that is packaged with an E-Mark chip. All fully functional Type-C cables should be packaged with an E-Mark (in daily operations, we require current cables above 3A to have an E-Mark chip)

Checking the Remaining Charge

1. Short press to view the current percentage of battery level
- Note:** It is normal for the Juice® Super Max 100W and your device to get warm during charging. They may get even warmer if you use your device to play videos or for gaming while charging.

Charging your Gadgets

Always check the voltage your device can accept before charging with any Juice product, this will ensure full compatibility

1. After connecting the PD power bank to your device's cable, the output will automatically turn on, and the digital display will light up to show the current battery level. The power bank will then enter it's discharging state, with the output current and voltage parameters being displayed. If entering PD mode, the PD indicator will light up; If the receiving device is almost fully charged the power bank will enter low current mode, with a charging current of only about 500mAh.
2. When the PD power bank automatically stops discharging (Either due to the mobile phone or computer being fully charged or the device is unplugged), the digital display and outputs turn off. The power bank will then enter standby mode.
3. To achieve the optimal 100W or 65W charging state, an E-MARKER cable must be equipped, otherwise the maximum charging power is only 60W. (Also confirm that your receiving device can support 100W or 65W)
4. Once charged, simply unplug your device and store your Juice® Super Max power bank until you are ready to use it again. It is strongly recommended you charge the Juice® Super Max before storing. Ensure the power bank is charged fully every 3 months to keep it in optimum condition. Do not store for long periods with zero charge.

Note: Mobile and gadget device manufacturers have different requirements to charge their products, they may also use different cables to charge their devices. These manufacturers may vary the specifications of how to charge a device and they may also introduce other charging methods on their new products, therefore we can not guarantee that the Juice® Super Max 100W power bank will be able to charge all devices. Juice® always suggests that you use the original charging cable included with your device to charge.

Lets get Techy!

Input	USB-C 1 & 2 - 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3.25A (65W MAX)
Output	USB-C 1 & 2 - 5V/3A, 9V/3A, 15V/3A, 20V/5A (100W MAX) USB-A 1 & 2 - 5V/2.4A
Dimensions	108mm x 48mm x 48mm
Net Weight	390g
Capacity	20,000mAh

Optimising Your Super Max

Although it comes with power, try to fully charge the Juice® Super Max power bank before heavy use. The digital screen will display '100%' when fully charged. The Juice® Super Max performs best when optimised. Do this by charging and fully draining (using) the power bank 1 to 2 times. Charge your Juice® Super Max via either USB C port.

Legal Liability

The Juice® Super Max 100W can be used only with compatible products. Please read your equipment compatibility instructions to determine whether this Juice® Super Max 100W matches your equipment. The manufacturer will not be liable for any damage to your electronic equipment during the use of this product. Juice® will not be held responsible for any equipment or accessories not suitable for use with the Juice® Super Max 100W. The manufacturer will not be held liable for damage caused by misuse or damage incurred by the buyer or the third party arising from any intentional or unintentional use of the Juice® Super Max 100W. Average charge amounts shown (5 charges for the Juice® Super Max 100W power bank) are estimated on charging an iPhone 15 mobile.

Safety Notes

IMPORTANT: Read all information and warnings before using the Juice® Super Max 100W. Improper use of this product may lead to the product being damaged and you (the buyer, not the dealer) will be held responsible for damages such as over heating, the release of toxic fumes, fire or explosion.

1. Before using the product, please read the user manual to understand each function and operation of the product.
2. If you do not use a mobile power supply for a long time, you need to charge it at least every two months, and maintain 50% of the product's capacity before leaving it idle.
3. During use, the device may generate heat, which is a normal phenomenon. However, if the temperature of the product exceeds 48 degrees, please stop using it and contact the manufacturer. It is recommended that the charging environment temperature be between 0 °C & 30 °C.
4. Please do not litter electronic products and recycle them to local recycling facilities.
5. Do not allow children or incapable individuals to use this device alone, unless they use it safely under guidance and supervision.
6. Please pay attention to the specifications of the output and input to prevent equipment from causing malfunctions or fires.
7. Please do not attempt to disassemble, drop, tap, or vibrate the equipment. Do not place the equipment in high temperature, humidity, or water.

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. ALL ELECTRONIC PRODUCTS WITH THE WEEE LOGO MUST BE COLLECTED AND SENT TO APPROVED OPERATORS FOR SAFE DISPOSAL OR RECYCLING. PLEASE RECYCLE WHERE FACILITIES EXIST. MANY ELECTRICAL/ELECTRONIC EQUIPMENT RETAILERS FACILITATE "DISTRIBUTOR TAKE-BACK SCHEME" OF HOUSEHOLD WEEE. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILERS FOR DESIGNATED COLLECTION FACILITIES (DCF) WHERE CONSUMERS MAY DISPOSE OF THEIR WEEE FREE OF CHARGE.



RECYCLE ME

MADE FROM **100%** RECYCLED PLASTICS

8% of the material on this product is made from recycled post consumer waste plastic.



SCAN ME FOR WARRANTY



Do not remove the batch code