

BUSH *Classic*

Instruction manual

Mini DAB/FM radio

SKU: 133336501 – Grey

SKU: 133336587 – Cream

SKU: 133422477 – Woodland walk



You'll soon be enjoying your new Bush Classic Mini DAB/ FM Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Bush Classic Mini DAB/FM Radio. Should you require any guidance; call our Help line on 0345 604 0105.

Further contact details can be found online at: www.argos-support.co.uk

Contents

1	Safety information	
	Power source	6
	Ventilation heat and moisture	7
	Battery safety	8
	Care and maintenance	8
2	Getting to know your radio	
	Accessories	10
	Radio	11
	Fitting the batteries	12
3	Using your radio	
	Getting started	14
	Using the radio – DAB mode	15
	Using the radio – FM mode	16
	Radio display modes and set up options	17
	Programmed station function	18
	Setting and using the sleep function	19
	Alarm function	19
	Setting the snooze interval	21
	Using the radio with auxiliary equipment	21
	Using the radio with headphones	22
	Manually setting the clock	22
	Reset	23
4	Other information	
	Technical specification	26
5	Product support	
	Troubleshooting	28
	Help and assistance	29
	Recycling electrical products	30
	Declaration	30
	Guarantee	31

This page is left intentionally blank

Safety information 1





Safety information

Important - Please read these instructions fully before installing or operating

Power source

- For household and indoor use only
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Fully unwind the cable before plugging in and ensure the cable is positioned away from areas where it is likely to get damaged or cause a trip hazard.
- The output cord of this mains adaptor cannot be replaced. In the event of damage to the cable, jack plug or adaptor, the entire adaptor unit should be replaced.
- Connections must only be made via the mains adaptor supplied, never connect the appliance directly to the 240v mains supply.
- Never use the adaptor supplied with any other appliance.
- Remove mains adaptor from supply if appliance is unused for a long period of time, and during thunderstorms.
- Do not pull on the cable to disconnect from mains supply.
- Switch off and unplug when not in use and before cleaning or servicing the appliance. Servicing of this appliance must only be carried out by a qualified electrician.
- Always ensure the mains adaptor plug is readily unpluggable – do not use with 'lockable' sockets or permanently wire to mains.



Safety information

Important - Please read these instructions fully before installing or operating

Ventilation, heat and moisture

- Keep appliance, cable, mains adaptor plug dry and away from areas where it is likely to get splashed. Avoid using in hot, humid environments.
- Place the appliance on a flat, stable surface with adequate ventilation and away from other sources of heat. Minimum distances around the appliance for adequate ventilation is 10cm. Do not cover or restrict ventilation openings.
- Do not place items with naked flames or containers with liquids on this appliance.
- The mains adaptor will become warm in use; do not cover or place on or near surfaces that could be affected by heat such as table tops and carpets.



The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

Warning: to reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside, refer servicing to qualified service personnel.



Safety information

Important - Please read these instructions fully before installing or operating

Battery Safety

- CAUTION – Danger of explosion if batteries are incorrectly fitted / replaced.
- Batteries should be installed by an adult. Keep new and used batteries away from children.
- Only use 'AA' 1.5V batteries in this appliance.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from appliance before recharging.
- Never mix old and new batteries (replace all batteries at the same time).
- Never try to dismantle batteries.
- Do not short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.
- Dispose of used batteries responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode.

Care and maintenance

Wipe with a soft cloth. If the cabinet is very dirty, unplug from the mains and dampen the cloth with a weak solution of washing up liquid and water and wipe clean. Allow it to dry thoroughly before using.

Getting to know your radio 2



Getting to know your radio


You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your radio and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories

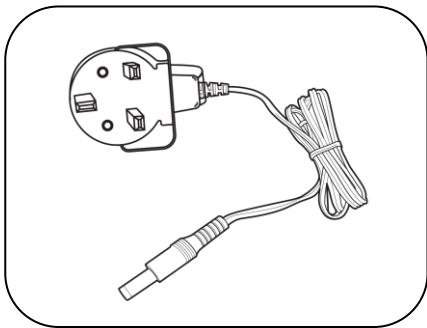


Adaptor

Getting to know your radio

You'll be up and running in no time

Radio

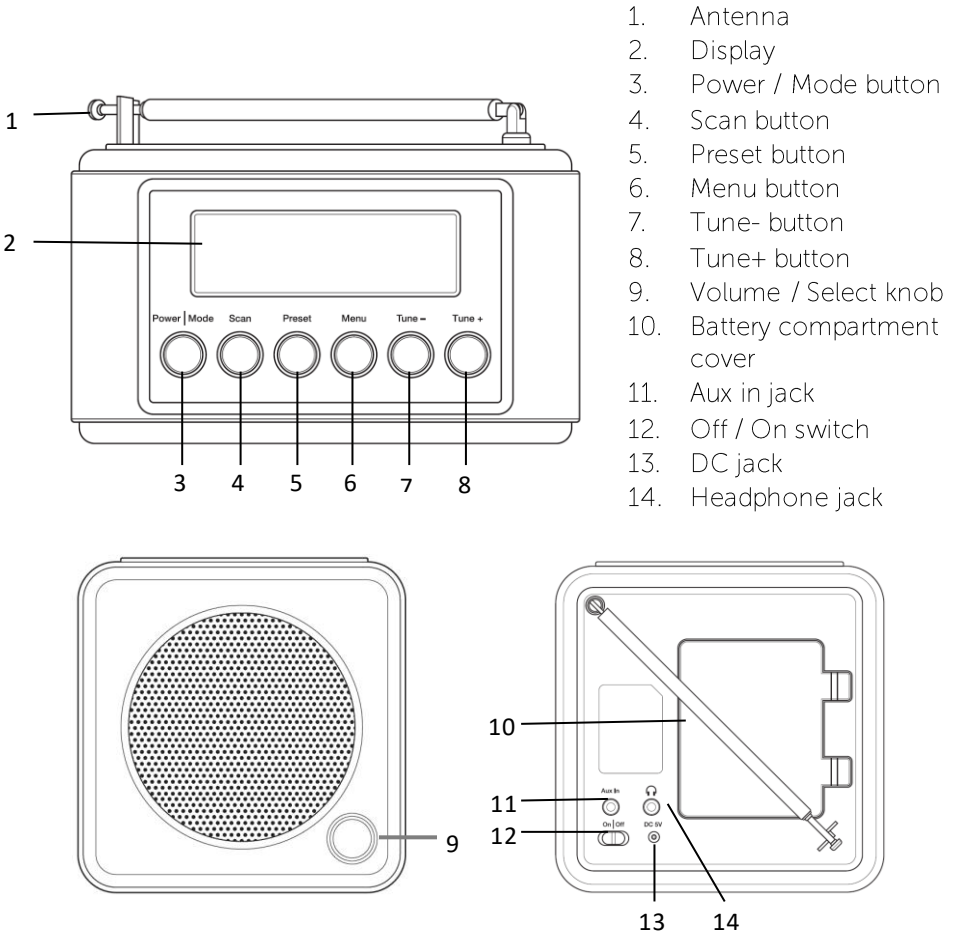

Or by calling one of our experts on 0345 604 0105


Getting to know your radio

You'll be up and running in no time

Fitting the batteries

To use the appliance with batteries ensure that the power cord is NOT connected to the mains and install the batteries into the battery compartment

1. Lift off the battery compartment cover from the reverse of the radio.
2. Insert 4 x AA 1.5V alkaline batteries (not included) in accordance with the diagram in the battery compartment. Take care to observe the correct polarity (+/ -).
3. Refit the battery compartment cover.
4. Do not expose the batteries or the installed batteries to excessive heat (e.g. fire, sunshine or position close to radiators etc.).

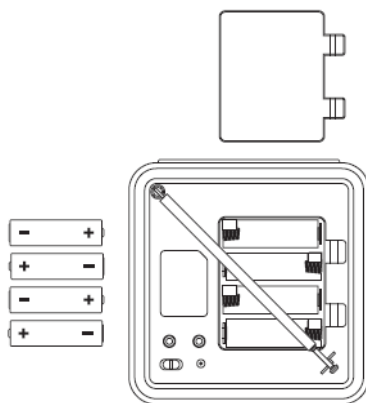

Notes:

- All DAB radio's use more power during use than 'traditional' radios and so will run batteries down within a few hours. Therefore use of mains power (or rechargeable batteries) is recommended for extended listening.
- Always switch off using the ON/OFF switch at rear when not in use and the alarm is not needed. **Standby mode continues to use power and (if in battery mode) will flatten the batteries within a couple of days.**

Using your radio 3



Using your radio

Let's get started

Getting started

1. Connect the mains adaptor to the DC jack, unclip and fully extend the antenna, plug in and switch on at the mains.
2. Move the ON/OFF switch to the 'On' position at the rear of the radio. A 'Welcome to Digital Radio' message will be briefly displayed and the unit will automatically enter into standby mode.
3. Press **and hold** the POWER / MODE button to turn on the radio.
4. The first time the radio is connected to the supply, the radio will perform a scan for the available DAB stations in the area. The display will show 'Autotune Full Scan', followed by 'Searching', then the scan percentage will be displayed and finally the total number of stations found.
5. When the scan is finished the radio will play the first alphanumerically found station. The display will show the station being listened to.
6. If the radio does not find any stations, 'No signal DAB' will be displayed. Ensure the antenna is fully extended or try moving the radio to another location (near a window may be better) and repeat the above steps.
7. Adjust the volume to the desired level by rotating the VOLUME / SELECT knob.
8. To switch to FM radio, press the POWER / MODE button once. The display will show switching to FM. Press the button again to switch to the Auxiliary mode. One further press will return the radio to DAB mode.
9. Press **and hold** the POWER / MODE to place the unit in standby mode or switch off using the ON/OFF switch at the rear of the radio (note: clock display and alarm will not function in OFF mode).

Note: The clock in this radio is equipped to receive a DAB radio frequency time signal and after turned on, it will automatically tune into a DAB radio station and update the clock. It may be necessary to wait for 1-2 minutes to allow the unit to receive the time signal. If the area will only receive an FM signal it will be necessary to manually set the clock – see page 22.

Using your radio

Let's get started

Using the radio – DAB mode

DAB differs from analogue radio; the separate signals from a number of stations are grouped together and transmitted as a single frequency. These groups are referred to as multiplexes and ensembles.

DAB mode

1. Turn the radio on, press the POWER / MODE button and select the DAB mode. The display will show 'DAB' and the radio will automatically tune to the last station listened to, or if using for the first time the automatic set up procedure will be activated (see page 14).
2. To search the stations that have been found, press the TUNE+ or TUNE – button to scroll through the available stations.
3. Press the VOLUME / SELECT knob to listen to the highlighted station or wait a few seconds and the radio will automatically retune.

DAB mode – auto tune

This function allows the radio to search automatically for DAB Band III channels. Press the SCAN button to initiate the auto tuning function.

1. The display will show 'Autotune Full Scan', followed by 'Searching' and the scan percentage will be displayed and finally the total number of stations found.
2. When the scan is finished the radio will play the first alphanumerically found station.
3. If the radio does not find any stations, 'No signal DAB' will be displayed. Ensure the antenna is fully extended or try moving the radio to another location (near a window may be better) and repeating the above steps.

Using your radio

Let's get started

Using the radio – FM mode

1. Turn the radio on, press the POWER / MODE button and select the FM mode. The display will show 'switching to FM' and the radio will automatically tune to 87.50MHz.
2. To activate auto search, press and **hold** the TUNE + or TUNE - button for at least 1 second to start scanning up or down the frequency. The radio will stop automatically once the next station has been found.
3. To search manually, press the TUNE + or TUNE- button until the desired frequency is displayed. The frequency increments by 0.05MHz with each press of the button.
4. To change the audio mode (stereo or mono) press the VOLUME knob on the unit, this will switch from auto (stereo) to mono, press and again to switch back. If auto is selected the radio will automatically switch between stereo and mono mode. (Note: as this unit only has a single speaker, these modes will not affect the speaker output)

Using your radio


Let's get started

Radio display modes and set up options


Display modes

If the MENU button is then pressed repeatedly, the second line of the station display will scroll through the following modes with each press of the button.

In DAB mode

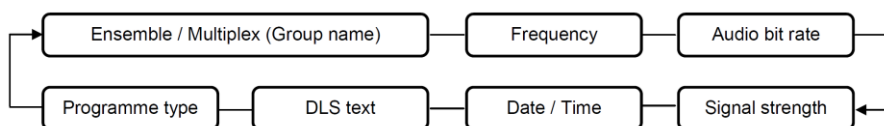

In FM mode

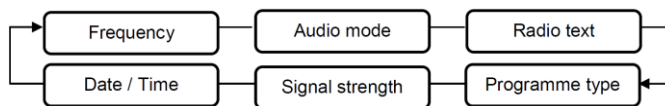

- Ensemble / Multiplex (Group name) - The ensemble / multiplex is a group of stations that are bundled and transmitted together in a single frequency. There are national and local multiplexes, local ones contain stations that are specific to the local area.
- Signal strength – the display will show a slide bar to indicate the strength of the signal. The stronger the signal, the longer the bar.
- DLS (dynamic label segment) / Radio text - The broadcaster may include a scrolling message about the current programme.
- Programme type – this describes the style of the programme. If the information is not available the display will show '<Program type>'.
- Time and date - the time and date will be automatically updated by the radio time signal.
- Audio mode – the display will show if the station being received is stereo or mono.
- Frequency – the display will show the frequency of the station being broadcast.
- Audio bit rate – the display will show the digital audio bit rate being received.

Using your radio

Let's get started

Set up options

This function allows the set up menu to be entered and a number of options to be changed. In either FM or DAB mode, press and hold the MENU button. When 'set alarm' is displayed, press the TUNE + or TUNE - button until the option of choice is shown and then press the VOLUME / SELECT knob to accept and enter the set up option.

- Set Alarm – allows an alarm to be set. See page 19.
- SW version - displays the software version.
- System reset – allows reset to the factory settings. See page 23.
- Set snooze time – allows the snooze time to be set. See page 21.
- Set date / time – allows the time and date to be set. See page 22
- Set sleep – allows sleep interval to be set. See page 19.

Programmed station function

This function allows up to 10 stations to be programmed into the memory and stored in the DAB and FM modes.

1. Follow the directions in the previous sections to select a radio station.
2. Press and **hold** the PRESET button until the 'Preset empty 1' is displayed and the number flashes. Press the SELECT/ VOLUME knob, the station now broadcasting has now been stored in the selected location and the display will show the 'preset 1 stored'.
3. To store further stations, press and **hold** the PRESET button, and then press the TUNE+ or TUNE- button repeatedly until an empty storage location is found and press the VOLUME / SELECT knob to save.
4. To listen to the preset stations, press the PRESET button and use the TUNE+ or TUNE- buttons to search the stored locations. When the storage location of choice is highlighted, press the SELECT / VOLUME knob to listen to the stored station. If the preset has not been allocated "Preset empty #" will be shown in the display.


Using your radio

Let's get started

Setting and using the sleep function

This function will switch off the radio automatically after a preset time interval.

1. With the radio of choice playing, press **and hold** the MENU button until '<set alarm>' is shown in the display.
2. Press the TUNE+ or TUNE- button repeatedly until 'set sleep' is displayed and press the VOLUME / SELECT knob to select.
3. Press TUNE+ or TUNE- button repeatedly until the desired sleep interval (see sequence below) is shown in the display.

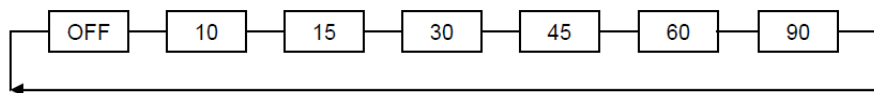

4. Press the VOLUME / SELECT knob to accept. The sleep timer is now activated and the display will show the sleep indicator (S) and the time interval remaining before the radio switches off (e.g. 15).
5. The sleep function will count down and the unit will switch off automatically after the time interval selected has lapsed.
6. To cancel the sleep timer, press **and hold** the MENU button until 'set alarm>' is shown in the display. Press TUNE+ or TUNE- button as before until 'set sleep' is displayed and press the VOLUME / SELECT knob to select. Press the TUNE+ or TUNE- button repeatedly until 'OFF' is shown in the display. Press the VOLUME / SELECT knob to accept.

Alarm function

This radio has an alarm and may be set to wake as a buzzer tone or to a favourite radio (DAB/FM) station. The alarm is set during operation.

1. To set the alarm, press **and hold** the MENU button until <set alarm> is displayed.
2. Press the TUNE+ or TUNE- button repeatedly until 'set alarm' is displayed.
3. Press the SELECT / VOLUME knob to select to enter the alarm set up mode. The alarm status will now be shown in the display.
4. Press the TUNE+ or TUNE- button until 'Alarm on' is shown in the display and press the SELECT / VOLUME knob to confirm and the hour digits will now flash in the display.

Using your radio

Let's get started

Alarm function (continued)

5. Use the TUNE+ or TUNE- buttons to adjust the hour digits to the correct alarm hour and then press the SELECT / VOLUME knob to accept and move to the minutes.
6. Use the TUNE+ or TUNE- buttons to adjust the minutes to the correct alarm minute and then press the SELECT / VOLUME knob to accept. The alarm wake up mode is now displayed.
7. Use the TUNE+ or TUNE- buttons to display the wake up mode of choice (BEEPER, DAB, FM) and then press the SELECT / VOLUME knob to accept.
8. The alarm set up mode has now been completed and the display will now show the alarm indicator (🔔).
9. The alarm is now set and will remain in memory when the unit is switched to standby mode.
10. When the time on the clock is the same as the alarm time that has been set, the alarm will sound and the display will flash.
11. The alarm will continue to sound and stop automatically after approximately one hour. To silence the alarm, press the POWER / MODE button. The alarm indicator will remain illuminated and the alarm will sound again at the same time the following day unless the alarm is switched off.
12. To activate the snooze function, press the SELECT / VOLUME knob when the alarm sounds. The snooze indicator (Z🔔) will be shown in the display, the alarm will silence and the alarm will sound again after approximately 5 minutes (unless a different interval has been set – see page 21).
13. To turn off the alarm permanently, follow steps 1 – 3 above and then select 'Off' using the TUNE + button. Press the SELECT / VOLUME knob to confirm.

Notes

- If the power is interrupted and batteries are not fitted in the battery compartment (or the unit is switched OFF using the rear switch) the alarm settings will be lost.
- If the DAB or FM radio wake up option is selected the alarm will play the last station listened to in DAB or FM.
- The volume that the alarm will activate at is the volume that the radio was playing when placed into standby mode.


Using your radio

Let's get started

Setting the snooze interval

The default snooze interval of this radio is 5 minutes. To set a different interval, follow the instructions below.

1. Press **and hold** the MENU button until '<set alarm>' is shown in the display.
2. Press the TUNE+ or TUNE- button repeatedly until 'set snooze time' is displayed and press the VOLUME / SELECT knob to select.
3. Press TUNE+ or TUNE- button repeatedly until the desired snooze interval (see sequence below) is shown in the display.

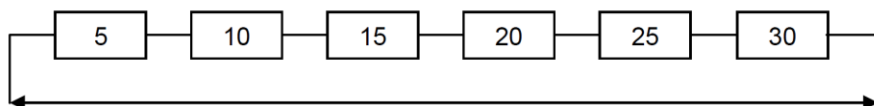

4. Press the VOLUME / SELECT knob to accept. The snooze interval has now been set.

Using the radio with auxiliary equipment


Auxiliary audio equipment (e.g. MP3 player) can be connected and amplified via the radio.

1. With the auxiliary equipment and the radio switched off, connect the auxiliary equipment using a 3.5mm jack cable (not included) into the AUX IN jack at the rear of the unit.
2. Switch the radio on and press the POWER / MODE button until 'switch to AUX -IN' is shown in the display.
3. Switch on the auxiliary device and select the music to be played and adjust the volume using the radio or the auxiliary device.
4. Use the controls as usual on the auxiliary device to move to the next track etc.

Using your radio

Let's get started

Using the radio with headphones

A stereo headphone jack has been provided so that the unit can be used without disturbing others. Plug in the headphones at the point marked  at the rear of the radio and adjust the listening volume to your chosen level. Excessive sound pressure from earphones and headphones can cause hearing loss. The speaker will not operate when earphones are fitted

Manually setting the clock

The clock in this radio will automatically set when connected to a DAB radio station. In the event that a DAB time signal is not available follow the set up procedure below.

1. With the radio in any mode, press **and hold** the MENU button until <set alarm> is displayed, press TUNE+ or TUNE- button repeatedly until 'set data / time' is displayed.
2. Press the VOLUME / SELECT knob to select and the clock set mode will flash in the display.
3. Press the TUNE + or TUNE – button until 'manual' is shown and press the VOLUME / SELECT knob to select and enter the clock set up mode.
4. Use the TUNE + or TUNE – buttons to adjust each option and then press the VOLUME / SELECT knob to accept and to move to the next field. When the minutes have been set and accepted, the clock set up mode will be exited.

Note:

Each of the above steps needs to be completed within 10 seconds of pressing the button, otherwise the screen will clear.

Using your radio

Let's get started

Reset

Moving the radio to another location in the country the pre-tuned and stored stations may no longer be available and it will be necessary to reset the radio back to the factory settings.

1. In either FM or DAB mode, press **and hold** the MENU button, when <set alarm> is displayed, press TUNE+ or TUNE- button repeatedly until 'system reset' is displayed.
2. Press the VOLUME / SELECT knob to select, when 'press enter key to reset' is displayed press the knob to accept and the reset will begin.
3. A scan will then start and when complete the radio will play the first alphanumerically found DAB station. All stored programmed stations will be lost during reset.


This page is left intentionally blank

Other information 4



Other information

Technical Specification

Model	SKU: 133336501 – Grey SKU: 133336587 – Cream SKU: 133422477 – Woodland walk
Rated voltage (transformer)	100 – 240V~ 50/60Hz, 0.18A
Transformer output	5V  1.2A
Transformer model	ZFXL-050120Z
Class rating (transformer)	II (double insulated)
Rated voltage (radio)	DC 6V (1.5V x 4 AA)
Power consumption	5W
Power consumption (standby)	<1W
Audio output	2W RMS
Radio	DAB 174-240MHz FM 87.5 – 108 MHz
Operating conditions	Temperature: 5°C to 35°C Humidity 5% to 90%
Operating position	Horizontal

Product support 5



Product support

Help is always at hand

Troubleshooting

Observation	Potential cause / solution
The unit does not work.	Has the DC adaptor been correctly plugged into the mains and the DC input jack at the rear of the unit? Does the mains socket that is being used have power? Has the ON/OFF switch at the rear of the radio been moved to the 'on' position? Has the POWER button been pressed?
The unit does not work on batteries	Has the adaptor lead been removed from the radio? Are the batteries inserted correctly or are they exhausted?
Batteries appear to go flat quickly	Has unit been switched to OFF using the ON/OFF switch at rear when not in use? See notes at end of page 12.
No sound	Is the volume control set at minimum? Are headphones fitted in the phones jack? Has Aux-in been selected with nothing plugged into 'Aux'?
Radio reception noisy (FM)	Extend the antenna or adjust the position of the radio.
Radio reception stutters / bubbling sounds (DAB)	Signal is weak. Extend the antenna or adjust the location of the radio. Positions higher up or nearer windows may improve reception.
DAB 'No Signal'	This normally means the signal is very weak, not that there is no signal. Try moving the radio to a different location and re-scanning. Check that your local area has DAB coverage on www.ukdigitalradio.com/coverage/postcodesearch/
Sleep function does not work	Has the sleep function been activated? See page 19
Alarm function does not work	Has the alarm / the correct been activated? See page 19
Snooze interval too long	See page 21 on how to adjust the snooze interval.
Auxiliary equipment does not play	Is the auxiliary equipment correctly connected to the unit? Has the play button been pressed on the auxiliary equipment?

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bush radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref:	<input type="text"/>	You can find this information on the rating plate – a small sticker (usually a sticker or metal plate on the rear of your product)
Serial number	<input type="text"/>	
Date of purchase	<input type="text"/>	This will be shown on your receipt

Local call rate applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan / tariff. Mobile and providers costs may vary, see www.bt.com/pricing for details

For security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Or by calling one of our experts on 0345 604 0105

Product support

Help is always at hand

Recycling electrical products



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

Declaration



Sainsbury's Supermarkets Ltd. hereby declares that this radio (SKU 133336501, 133336587, 133422477) is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

For a full copy of the EU Declaration of Conformity for this product, please access <http://www.sainsburys.co.uk/shop/gb/groceries/get-ideas/declaration-of-conformity> and use the SKU above, or contact Sainsbury's Supermarkets Ltd, 33 Holborn, London EC1N 2HT.

Product support

Help is always at hand

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines open 8am-8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may

charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP

Guarantor: Sainsbury's Supermarkets Ltd, 33 Holborn, London EC1N 2HT

Or by calling one of our experts on **0345 604 0105**

BUSH *Classic*

**Produced for Bush
489-499 Avebury Boulevard, Milton Keynes MK9 2NW
Made in China.**

Bush is a registered trademark of Argos Ltd.

Issue 1 02/18