

cookworks

Plastic Blender

Model No. TB507CF



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference




ELECTRICAL SAFETY

- You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug if unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Keep motor housing, cable, and plug dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not cover or block the ventilation holes.
- Do not pull on the cable to disconnect from the mains supply.
- Do not operate the appliance if damaged or after it malfunctions.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Only use with the parts supplied and fully assembled.
- Never place hands or utensils inside the jug whilst the blender is in use. Only use a scraper when the blender is not in operation.
- Do not cover the blender and allow the motor housing to cool fully before storing.
- Never use hot liquids in the blender jug, always allow liquids to cool to room temperature before blending.
- To avoid personal injury and product damage, take care when handling the jug and adding ingredients.
- Plastic jugs may damage if hot ingredients are added. It is recommended that all ingredients are at room temperature when added to the jug. Never add ingredients above 60°C.
- Do not fill above maximum level marked (1500ml) or use without the lid and stopper in place as the contents may be ejected when the blender is started.
- Do not leave unattended during use.
- The blender blades are sharp, take care when emptying the jug and cleaning.
- This appliance can cause personal injury if misused.

PARTS

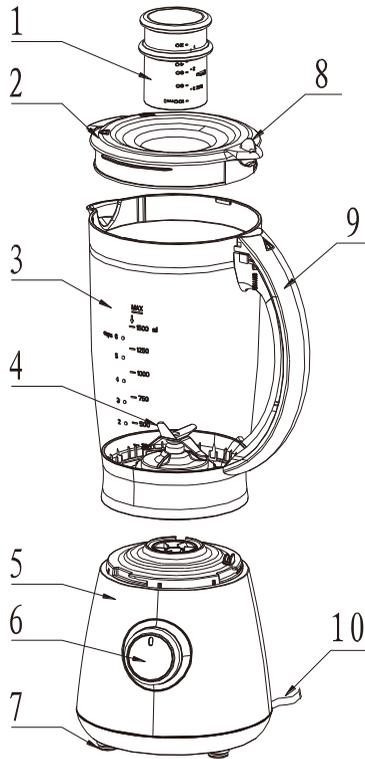



- | | |
|--------------------------|---------------------|
| 1. Stopper/measuring cup | 6. Speed switch |
| 2. Lid | 7. Feet |
| 3. Jug | 8. Safety interlock |
| 4. Removable blade | 9. Handle |
| 5. Motor housing | 10. Power cord |

IMPORTANT:

This blender is equipped with a safety feature, where the blades will not operate unless the base of the jug and motor housing are fully locked and the lid correctly fitted.

TO USE

1. Clean thoroughly before use.
2. Place the motor housing on a stable surface, check that the speed switch is at the 'OFF' position, fully unwind the cable and plug in.
3. Place the ingredients to be blended into the jug and check that the level is not above the maximum level marked (1500ml).
4. Fit the lid and stopper to the jug and lock into position (Fig. 1). When the lid is correctly fitted, the tab will be aligned with the jug handle.
5. Fit the jug onto the motor housing, align the arrow marked on the jug with the 'unlocked' padlock symbol on the side of the motor housing and twist until it is aligned with the 'locked' symbol (Fig. 2).
6. Using the speed switch, select the appropriate blender speed for your ingredients. A slower mix will be obtained by selecting the lower speed setting (1) and a faster mix by selecting the higher setting (2).
7. **If the blender does not operate, check that the jug and the lid is fully locked into position.**

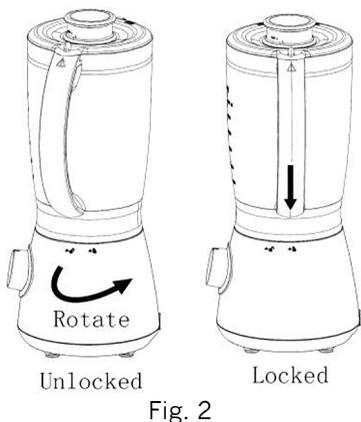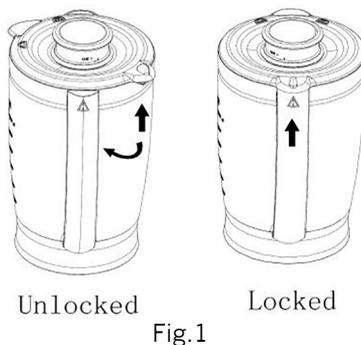

TO USE (CONTINUED)

8. Blend for a **maximum of 2 minutes**. If further blending is required allow it to cool to room temperature before restarting the blender.
9. Switch off; allow the blade to stop spinning before checking the consistency of the mix. If satisfactory, remove the jug.
10. To use the blender on pulse, turn and hold the speed switch to the 'Pulse' position for short intervals. The blender will operate at full speed, when the desired mix is achieved, release the switch.
11. To stop or interrupt the blending process, switch the appliance off by turning the speed switch to 'OFF' or by turning off at the mains.

Notes:

- Do not run the blender with the jug empty.
- For some types of mixes, it may be necessary to fill above the minimum (250ml) to obtain the most efficient mixing.
- The stopper is graduated and may be used as a measuring cup.
- The jug can be rinsed between uses in a session by half filling with clean water and operating the blender on pulse for a few seconds. Always clean thoroughly at the end of each session.
- Always check that the seal is fitted before use.
- Do not continuously operate the blender too long. When the temperature of motor over the limited, the protect function of motor will be active to stop it keep working. At this time, unplug the unit to cool down and waiting for the PTC temperature fuse to reset, then the unit could resume to operated.
- If the blender gets blocked, the protect function of motor will also active. It should stop operating and unplug the unit to remove the obstacle, then the unit could work again.

CLEANING

Clean the blender after each use.

1. Switch off and unplug.
2. The jug, lid and stopper may be washed in hot water with a little washing up liquid taking care not to handle the blades. Rinse and wipe dry. If water or foam enter the handle during washing, stand the jug upright and leave to drain-liquid will drain naturally through a hole situated at the base of handle. Not suitable for dishwashers.
3. To remove the blade assembly (not the plastic collar) from the jug, firmly grasp the lugs of blade assembly on the underside of the jug. Twist the assembly anti-clockwise to remove (Fig 3). Lift off the silicon seal (Fig 4).
*** Please note the blade assembly may be difficult to remove the first time.**



Fig. 3

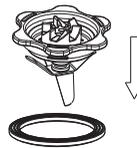


Fig. 4

4. Wipe the outside of the motor housing with a damp cloth; do not use detergent or abrasives as these may scratch the surface.
5. Never immerse the motor housing, cable or plug in water.

TECHNICAL SPECIFICATION

Cookworks 1.5L Plastic Blender	
Model no	TB507CF
Rated Voltage & Frequency	220 – 240V AC, 50 – 60Hz
Rated Power Input	500W
Capacity	1.5 Litres
Maximum work time	2 minutes
Class rating	II (Double insulated)
BS 1362 fuse	3A
Product dimensions (external)	171 x 212 x 407 mm
Product weight (net)	1.89 kg approx.



RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

 This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with. Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
London
EC1N 2HT
www.argos-support.co.uk

