



SureDri[®]

Heat Pod Drying System

Instruction Manual



Airer not included

FOR HOUSEHOLD USE ONLY
READ THESE INSTRUCTIONS BEFORE USING THIS UNIT
PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

1



Minky Homecare, Vale Mill (Rochdale) Ltd,
Robinson Street, Rochdale, OL16 1TA.

PL Innovation GMBH, HauptstraBe 103,
53619, Rheinbreitbach, Germany.

minky.com

3

Before using this appliance, please read the following instructions carefully and keep for future reference.

SAFETY INSTRUCTIONS

1. This appliance is for indoor use only.
2. This appliance is for domestic use only and should not be used for commercial purposes.
3. Check that the voltage on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge providing they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be undertaken by children unless they are older than 8 years and supervised.
5. This is not a toy - children should be supervised to ensure they do not play with the appliance. Keep the appliance and its cord out of reach of children less than 8 years.
6. If the appliance, power supply cord and plug are malfunctioning or they have been dropped or damaged switch off the appliance and discontinue use immediately.
7. This appliance contains no user serviceable parts. Repairs should only be undertaken by the manufacturer, its service agent or a similar qualified person.
8. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similar qualified person in order to avoid a hazard.
9. If replacement of the plug fuse is required, the replacement fuse should be of an identical rating to the original.
10. Keep the power supply cord away from sharp edges and parts of the appliance that may become hot during use. Do not allow the power supply cord to run under rugs or carpets or create a trip hazard.
11. Do not use this appliance with an extension lead or multiple socket adaptor.
12. Do not use this appliance near an open flame or in moist or damp conditions. Keep the appliance away from other heat emitting appliances.
13. Allow sufficient space around the Heat Pod Unit and airer for ventilation and heat dissipation. Place on a flat, stable, heat resistant surface a minimum distance of 5 to 10 cm from walls and other items.
14. Do not leave the appliance unattended whilst connected to the mains power supply. Switch off the mains power supply and remove the plug by hand.
15. Always disconnect the appliance from the power supply before assembling, disassembling or performing cleaning or maintenance.
16. Do not immerse the Heat Pod Unit, power supply cord or plug in water or any other liquid. Care should be taken to avoid spillage on the electrical components, power cord and plug. Do not operate the appliance with wet hands.
17. Do not use any accessories or attachments with the appliance that have not been supplied or recommended by the manufacturer.

2

WARNING

1. This appliance is intended only for drying textiles washed in water.
2. Applying dripping wet garments can cause a fire hazard. Ensure all garments have been spun well in a washing machine before hanging.
3. Do not use with delicate textiles i.e. silks or non-colourfast garments.

CAUTION

Misuse of the appliance could cause injury – do not use the appliance for anything other than its intended use.



Caution:

Any heated surfaces and the heating element may contain residual heat and still be hot after use. Allow the product to cool fully before moving or handling.

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Do not allow any garments, objects or the Airer Cover to be placed on top of or cover the Heat Pod and ensure the outlet is not obstructed to avoid overheating.

Do not insert any objects into the air vents and ensure each vent is not obstructed.

Do not place the Heat Pod Unit next to the mains power supply

It is normal for the appliance to produce a little odour on the first use. This will cause no harm and will dissipate after the first few uses.

GETTING STARTED

1. Remove the appliance from the packaging
2. Store or dispose of the packaging safely



WHAT'S IN THE BOX

1. Minky Sure Dri Heat Pod Unit
2. Telescopic hose
3. Hose end cap
4. Frame
5. Cover
6. Instruction manual

3

PARTS

- 1. Minky Sure Dri Heat Pod Unit
- 2. Grille
- 3. Air outlet
- 4. Power indicator
- 5. Heat settings
- 6. Timer
- 7. Hose connector
- 8. Telescopic hose
- 9. Extension tube head
- 10. Hose end cap
- 11. Frame: 2 x A, 2 x B, 2 x C, 2 x D, 4 x E
- 12. Cover (Airer not included)

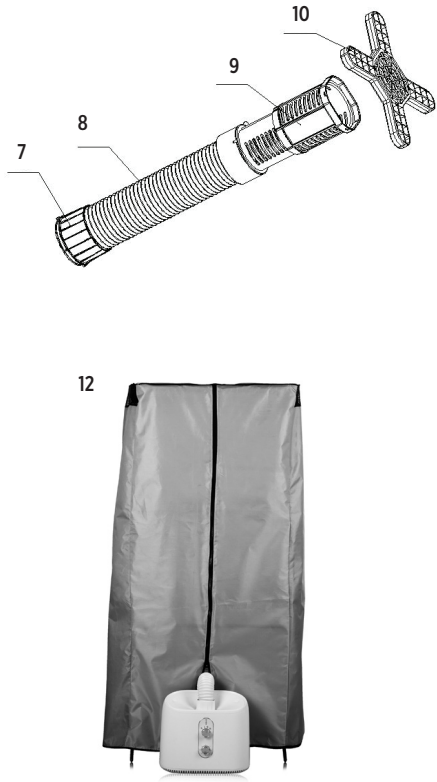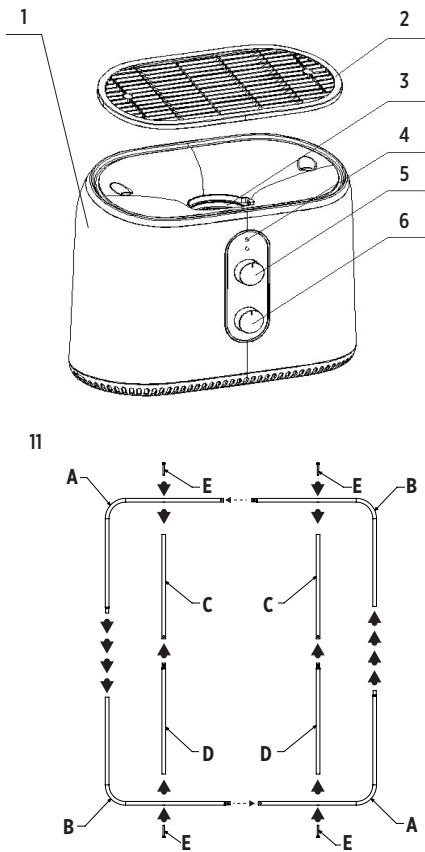


4

FEATURES

- 1. Designed to be used with all 3 tier airers with maximum open dimensions of H139 x W59 x D49cm
- 2. Costs pennies to run *
- 3. Telescopic hose fits underneath any 3 tier airer
- 4. Low / medium / high temperature feature
- 5. Cool air feature
- 6. Safety cut out switch
- 7. 3 hour timer feature
- 8. 850W power
- 9. 1.4m power cord

*Exact cost per hour dependent on domestic electricity prices at time of use.

CONTROL PANEL FEATURES

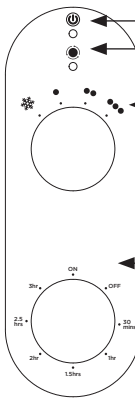

- 1. Power indicator
- 2. Fan indicator
- 3. Heat and cool air settings
- 4. On – continuous
- 5. OFF
- 6. Timer functions

INSTRUCTIONS FOR USE

ASSEMBLING THE APPLIANCE

- 1. The appliance needs to be assembled before plugging into the mains power supply.
- 2. Remove the grille from the top of the Heat Pod Unit.
- 3. Extend the extension tube head to maximum.
- 4. Apply hose end cap to the extension tube head, push on to fit.
- 5. Insert the hose connector into the air outlet and twist to lock (as per Figure 1 below).
- 6. Locate the appliance to the front of the base of the airer, extend the telescopic hose and extend the extension tube head (as per figure 2 below).
- 7. Position the end cap between the middle of bottom rungs.
- 8. Assemble the frame (as per Figure 3 below).
- 9. Tie the cover onto the frame (as per Figure 4 below).
- 10. The appliance can now be plugged into the mains power supply.

5

STORAGE

- 1. Unplug the appliance.
- 2. Remove the cover and frame.
- 3. Untie the cover from the frame.
- 4. Fold the cover and place the cover and frame in a safe place.
- 5. Remove the telescopic tube from underneath the airer, compress the tube and untwist the hose connector from the appliance.
- 6. Place the appliance and telescopic tube in a safe place.

CLEANING AND MAINTENANCE

- 1. Before cleaning, ensure the appliance is unplugged from the mains power supply and allow to cool fully.
- 2. Clean the appliance with a soft damp cloth and dry thoroughly.
- 3. Do not clean the appliance with scourers or harsh detergents as this could damage the appliance and impair its functionality and appearance.
- 4. Do not immerse the appliance into water or any other liquid.
- 5. Clean the cover with a soft damp cloth and allow to dry naturally.

SPECIFICATIONS

Product Code: MS21N-001

Input: 220V-240V-; 50 Hz/60 Hz; IPX2

Output: 850W

GUARANTEE AND CUSTOMER SERVICES

This product is guaranteed for a period of 1 year from the date of purchase against all manufacturing defects, subject to correct use in accordance with these instructions and normal domestic use. Please retain a valid proof of purchase or receipt to activate this guarantee.

For full terms and conditions please refer to our website.

Minky products are manufactured to the highest standards to ensure the consistent quality expected from Britain's leading supplier of homecare products.

To contact us please call our customer helpline on **0330 00 22 555** or email **support@minkyhomecare.co.uk**

Minky Homecare, Vale Mill (Rochdale) Ltd. Robinson Street, Rochdale, OL16 1TA, United Kingdom

PL Innovation GMBH, HauptstraBe 103, 53619, Rheinbreitbach, Germany.

Please retain this information for future reference. These instructions can also be found on the Minky website.

6

7

Figure 1



Figure 2



Figure 3


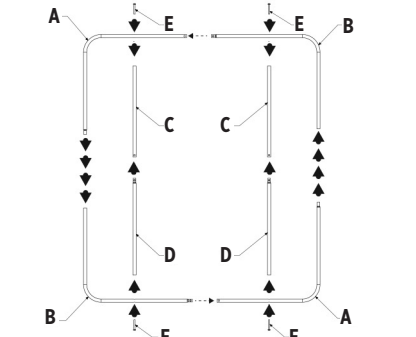 


Figure 4

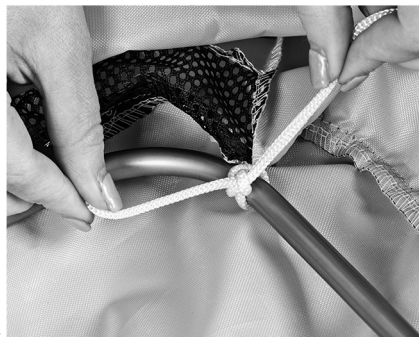 

OPERATING THE APPLIANCE

- 1. Ensure the 'Assembling the appliance' instructions have been followed.
- 2. Once the appliance is ready to be used, load the airer with damp garments.
- 3. Applying dripping wet garments can cause a fire hazard. Ensure all garments have been spun well in a washing machine before hanging.
- 4. Load the airer and place the cover and frame over the airer. Ensure the frame is resting flush with the top of the airer.
- 5. Plug in the Heat Pod Unit and switch on at the mains power supply. The Power light will illuminate to indicate the appliance is plugged in.
- 6. Turn the temperature dial to your desired heat setting.
- 7. Turn the timer dial to ON for continuous running. The fan indicator light will illuminate to show that the fan is running.
- 8. To use the timer function, turn the timer dial to the desired run time. The Heat Pod Unit will automatically turn off once the time has elapsed.
- 9. Once the garments are dry, turn off the appliance by turning the Timer Dial to the 'Off' position. The fan indicator light will turn off to show that the fan has stopped. If a timer has been set, the Heat Pod Unit will automatically turn off once the timer has elapsed.
- 10. Remove your garments with care as the appliance may still be hot.

6

7