
MODEL# BMT014D Fig.1

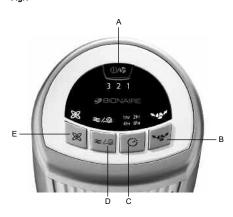

Note: Image shown with all lights illuminated.



Holmes Products (Europe) Ltd 1 Francis Grove London SW19 4DT England Fax: +44 (0)20 8947 8272 Email: enquiriesEurope@jardencs.com Website address: www.jardencs.com UK - Free phone Customer Service Helpine - 0800 052 3615





CE

© 2010 Surbeam Products. Inc. doing business as Jarden Consumer Solutions. All rights reserved. Imported and distributed by Holmes Products (Europe) Ltd., 1 Francis Grove, London SW19 4DT, United Kingdom. Pnrited in PRC SPR-100610 PN. 141567 INSTRUCTION MANUAL

### U.K. and IRELAND PLEASE READ AND SAVE THESE INSTRUCTIONS

IMPORTANT INSTRUCTIONS When using electrical appliances, basic

safety precautions should always be taken including the following: Use the fan only for purposes

- Use the fan only for purposes described in the instruction manual. To protect against electrical shock, do not immerse the fan, plug or cord in water or spray with liquids. Close supervision is necessary when
- any appliance is used by or nea
- children Unplug from the electrical outlet when
- not in use, when moving the fan from one location to another, before putting on or taking off parts and before cleaning. Avoid contact with any moving parts.
- Do not operate in the presence of explosive and/or flammable fumes. Do not operate fan until fully
- mbled with all parts properly in place. To avoid fire hazard, NEVER place
- the cord under rugs or any parts an open flame, cooking or other
- heating appliance. Ensure that the fan is switched off from the supply mains before
- from the supply mains before removing the guard. Do not operate any appliance with a damaged cord, plug, after the appliance malfunctions, or has been dropped/damaged in any manner. The use of attachments not recommended or sold by the spaliance manifecturer may cause
- appliance manufacturer may cause hazards
- Do not use outdoors
- Do not let the cord hang over the edge of a table or counter, or come into contact with hot surfaces.

To disconnect from the electrical supply, grip the plug and pull from the wall outlet. DO NOT pull on the cord. Always use on a dry, level surface

Aways use on a dry, level surface. Do not operate without the fan grills properly in place. This product is intended for household use ONLY and not for commercial or

industrial applications. Should the fan stop working, first check the fuse in the plug (UK only) or fuse/circuit breaker at the distribution

board is operating, before contacting the manufacturer or service agent. If the supply cord or plug is damage it must be replaced by the aged manufacturer or its service agent or a similarly qualified person in order to avoid hazard.

This appliance is not intended for use This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance but concerning use of the appliance by a person responsible for their safety Children should be supervised to ensure that they do not play with the

# MISSING A PART FOR YOUR

FAN? Please call 0800 052 3615 for

sistance ASSEMBLY INSTRUCTIONS

Your fan comes fully assembled and is ready for use.

### **OPERATING INSTRUCTIONS**

- (See Fig. 1) A. Power Button/Speed Settings \_\_/\$ Press ()/(5 = 1 (low speed), 2 (medium Speed), 3 (high speed), off (no light)
- B. Oscillation Control v∉ Press v∉ = on (light on), off (no light)

- C. Timer 🕝 Press 🕝 = light on 1, 2, 4, or 8 (hours until unit will shut off automatically)
- automatically) Press ③ = no light (no timer unit stays on until turned off)
- mode randomly cycles through the speed settings to simulate a natural breeze Press S/@ = sleep mode ~ cycles through the speed settings in
- order Press ≝/...@ = off (no light)
- E. Ioniser Press ≫ = on ioniser freshens the air in your room Press ≫ = off (no light)

NOTE: This fan has a special feature to save your settings. Press and hold ()/6 to turn off and save current settings to memory. The next time you use your fan, it will begin operating in the setting last used. This feature will work only if the unit is plugged in.

# CLEANING AND MAINTENANCE

Follow these instructions to correctly and safely care for your Bionaire™ fan. Please remember: • Always unplug the fan before cleaning

- or assembly. Do not allow water to drip on or into
- the fan motor housing. Be sure to use a soft cloth, moistened with a mild soap solution.
- Do not use any of the following as a cleaner: petrol, thinners or benzene.

FAN STORAGE It is important to keep the fan in a safe, dry location.

For U.K. and Ireland only: If the plug is not suitable for the socket outlets in your home, it can be removed

and replaced by a plug of the correct type. Please refer to "Installation of a plug" below.

# Installation of a plug Applicable to U.K. and Ireland

NOTE: If you are unsure or in doubt about the installation of the plug please contact a qualified electrician. If a 13A 3-pin plug is fitted, it must be an ASTA approved plug, conforming to BS1363 standard. Replacement 3A fuse must be BSI or ASTA BS1362 approved. The wires in the mains lead are coloured



BROWN - LIVE NEUTRAL BLUE Please note that the colour of these

mains wires may not correspond with the colour markings that identify the terminals in your plug. Please proceed as follows:

The BROWN coloured wire must be connected to the terminal, which is marked with the letter "L" or is coloured

RED The BLUE coloured wire must be connected to the terminal, which is marked with the letter "N" or is coloured

BI ACK DO NOT CONNECT either of these

## GUARANTEE

Please keep your receipt as this will be required for any claims under this

guarantee.

This appliance is guaranteed for 3 years after your purchase as described in this document

During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back

to the place of purchase, with your till receipt and a copy of this guarantee The rights and benefits under this

guarantee are additional to your guarantee are additional to your statutory rights, which are not affected by this guarantee. Only Holmes Products (Europe) Ltd. ("Holmes") has the right to change these terms.

Holmes undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly free of charge provided that:

 
you promptly notify the place of purchase or Holmes of the problem; and

the appliance has not been altered in any way or subjected to damage misuse, abuse, repair or alteration by a person other than a person

authorised by Holmes. Faults that occur through, improper use damage, abuse, use with incorrect voltage, acts of nature, events beyond voltage, acts of nature, events beyond the control of Holmes, repair or alteration by a person other than a person authorised by Holmes or failure to follow instructions for use are not covered by this guarantee. Additionally, normal wear and tear, including, but not limited to, minor disectation and contachers are minor discoloration and scratches are

The rights under this guarantee shall only apply to the original purchaser and shall not extend to commercial or communal

not covered by this guarantee.

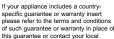

use

authorized dealer for more information This marking indicates that this product should not be disposed with oth

should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material Ъ

resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. Holmes Products (Europe) Limited

1 Francis Grove London SW19 4DT UK