


成品尺寸：145x210mm 骑马钉

challenge®

**Model No. TX-403DCMF
4INCH WHITE MISTING FAN
INSTRUCTION MANUAL**

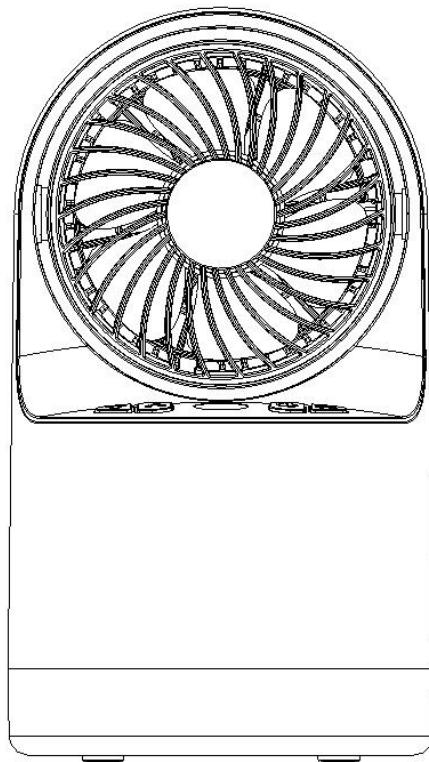

Important: Please read these instructions carefully before first using this product and retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS.



Read through all the instructions carefully before starting to use the appliance. Keep this manual in a safe place for future reference.


3mm

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- Children should be supervised to ensure they do not play with the appliance.
- To protect against electrical shock do not immerse cord, plugs, or main body in water or other liquid.
- Check the appliance before each use for signs of wear or damage. If damaged discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor, household use only.
- Do not insert fingers or other objects into the fan during use, this can cause personal injury and damage.
- Unplug the appliance when not in use, when moving the appliance and before cleaning.
- Do not place the appliance on an unsteady surface.
- Keep away from open flames such as lit candles, open fires, cooking, and other heating appliances.
- Do not use in the presence of explosive and/ or flammable fumes.

BATTERY WARNING


- Do not expose a battery to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. NOTE The temperature -130°C- can be replaced by the temperature -265 F .
- Follow all charging instruction and do not charge the battery outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.
- After extended periods of storage, it may be necessary to charge and discharge the battery several times to obtain maximum performance.
- Battery gives its best performance when it is operated at normal room temperature (20°C±5°C).
- In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not leave a battery on prolonged charge when not in use. Do not use any charger other than that specifically provided for use with the product.
- Do not use any cell or battery which is not designed for use with the product.
- Keep batteries out of the reach of children.
- Do not crush, puncture, dismantle or otherwise damage battery packs.
- Avoid storage in direct sunlight.
- Do not dispose of exhausted battery packs in household waste. Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.

PARTS & CONTROLS.

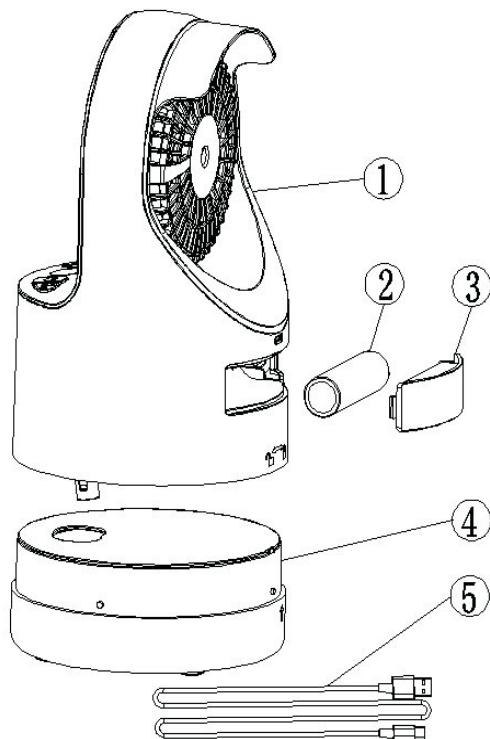

1. FAN
2. BATTERY
3. BATTERY COVER
4. WATER TANK/ BASE
5. TYPE-C USB

FAN OPERATION.

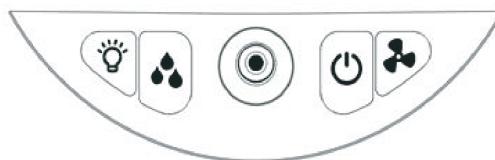

LED: Press the light button to switch on the light, there are 7 colour options. To switch the light off you will need to press the button through the 7 colour options until the light is off.



MIST: Press to activate the mist function. Note: Water needs to be added to the water tank for this function to work.



ON/OFF: press to switch on the fan, press the button again to switch the fan OFF. Note: The fan will start on the lowest speed.



SPEED: press the speed button to cycle through the speed settings low, medium and high.

FILLING THE WATER TANK.

- Before adding water to the water tank, switch off and unplug the fan.
- Unlock the base by turning to the base anti clockwise.
- Fill the tank with clean and cold water making sure not to overfill it.
- Place the main fan housing back on top of the base turning clockwise to lock in place. Make sure the base is securely attached before use.
- Empty any remaining water out of the tank after each use.

Note:

Only use water in the water tank. Do not add chemicals, oils, or any other additives.

Only use cold or lukewarm water, hot water could cause damage and or personal injury.

Never leave water in the water tank when the fan is not in use or when storing away.

CHARGING INSTRUCTIONS.

- The fan comes with a rechargeable battery that can last up to 6 hours.
- Charge the battery by connecting the USB-C cable supplied with the fan to the USB socket at the rear of the base and charge using a suitable power supply such as a laptop or PC USB port, USB power supply or USB socket outlet. Charge time should not exceed 8 hours.
- The fan can be used whilst connected to the USB power source or battery alone. Care should be taken not to leave the fan connected to a mains power source for long periods of time as this can reduce the battery life.
- When the battery is charging the bottom of the tank will flash red. To indicate the battery is fully charged the light will change to green.
- The fan does not support rapid charging.
- After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

BATTERY INSTALLATION

 
NOTE: The battery in this fan can be replaced with a suitable battery replacement of the same specification Li 18650 1800mAh purchased from a reputable battery supplier.

- Remove battery cover door and carefully remove battery and dispose following your local recycling facility.
- Insert the new battery making sure the (+) and (-) signs match on the battery match with the battery compartment (observing correct polarity), failure to do so can result in damage to the fan and battery.
- Replace the battery cover.

USING YOUR FAN.

- Place on a dry and stable surface.
- Make sure the battery is fully charged or the fan is connected to a suitable power source using the USB cable supplied.
- Press the ON/OFF switch to turn the fan ON or OFF.
- Press the SPEED button to select the desired speed.
- Activate the mist button for a continuous fine mist if desired. Water must be added to the tank for this function to work.

- Activate the light button for optional ambient lighting. Continue to press the light button to cycle through the light colour options.
- After use unplug the fan if connected to a power source and empty the water tank.



NOTE: The water in the fan must be changed every 3 days.

Charging time approx. 2 hours

Operating time approx.

- High speed fan only working time 6 hours.
- Mid speed fan only working time 7 hours.
- Low speed fan only working time 10 hours.
- High speed +mist working time 2 hours.
- Low speed +mist working time 4 hours.
- Mist only working time 3.5 hours.

CLEANING INSTRUCTIONS.

- Make sure the fan is switched off and unplugged before cleaning.
- Clean the outside of the fan using a clean damp cloth.
- Remove the water tank and clean using warm water.
- Regular cleaning of the water tank is strongly advised.
- Dry thoroughly before use or storing away.

TECHNICAL SPECIFICATION.

Challenge 4-inch Misting Fan

Model number	TX-403DCMF
Input rated voltage	5V DC
Output rated wattage	4W
Cable type	USB-C (1m)
Battery	Li 18650 1800mAh
Water tank capacity	400ml
Dimensions	130x130x210mm
Weight	590g



Produced in China for Argos Limited, London, EC1N 2HT, UK. Argos (N.I.)
Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

14mm



RECYCLING ELECTRICAL PRODUCTS

7.7mm



Li-ion

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.



Li-ion Li-ion battery. This product has been marked with a symbol relating to "separate collection" for all battery. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery can be hazardous for the environment and for human health since they contain hazardous substances.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
London
EC1N 2HT
www.argos-support.co.uk