

BUSH

Instruction Manual

Bluetooth Adaptor

B102



CONTENTS

Safety information.....	2
Panels instruction.....	5
Get started.....	6
Cable connection operation.....	7
NFC operation.....	8
Bluetooth operation.....	9
Specification.....	10
Disposal of old electrical appliances.....	10
Contact details.....	11
Guarantee.....	12

ACCESSORIES

Micro USB power adaptor
3.5mm-3.5mm cable
3.5mm-2x RCA cable
User manual

Note:

Place the unit on a dry stable surface away from heat and damp and where is unlikely to fall or be knocked over.

SAFETY INFORMATION



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

1. Read these instructions. Keep these instructions.
2. Heed all warnings. Follow all instructions.
3. Do not use this apparatus near water.
4. Clean only with a slightly damp cloth.
5. Do not block any ventilation openings.
6. Install in accordance with the manufacturer's instructions.
7. Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel.
10. Servicing is required when the unit has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

SAFETY INFORMATION

11. To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture.
12. The unit must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.
13. No naked flame sources such as candles should be placed on the product.
14. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.
15. Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

ELECTRICAL INFORMATION

Use only power supplies listed in the user instructions.

MAINS SUPPLY

1. The mains operating voltage of this unit is marked on a rating plate on the back of the unit.
2. The means of disconnecting this appliance from the mains supply is the mains plug. This should be unobstructed and readily operable at all times.
3. The direct plug-in adapter (if included) is used as disconnect device, the disconnect device shall remain readily operable.
4. Plug the adapter with the product power supply interface firmly before connecting to power.

SAFETY INFORMATION

We apologize for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.


AVOID HEARING DAMAGE

Listen at moderate volumes to avoid hearing damage. If you hear no sound during playing, do not turn up volume as the music suddenly begin at high volume. Excessive sound pressure from speakers can cause hearing damage and loss. To avoid damaging your ears, adjust the volume to the lowest level before playing, and turn up to the desired level when playback has started.


CARE AND MAINTENANCE

1. Do not use harsh or abrasive cleaning agents or solvents.
2. Polish the product with soft cloth.
3. Do not attempt to disassemble you product.
4. Do not paint your product.
5. Do not drop, throw or try to bend your product.
6. Only use the power supply that same with product. Use an unauthorized power supply will damage the product.
7. All care and cleaning operations should be carried out with the unit unplugged from the mains power.
8. Occasionally wipe the unit with a lint free duster. Never clean the unit with liquids or solvents.
9. After using the machine, power off at the mains and unplug it if you are leaving it unattended for a long period.

PANELS INSTRUCTION

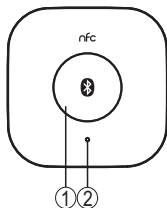

1. Bluetooth button/ NFC sensor
2. Indicator light

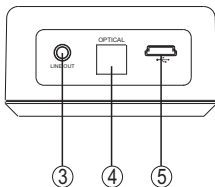

3. Line out
4. Optical output
5. Micro USB power input

GET STARTED

1. Connect the Micro USB plug of the Power Input on the back of the unit.
2. Connect the USB plug of the Power Cable to the USB port on the Power Adaptor.
3. Connect the Power Adaptor to a wall outlet.



CABLE CONNECTION OPERATION

LINE OUT OPERATION- RCA/AUX:

1. Connect the plug of the **3.5 mm** cable to the **LINE OUT** jack on the back of the unit.
- 2a. Connect the other end of **RCA** plugs to the audio input of your audio device (e.g. amplifier).
- 2b. Connect the other end of **3.5mm** plugs to the 3.5 mm input of your audio unit (e.g. speakers)..

OPTICAL OPERATION - Optical:

1. Connect the plug of an optical audio cable (not supplied) to the optical output the back of the unit.
2. Connect the other end to the optical input of your audio unit (e.g. DVD player).



NFC OPERATION

1. Place the back of your phone (with NFC function) on the **NFC SENSOR** for 3 seconds. The Bluetooth function of the phone is activated automatically.
2. The units are paired when the indicator light solid blue.
3. Your audio device provides the best control of the playback.
4. To disconnect the NFC connection, place the back of the phone on the **NFC SENSOR** again for 3 seconds. The units are disconnected and you will hear a sound.

Note:

1. Some devices with Android system 4.0 or below need to install the 'NFC.apk' to activate the NFC function.
2. Some devices have a weak compatibility with NFC function that may be related to the NFC software.



BLUETOOTH OPERATION

1. To enjoy music wirelessly from audio devices (e.g. phone), start the Bluetooth function on your device.
2. Press the **BLUETOOTH** button to enter the Bluetooth mode. The **INDICATOR** flashes blue.
3. Let your phone search for Bluetooth units, and select '**B102**' from the list of discovered devices.
(If necessary, enter '0000' as passkey.)
4. After a successful Bluetooth connection, the **INDICATOR** lights solid blue.
5. Your audio device provides the best control of the playback.
6. Double click the **BLUETOOTH** button will un-pair the unit from your phone.

Note:

When you receive an incoming call on your mobile phone, the unit will automatically mute. When the call ends, it depends on your phone whether the track will resume playback.

SPECIFICATIONS

Power supply: 220-240 V / 50 Hz

Bluetooth range: 10 m

Dimensions: 86 x 86 x 25 mm

DISPOSAL OF OLD ELECTRICAL APPLIANCES



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.



This appliance complies with the following EU directives: 2006/95/EC Low voltage directive, 2004/108/EC EMC directive, 2002/96/EC WEEE directive.

CONTACT DETAILS

In the unlikely event of difficulties with your appliance, please contact the retailer if the machine is still under guarantee.

Customer help-line: 0870 600 3030

GUARANTEE

BUSH

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year.

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW