 


challenge[®]

Model No. DH-JH04
AIR PURIFIER
INSTRUCTION MANUAL

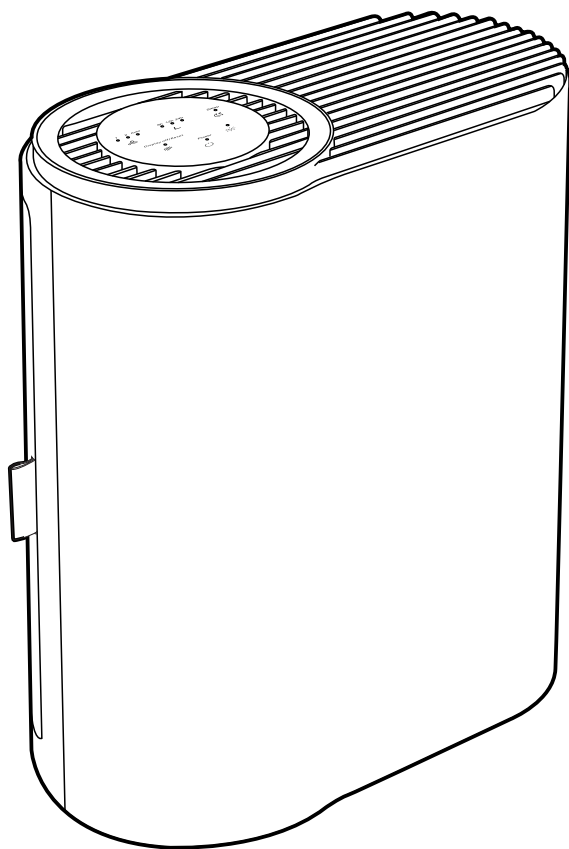

Important: Please read these instructions carefully
before first using this product and
retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS.



Read through all the instructions carefully before starting to use the appliance. Keep this manual in a safe place for future reference.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children should be supervised to ensure they do not play with the appliance.
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.

The product is not to be used if it has been dropped or there are visible signs of damage.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.

- Never attempt to repair by yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor; household use only.
- Unplug the appliance when not in use, when moving the appliance and before cleaning.
- Do not place the appliance on an unsteady surface.
- Do not cover the appliance as this can block the air flow and cause overheating.

PARTS & CONTROLS

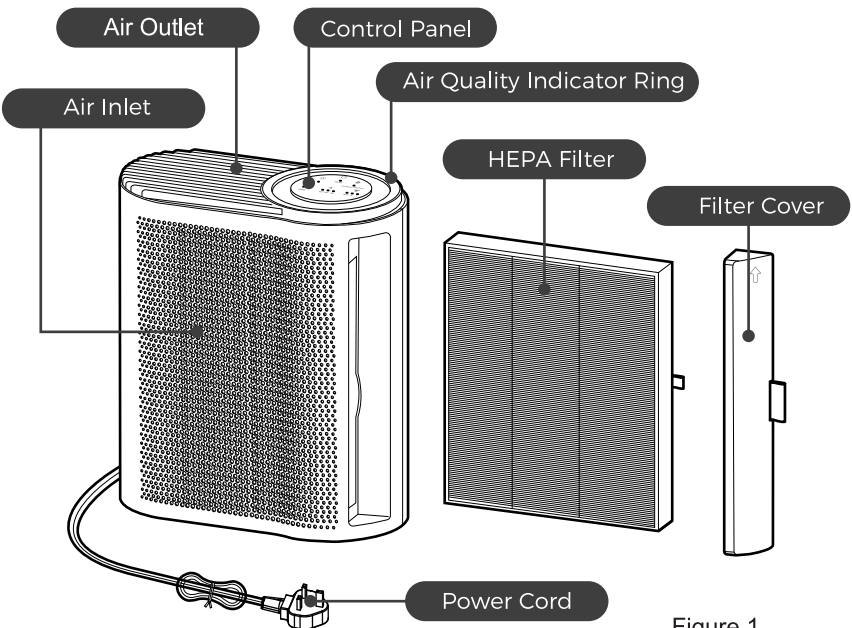 


Figure 1

CONTROL PANEL


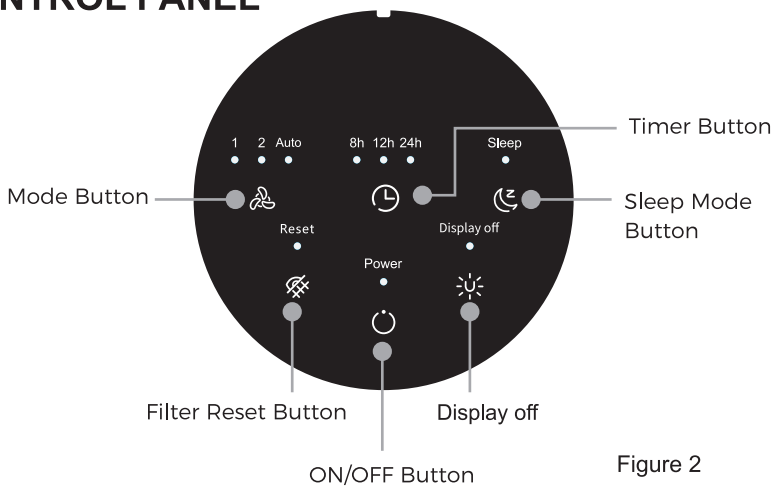 


Figure 2


BEFORE FIRST USE

 remove the packaging from the filter contained inside the air purifier before first use

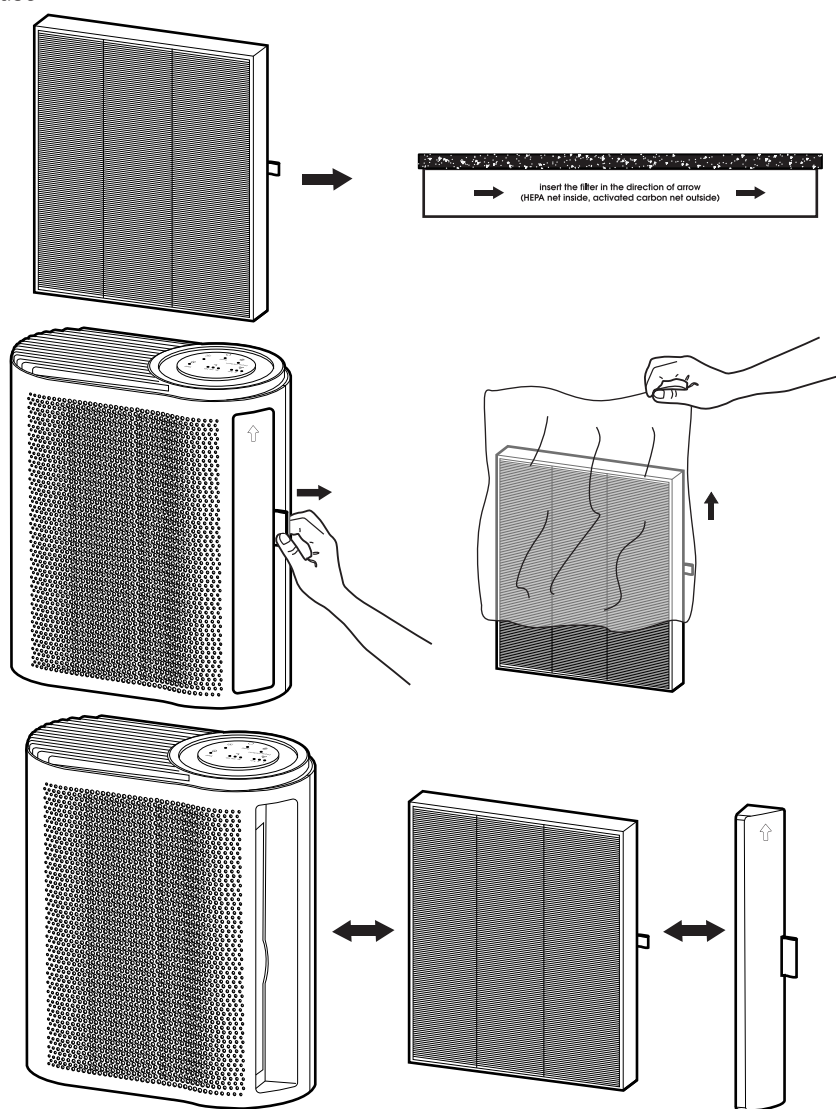


- Pull the filter cover away from the body to expose the HEPA filter, and pull the HEPA filter out.
- Remove the filter packaging.
- Replace the HEPA filter into the air purifier taking note of the correct position and replace the filter cover.

 Note: Replacement filters can be purchased via www.argos.co.uk with catalogue number 5024531.

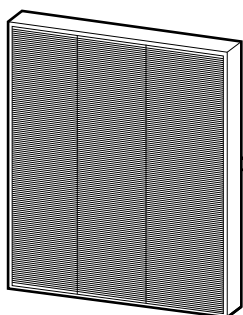

 Note: Take care to insert the filter in the correct way.

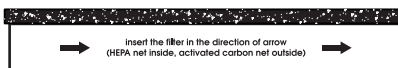

AIR PURIFIER CONTROLS.

 **Power control Button.** Press to switch the Air Purifier ON or OFF.

 **Mode Button.** Press to change the fan speed between 1,2 and auto.

Auto mode. When auto mode is selected, the air purifier will adjust the fan speed automatically based on the air quality. For example, if the air quality is bad, the fan will automatically be set to high speed.

 **Timer function.** When the air purifier is working, select the timer function button to set the timer from 8h-12h-24h-OFF. When the time is up, the air purifier will turn off automatically.

 **Sleep mode.** In sleep mode, the fan runs at low speed and low noise, with all indicator lights switched off except for the sleep mode icon light and the power icon light.

Press sleep mode again to deactivate this mode.

 **Display off.** This turns off the display lights on the air purifier, including button lights and air quality indicator lights (except the Display off Indicator).

 **Reset Button.** If the service life is too low, the HEPA indicator lights on, indicating that the filter needs to be replaced. After replacing the filter, long press the "  "button for 3 seconds to reset the indicator. When reset is successful, the "  "indicator stops blinking and 5 seconds later it will return to the main screen.

Memory Function. The air purifier will restart at the previously set mode and fan settings after being switched off. It will not remember timers or sleep mode.

Air Quality indicator ring. the air purifier is equipped with dust sensors that detect the level of PMs (particle matter) in the room and provide a visual display to indicate the air quality. The air quality ring is around the control panel. The sensor is continually monitoring the air and the air quality indicator illuminates in either blue, yellow, or red depending on the level of PM's detected in the room.

PM 2.5 level Colour indicator.

Blue – Good air quality.

Yellow – Moderate air quality.

Red – Poor air quality.

OPERATION.

- Place the air purifier on a dry, firm, level surface where it is unlikely to get knocked.
- Connect the power cord to a suitable power supply.
- Switch the air purifier on using the power ON/ OFF button.
- Once the air purifier is switched on, all indicator lights on the control panel will illuminate and a beep will sound. The air quality indicator ring will flash blue, yellow then red before going switching off. The fan has now entered standby state.
- Press the power ON button again, the air purifier turns on with a beep. The fan is on the first speed setting and the corresponding icon for speed 1 is illuminated. The air quality ring will also illuminate with a corresponding colour according to the current PM 2.5 level detected.
- Use the function buttons to set your air purifier to your individual preferences.
- For operation from standby mode, the air purifier memory function will restart the air purifier from the last used settings for fan and mode.

CLEANING & MAINTENANCE.

Before performing any cleaning or maintenance, make sure the air purifier is switched off and unplugged from the mains power supply.

It is recommended to clean your air purifier once every 3 months and before extended storage.

- Clean the exterior surface of the appliance with a soft, lightly damp cloth, then dry the appliance with a soft, clean cloth. Do not use any chemical solution, wax polish, or spray water on to the air purifier.
- The HEPA filter, located at the side of the air purifier helps to remove dust particles from the air. A dirty filter clogged by dust particles can reduce the efficiency of the air purifier. For optimum performance from your air purifier, it is recommended you replace the HEPA filter after 2000h (3 months) use. How often you use the air purifier, and the air quality may shorten/ lengthen this time.

Filter Maintenance.

If your air purifier will not be used for more than 30 days, it is recommended that you remove the HEPA filter from the unit and wrap it in an airtight plastic bag.

STORAGE.

- When not in use, clean the air purifier before storing away in the original or similar sized box.
- Store the appliance in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

TECHNICAL SPECIFICATION.

Challenge Air purifier	
Model number	DH-JH04
Input rated voltage	220-240V 50Hz
Output rated wattage	34W
Weight	3.2kg
Dimensions	31.5 x 16 x 36.3cm
Suggested room size	46m ²
Working temp range	8°C-40°C indoor



Produced in China for Argos Limited, London, EC1N 2HT, UK.
Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally,
Belfast, BT8 6FX, UK.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

PLUG/ WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:

 
BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

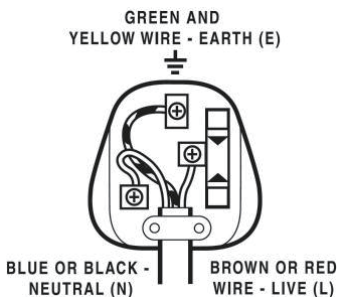

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connected to the terminal marked with the letter E or the earth symbol.





PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
London
EC1N 2HT
www.argos-support.co.uk