INSTALLATION OF A PLUG APPLICABLE TO U.K. AND IRELAND. This appliance is fitted with either a mouded of house the ASS of the ASS of the ASS of the house of the ASS of the ASS of the ASS of the appliance must not be used without the tuse cover fitted. If the plug is unsuitable, it should be dismanted and removed from the supply cord and an appropriate plug fitted as detailed connected to a 13 amp socket and the plug must be disposed of immediately. The wires of the mains lead are coloured in accordance with the following code: BLUE – NEUTRAL BROWN – LIVE The wire which is coloured Blue, must be BLUE – NEUTRAL BROWN – LIVE The wire which is coloured Blue, must be connected to the terminal which is marked with the letter N or coloured Black. The wire which is coloured Brown, must be connected to the terminal which is marked with the letter L or coloured Red. CAUTION: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL IN THE WIRE TO THE EARTH TERMINAL IN THE WIRE TO THE EARTH TERMINAL IN THE THE EARTH SYMBOL (G) OR COLOURED GREEN OR GREEN AND YELLOW.



GUARANTEE Please keep your receipt as this will be required for any claims under this guarantee. This appliance is guaranteed for 3 years after your purchase as described in this document. your pürchase as described in this document During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back to the place of purchase, with your fill receipt and a copy of The rights and benefits under this guarantee are additional to your statutory rights, which are not affected by this guarantee. Only

Jarden Consumer Solutions (Europe) Limited (\*UCS (Europe)") has the right to change these terms. UCS (Europe) undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly the of charge provided that:

be not working property inter of charge provided that:
 you promptly notify the place of purchase or JCS (Europe) of the problem; and
 the appliance has not been altered in any way or subjected to damage, misuse, abuse, repair or alteration by a person other than a person authorised by JCS (Europe).
 Faults that occur through, improper use, damage, abuse, use with incorrect vottage, acts of nature, venits beyond the control of some other than a person authorised by JCS (Europe).
 Faults that occur through, improper use, damage, abuse, use with incorrect vottage, acts of nature, venits beyond the control of some other than a person authorised by JCS (Europe) or failure to follow instructions for use are not covered by this guarantee.
 Additionally, normal wear and tear, including, but not limited to, minor discoloration and scratches are not covered by this guarantee.
 The rights under this guarantee shall only apply to the original purchaser and shall not be therms and conditions to guard guarantee to untry-specific guarantee or warrantly insert please refer to the terms and conditions to guard guarantee to the site of the site guarantee to the site or during the dust guarantee induces a contry-specific guarantee to vort obain the guarantee to the site of the terms and the during the dust guarantee shall only apply to the original purchase the site of the terms and the dust guarantee induces a contry-specific guarantee to vort obain the site of guarantee to the terms and the dust guarantee induces a contry-specific guarantee to the site of the terms and the dust guarantee is the site of the terms and the dust guarantee is the site of the terms and the dust guarantee is the site of the terms and the dust guarantee is the site of the terms and the dust guarantee is the site of the terms and the dust guarantee is the site of the terms and the dust guarantee is the site of the terms and the dust guarantee is the site of the terms a

contact your local authorized dealer for more information. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent peath from uncontrolled wates disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. Jarden Consumer Solutions (Europe) Limited Middleton Road Royton

Royton OL2 5LN UK





© 2013 Surbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Jarden Consumer Solutions (Europe) Limited, Middeton Road, Rayton OL2 SLN, United Kingdom. Printed n PRC

CE

**ØBIONAIRE** 

Jarden Consumer Solutions (Europe) Limited Royton, Oldham OL2 5LN England

Fax: +44 (0)20 8947 8272 Email: enquiriesEurope@jardencs.com UK - Fitter Sales Order Line - 087 059 9000 Website address: www.bionaire.com UK - Free phone Customer Service Helpline - 0800 052 3615

BASF1516\_Rev1 07/13

93631-0 P.N. 172231

**ØBIONAIRE** pure indoor living







# U.K. AND IRELAND

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS. fully read and retain all instructions e using your 2-in-1 dual desk/stand fan This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Unplug from the electrical outlet when not in use, when moving the fan from one location to another, before putting on or taking off any parts and before

cleaning.

- If the supply cord or plug is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.

- .
- etson in order to avoid nazard. To protect against electrical shock, do not immerse the fan, plug or cord in water or spray with illuids. Avoid contact with any moving parts. Do not operate in the presence of explosive and/or fammable fumes with all parts progently in place. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance. .
- Do not use outdoors
- Do not use outdoors. Do not let the cord hang over the edge of a table or counter, or come into contact with hot surface. To disconnect from the electrical supply, grip the plug and pull from the wall outlet. DO NOT pull on the cord. Always use on a dry, level surface. Do not operate your fan unless the fan grilles are properly fitted.

- granes are property fitted. This product is intended for household use ONLY and not for commercial or industrial applications. .

Should the fan stop working, first check the fuse in the plug (UK only) or fuse/ circuit breaker at the distribution board is operating, before contacting the manufacturer or service agent.

MISSING A PART FOR YOUR FAN? Please call 0800 052 3615 for assistant

# ASSEMBLY INSTRUCTIONS

Base/pole assembly (FIG 1)

- Your fan can be used as a desk fan or a floor fan. It is supplied with two poles; an adjustable pole for floor use and a short, fixed pole for desktop use. 1. Select either the adjustable pole or short pole **O**. 2. Turn the pole upside down and insert the
- pole **①**. Turn the pole upside down and insert the end of the pole through the decorative base cover **③**. Fit the weight **④** and conical washer **④** over the end of the pole as shown. 3.
- Screw the T-shaped locking bolt () into the end of the pole as shown and tighten 4.
- firmly. Set the base on the floor, weight side down. 5.

Fan blade assembly (FIG 4) CAUTION: The fan blades might have sharp edges. Handle with care.

es. Handle with care. Loosen the securing screw and slide the fan blade and onto the motor shaft. The motor shaft may be covered with a protective plastic sleeve. Remove and discard the sleeve before fitting the fan blade.

Make sure securing screw 🕲 aligns with the notch 🕐 on the motor shaft and tighten it firmly. 2.

- Ford grille assembly (FIG 5)
  NOTE: Parts Ø, Ø and Ø are fitted to the front grille for shipping purposes. Remove and discard the clear plastic tube.
  1. BiONAIRE<sup>TM</sup> logo the right side up and hock the bracket Ø over the right side up and hock the bracket Ø over diddle the central wire of the rear grille.
  2. Align the solit in the bottom rim of of the front grille with the corresponding slot in the rear grille.
  3. Fit the screw Ø through the slots.
  4. Fit the screw Ø through the slots.
  4. Fit the screw Ø through the slots.
  4. Fit the screw Ø through the slots.

Final assembly (FIG 6) Rotate the five grille clips **①** as shown making sure that they go over both front and rear grille rims.

# **OPERATING INSTRUCTIONS**

- Set your fan on a dry, level surface Make sure the speed control (**0** FIG 2) is in the off (0) position. Plug your fan into a suitable mains outlet socket. 1. 2.
- 3.
- 4.
- 5.
- socket. Select the desired speed using the speed control (1, 2 or 3). If desired, you can set your fan to swing slowly backwards and fowards using the oscillation knob ( $\emptyset$  FIG 2). To start oscillation, push the knob downwards. To stop, pull the knob upwards.

## ADJUSTMENTS Tilt adjustment

To adjust the tilt of your fan, loosen the tilt head adjustment knob (**I** FIG 2), adjust your fan to the desired tilt angle then tighten the knob.

Height adjustment (adjustable pole only) Loosen the adjustable pole locking knob.
 Adjust the pole to the desired height then firmly tighten the locking knob.  cleaner: petrol, thinners or benzene.
 Fan blade cleaning
 To access the fan blade, remove the front grille by opening the five clips of and removing the sourcing screw **0**, nut **0** and vester **0**.
 Loosen the fan blade securing screw **0** and remove the fan blade from the motor and remove the fan blade from the motor of the blade and from the motor shaft. Clean the fan blade, and front and rear grilles with a soft moist cloth. Replace the fan blade as described under Fan blade assembly. 3.

CLEANING AND MAINTENANCE Follow these instructions to correctly and safely care for your Bionaire™ fan. Please remember:

•

.

Always unplug the fan before cleaning or assembly

Do not allow water to drip onto or into the fan head.

Be sure to use a soft cloth, moistened with a mild soap solution. Do not use any of the following as a cleaner: petrol, thinners or benzene.

- 4
- Refit the front grille as described under Front grille assembly and Final assembly. 5.

Fan head, base and pole cleaning Fair head, base and pole creating Carefully clean the fan base, pole and fan head using a soft, moist cloth, with or without a mild scap solution. Please use caution around the motor housing area. Do not allow the motor or other electrical components to become exposed to water.

# FAN STORAGE

- FAN STORAGE Your fan can be stored either partially disassembled or assembled. It is important to keep it in a safe, dry location. If stored disassembled, we recommend using the original or an appropriately sized box.
- sized box. If stored assembled or partially assembled, remember to protect the fan head from dust.

Fan head assembly (FIG 2) 1. Place the fan head assembly () onto the pole. the pole. Align the hole in the fan head with the hole in the pole and secure the fan head using the locking knob ① tightening firmly. 2. NOTE: The fan head locking knob () may be fitted to the short pole when shipped.

# fitted to the short pole when shipped. Rear grillee assembly (FIG 3) 1. Unscrew the grille mounting nut () from the fan head. Position the rear grille over twertical shoe in the top and bottom of the rear grille fit over the two prongs on the front of the fan head. Make sure that the carry handle on the rear grille is at the top 2. Secure the rear grille using the grille mounting nut () and tighten firmly.