

 
# Hygena- Tall boy

Assembly Instructions - please keep for future reference

528/9060

**hygena**

538/8734

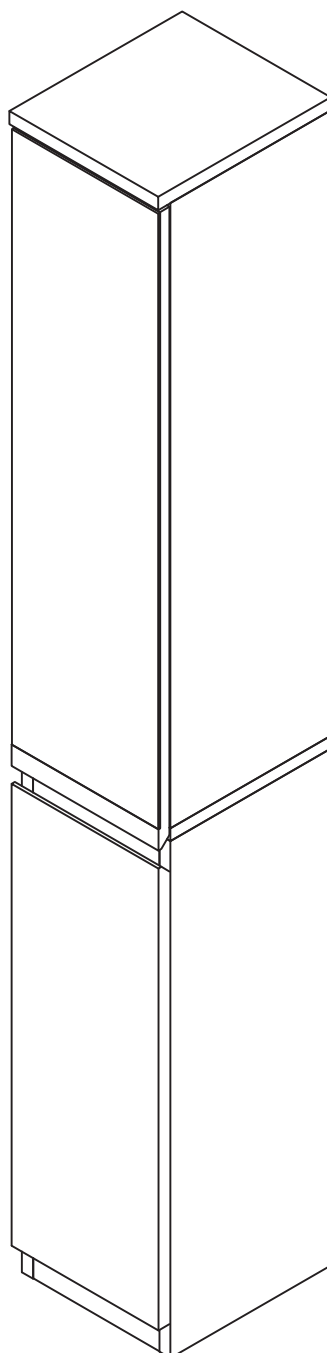

## Dimensions

Width - 24cm  
Depth - 28cm  
Height - 164cm

**Important– Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400800**



## Safety and Care Advice

**Important - Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

**Glue safety - Take care when using glue, please follow the advice below**

**Skin contact:** Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

**Eye contact:** Rinse immediately with clean water for 15 minutes and seek medical advice.

**If swallowed:** Seek medical advice immediately.

### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

### Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

## WARNING

**In order to help prevent overturning – please follow these instructions**

 
To help prevent product toppling over please follow the below steps:-  
Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.  
You will need to provide wall plugs and screws applicable for your wall type

# Components - Panels

If you have damaged or missing components, call the  
Customer Helpline: 0345 6400800

Please check you have all the panels listed below

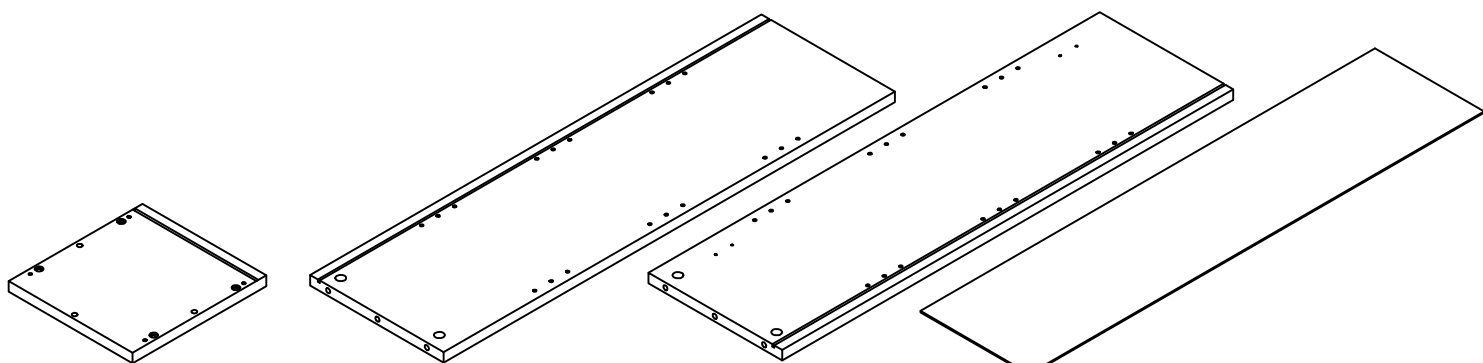


1 Fixed shelf x1  
(24cm x 26.3cm)

2 Upper left side x 1  
(87.3cm x 26.1cm)

3 Upper right side x 1  
(87.3cm x 26.1cm)

 4 Upper back x 1  
(88.6cm x 20.9cm)

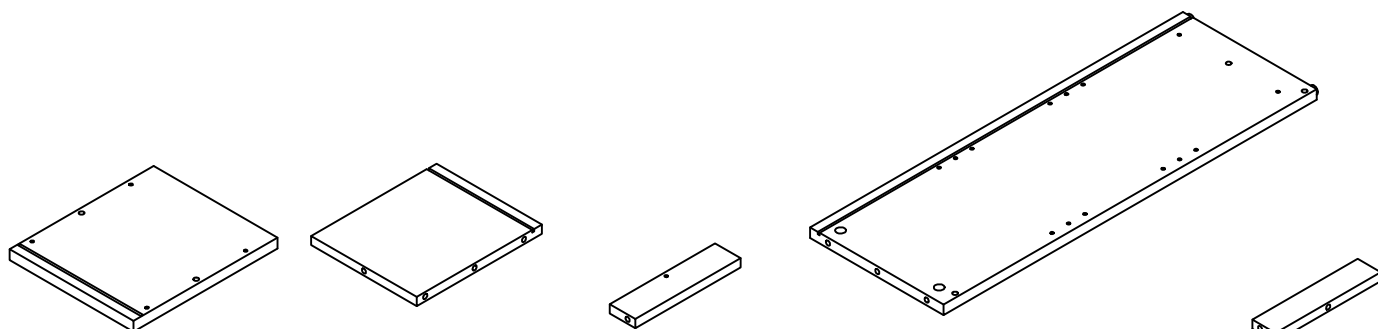


5 Top x 1  
(28.1cm x 24.1cm)

6 Bottom x 1  
(24.8cm x 20.1cm)

7 Bottom front bar x 1  
(20.1cm x 50.1cm)

8 Bottom left side x 1  
(73cm x 26.1cm)

 9 Middle front bar x 1  
(20.1cm x 45cm)

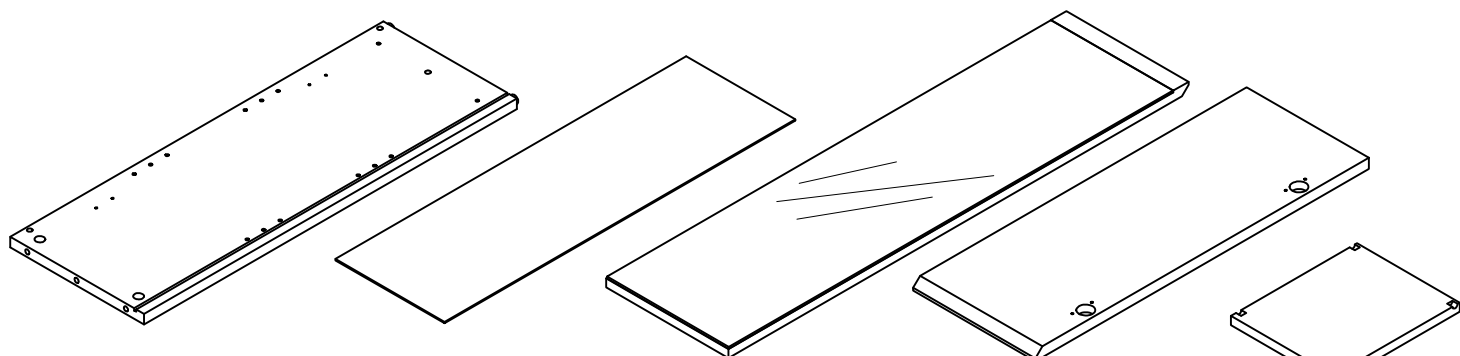

10 Bottom right side x 1  
(73cm x 28.1cm)

11 Bottom back x 1  
(68.2cm x 20.9cm)

12 Upper door x 1  
(89.5cm x 23.8cm)

13 Bottom door x 1  
(64.8cm x 23.8cm)






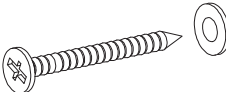
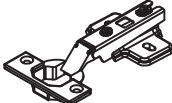




 


14 Adjustable shelf x 5  
(24.6cm x 20cm)

# Components - Fittings

 
If you have damaged or missing components, call the  
Customer Helpline: 0345 6400800

Please check you have all the fittings listed below

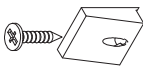
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  8x30mm dowel x11	<b>B</b>  Male camlock x13	<b>C</b>  Female camlock x13	<b>D</b>  Glue x 1
<b>E</b>  Wall strap x 1	<b>F</b>  4x32mm Screw x 2	<b>G</b>  Hinge x 4	<b>H</b>  4x14mm Screw x 16
<b>I</b>  Plug x1	<b>J</b>  Panel Stiffeners x 8	<b>K</b>  Shelf support x 20	<b>L</b>  25mm Sticker x 8
<b>M</b>  6x50mm Screw x 4	<b>N</b>  Hex key x 1		

## Tools required



Phillips screwdriver  
(medium & large)

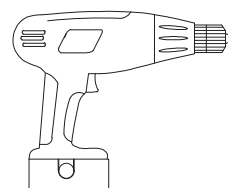 

Drill





7mm Suitable drill bit  
(for use with wall plug)



Small  
hammer

## Ruler - Use this ruler to help correctly identify the screws

  


The screws length is measured from the head to the point (30mm screw shown).

# Components - Fittings

 If you have damaged or missing components,  
call the Customer Helpline: 0345 6400800


**Ruler - Use this ruler to help correctly identify the screws**



## Using Camlocks

### Step 1

 
Connect the male camlock as directed in the assembly instructions using a screwdriver.

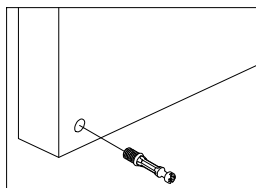

### Step 2


Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

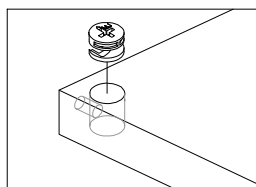

### Step 3

 Push the male camlock into the entry hole.

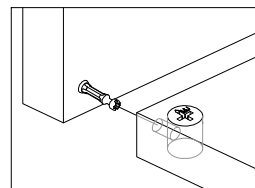


### Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

 The joint is now secure.

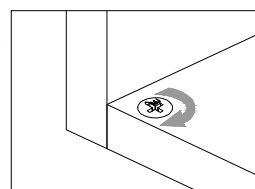


# Assembly Instructions

## Step 1

Fitting Male camlock

 1. Insert 9 x male camlocks **B** to the top **5**, bottom left side **8** and bottom right side **10** and bottom front bar **7**.

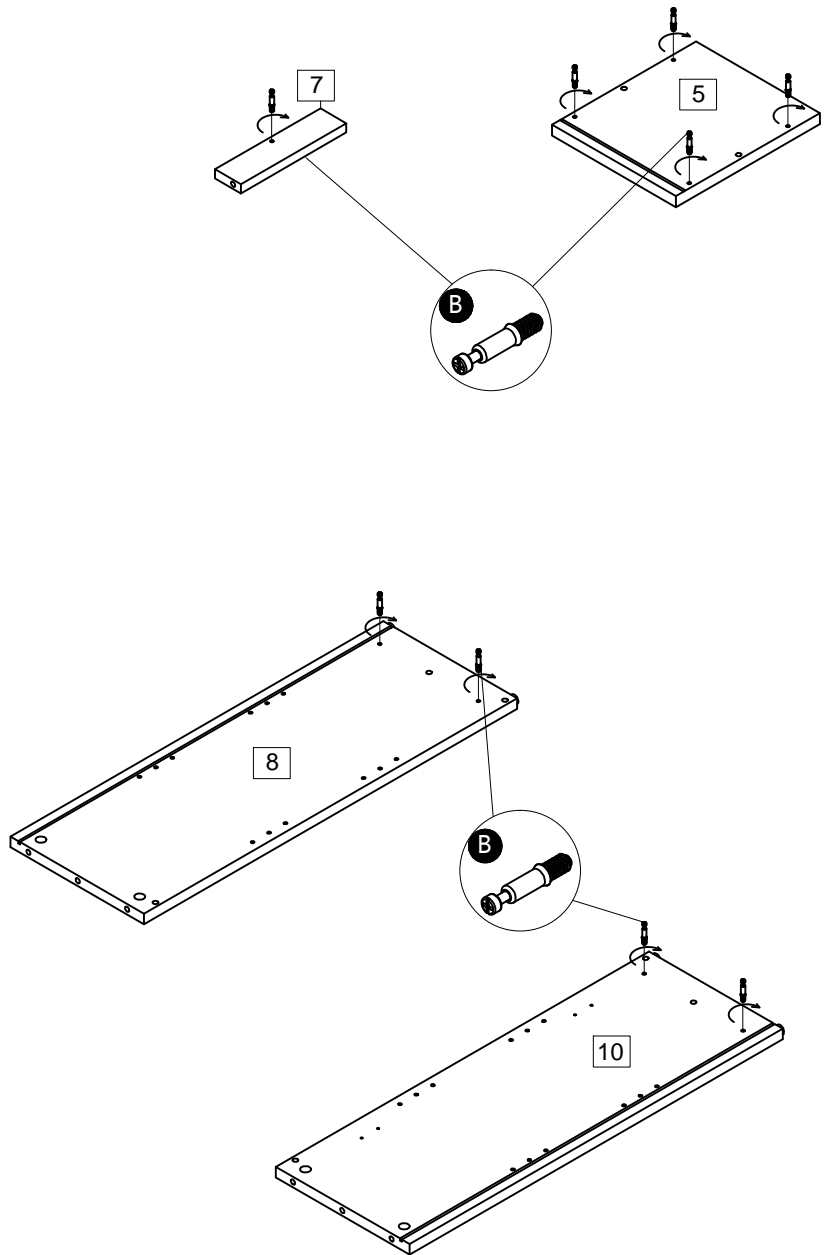


# Assembly Instructions

## Step 2

### Fitting dowels

 
1. Glue and insert 12 x dowels **A** to upper left side **2**, upper right side **3**, bottom **6** & middle front bar **9**, bottom left side **8** and bottom right side **10**.

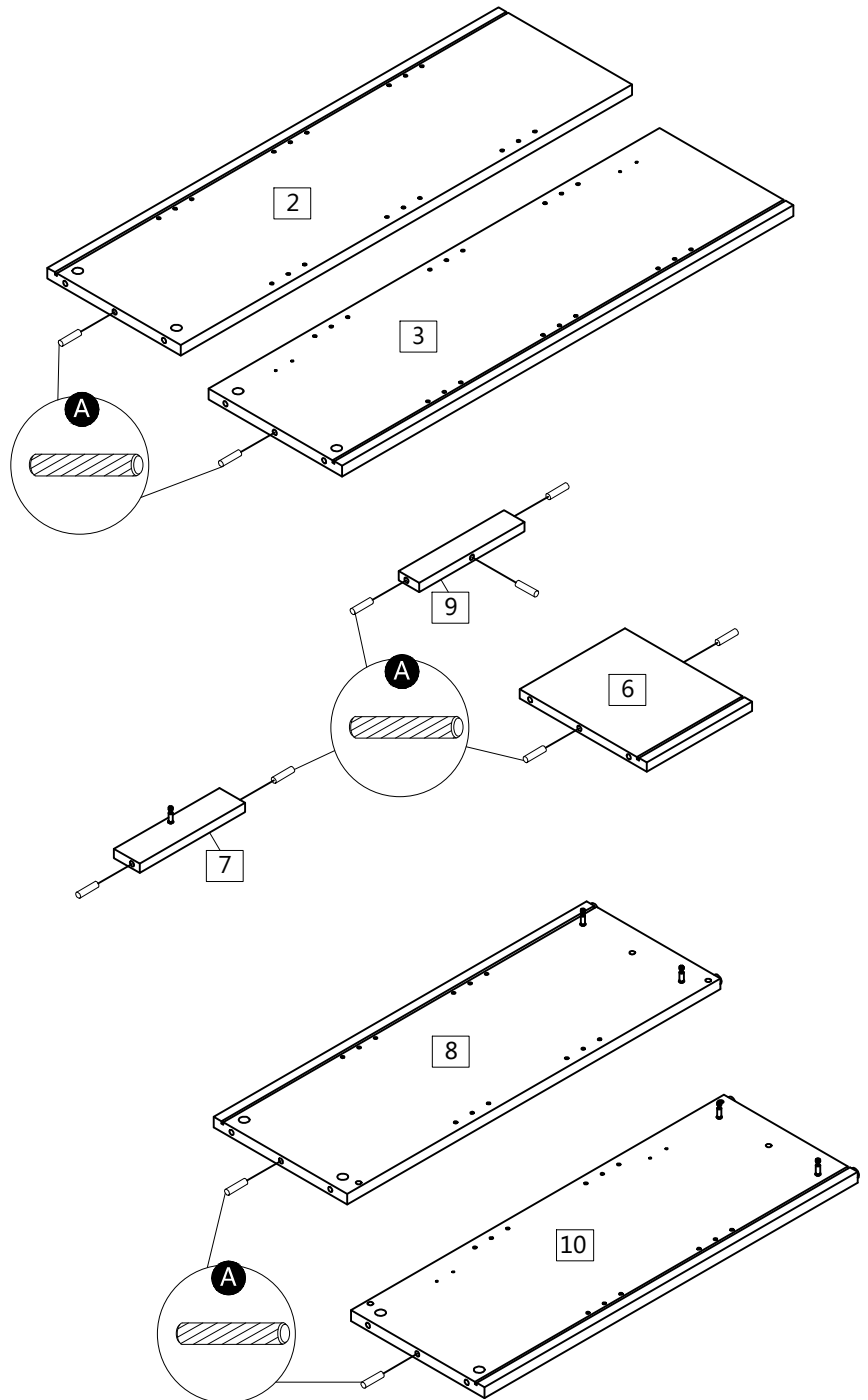

# Assembly Instructions


## Step 3

 1. Attach fixed shelf **1** to upper right side **3** & upper left side **2** with 4 x screws **M** using Hex key **N** supplied to tighten.

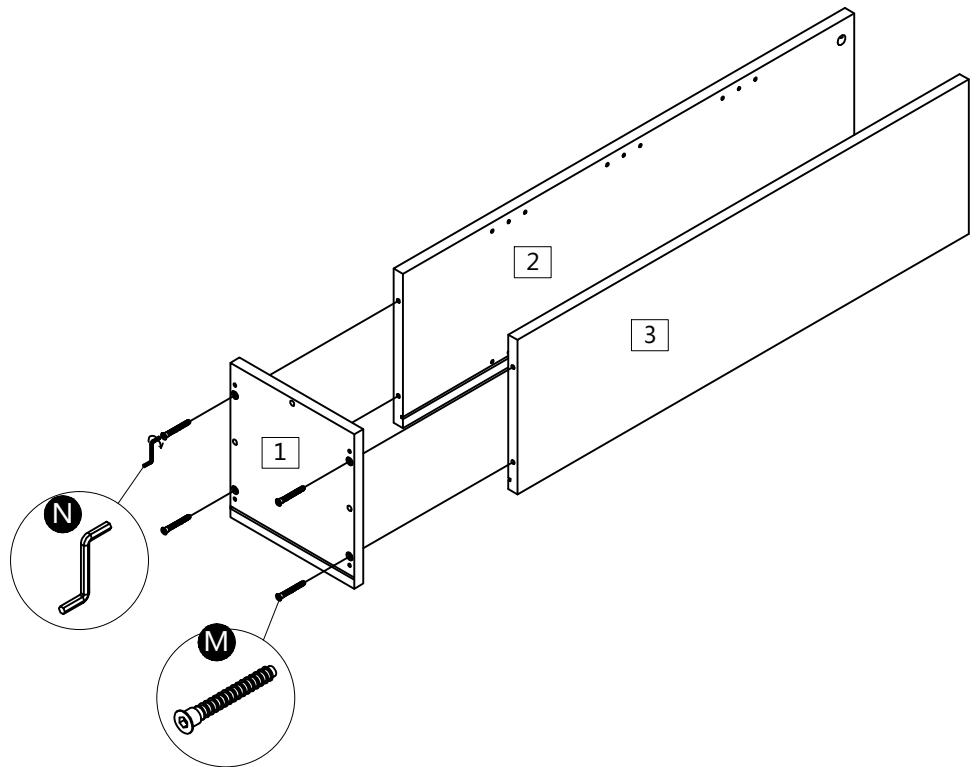

## Step 4

 1. Slide upper back **4** along grooves in upper left side **2** and upper right side **3**.

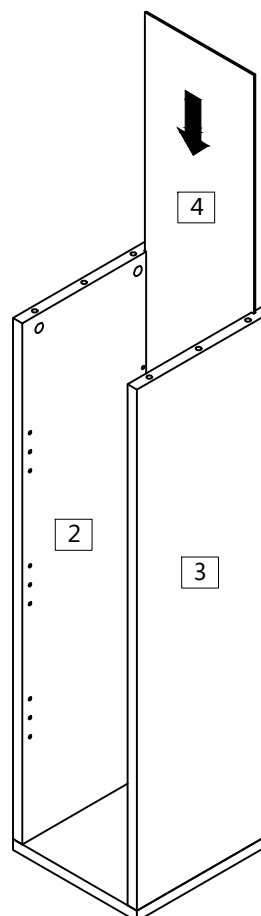




# Assembly Instructions

## Step 5

1. Attach top **5** to upper left side **2** & upper right side **3**.
2. Insert 4 x female camlocks **C** to upper left side **2** & upper right side **3**.

 Use a screwdriver to turn the female camlock clockwise to lock.

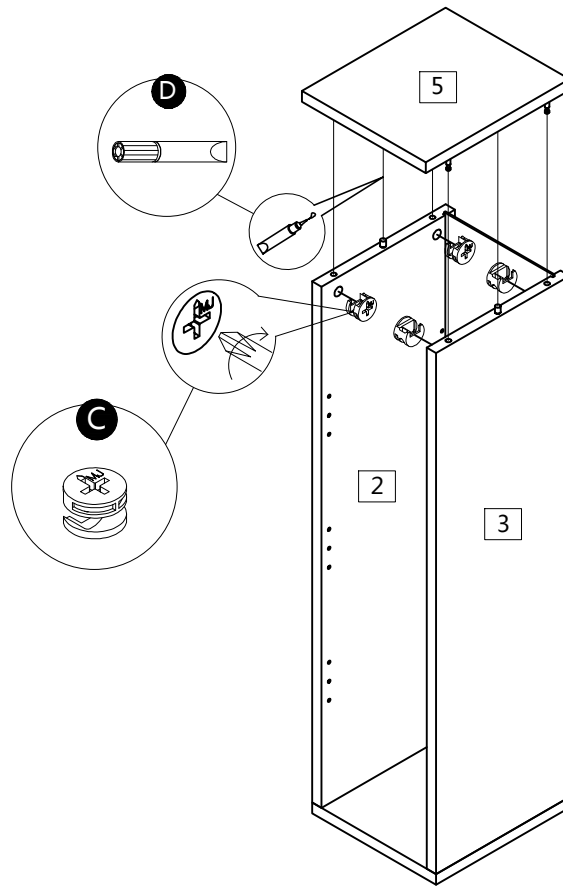


## Step 6

### Attaching panels

1. Attach bottom front bar **7** to bottom **6**.
2. Insert 1 x female camlock **C** to bottom **6**.

 Use a screwdriver to turn the female camlock clockwise to lock.

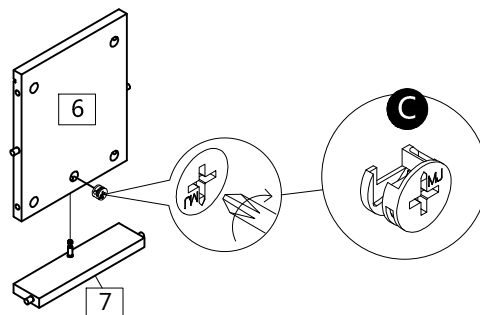


# Assembly Instructions

## Step 7

1. Attach bottom **6** & middle front bar **9** to bottom left side **8**.
2. Insert 2 x female camlocks **C** to bottom **6**.

 
Use a screwdriver to turn the female camlock clockwise to lock.

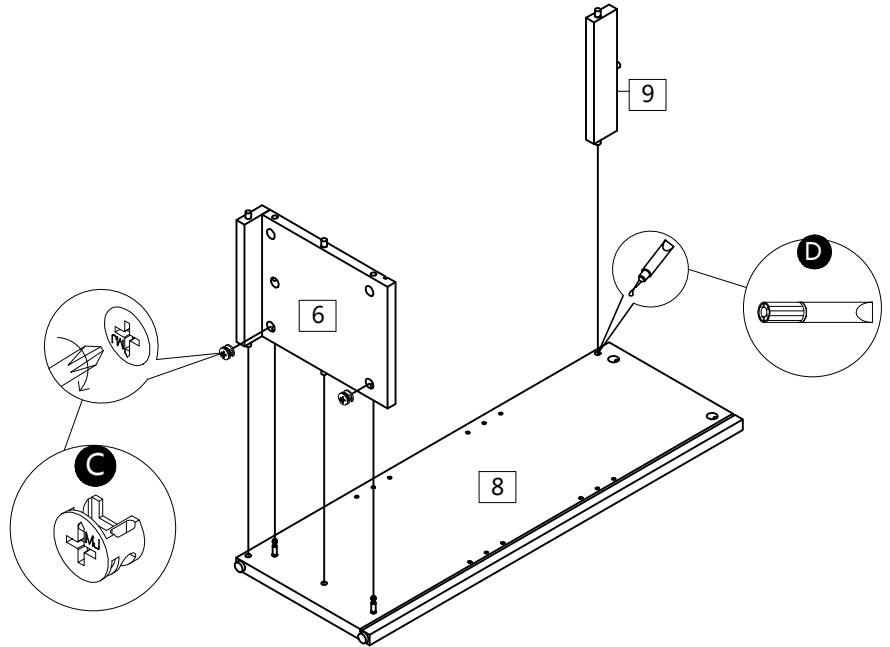

## Step 8

1. Attach upper right side **10** to bottom **6** & middle front bar **9**.
2. Insert 2 x female camlocks **C** to bottom **6**.

 
Use a screwdriver to turn the female camlock clockwise to lock.

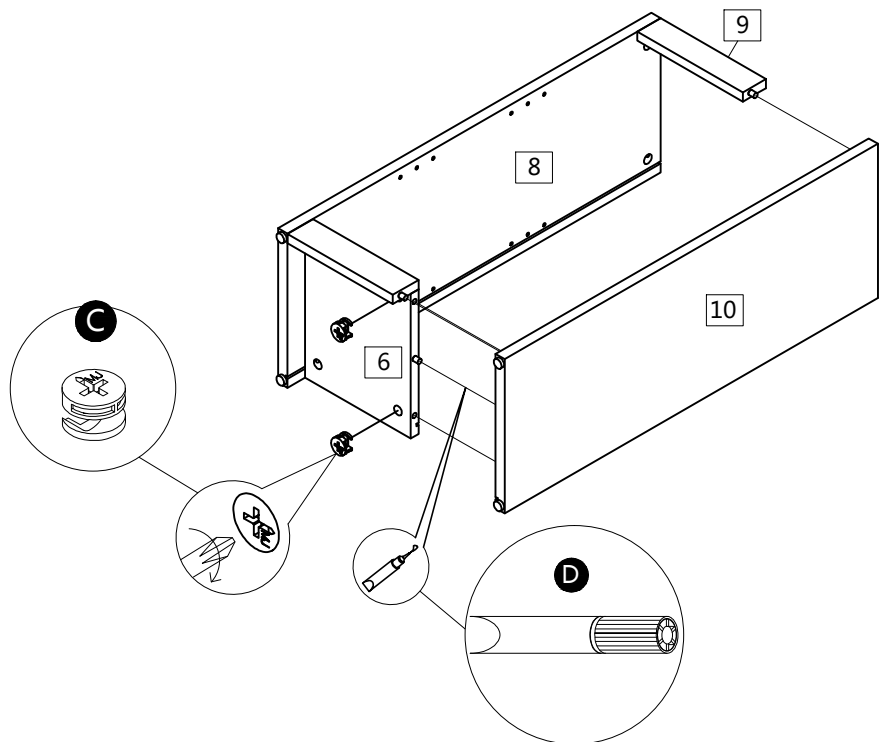

# Assembly Instructions


## Step 9

 1. Slide bottom back **11**  
along grooves of the unit as  
shown in diagram

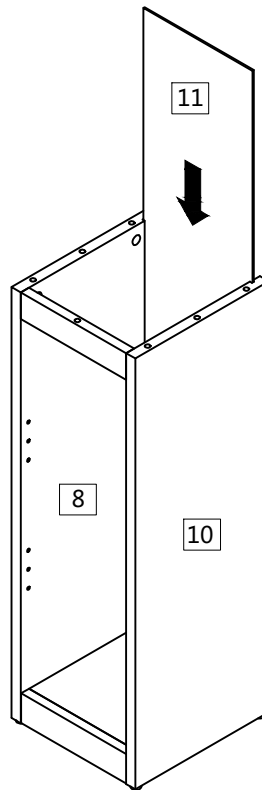

## Step 10

 1. Insert 4 x male camlocks **B**  
to the fixed shelf **1**.

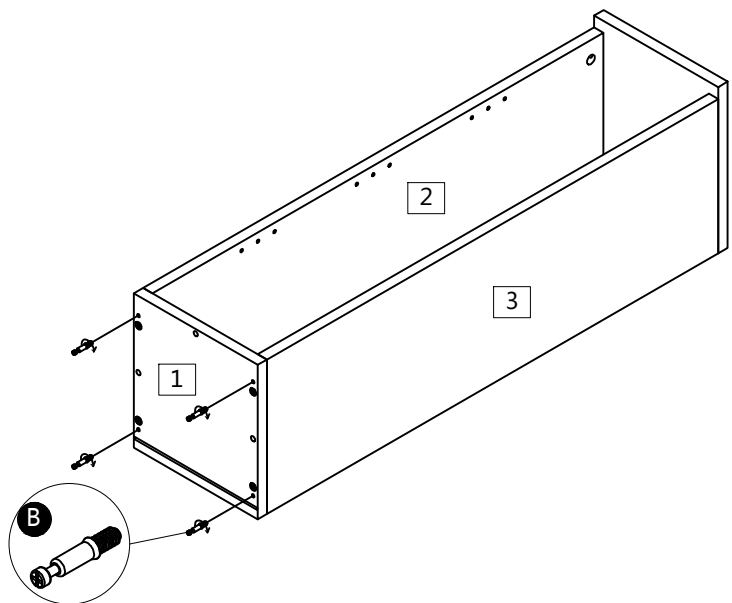


# Assembly Instructions

## Step 11

1. Attach the upper section to the bottom section by locating Male camlocks in panel **1** into adjacent holes in panels **8** and **10**.

2. Insert 4 x female camlocks **C** to bottom left side **8** and bottom right side **10**.

 
Use a screwdriver to turn the female camlock clockwise to lock. Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

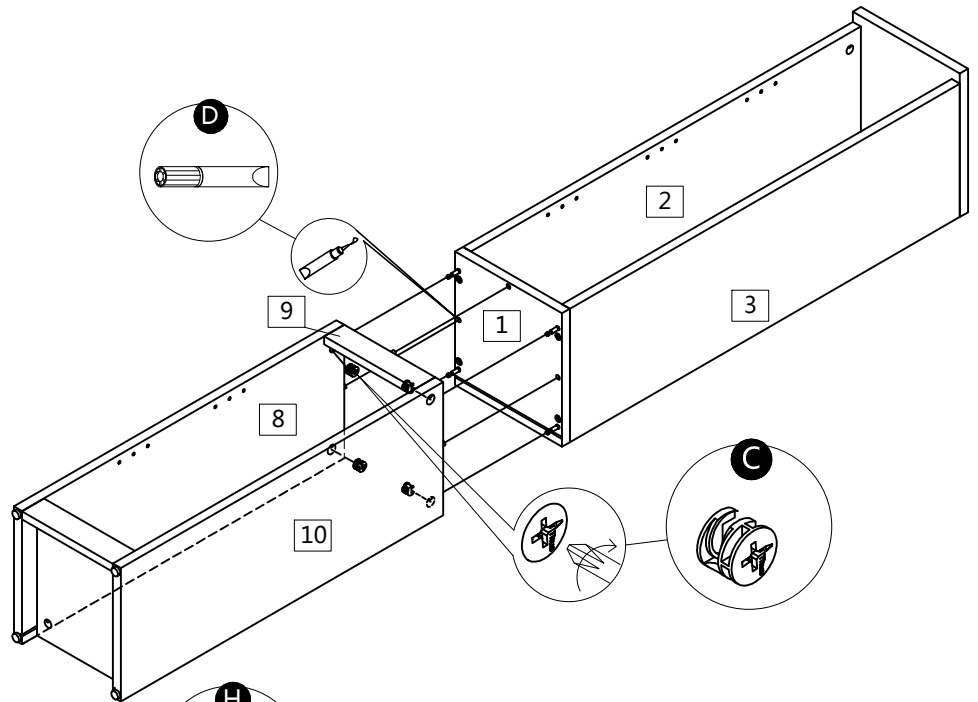

## Step 12

1. Attach 2 x hinges **G** to the upper door **12** with 4 x screws **H** as shown.

 2. Attach 2 x hinges **G** to the bottom door **13** with 4 x screws **H** as shown.

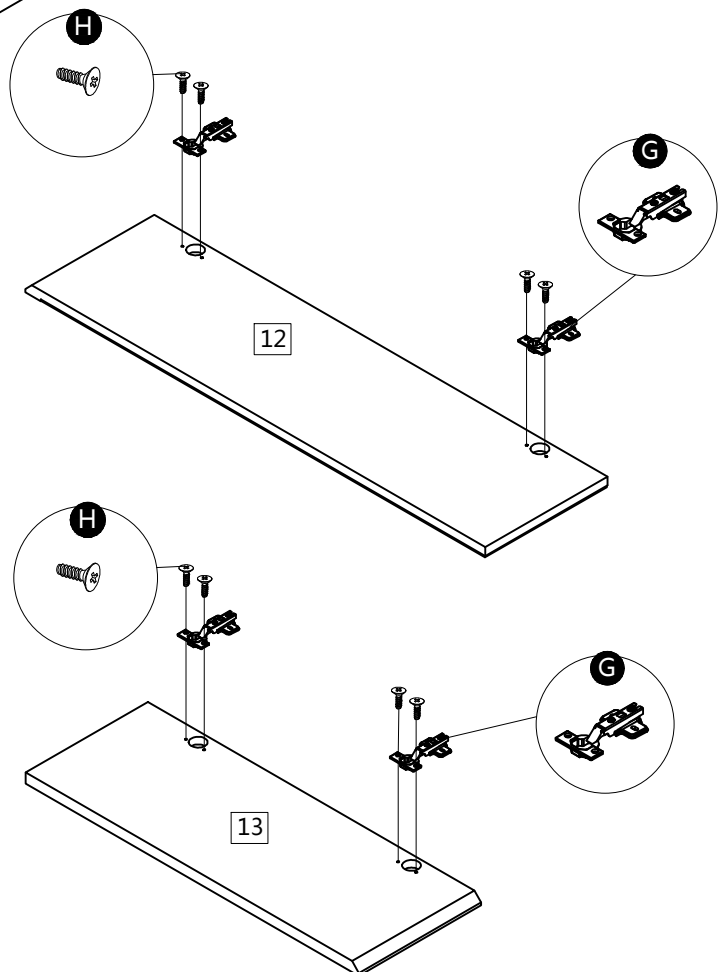

# Assembly Instructions

## Step 13

1. Attach upper door **12** and bottom door **13** to the unit with 8 x screws **H** as shown.

2. Use 8 x stickers **L** to cover camlock hole on upper left side **2** and upper right side **3**, bottom left side **8** and bottom right side **10**.

 
 
Hinge adjustment:

a: To move the doors up or down, loosen screws shown and move doors to suit

b: To move the doors in or out, loosen screws shown and move doors to suit.

Retighten screws

c: To move the doors left or right, adjust screws shown.

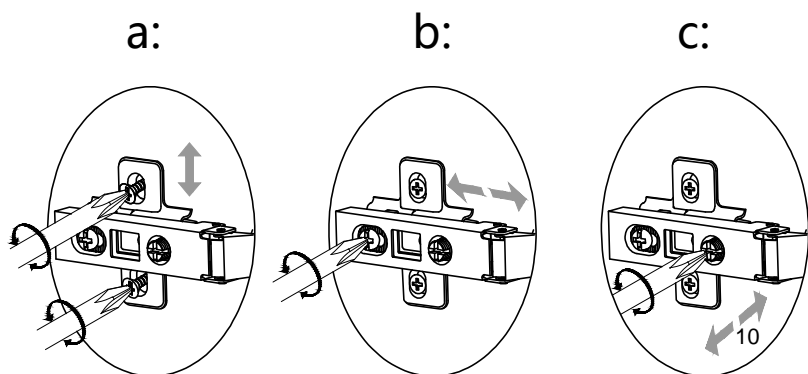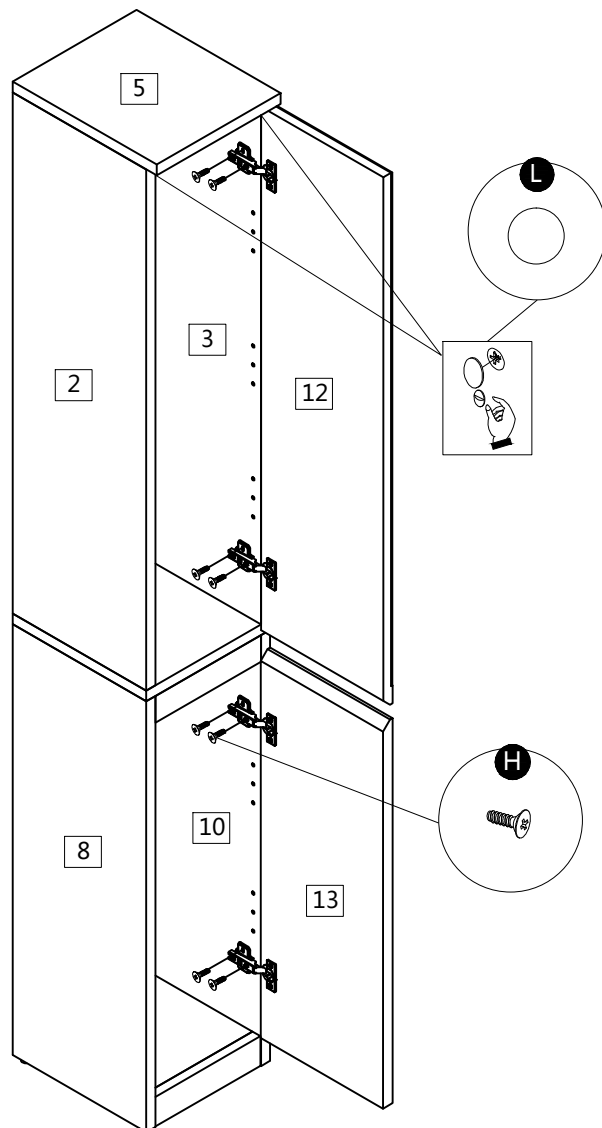


# Assembly Instructions

## Step 14

1. Insert shelf supports **K** into the holes inside the unit in the desired position

 2. Place adjustable shelves **14** on the shelf supports.

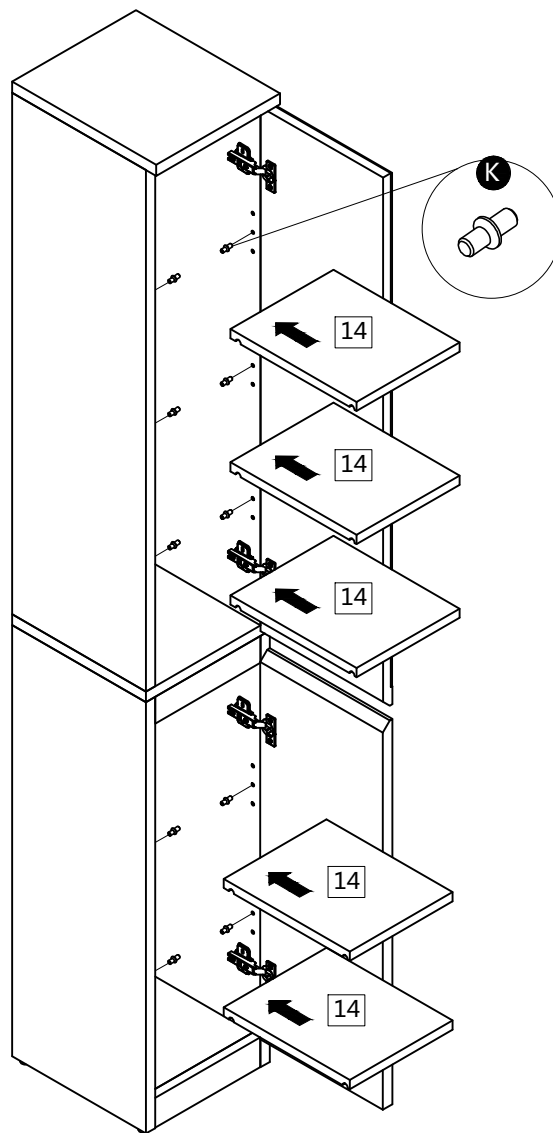


# Assembly Instructions

## Step 15

1. Insert 8 x panel Stiffeners **J** into the back panel grooves as shown. These add support and give the unit rigidity.

 2. Using screw & washer **F** secure the 1 x nylon strap **E** to the back of top

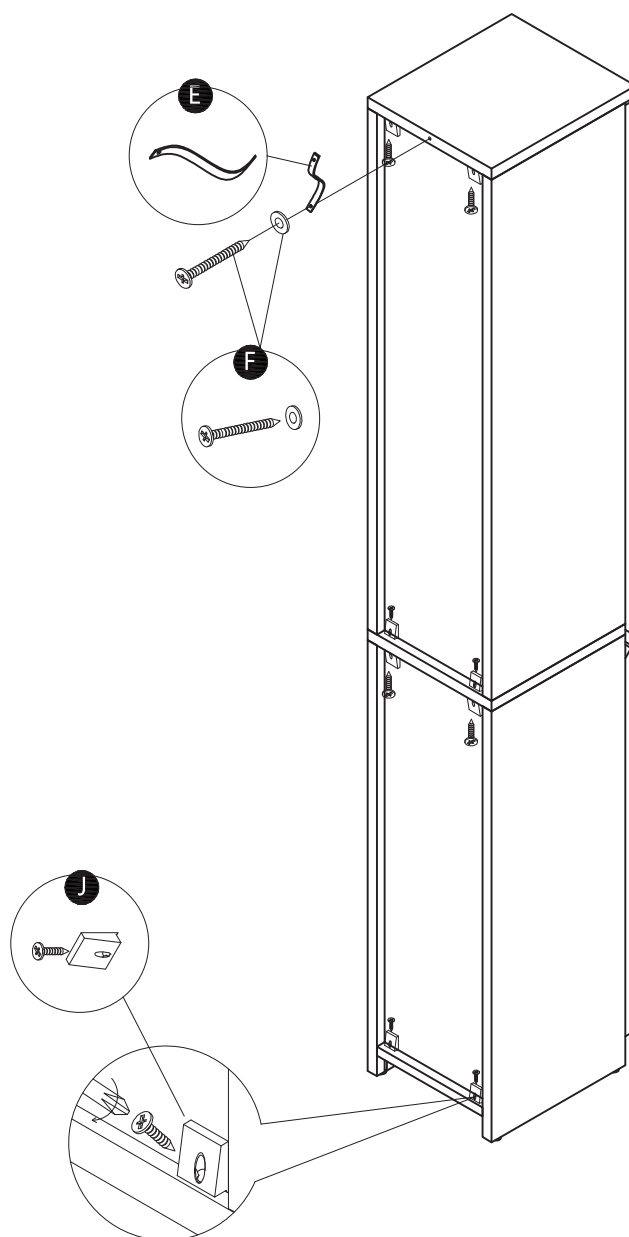

# Assembly Instructions

## Step 16

It is recommended that the unit is fixed to a wall.

1. Move the unit into desired position.



Warning:  
The unit  
is heavy.  
Lift with care.

2. Mark the wall with a suitable scribe the position of the fixing hole.

 


Warning:  
Before drilling, check  
wall for hidden pipes  
and cables.

3. Drill hole and insert wall plug **I**.

4. Secure the other end of the strap **E** to the wall with washer & screw **F**.

Note: To hide the strap behind the unit, drill the hole lower than the top of unit.

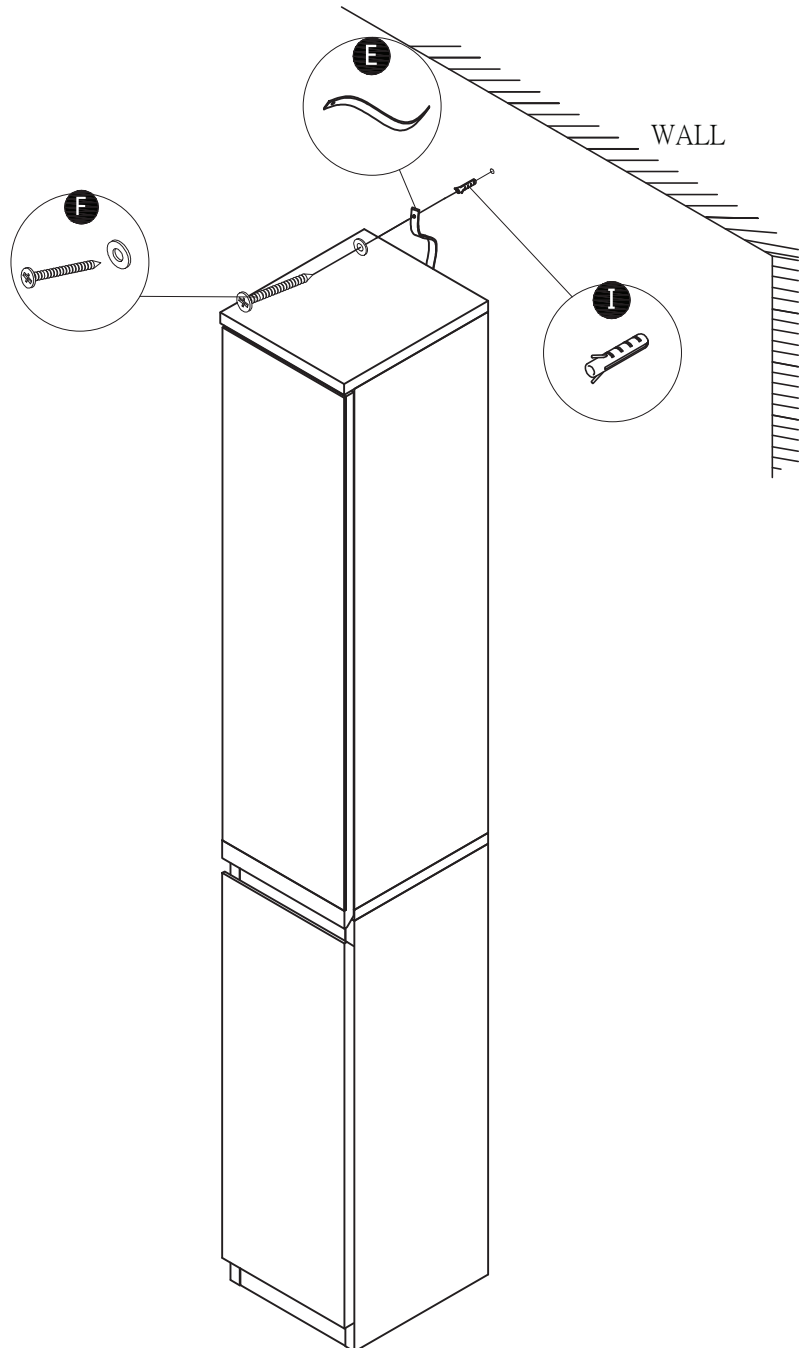


If you need help or have damaged or missing parts, call the Customer Helpline: 0345 6400800  
Argos LTD. 489-499 Avebury boulevard, Central Milton Keynes, MK9 2NW



# A Guide to Wall Mounting & Fixings
 
## Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using the incorrect fixings is the responsibility of the installer.



**Important:** when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit**. **Consult a qualified tradesperson if you are unsure.**


Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls

 
You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

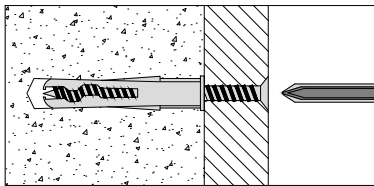


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.3 "Cavity Fixing" wall plug

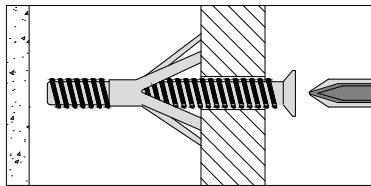


For use with plasterboard partitions or hollow wooden doors.

 No.5 "Hammer Fixing" wall plug

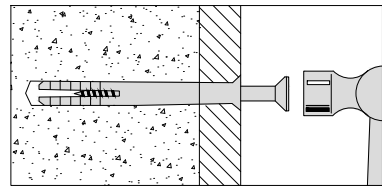


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.2 "Plasterboard" wall plug

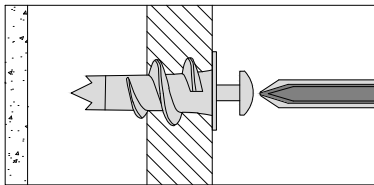


For use when attaching light loads onto plasterboard partitions.

 No.4 "Cavity Fixing - Heavy Duty" wall plug

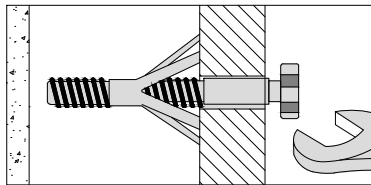

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.4 "Shield Anchor" wall plug - heavy loads

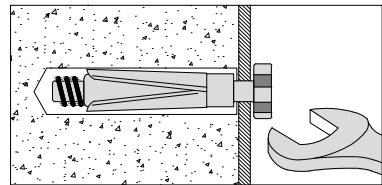

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** always check the fitting and location to ensure your safety in and around the home.

**Fitting:** from time to time check the fitting: to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, call the

Customer Helpline: 0345 6400800