

PIFCO®

MINI DEHUMIDIFIER

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

MODEL **P44011**



TECHNICAL DATA

Description:	Mini Dehumidifier
Model:	P44011
Adaptor:	
Input:	100 - 240V 2.5A
Output:	DC9V  2.5A
Product Rating:	DC9V  2.5A 36W
Removable Water Tank:	500 ml

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.

RKW Quality Assurance, United Kingdom

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance.

See back page for details.

WIRING SAFETY FOR UK USE ONLY

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.


The wire coloured green/yellow must be connected to the terminal marked with the letter [E] or marked .

On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

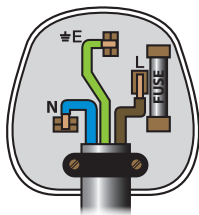

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of it safely.

Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This Appliance **MUST** be Earthed

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use the appliance outdoors.

- Do not operate with wet hands.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department.



HIGH VOLTAGE

WHAT'S IN THE BOX

Instruction Manual

AC/DC power adaptor

1. 'On' green LED
2. 'Full' red LED
3. Air inlet
4. Removable water tank
5. Dry air outlet
6. On/Off button
7. Water displacement hole (not shown)
8. Hydraulic cut- off (not shown)



BEFORE YOUR FIRST USE:

1. Remove your appliance from the packaging.
2. Check that there is no damage to the cord or any visible damage to the body.
3. Your appliance is now ready for normal use.

Dispose of the packaging in a responsible manner.

USING YOUR APPLIANCE

1. Connect the power cord to the appliance and plug the adaptor into the mains outlet.
2. Move the On/Off button to On position, the mini dehumidifier will begin to operate. The green LED will be turned on. Listen and feel for the air blowing from dry air outlet.
3. To switch off the unit, move the On/Off button to the Off position and the mini dehumidifier will turn off.

REMOVABLE WATER TANK

1. When the water tank becomes full (500 ml of water), the unit will automatically switch off and the Red LED will turn on.
2. To remove the water tank, first switch off the mini dehumidifier, press the 'On / Off' button to the 'Off' position. Then, remove the water tank from the unit and pour the water down the drain. Put the water tank back into the unit. To continue dehumidifying, press the 'On / Off' button to turn ON the appliance.

CLEANING & CARE

- If the tank is dirty or smells unpleasant, wash it with warm soapy water. Rinse and dry thoroughly. ENSURE TANK IS PROPERLY SEATED WHEN REFITTING.
- Use a damp cloth to clean the appliance.
- Reassemble when dry.

WARNING:
DO NOT IMMERSE ANY PART OF THE
APPLIANCE IN WATER

STORAGE

If the unit is not being used for a long period of time:

- Empty any water from the tank.
- Fold up the power supply cord.
- Clean the air filter.
- Store in a safe, dry place, out of reach of children.



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products
we are offering you an extra 2 years peace of mind.

To receive your extra 2 years guarantee, register your appliance online by visiting

www.pifco.co



**Should you have a problem
with your appliance or need any spare parts please call our
Customer Support Team:**

+44 (0) 333 220 6054

Distributed throughout the UK by RKW LTD

PIFCO®