

Binatone

USER GUIDE

Vesta 1305 Call Blocker
Vesta 1305 Call Blocker Twin
Vesta 1305 Call Blocker Triple
Vesta 1305 Call Blocker Quad

Digital Cordless Telephone



Binatone Helpline
(for UK only)

Mon - Fri - 8.00am to 8.00pm

Sat - 8.30am to 2.00pm

**0844 557 9677 (UK only - Calls cost 7p per minute
plus your telephone company's access charge.)**

0818 762092 (ROI)

Or visit our website: www.binatoneglobal.com

**THIS EQUIPMENT IS NOT DESIGNED FOR MAKING
EMERGENCY TELEPHONE CALLS WHEN THE POWER
FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE
MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.**

**Before operating this set,
please read these instructions carefully.**

TECHNICAL DETAILS

Standard	Digital Enhanced CordlessTelecommunication(DECT)
Frequency range	1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300m outdoors; up to 50m indoors
Operating time	Standby: 100 hours; Talking: 10 hours Battery charge time:15 hours
Temperature range	Operating 0°C to 40°C; Storage -20°C to 60°C
Electrical power	Base unit: VTech - VT04EUK06045 / VT04EEU06045 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Ruijing - RJ-AS060450B001 / RJ-AS060450E002 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Charger unit: VTech - VT04EUK06045 / VT04EEU06045 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Ruijing - RJ-AS060450B001 / RJ-AS060450E002 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Battery information (each handset): CORUN-Ni-MH AAAJ400, Type Ni-MH (Rechargeable battery) Voltage Rating 400mAh, 2 X 1.2V AAA Size Use only adaptors and batteries listed above.

Caution

Risk of explosion if battery is replaced by an incorrect type

Dispose of used batteries according to the your local authority regulations.

Port specification

The  port (connected to the mains power supply) is a SELV port with respect to EN41003.

The  port (connected to the telephonenumber) is a TNV port with respect to EN41003.

CLEANING AND CARE

Do not clean any part of your phone system with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

When necessary, clean it with a damp cloth.

Keep your phone system away from **hot, humid conditions** or **strong sunlight**, and **don't let it get wet.**

Every effort has been made to ensure high standards of reliability for your phone system. However, if something does go wrong, please **do not try to repair it yourself, but** consult your supplier or the Helpline.

CONTENTS

1	IMPORTANT SAFETY INSTRUCTIONS	1
2	INSTALLING YOUR PHONE	5
2.1	Connecting the base station.....	5
2.2	Installing and charging the batteries.....	5
3	GETTING TO KNOW YOUR PHONE	6
3.1	Handset Overview.....	6
3.2	Base Station Overview.....	7
3.3	Display icons and Symbols.....	7
3.4	Menu Structure.....	8
3.5	Text and Digit Entry Table.....	9
4	USING YOUR PHONE	10
4.1	Make a Call.....	10
4.2	Answer a Call.....	10
4.3	End a Call.....	10
4.4	Handset Speakerphone.....	11
4.5	Adjust Volume.....	11
4.6	Mute a Call.....	11
4.7	Turn off the Handset Ringer.....	11
4.8	Turn on the Keypad Lock.....	11
4.9	Redial the last number.....	11
4.10	Find the Handset.....	12
4.11	Make an Internal Call (Multi - handset versions only).....	12
5	PRIVATE PHONEBOOK	14
5.1	Add a New Phonebook Entry.....	14
5.2	Search for a Phonebook Entry.....	14
5.3	View a Phonebook Entry.....	14
5.4	Edit a Phonebook Entry.....	14
5.5	Delete a Phonebook Entry.....	15
5.6	Delete all Phonebook entries.....	15
5.7	Check the Phonebook Usage.....	15
5.8	Add a Phonebook Entry to WHITE LIST.....	15
5.9	View a WHITE LIST entry.....	15
5.10	Remove an Entry from the WHITE LIST.....	16
5.11	Delete all WHITE LIST entries.....	16
5.12	Remove an Entry from the WHITE LIST.....	16

6	CALLER DISPLAY (NETWORK DEPENDENT)	17
6.1	View the Call List	17
6.2	Store a Call List Number into the Phonebook	17
6.3	Delete an entry in the Call List	17
6.4	Delete all Call list entries	17
7	CALL BLOCKER	18
7.1	Add a Number to the Black List	18
7.2	View a Black List Entry	18
7.3	Edit a Black List Entry	18
7.4	Delete a Black List Entry	19
7.5	Delete All Black List Entries	19
7.6	Call Blocker Settings	19
8	PHONE SETTINGS	21
8.1	Date and Time Settings	21
8.2	Alarm Settings	22
8.3	Handset Settings	22
8.4	Base Settings	24
8.5	Registration	25
8.6	Reset Your Phone	25
9	TROUBLESHOOTING	26
10	DECLARATION OF CONFORMITY	27
11	GUARANTEE AND SERVICE	28

1 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock or injury, including the following:

- 1) Read and understand all the instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4) Keep your Vesta 1305 away from hot, humid conditions or strong sunlight, and don't let it get wet or use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
- 5) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 6) Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- 7) NEVER use your Vesta 1305 outdoors during a thunderstorm - unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
- 8) Do not use the telephone to report a gas leak in the vicinity of the leak.
- 9) Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
- 10) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
- 11) Do not use third party charging bays. Damage may be caused to the batteries.
- 12) Please ensure the batteries are inserted in the correct polarity.
- 13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

Package contents

The package contains the following items:

- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 AAA NiMH rechargeable batteries
- 1 User manual

Note: If you have a Twin, Triple or Quad system, you will also have the requisite extra handset(s) and batteries, and a charger pod for each extra handset.

Connection and conditions for use:

You can connect your phone to a direct exchange line (DEL) on a local exchange with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX. Do not connect as an extension to a payphone.

The ringer equivalance numbers (REN) of all equipment (phones, fax machines, modems, etc.) connected to an exchange line must not add up to more than 4, otherwise one or more of them may not ring and/or answer calls correctly. The phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.



Handset - Base Connection

- 1) When purchased, all handsets are already registered to the base unit and should link to it when they are all powered up.
- 2) To use your cordless handset and base unit together, you must be able to establish a radio link between them. The signal between the handset and the base is in accordance with the normal standards for a DECT phone: Maximum range up to 300 metres outdoors or 50 metres indoors. Be aware that:
 - > Any large metal object, such as a refrigerator, mirror or filing cabinet, between the handset and the base unit may block the radio signal.
 - > Other solid structures, like walls, may reduce the signal strength.
 - > Other electrical equipment may cause interference and/or affect the range.
- 3) Do not place close to another telephone, a TV or audio equipment - it may cause interference.
- 4) Out of Range warning. If you hear a warning tone during a call, and/or the sound in the earpiece becomes faint or distorted, you may be going out of range of the base unit, so move nearer to the base unit within 20 seconds, otherwise the call may be cut off.

Note: The handsets include an ECO function, which means the handset only uses the transmission power it needs to communicate with the base rather than full transmission power all the time.

2 INSTALLING YOUR PHONE

2.1 Connecting the base station

- 1) Plug the power supply  and line cord  into the base station.
- 2) Plug the power adapter into a 100-240V 50/60Hz mains socket, and the line cord into your telephone line socket.
- 3) Always use the cables provided in the box.



Warning: Use only the provided power adapter, as others may cause a hazard.

Warning: Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket. Never try to lengthen the mains power cable.

 
Warning: For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

Note: The base unit needs mains power for normal operation, not just for charging the handset batteries.

2.2 Installing and charging the batteries

- 1) Place the 2 supplied batteries into the battery compartment with the polarity markings as shown. Use only the NiMH rechargeable battery type provided.
- 2) Position the battery compartment cover over the batteries and slide up to click into place.
- 3) Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.


Note: To charge a handset you can put it face-up or face-down on the base or charger.

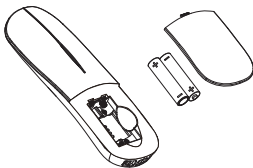

If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems. In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to.

 If you need more broadband micro-filters, contact your broadband supplier.



3 GETTING TO KNOW YOUR PHONE

3.1 Handset Overview

1 UP (Calls)

From idle: access the Call List

In lists: move up the options

During calls / ringing: increase the volume.

2 LEFT SOFT KEY (OK Menu)

Use with icons on display above, to open menu and confirm options.

3 TALK ON (Talk) & SPEAKERPHONE (Speaker icon)

Make or answer calls.

During a call: Press to turn on / off the speakerphone.

In Phonebook list / Redial list / Call list:

Press to make a call.

4 DOWN (Redial)

In lists: move down the options.

During calls / ringing: decrease the volume.

From idle: access the Redial List.

5 CALL BLOCKER (Hand icon)

Press to enter CALL BLOCKER menu.

6 RIGHT SOFT KEY (C/Mute INT)

Use with icons on display above, to clear characters, go back to previous menu, mute the microphone or make an intercom call.

7 TALK OFF (Off)

End a call or return to previous menu.

 
From idle: press and hold to turn the handset on / off.

8 R - RECALL (Flash) also called Flash

Sends a recall (R) signal, used for some PBX / Calling Features.

9 PHONEBOOK (Book icon)

Press to open the Phonebook list.

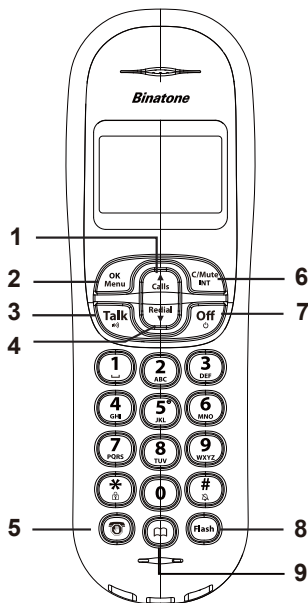


3.2 Base Station Overview

1. FIND ^{Find}

  
Press to page your registered handset(s).
Press and hold to put base into registration mode.



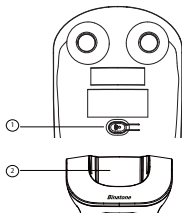








2. HANDSET CHARGING CRADLE




3.3 Display icons and Symbols

The LCD screen gives you information on the current status of the telephone.



-  Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
-  Steady when an intercom call is in progress. Flashes when there is an incoming internal call.
-  Indicates the speakerphone is being used.
-  Indicates a call is in progress on that handset. Flashes when there is an incoming call.
-  Indicates that the handset ringer is switched off.
-  Steady when an alarm is set. Flashes when the alarm is sounding.
-  Indicates that the keypad is locked.
-  Indicates when you have a new Voice Mail message. (This is a Caller Display service and is not usually available from UK network providers.)
-  Indicates when the battery is fully charged. Whole icon flashes when the battery is charging.
-  Indicates when the battery needs charging.
-  Indicates when there are more characters or numbers in front of those being displayed.

- ▶ Indicates when there are more characters or numbers after those being displayed.
-  LEFT SOFT KEY function. Press to access the main menu.
- OK** LEFT SOFT KEY function. Press to confirm the current selection.
- ★ Indicates a new TAM message is playing or a new Call List entry is being displayed.
- ◆ Indicates you can scroll up / down the menu items / Phonebook list / Redial list / Call List
- ⇌ (INT) RIGHT SOFT KEY function. Press to start an intercom call.
- ↶ (BACK) RIGHT SOFT KEY function. Press to go back to the previous menu level or cancel the current action.
- C** RIGHT SOFT KEY function. Press to clear a character, stop the alarm, or mute/unmute the microphone during a call.

3.4 Menu Structure

 
In idle mode, press <MENU/OK> to go to **CALL LIST**, the first option in the menu list.

Press <UP> or <DOWN> to go to other options in the menu list.

Press <MENU/OK> to enter a sub-menu or function.

Press <C/MUTE> to go back to the previous level.

Refer to the following for the menu structure.

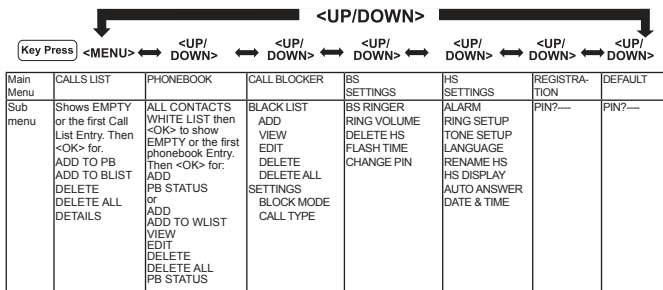

3.5 Text and Digit Entry Table

The following table shows you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text with the <UP>/<DOWN> keys to amend the text entry.
3. Press <C/MUTE> to delete the last character.
4. Press and hold <C/MUTE> to delete the entire text string.

3.5.1 English Character Set

Key Press	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, or P (Pause) if press and hold
*	*	?	/	\	()					*
#	O	'	.	-	&						#

"Some other characters are available with some of the alternative handset language options (see 8.3.5)."

4 USING YOUR PHONE

4.1 Make a Call

4.1.1 Preparatory Dialling

Enter the phone number and press <TALK ON> to connect to the line and dial the number. When entering the number, if you make a mistake, press <C/MUTE> to delete digits.

4.1.2 Direct Dialling

Press <TALK ON> to connect to the line and then enter the phone number.

(**Note:** if you enter a wrong digit you cannot correct it with the <C/MUTE> key.)

4.1.3 Call from the phonebook

Press <PHONEBOOK> to access the phonebook and press <UP>/<DOWN> to select the desired phonebook entry.

Press <TALK ON> to dial out the selected entry.

Note: The alphanumeric keys provide a short-cut to find entries beginning with the corresponding letters.

4.1.4 Call from the Call List (only available with Caller Display)

Press <UP>(Calls) to access the Call List and press <UP>/<DOWN> to select the desired Call List entry.

Press <TALK ON> to dial out the selected entry.

Note: You can also access the Call List by pressing <MENU/OK> twice.

4.1.5 Call from the redial list

Press <DOWN>(Redial) to access the redial list and press <UP>/<DOWN> to select the desired number.

Press <TALK ON> to dial out the selected redial number.

4.1.6 Call timer

Your handset automatically times the duration of every call.

The call timer is displayed as soon as you answer a call or 15 seconds after dialling and remains on the screen for 5 seconds after the end of the call.

It is shown in hours, minutes and seconds format (HH:MM:SS).

4.2 Answer a Call

If the handset is not on the charging cradle, or if **AUTO ANSWER** is set to **OFF**:

When the phone rings, press <TALK ON> to answer the call.

Note: If **AUTO ANSWER** is set to **ON**, lift the handset off the base or charger to answer the call automatically, without pressing buttons.

4.3 End a Call

During a call press <TALK OFF> to end the call.

OR

Put the handset on the base station or charger to end the call.

4.4 Handset Speakerphone

During a call you can press <TALK ON> to alternate between handsfree speakerphone and normal handset use.

4.5 Adjust Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of the earpiece and speakerphone volumes.

During a call:



Press <UP>/<DOWN> to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.

4.6 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call. During a call:

Press <C/MUTE> to mute the microphone and **MUTED** will display on the LCD. Your caller cannot hear you. Press <C/MUTE> again to unmute the microphone.

4.7 Turn off the Handset Ringer



In idle, press and hold <# /  > to turn off the handset ringer. The “” icon is displayed on the LCD.

Note: The display will still flash the Call icon and show **CALL** or the Caller Display number, when there is an incoming call, even if the ringer is turned off.


To turn the ringer back on, press and hold <# /  > again.

4.8 Turn on the Keypad Lock

You can lock the keypad so that it cannot be used accidentally while carrying it around.

In idle, press and hold < * /  > to turn on the keypad lock, and the “” icon is displayed on the LCD.

Note: You can still use <TALK ON> to answer a call when the handset is ringing.


To turn the keypad lock off, press and hold < * /  > again.

4.9 Redial the last number

You can redial any of the 20 last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

4.9.1 Redial a Number from the Redial List

1. Press <DOWN>(Redial) to access the redial list.

Note: If the redial list entry shows a name, press <# /  > to view the number of this entry.

2. Press <UP>/<DOWN> to browse the redial list.

3. Press <TALK ON> to dial to the selected redial number.

Note: If there are no numbers in the redial list, the display shows **EMPTY**.

4.9.2 Store a Redial Number into the Phonebook

1. Follow Steps 1 and 2 in section 4.9.1.
2. Press <MENU/OK> to show **ADD TO PB**.
3. Press <MENU/OK> and then enter the name you want to use in the phonebook.
4. Press <MENU/OK> and then modify the number, if necessary.
5. Press <MENU/OK> to show **MELODY 1**.
6. Press <UP>/<DOWN> to browse the ringtone list. The respective ringtones play while browsing the list. (**Note:** the selected melody will only play when you receive a call if you subscribe to Caller Display and the incoming number matches the stored number.)
7. Press <MENU/OK> to confirm, and the entry will be stored.

4.9.3 Delete a Redial Number

1. Follow Steps 1 and 2 in section 4.9.1.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DELETE**.
3. Press <MENU/OK> to confirm, and the entry will be deleted.

4.9.4 Delete all Redial List entries

1. Follow Steps 1 and 2 in section 4.9.1.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DELETE ALL**.
3. Press <MENU/OK> to display **CONFIRM?**.
4. Press <MENU/OK> to confirm. All entries will be deleted and the display will show **EMPTY**.

4.10 Find the Handset

You can locate the handset by pressing the <FIND> key on the underside of the base station. All the handsets registered to the base will produce the paging tone and show **PAGING** on the display for 60 seconds. You can stop the paging by pressing <TALK ON>, <TALK OFF> or <C/MUTE> on any handset or <FIND> on the base again.

Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.11 Make an Internal Call (Multi - handset versions only)

This feature is only applicable when there are at least two registered handsets.

It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

Note: If only one handset is registered to the base station, when <C/MUTE> is pressed, it will display **NOT POSSIBLE**.

4.11.1 Intercom Another Handset

1. In idle mode, press <C/MUTE> and all the other registered handset numbers will display, along with a "9".
2. Enter the number of the handset that you want to call, or press the < 9 > key to call all handsets.
3. The called handset rings and <TALK ON> must be pressed on that handset to establish the intercom call.

Note: If only two handsets are registered to the base station, pressing <C/MUTE> will call the other handset immediately.

Note: If there is an external call while you are on an intercom call, you'll hear warning beeps, and you have to end the intercom call, before you can answer the external call.

4.11.2 Call All Handsets

1. In idle mode, press <C/MUTE> and the registered handsets will display.
2. Press the < 9 > key to ring to all registered handsets

4.11.3 Transfer an External Call to another handset

During an external call:

1. Press <MENU/OK> to show **INTERCOM**.
2. Press <MENU/OK> to show all the other registered handset numbers, plus "9". Enter the number for the handset you want to transfer the call to.
3. The external call is put on hold automatically and the called handset rings.
4. Press <TALK ON> on the called handset to establish an internal call.
5. Press <TALK OFF> on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is transferred to the called handset.

Note: If the other handset has not answered the intercom call, you can stop the intercom and return to the external call by pressing <TALK OFF>

4.11.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom).

The three parties can share the conversation and no additional network subscription is required.

During an external call:

1. Follow Steps 1 to 4 in section 4.11.3.
2. Press and hold < * / $\frac{0}{1}$ > on the calling handset to establish the conference call. Either handset can exit the conference by pressing <TALK OFF>, leaving the other handset still connected to the external call.

5 PRIVATE PHONEBOOK

Each handset can store up to 100 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (**Note:** the different ringtones only play if you subscribe to Caller Display and the incoming number matches the stored number.) Phonebook entries are stored alphabetically by name.

5.1 Add a New Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
(**OR:** Press <MENU/OK> then <UP>/<DOWN> to show **PHONEBOOK** and then press <MENU/OK> to access the phonebook.)
2. Press <MENU/OK> to show **ADD**.
3. Press <MENU/OK> and then enter the name.
4. Press <MENU/OK> and then enter the number.
5. Press <MENU/OK> then <UP>/<DOWN> to select the desired ringtone for your phonebook entry.
6. Press <MENU/OK> to store the phonebook entry.

5.2 Search for a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Enter the first letter of the name using the alphanumeric keys (e.g. if it begins with C, press the 2 key three times), and then then <UP>/<DOWN> to scroll to the entry you want.

5.3 View a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP>/<DOWN> to select the desired phonebook entry.
3. Press <MENU/OK> then <UP>/<DOWN> to show **VIEW**.
4. Press <MENU/OK> then <UP>/<DOWN> to review the name, number and ringtone of the selected phonebook entry.

Note: If the number is more than 12 digits, press <MENU/OK> or <C/MUTE> to view the remaining digits.

5.4 Edit a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP>/<DOWN> to select the desired phonebook entry.
3. Press <MENU/OK> then <UP>/<DOWN> to show **EDIT**.
4. Press <MENU/OK> to display the current name.
5. Edit the name and press <MENU/OK>.
6. Edit the number and press <MENU/OK>.
7. Press <UP>/<DOWN> to select the ringtone and press <MENU/OK> to confirm.

5.5 Delete a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP>/<DOWN> to select the desired phonebook entry.
3. Press <MENU/OK> then <UP>/<DOWN> to show **DELETE**.
4. Press <MENU/OK> to confirm, and the entry will be deleted.

5.6 Delete all Phonebook entries

1. Press <PHONEBOOK> to access the phonebook.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DELETE ALL**.
3. Press <MENU/OK> to display **CONFIRM?**.
4. Press <MENU/OK> to confirm. All entries will be deleted and the display will show **EMPTY**.

5.7 Check the Phonebook Usage

You can check how many phonebook entries are stored in your handset and how many phonebook entries are available for you to store in the phonebook.

1. Press <PHONEBOOK> to access the phonebook.
2. Press <MENU/OK> then <UP>/<DOWN> to show **PB STATUS**.
3. Press <MENU/OK> to display how much of the phonebook is being used for example **14/100 USED** means 14 entries are stored out of the total 100 available spaces.

5.8 Add a Phonebook Entry to WHITE LIST

The White List can hold up to 20 numbers that will not be blocked if the Call Blocker is enabled. White List entries can be identified in the Phonebook list by a < * > to the right of the name.

1. In idle, press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.
3. Press <MENU/OK> and <UP/DOWN> to select **ADD TO WLST**.
4. Press <MENU/OK> to add the entry to the White List. A < * > will appear to the right of its name.

5.9 View a WHITE LIST entry

1. In idle, press <MENU/OK> then <UP/DOWN> to show PHONEBOOK.
2. Press <MENU/OK> then <UP/DOWN> to show **WHITE LIST**.
3. Press <MENU/OK> then <UP/DOWN> to select the desired WHITE LIST entry.
4. Press <MENU/OK> to show **VIEW**.
5. Press <MENU/OK> and <UP/DOWN> to review the name, number and ringtone of the selected White List phonebook entry.

Note: If the number is more than 12 digits, press <MENU/OK> or <C/MUTE> to view the remaining digits.

5.10 Remove an Entry from the WHITE LIST

1. In idle, press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to find the desired WHITE LIST entry with a < * > to the right of its name.
3. Press <MENU/OK> and the <UP/DOWN> to select **DEL FM WLST**.
4. Press <MENU/OK> to remove the entry from the White List. The entry will remain in the Phonebook, but the < * > will disappear from next to its name.

Alternatively

1. In idle, press <MENU/OK> then <UP/DOWN> to show **PHONEBOOK**.
2. Press <MENU/OK> then <UP/DOWN> to show **WHITE LIST**.
3. Press <MENU/OK> then <UP/DOWN> to select the desired **WHITE LIST** entry.
4. Press <MENU/OK> then <UP/DOWN> to show **DELETE**.
5. Press <MENU/OK> to confirm. The WHITE LIST entry will be deleted, but it will remain as a normal Phonebook entry.

5.11 Delete all WHITE LIST entries

1. In idle, press <MENU/OK> then <UP/DOWN> to show **PHONEBOOK**.
2. Press <MENU/OK> then <UP/DOWN> to show **WHITE LIST**.
3. Press <MENU/OK> to show the first White List entry.
4. Press <MENU/OK> then <UP/DOWN> to select **DELETE ALL**.
5. Press <MENU/OK> to display **CONFIRM?**.
6. Press <MENU/OK> to confirm. All WHITE LIST entries will be deleted and the display will show **EMPTY**, but they will remain as a normal Phonebook entries.

5.12 Remove an Entry from the WHITE LIST

1. In idle, press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to find the desired WHITE LIST entry with a < * > to the right of its name.
3. Press <MENU/OK> and the <UP/DOWN> to select **DEL FM WLST**.
4. Press <MENU/OK> to remove the entry from the White List. The entry will remain in the Phonebook, but the < * > will disappear from next to its name.

6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 30 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.

If the call is from someone who withheld their number, e.g. by dialling 141, **WITHHELD** will display.

If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, **OUT OF AREA** will display.

If you've got new Caller Display records, the handset will display **X NEW CALLS** in standby mode. The New Calls indication will remain until all the new call records have been viewed on that handset.

6.1 View the Call List

All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a * icon at the centre of the bottom line of the display.

1. Press <UP>(Calls) to access the call list.
OR Press <MENU/OK> to show **CALL LIST** and then press <MENU/OK>.
2. Press <UP>/<DOWN> to select the desired entry.
3. Press <#> to view the caller's number if applicable.
4. Press <MENU/OK>, then <UP>/<DOWN> to show **DETAILS**, and then <MENU/OK> to display the date and time of the call. Press <MENU/OK> to go back to the previous screen.

6.2 Store a Call List Number into the Phonebook

1. Follow Steps 1 and 2 in Section 6.1 .
2. Press <MENU/OK> to show **ADD TO PB**.
3. Press <MENU/OK> and then enter the name.
4. Press <MENU/OK> and the selected call list number is displayed.
5. Edit the number if necessary.
6. Press <MENU/OK> then <UP>/<DOWN> to select the ringtone.
7. Press <MENU/OK> to store the phonebook entry and return to the calls list.

6.3 Delete an entry in the Call List

1. Follow Steps 1 and 2 in Section 6.1 .
2. Press <MENU/OK> then <UP>/<DOWN> to show **DELETE**.
3. Press <MENU/OK> to delete the entry immediately.

6.4 Delete all Call list entries

1. Follow Steps 1 and 2 in Section 6.1.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DELETE ALL**.
3. Press <MENU/OK> to display **CONFIRM?**.
4. Press <MENU/OK> to confirm. All entries will be deleted and the display will show **EMPTY**.

7 CALL BLOCKER

If you subscribe to Caller ID, you can use the call blocker feature to reject certain calls automatically by adding numbers into the black list or rejecting a Call Type (see 7.6.5). The phone stores up to 100 entries shared between the phonebook (including the WHITE LIST) and the black list.

When a blocked call is received the telephone will not ring, but the handset will show the caller details. If the answering machine is active it will answer the call, but no call screening will be heard (see section 9). In order to use the call blocker you must first activate the feature (see 7.6). See section 5.1 and 5.8 for how to store numbers to the phonebook and white list. See section 7.1 for how to store numbers to the black list.

7.1 Add a Number to the Black List

The Black List is used to hold numbers that will always be blocked when the Call Blocker is set to BLOCK BLIST.

Note: Each Black List entry reduces the capacity of the Phonebook / White List store.

1. In idle, press <CALL BLOCKER> or press <MENU/OK> and <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> to show **BLACK LIST**.
3. Press <MENU/OK> twice to open the Black List and then to show **ADD**.
4. Press <MENU/OK> and then enter the number.
5. Press <MENU/OK> to store the number to the black list.

7.2 View a Black List Entry

1. In idle, press <CALL BLOCKER> or press <MENU/OK> and <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> to show **BLACK LIST**.
3. Press <MENU/OK> then <UP/DOWN> to select the desired black list entry.
4. Press <MENU/OK> and <UP/DOWN> to select **VIEW**.
5. Press <MENU/OK> and <UP/DOWN> to see the number and name of the selected entry.

7.3 Edit a Black List Entry

1. In idle, press <CALL BLOCKER> or press <MENU/OK> and <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> to show **BLACK LIST**.
3. Press <MENU/OK> then <UP/DOWN> to select the desired black list entry.
4. Press <MENU/OK> and <UP/DOWN> to select **EDIT**.
5. Press <MENU/OK> to display the current name.
6. Edit the name and press <MENU/OK>.
7. Edit the number and press <MENU/OK> to confirm the change.

7.4 Delete a Black List Entry

1. In idle, press <CALL BLOCKER> or press <MENU/OK> and <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> to show **BLACK LIST**.
3. Press <MENU/OK> then <UP/DOWN> to find the entry you want to delete.
4. Press <MENU/OK> and <UP/DOWN> to select **DELETE**.
5. Press <MENU/OK> to confirm, and the **BLACK LIST** entry will be deleted.

7.5 Delete All Black List Entries

1. In idle, press <CALL BLOCKER> or press <MENU/OK> and <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> to show **BLACK LIST**.
3. Press <MENU/OK> to open the Black List.
4. Press <MENU/OK> and <UP/DOWN> to select **DELETE ALL**.
5. Press <MENU/OK> to display CONFIRM?.
6. Press <MENU/OK> to confirm the Black List delete all, and display **EMPTY**.

7.6 Call Blocker Settings

You can change the settings for the block mode and call type.

7.6.1 Choose the Block Mode

You can choose to block all calls, allow only WHITE LIST entries, or block black list entries.

1. In idle, press <CALL BLOCKER> or press <MENU/OK> and <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> and <UP/DOWN> to select **SETTINGS**.
3. Press <MENU/OK> to show **BLOCK MODE**.
4. Press <MENU/OK> and <UP/DOWN> to select, **BLOCK ALL, ALLOW WLST, BLOCK BLIST, or OFF**.
5. Press <MENU/OK> to proceed.

Note: If you want to block all calls except for White List entries, set **BLOCK ALL** before setting **ALLOW WLST**.

7.6.2 All-Time Blocking

1. Follow Steps 1 to 4 in Section 7.6.1 and choose **BLOCK ALL** for the block mode.
2. Press <MENU/OK> then <UP/DOWN> to select **ALWAYS ON**.
3. Press <MENU/OK> to confirm the selection.

7.6.3 Timed Blocking

1. Follow Steps 1 to 4 in Section 7.6.1 and choose **BLOCK ALL** for the block mode.
2. Press <MENU/OK> and <UP/DOWN> to select **TIMED**.
3. Press <MENU/OK> twice to select **TIME ON**.
4. Enter the time information in 24 hour format, and then press <MENU/OK>.
5. Press <MENU/OK> to select **TIME OFF**.
6. Enter the time information in 24 hour format, and then press <MENU/OK> to confirm.

7.6.4 Turn the Block Mode Off

All calls will ring normal when the block mode is off.

1. Follow Steps 1 to 3 in Section 7.6.1 to choose the block mode.
2. Press <MENU/OK> and <UP/DOWN> to select **OFF**.
3. Press <MENU/OK> to confirm.

7.6.5 Block Calls by Call Type

You can choose to block different types of incoming calls that normally do not have a caller ID number by setting the respective call type to **ON**.

1. In idle, press <CALL BLOCKER> or press<MENU/OK> and <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> and <UP/DOWN> to select **SETTINGS**.
3. Press <MENU/OK> and <UP/DOWN> to select **CALL TYPE**.
4. Press <MENU/OK> and <UP/DOWN> to select **WITHHELD, INTERNAT'L, UNAVAILABLE, or PAYPHONE**.
5. Press <MENU/OK> and <UP/DOWN> to select **ON** or **OFF**.
6. Press <MENU/OK> to confirm the setting for that call type.
7. To set for other call types, repeat from step 5.

Notes:

If for any reason the Caller display is not received or you do not have the Caller display service the call will be treated as a black listed call.

If you do not have the Caller display service it is advised that you do not use the Call Blocker > Block Black List option.

If the number is in both the black list and the phonebook then the phonebook takes precedence and the call is received as normal.

When storing a number to the phonebook, white list or black list, please ensure that you store the number with the relevant area code.

When viewing all contacts stored in the phonebook, white list numbers will be marked with a *.

It is also possible to dial a black listed number directly from the black list.

1. In idle, press <CALL BLOCKER> or press <MENU/OK> then <UP/DOWN> to select **CALL BLOCKER**.
2. Press <MENU/OK> to show **BLACK LIST**.
3. Press <MENU/OK> and <UP/DOWN> to select the desired black list number.
4. Press <TALK ON>to dial out the selected black list entry.

8 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

8.1 Date and Time Settings

If you subscribe to Caller Display the time and date settings will be automatically updated by the network when you receive an incoming call.

The Caller Display service only sends the month and date, not the year, so you may need to set the year.

8.1.1 Change the Date Format

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DATE & TIME**.
3. Press <MENU/OK> to show **DATE FORMAT**.
4. Press <MENU/OK> then <UP>/<DOWN> to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
5. Press <MENU/OK> to confirm.

8.1.2 Change the Time Format

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DATE & TIME**.
3. Press <MENU/OK> then <UP>/<DOWN> to show **TIME FORMAT**.
4. Press <MENU/OK> then <UP>/<DOWN> to select your desired time format (**12 HR** or **24 HR**).
5. Press <MENU/OK> to confirm.

8.1.3 Set the Time

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DATE & TIME**.
3. Press <MENU/OK> then <UP>/<DOWN> to show **SET TIME**.
4. Press <MENU/OK> and then enter the time information in 24 hour format.
5. Press <MENU/OK> to confirm.

Note: If the time is not set, it will start running from **00:00**.

8.1.4 Set the Date

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **DATE & TIME**.
3. Press <MENU/OK> then <UP>/<DOWN> to show **SET DATE**.
4. Press <MENU/OK> and then enter the date information in the format you set in Section 8.1.1.
5. Press <MENU/OK> to confirm.

Note: If the date is not set, it will start running from **01/01/15**.

8.2 Alarm Settings

You can set an alarm time on a handset. When an alarm is set, the alarm icon is shown on the handset display. When the alarm time is reached, the alarm icon and **ALARM ON** flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm. If the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold <TALK OFF> while the alarm is sounding, to stop the alarm and turn off the snooze function.

Note:

- A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.
- During an external call or internal call, if an alarm is set and when the alarm time is reached, the alarm icon and **ALARM ON** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds <TALK OFF> to disable the alarm, the display will revert to the call duration.
- During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.

8.2.1 Turn on/off the Alarm

- Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
- Press <MENU/OK> to show **ALARM**.
- Press <MENU/OK> then <UP>/<DOWN> to select **ON** or **OFF**.
- Press <MENU/OK> to confirm.

Note: If **ON** is selected, you will be prompted to set the alarm time.

8.2.2 Set the Alarm Time (If Alarm time is set to be ON)

- Follow Steps 1 to 4 in Section 8.2.1.
- Enter the alarm time in 24 hour format.
- Press <MENU/OK> to display **SNOOZE**.
- Press <MENU/OK> then <UP>/<DOWN> to select snooze **ON** or **OFF**.
- Press <MENU/OK> to confirm.

8.3 Handset Settings

8.3.1 Set the Ringer Melody for Internal Calls

- Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
- Press <MENU/OK> then <UP>/<DOWN> to show **RING SETUP**.
- Press <MENU/OK> to show **INT RING**.
- Press <MENU/OK> then <UP>/<DOWN> to select the melody you want to hear for internal calls.

Note: The respective melody will be played while browsing the ringtone list.

- Press <MENU/OK> to confirm.

8.3.2 Set the Ringer Melody for External Calls

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **RING SETUP**.
3. Press <MENU/OK> then <UP>/<DOWN> to show **EXT RING**.
4. Press <MENU/OK> then <UP>/<DOWN> to select the melody you want to hear for external calls.

Note: The respective melody will be played while browsing the ringtone list.

5. Press <MENU/OK> to confirm.

8.3.3 Set the Ringer Volume

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **RING SETUP**.
3. Press <MENU/OK> then <UP>/<DOWN> to show **RING VOLUME**.
4. Press <MENU/OK> then <UP>/<DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).

Note: The respective ringer volume will be played during your selection.

If **VOLUME OFF** is selected, the Ringer Off icon will be displayed.

5. Press <MENU/OK> to confirm.

8.3.4 Set Alert Tones

Three different alert tones are set on by default, but can be turned off, if desired. **Key Tone** - a single beep is emitted when you press a key.

Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.

Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **STONE SETUP**.
3. Press <MENU/OK> and then <UP>/<DOWN> to select **KEY TONE / BATTERY TONE / OUT OF RANGE**.
4. Press <MENU/OK> then <UP>/<DOWN> to turn **ON** or **OFF** these tones.
5. Press <MENU/OK> to confirm.

8.3.5 Set the Handset Language

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **LANGUAGE**.
3. Press <MENU/OK> then <UP>/<DOWN> to select the desired language.
4. Press <MENU/OK> to confirm.

8.3.6 Rename the Handset

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**
2. Press <MENU/OK> then <UP>/<DOWN> to show **RENAME HS**.
3. Press <MENU/OK> and change the name of your handset, using <C/MUTE> to delete letters and the alphanumeric keys to enter up to 10 letters for the name that will be displayed on the screen in idle mode.
4. Press <MENU/OK> to confirm.

8.3.7 Choose the Information to be Displayed in Idle

You can choose to display time or handset name in your idle screen.

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **HS DISPLAY**.
3. Press <MENU/OK> then <UP>/<DOWN> to select **HANDSET NAME** or **TIME**.
4. Press <MENU/OK> to confirm.

8.3.8 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

1. Press <MENU/OK> then <UP>/<DOWN> to show **HS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **AUTO ANSWER**.
3. Press <MENU/OK> then <UP>/<DOWN> to turn **ON** or **OFF** the auto answer feature.
4. Press <MENU/OK> to confirm.

8.4 Base Settings

8.4.1 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced.

You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and **REGISTER** on the display.

Note: You cannot de-register the handset that you are currently using.

1. Press <MENU/OK> then <UP>/<DOWN> to show **BS SETTINGS**.
2. Press <MENU/OK> to show **DELETE HS**.
3. Press <MENU/OK> and the display shows **PIN?----**.
4. Enter the 4-digit system **PIN**.
5. Press <MENU/OK> and the first handset number is displayed.
6. Press <UP>/<DOWN> to scroll through the list of registered handsets and select the number of the handset you want to de-register.
7. Press <MENU/OK> to confirm, and the chosen handset will be de-registered.

8.4.2 Change the Flash (Recall) Time

You may need to change the recall (flash) time if your phone is connected to a private exchange (PBX). The recall time options are **SHORT** (the default value of 100ms), **MEDIUM** (300ms) or **LONG** (600ms).

1. Press <MENU/OK> then <UP>/<DOWN> to show **BS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **FLASH TIME**.
3. Press <MENU/OK> then <UP>/<DOWN> to select your desired flash time (**SHORT, MEDIUM, LONG** - an asterisk indicates the current setting).
4. Press <MENU/OK> to confirm.

8.4.3 Change the System PIN Code

A 4-digit system PIN code is used to protect your phone against unauthorised use when changing some system settings of the base station. The default system PIN code is 0000.

1. Press <MENU/OK> then <UP>/<DOWN> to show **BS SETTINGS**.
2. Press <MENU/OK> then <UP>/<DOWN> to show **CHANGE PIN**.
3. Press <MENU/OK> to show **PIN? ----** .
4. Enter the current system **PIN**.
5. Press <MENU/OK> to display **NEW PIN?----** , and enter your new 4-digit system **PIN**.
6. Press <MENU/OK> to display **CONFIRM?----** , and enter your new 4-digit system PIN again.

Note: If the new PIN entered in Step 6 is not the same as the new system **PIN** entered in Step 5, you must enter the new system PIN at step 5 again.

7. Press <MENU/OK> to confirm

8.5 Registration

IMPORTANT: When you purchase a phone system, all handsets are already registered to your base, so you do not need to register them. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (**Note:** each handset can only be registered to one base.)

To register a new handset to your base:

1. Press and hold <FIND> on the underside of the base station for more than 5 seconds to put the base station into registration mode. The TAM indicator flashes and it will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
2. Press <MENU/OK> then <UP>/<DOWN> to show **REGISTRATION**.
3. Press <MENU/OK> to display **PIN?----** .
4. Enter the 4-digit system PIN (default 0000).
5. Press <MENU/OK> to confirm, and the display will show **PLEASE WAIT..**

If the handset registration is successful, you will hear a confirmation tone and the antenna icon will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the antenna icon will still flash and the display will return to **REGISTER**, so you will need to repeat the registration process.

8.6 Reset Your Phone

You can reset your phone to the default settings. After a reset, all your personal settings, call list entries, redial list entries and answering machine messages will be deleted, but your phonebook remains unchanged.

1. Press <MENU/OK> then <UP>/<DOWN> to show **DEFAULT**.
2. Press <MENU/OK> to display **PIN?----** .
3. Enter the 4-digit system PIN (default 0000).
4. Press <MENU/OK> to display **CONFIRM?**
5. Press <MENU/OK> to confirm, and the phone will be reset to its default settings.

9 TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Causes	Solutions
No dialling tone when pressing <TALK ON> key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. Another handset is using the base to make a call. d. Wrong telephone line cord	a. Check the connections. Unplug plug back in the mains. Check that the telephone cord been plugged into the base station phone socket. b. Check the base station plug are 230V plug (remove and plug-in) c. Wait until the line is unoccupied d. Use the original telephone line supplied.
When connected to a PBX, no / or wrong connection after dialling	Dialling prefix is needed.	Insert the dialling prefix.
OUT OF RANGE is displayed	a. Base station out of range. b. Base station not connected to mains.	a. Reduce the range. b. Connect base station to mains
The call does not work.	Service not activated or wrong operator or wrong setting.	Check your Subscription with network
No display.	Empty battery	Recharge battery.

This telephone is not equipped with a grounding function, and therefore some functions may be limited when used in PBX systems.

If the fault persists...

Disconnect all other instruments connected to the same line as the phone and try to make a call.

Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket.

Try making a call. If this works, the line is OK.

If the call does not work, and you are using a two-way socket adapter, remove the adapter and plug a telephone directly into the socket. If the call now works, the adapter is faulty.

10 DECLARATION OF CONFORMITY

Binatone Electronics International Limited
Floor 23A, 9 Des Voeux Road West, Hong Kong
Tel: (852) 2802 7388 Fax: (852) 2802 8138

Binatone

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Electronics International Limited
Floor 23A, 9 Des Voeux Road West, Hong Kong
Tel: (852) 2802 7388 Fax: (852) 2802 8138

Declare under our sole responsibility that the following product

Type of equipment: Digital cordless telephone
Model Name: Vesta 1305 series
Country of Origin: China
Brand: Binatone

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**, Directive 2011/65/EC on the **restriction of use of hazardous substances (RoHS)** and 2009/125/EC relating to ecodesign requirement for Energy-Related Products (ErP).

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard / regulation:

Radio Spectrum: EN 301406: V2.1.1 (2009-07);
EMC: EN 301489-6:V1.3.1 (2008-08);
EN 301489-1:V1.9.2 (2011-09);
Heath & Electrical Safety: EN 60950-1:2006 + A11+A1+A12:2011
EN50360:2001 +A1:2012 & EN50385 : 2002
ErP Implementing regulation EC1275/2008

Operating Condition	Power Consumption
Networked Standby Mode	0.6W (Ruijing)/ 0.66W (Vtech)

Manufacturer / Importer

(Signature of authorized person)

7 Apr 2016
.....
Date



Patrick Cheung
Senior Product Manager
Place: Hong Kong

The conformity to the requirements is validated by the **CE** symbol.

NOTE: In compliance with Directive 2002/96/EC, when you purchase a product that comes with the symbol shown on the right, you are required to dispose of electrical and electronic equipment by separate waste collection and you cannot dispose of the product as normal waste.

This equipment and all its components, subsystems and consumable materials formed an integral part of this product and when you decide to dispose of them you have to take them to a local recycling centre for appropriate waste disposal, in compliance with the current regulations.



Details about the location of these centres can be obtained from your local authority.

Notes for battery disposal

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please be aware of the local rules on separate collection of batteries. The correct disposal of batteries helps protect the environment and prevent health hazards.

11 GUARANTEE AND SERVICE

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store. If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW