

WIRELESS BLUETOOTH HEADPHONES

Installation & User Instructions – Please keep for future reference



Important – Please read these instructions fully before using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct installation, use and maintenance.

If you need help or have damaged or missing parts, call the Customer Help line: 0345 600 3021

Table of contents

- Charging the headphones 3
- Switching the headphones on 3
- Switching modes 3
- Volume control..... 3
- Pairing your device to the headphones..... 4
- Unpairing a bluetooth device 4
- Re-connecting a bluetooth device 4
- Listening to music from a bluetooth device 4
- Answering a call 4
- Listening to music from an SD card 5
- Warnings..... 5
- Preventing hearing loss..... 5
- Contact 5
- Disposal information 6
- Guarantee 7






Safety information

CAUTION: DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.

- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your headphones properly and enjoy all of their features.
- Please save this owner's guide for future reference.
- The product label is located on the back of the product.
- Heed all warnings - on the product and in the owner's guide.
- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped -
- Do not attempt to service this product yourself.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Any electrical work that is required to install this appliance **MUST** be carried out by a qualified electrician.

Getting started

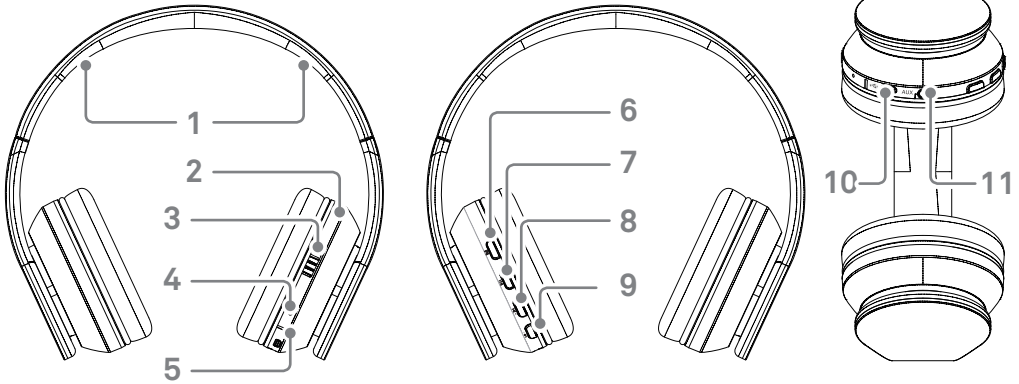

- 1. Retractable arch:** Extend or shorten the arch.
- 2. Micro SD slot:** Play audio from the SD card.
- 3. ON/OFF:** Headphone power switch.
- 4. Microphone:** Used for voice calls.
- 5. LED status indicator:** Displays Bluetooth and charging status.
- 6. M:** Mode button switches between SD card & Bluetooth modes.

- 7. ►/||:** Play/Pause button.
- 8. ►►/ + :** Skip to the next audio track or press & hold to increase the volume level.
- 9. ◀◀/ - :** Skip to the previous audio track or press & hold to decrease the volume level.
- 10. USB port:** Charging socket.
- 11. 3.5mm audio jack (AUX):** Connect a 3.5mm audio cable from an audio source such as an mp3 player.

Charging the headphones

Before use plug the supplied USB cable into a power supply and the charging port (10) of the headphones.

The LED indicator will show the charging status:

- Red LED = Charging
- No LED = Charging Complete

Charging time is approximately 3 hours.

When the battery becomes low on charge 4 short beeps every 10 seconds can be heard.

Switching the headphones on

1. Set the ON/OFF switch (3) to the ON position to power on the headphones.
2. Set the ON/OFF switch (3) to the OFF position to power off the headphones.

Switching modes

1. Press the 'M' button (6) to switch between Bluetooth and SD card input modes.

Volume control

1. Press and hold the ►►/ + button (8) to increase the volume level.
2. Press and hold the ◀◀/ - button (8) to decrease the volume level.

Bluetooth operation

Pairing your device to the headphones

1. Firstly you will need to enable the Bluetooth function on your phone or music player. Please refer to the manufacturers instructions to make the device 'discoverable'.
2. After the headphones have been fully charged, turn them on by setting the ON/OFF switch to the ON position.
3. Bluetooth pairing mode is indicated by an alternate red & blue flashing LED.
4. Search for Bluetooth devices from your phone or music player. The headphones will appear as 'HP8810'. When selected, pairing will take place and the LED indicator will change to a solid blue led.

Unpairing a bluetooth device

1. To unpair a bluetooth device from the headphones refer to your bluetooth devices manufacturer instructions.

Re-connecting a bluetooth device

Every time the headphones are switched on, they will connect to the nearest, and the last connected device automatically (as long as Bluetooth is enabled on that device).

If the headphones are set to the SD card input when powering off, press the 'M' button (6) to switch to bluetooth mode and the device will automatically connect.

Listening to music from a bluetooth device

Make sure to fully charge your headphones for 3 hours before the first use.

1. After pairing a bluetooth device simply select the music to play on your device as normal and listen through the headphones.
2. Press the button ►/|| button to begin playback. Press again to pause playback.
3. Press the button ►►/+ button to skip to the next track. Press the button ◀◀/- button to skip to the previous track.

Answering a call

Follow the below table to operate the headphones with your phone device.


FUNCTION	STATUS	OPERATION
Answer call	Ringing	Short press ►/
Reject call	Ringing	Long press ►/
Redial last number called	Connected	Short press ►/ twice
Volume up	Conversation mode	Long press ►►/+ button.
Volume down	Conversation mode	Long press ◀◀/- button.

SD card operation

Listening to music from an SD card

Follow the below steps to listen to mp3 tracks stored on a Micro SD card.

1. Insert a micro SD card into the SD card slot until you hear a click.

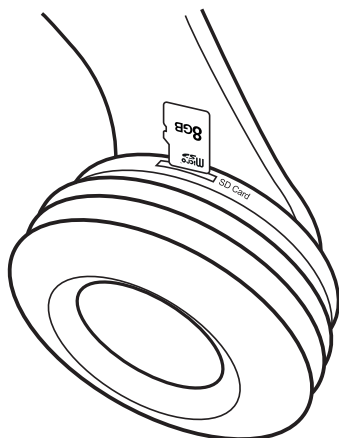

Take care to insert the Micro SD card with the top (side with writing) facing towards the other ear cup.

2. The input mode will switch automatically when a SD card is inserted, and audio playback will begin from the first track.
3. Press the button ►/|| button to pause playback. Press again to resume playback.
4. Press the button ►►/+ button to skip to the next track. Press the button ◀◀/- button to skip to the previous track.
5. To remove the Micro SD card, press down on the card until you hear a click and the card pops out.

NOTE: Only micro SD cards up to 32GB are supported.

Warnings

- Read safety instructions before use and adjusting the volume.
- Safe use depends on the exposure time and volume levels
- Volume at 80 dB(A), exposure should be limited to 40 hours a week. At 89 dB(A) exposure should not exceed 5 hour/weeks.
- The battery may present a risk of fire or chemical burn if it is not handled correctly.
- Do not disassemble, incinerate or expose to temperatures above 40°C.
- Do not use the battery if it shows any signs of leakage, if it is discoloured, deformed or has any defects.
- Do not leave your battery discharged or unused for long periods.
- If misused, batteries may explode or leak, resulting in damage and injury. If you notice any signs of leakage disregard the product immediately with usual precautions.

Preventing hearing loss

CAUTION: Sustained use of personal stereo head phones at full power can damage the users ears.

The headphones for this device comply with European Union sound pressure levels stipulated in the EN 50332-1:2000 standard.

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021

Other information

SPECIFICATIONS

Bluetooth Version	V2.1
Supports Bluetooth Version	HSP,HFP,A2DP,AVRCP
Battery	Built in rechargeable 300 mAh lithium battery
Music Play Time	Up to 6 hours
Standby time	10/15 days
Charging time	1-2 hours
Dimension	17 x 7.2 x 18.4cm
Weight	203g
Operating range	10 meters
Frequency	20Hz to 20 KHz
Sensitivity	95 ± 3dB
Input	DC 5V/180mA
Micro SD card size	up to 32GB
Accessories	User manual and USB cable

Disposal information



Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused

When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please make yourself aware of the local collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license.

This product is intended for use within the UK.

Declaration of Conformance

Hereby Argos LTD declares that the radio equipment type Band II LPD Device is in compliance with Directive 2014/53/EU

The full text of the EU declaration of conformity is available at the following internet address: <http://WWW.argos-support.co.uk>



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalidated if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

