 


重点校对项

- 1. 物料编码
- 2. 版面尺寸
- 3. 材质标注
- 4. 颜色标注
- 5. 客户型号
- 6. 产品名称
- 7. 产品参数
- 8. 电压功率
- 9. 单位符号
- 10. 认证标志
- 11. 回型标志
- 12. ROHS标志
- 13. 警语警语及字高
- 14. 控制面板及功能
- 15. 目录及页码
- 16. 商标LOGO

标准元素核对表（此表仅用于印刷品制作过程核对标准内容，非印刷内容）

认证图标	<p>大于5mm 大于5mm 大于5mm 大于5mm 大于7mm ETL有C或US或C+US UL只有C+US或无 GS图标无高度要求，印刷可见即可 说明书、保修卡类</p>
单位表述	直流电:V= 交流电:V- 频率:Hz 功率:W 容量:mL/L 电流:A 压强:Pa/kPa/MPa 长度:mm/cm/m 时间:s/min/h 重量:kg
产地表述	MADE IN CHINA Made in China Made in P.R.C
变更要求	图纸变更需要核实变更内容以及涉及的物料和MO单，尤其关注92的在途MO单

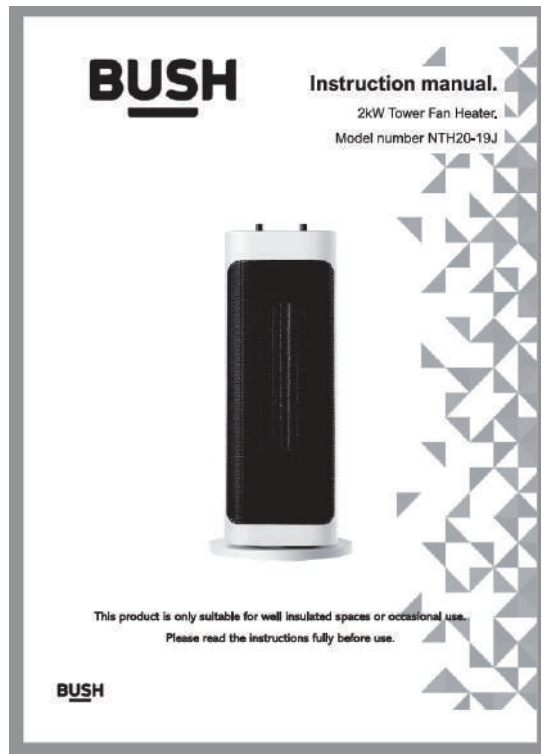

技术要求(版本号:B, 2023-06)

- 文字图案印刷颜色为：黑色，印刷字体需清晰可见，文字不能粘到一起；
- 该说明书的幅面大小为：A5，未注直线尺寸公差应符合GB/T1804-v；
- 该说明书的装订方式为：打钉；[70P以下为钉装，70P以上为胶装（特殊要求除外）]
- 说明书警语及认证标志应满足CE/UL标准，CE：警语部分大写字母高度不低于3mm，CE标志不低于5mm，WEEE标志不低于7mm；UL：大写字母字高不小于1/12”（2.11mm），小写字母字高不小于1/16”（1.6mm），“IMPORTANT SAFEGUARDS”，“SAVE THESE INSTRUCTIONS”等词，其字高不小于3/16”（4.8mm），IMPORTANT SAFEGUARDS 必须在最前面。
- 产品应符合QMG-J53.021《产品说明书技术条件》的有关要求。
- 有ROHS指令要求的物料应符合美的企业标准QML-J11.006《产品中限制使用有害物质的技术标准》。

				电暖器		16161000A26895	
				说明书		说明书 BUSH-NTH20-19J (5792540) -0501	
@按照业务要求调整ERP 刘雪莲 2024.7.31						材料: 80g双胶纸	
标记处数	更改文件号	签字	日期	图样标记	重量	比例	
制图	刘雪莲	审核	卢灿飞	K		1:1	
设计	-----	标准化	古广君				
校对	-----	审定	古广君				
会签	-----	日期	2024.7.30	共 1 页	第 1 页		

广东美的生活电器制造有限公司

BUSH

Instruction manual.

2kW Tower Fan Heater.

Model number NTH20-19J



This product is only suitable for well insulated spaces or occasional use.

Please read the instructions fully before use.

BUSH



Safety information important- please read the instructions fully before operating.

For household and indoor use only.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- Use only the voltage specified on the rating plate of the heater.

WARNING: in order to avoid overheating do not cover the heater.

WARNING: To reduce the risk of fire, keep textiles, curtains, or other flammable materials at least 1 m away from the air outlet.

- Only use this heater on a horizontal and stable surface.
- Do not place the heater immediately below a socket outlet.
- Do not use this appliance with a programmer, timer, separate remote-control system, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- To avoid risk of overloading your plug socket, the use of an extension lead with this heater is not recommended.
- Important- this heater is intended for floor use only. Do not mount on ceilings or walls.
- Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
- Do not leave the appliance unattended.

WARNING: Do not use this heater in small rooms, when they are occupied by people unable to leave the room alone, unless constant supervision is provided.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Children less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given

 
 
supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION- some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Always switch off the heater before removing the plug from the power socket.
- Do not remove the plug from the power socket by pulling on the cord, always grip the plug to remove.
- Always unplug the appliance when not in use, when moving the appliance or before cleaning.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not twist, kink, or wrap the cord around the appliance as this may cause the insulation to weaken and split.
- Do not run the power cord under carpets, rugs etc.
- Do not cover or restrict the airflow to the inlet or exhaust grilles, restricted airflow can cause the appliance to overheat and become a fire risk.
- Do not insert or allow any foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire, or damage the appliance.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Do not use the heater on deep pile carpets or long hair type rugs. Keep combustible materials such as drapes and other soft furnishings away from the heater.

Getting to know your heater.

1. Thermostat Control
2. OFF/Heat/Oscillate control
3. Power indicator

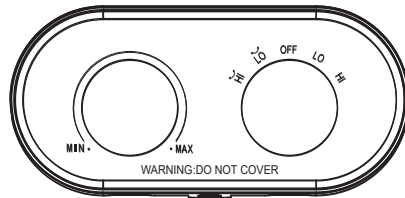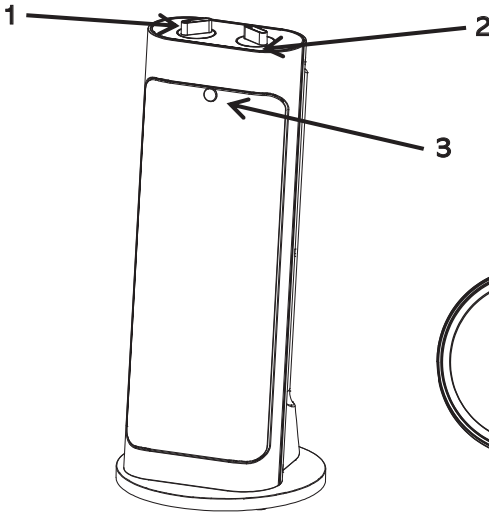

Before using your heater.

Make sure you have read and understood the instructions fully.

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- Position the Heater on a dry, level, sturdy surface, where it is unlikely to get knocked or tripped over and making sure the inlet and outlet grilles are free from obstruction.
- Connect the plug to the appropriate mains supply, making sure the plug is fully inserted.
- When you have finished using the heater. Make sure you switch off and unplug the power cord.

NOTE: care should be taken with the positioning of the appliance due to the mains cable creating a trip hazard.



WARNING: in order to avoid overheating do not cover the heater.

Fan Settings.

There are 2 heat settings to select from Low and High.

- To select the low heat setting. Rotate the OFF/Heat/Oscillate control to the low heat position (LO). Turn back to 'OFF' to switch the heater off.
- To select the high temperature setting, rotate the OFF/Heat/Oscillate control to the High heat position (HI). Turn back to OFF' to switch off.
- Rotate the Thermostat control (1) clockwise to increase the room temperature and anticlockwise to decrease the room temperature as desired.

Oscillation.

- To oscillate the fan heater from left to right in LOW heat mode turn the OFF/Heat/Oscillate control to 
- To oscillate the fan heater from left to right in HIGH heat mode turn the OFF/Heat/Oscillate control to 

Thermostat control.

Setting the temperature is easy to do.

- Select the heat setting as above, then rotate the thermostat control to maximum position. Once the desired room temperature has been reached, turn the thermostat control anticlockwise until it clicks off then turn the control clockwise slowly until it clicks back on. The thermostat will now maintain the set temperature.
- The heater will turn on and off automatically maintaining the room temperature that you have set.
- You may need to adjust the thermostat control to fine tune the ideal room temperature.

Note: for a more economic use of your heater, it is suggested to initially run the fan on High until the room temperature has been reached, then set the heater to the low heat setting.

Tip over switch

The heater is fitted with a safety switch which cuts the heater off if it falls over. This switch is located under the base. The heater needs to be placed on a firm and level surface in order to operate. Standing the unit on the long pile carpet may not activate the switch.

Overheat safety cut-out.

Your heater is fitted with a safety device the switches off the heater in the event of overheating. Should the heater stop working, turn the heater off and inspect for blockage of air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater. If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service center for examination or repair.

Care and Maintenance.

The heater requires regular cleaning to ensure trouble free operation:

- Always turn off unplug the heater from the mains supply before cleaning.
- Make sure the appliance has cooled down completely before cleaning.
- Use a slightly damp cloth to wipe the exterior of the heater to remove dust and dirt.
- Use a vacuum cleaner or compressed air to remove dust and fluff from the inlet and outlet grilles.
- Ensure the heater is dry before plugging back into the mains supply.
- If the heater has collected dust or dirt inside the unit or around the element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.

Storage

- Do not store appliance while it is still hot.
- When not in use, clean the heater before storing away in the original or similar sized box.
- Store the heater in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

Technical Specifications.

Bush 2kW Tower Fan Heater	
Model number	NTH20-19J
Input rated voltage	220-240V 50Hz
Output rated wattage	2000W
Net Weight	2.3kg
Product Dimensions	W45.2XD19.6XH19.6mm
Recommended room size	15m ²



Produced in China for Argos Limited.
Sainsbury's Supermarkets Ltd, London, EC1N 2HT, UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

Recycling electrical products.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

Plug and wiring advice.

The wires in this mains lead are coloured in accordance with the following UK electrical code:

 
BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.


Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

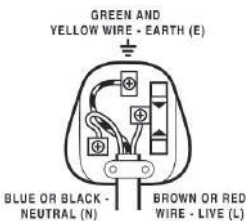

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol 

Information requirement for electrical space heater.

Table for information requirements for electric local space heaters					P
Model identifier(s): NTH20-19J					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric local space heaters only (select one)	
Nominal heat output	P _{nom}	2,0	kW	Manual heat charge control with integrated thermostat	[no]
Minimum heat output (indicative)	P _{min}	1,2	kW	Manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	P _{max}	2,0	kW	Electronic heat charge control with room and/or outdoor temperature feedback	[no]
Auxiliary electricity consumption				Fan assisted heat output	
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	[no]
At minimum heat output	e _{lmin}	N/A	kW	Single stage heat output and no room temperature control	[no]
In standby mode	e _{lSB}	N/A	W	Two or more manual stages, no room temperature control	[no]
				With mechanic thermostat room temperature control	[yes]
				With electronic room temperature control	[no]
				Electronic room temperature control plus day timer	[no]
				Electronic room temperature control plus week timer	[no]
				Other control options (multiple selections possible)	
				Room temperature control, with presence detection	[no]
				Room temperature control, with open window detection	[no]
				With distance control option	[no]
				With adaptive start control	[no]
				With working time limitation	[no]
				With black bulb sensor	[no]
Contact details:	Produced in China for Argos Limited. Sainsbury's Supermarkets Ltd, London, EC1N 2HT, UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.				
Remark:	For electric local space heaters, the measured seasonal space heating energy efficiency η_s cannot be worse than the declared value at the nominal heat output of the unit.				



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
London
EC1N 2HT
www.argos-support.co.uk

