




Russell Hobbs

Turbo Cyclonic Plus Bagless Cylinder Vacuum Cleaner

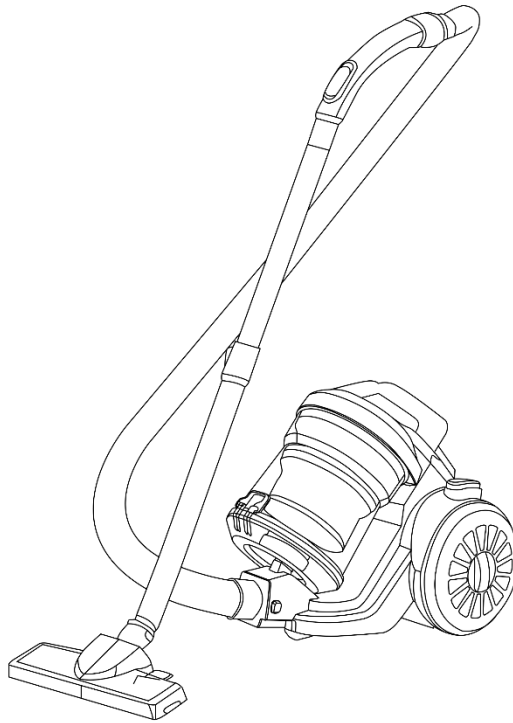

Model Number: RHCV2103

220-240V~, 50/60Hz, 800W

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**

**PLEASE RETAIN
FOR FUTURE REFERENCE**

CONTENTS

	Page(s)
Safety instructions	3-6
Energy performance label	7
Technical data	8
Vacuum feature diagram	9
Vacuum cleaner assembly	10-11
Using your vacuum cleaner	12-15
Cleaning and care	16-18
Problem solving	19
Guarantee and customer services	20
Spare parts	21
Connection to the mains supply	22
Disposal information	24

Thank you for purchasing your Russell Hobbs Turbo Cyclonic Plus Bagless Cylinder Vacuum Cleaner.

To get the best from your new cleaner, take a few moments to read these instructions and keep them in a safe place for future reference.

Should you require any further assistance, our friendly Product Care team will be happy to help.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

WARNING:

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product is intended for household use only. Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not operate this appliance for anything other than its intended use. This product is intended for household use only. Do not use outdoors.
- Do not immerse in water or other liquids for cleaning.

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

- Do not direct at people, animals, electrical outlets, or equipment containing electrical components.
- Unplug from outlet when not in use. Do not leave the cleaner unattended while plugged in.
- Do not use with damaged cord or plug.
- Do not use vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water.
- Keep the vacuum cleaner away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.
- Do not handle the vacuum cleaner with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer.

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

WARNING:

- Do not let the cord hang over the edge of the worktop, or touch hot surfaces.
- Do not use this vacuum to pick up water or any other liquids, combustible substances or hot/burning objects.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the cleaner. Be aware that loose clothing or hair may become trapped in the cleaner if improperly used.
- Before use, ensure that all of the air vents of the cleaner are clear and there is no restriction of air flow.
- When cleaning stairs, ensure the cleaner is on a step below you. NEVER place the cleaner above.
- Caution: Exhaust air discharged from the rear of the cleaner may extinguish a gas fire, pilot light, or disturb ashes in an open fire. Always avoid directing the cleaner toward naked flames.
- Do not run the vacuum cleaner over any cables, or its own power cable. As this will result in damaging the cable.

SAFETY INSTRUCTIONS


IMPORTANT SAFETY INSTRUCTIONS **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

- **Important:** This cleaner has a thermal safety device which automatically cuts off the power supply in case of over heating. If the safety device has switched the cleaner off, unplug from the mains, allow the cleaner to cool down and check for any blockages. Once the cleaner has cooled it can be plugged back in to the mains and used as normal.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**

ENERGY PERFORMANCE LABEL

The purpose of the energy label is to help you understand a vacuum cleaner's energy efficiency performance.

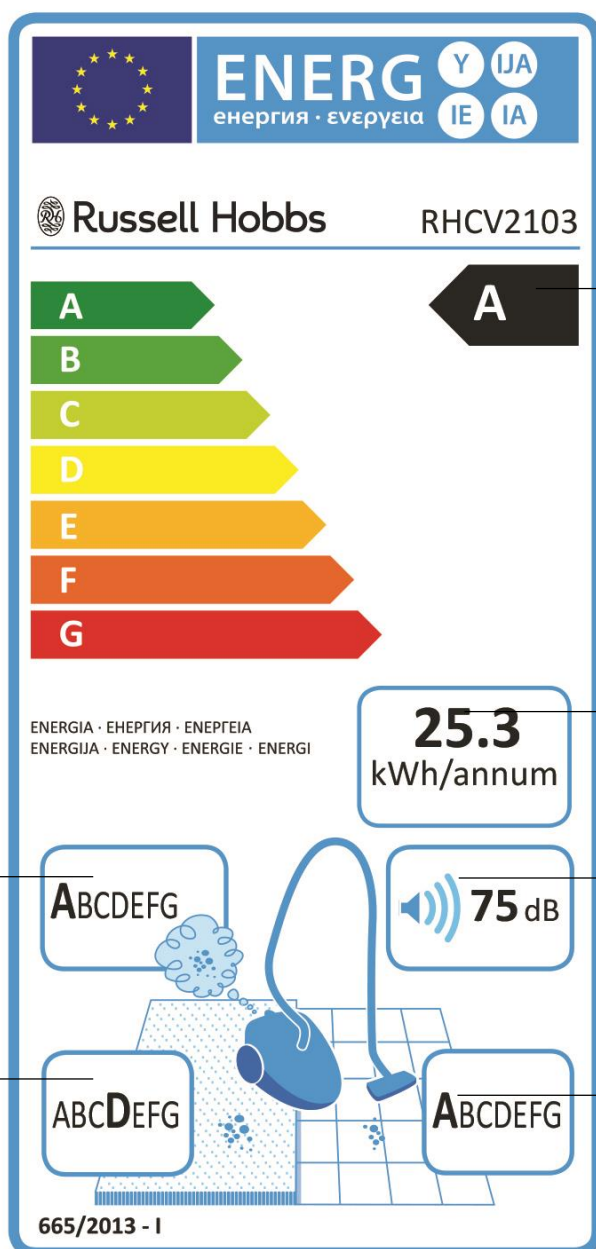

1. Energy rating – based primarily on energy consumption and pick-up.

2. Annual energy usage – the amount of energy used over a year.

3. Emissions – the amount of dust in the air emitted from the machine's exhaust.

4. Noise – the noise level produced by the machine, measured in decibels.


5. Pick up (carpets) – the rating of how much dust the machine picks up from carpets.

6. Pick-up (hard floors/crevices) – the rating of how much dust the machine picks up from hard floors and crevices.

TECHNICAL DATA (PRODUCT FISCHE)

Trade mark	Russell Hobbs
Model	RHCV2103
Energy efficiency class	A
Annual energy consumption (kWh/year)	25.3
Carpet cleaning performance class	D
Hard floor cleaning performance class	A
Dust re-emission class	A
Sound power level	75db
Rated input power	800

VACUUM FEATURE DIAGRAM

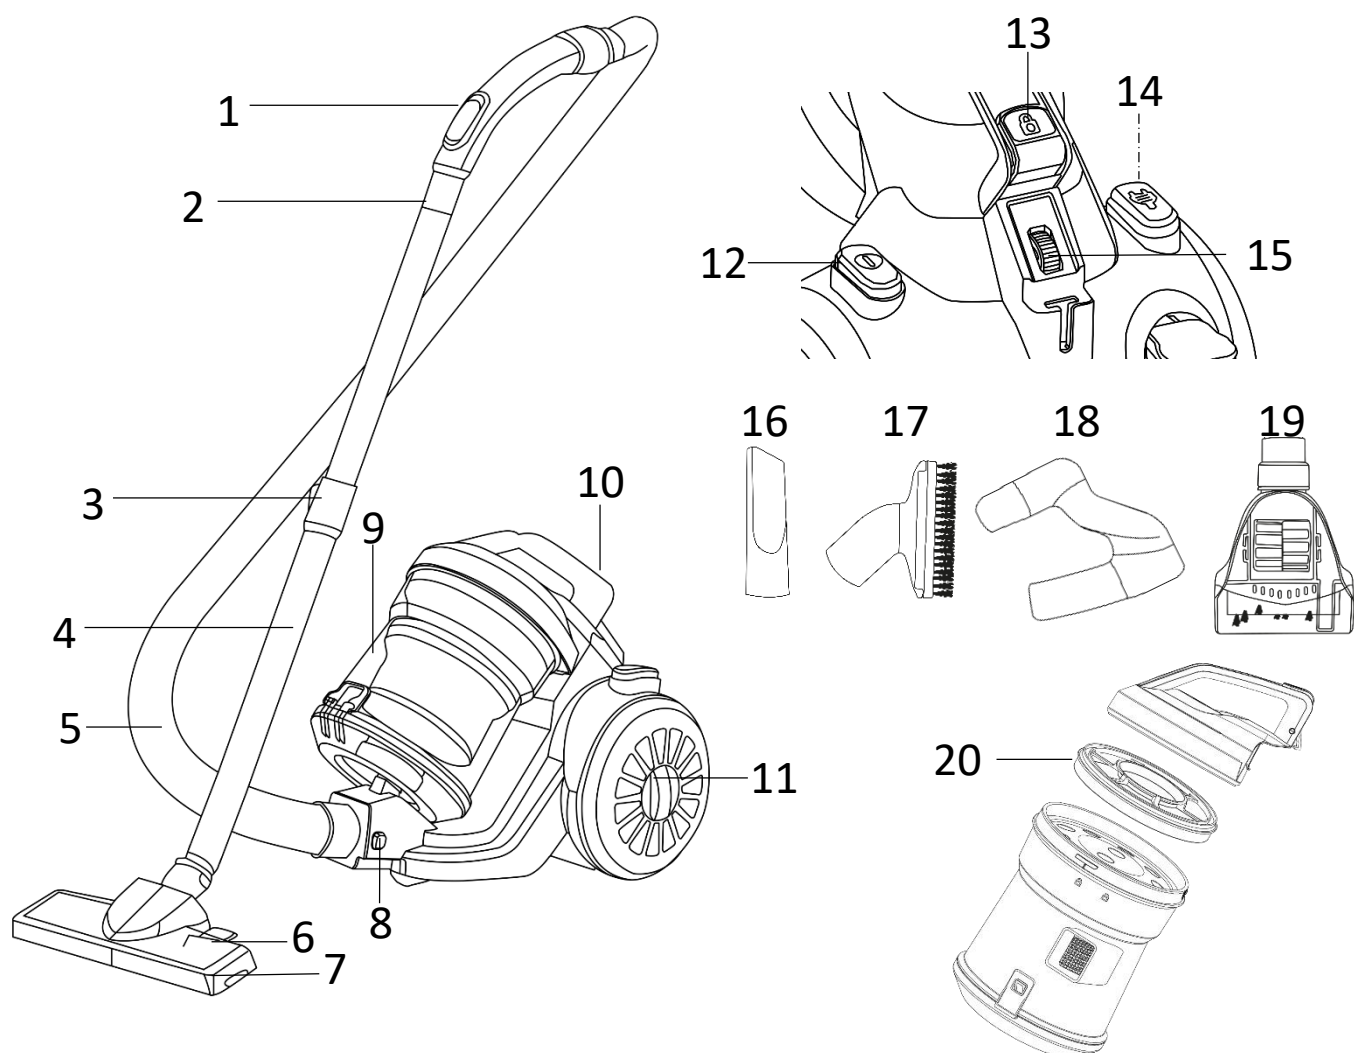

1	Hose suction control	7	Floor head	14	Cord rewind button
2	Hose connector	8	Hose release button(s)	15	Variable power dial
3	Extension lock	9	Dust container	16	Crevice Tool
4	Extension tube	10	Carry handle	17	Brush Tool
5	Hose	11	HEPA Filter Cover	18	On Board Tool Holder
6	Floor surface selector	12	Power button	19	Turbo Brush
		13	Container release	20	Internal Filter

For Customer Services & Spare Parts please call **0345 209 7461**
 Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
 Or visit us at www.productcare.co.uk

VACUUM CLEANER ASSEMBLY

Before using your vacuum cleaner

Remove all packaging and lay out the separate components.

Check the unit after unpacking for any visual damage such as:

- Misaligned or damaged parts
- Damage to the main body and separate components
- Damage to the plug or cable.





If you can see any damage do not use the vacuum cleaner and contact customer services.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**

VACUUM CLEANER ASSEMBLY

Ensure the unit is unplugged before assembling.

- 1.** Push the dust container onto the vacuum cleaner unit base until it 'clicks' into place.
- 2.** Insert the ribbed end of the hose into the hose inlet. Push in until it 'clicks' to secure.
- 3.** Insert the opposite end of the hose into the extension tube and push together.
- 4.** Insert the other end of the extension tube into the floor head and rotate if necessary.

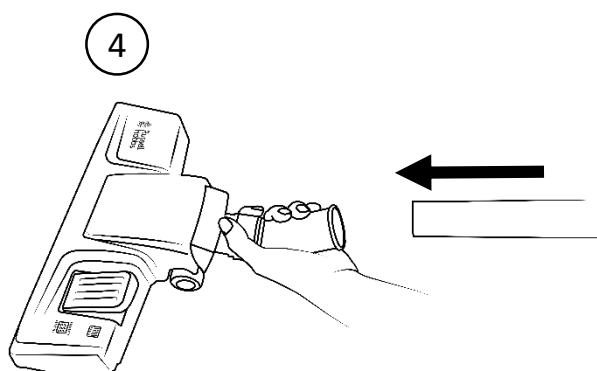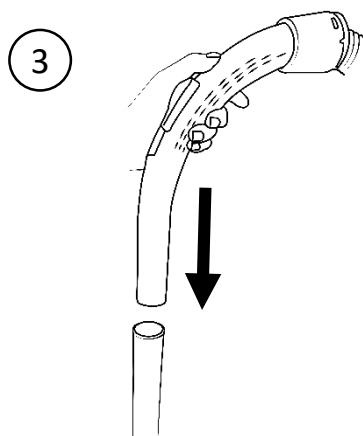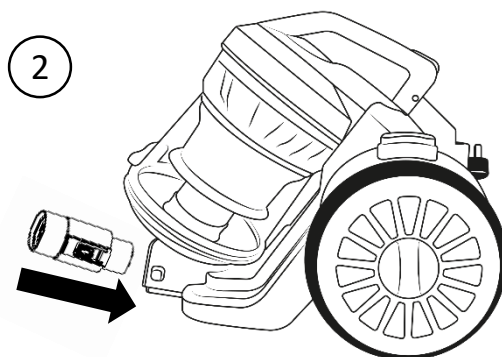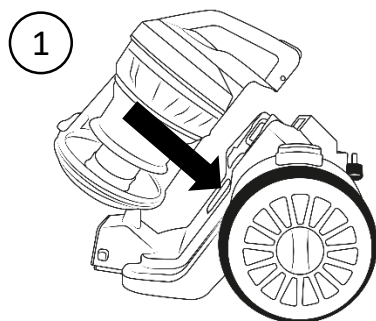


USING YOUR VACUUM CLEANER

Once assembled:

1. The cord is stored inside the unit. Pull the power cord out of the machine to as long as you require and stop when you see the yellow tab. Do not over-extend. If the red tab is visible, then wind the cord back until only the yellow tab is visible.
2. Plug the cable into a wall socket and press the switch on.
3. Press the power button to start vacuuming.
4. Move the vacuum cleaner floor head in a forwards and backwards motion over the areas you would like to clean.

Note: Large items can get trapped in the brush/floor head which could cause the unit to overheat. Make sure you pick up larger items that could get trapped before vacuuming.

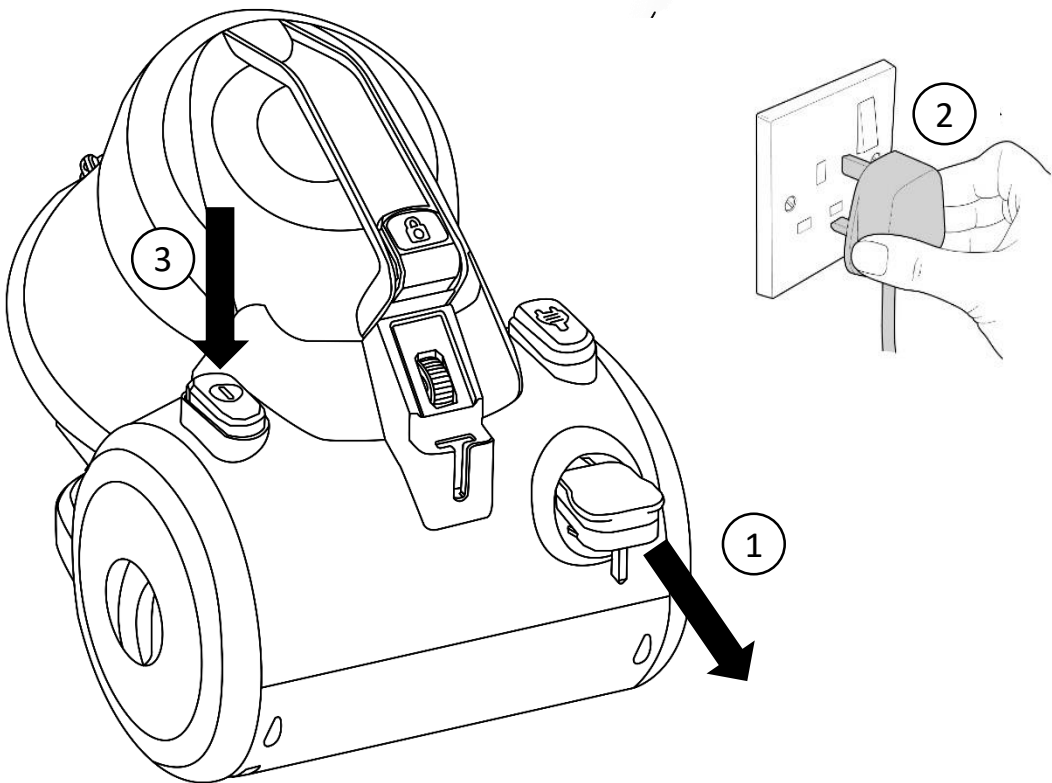


USING YOUR VACUUM CLEANER


5. You can adjust the extension tube length to a comfortable cleaning height. To alter the length of the telescopic handle,

a) Push and hold the extension lock in the direction indicated.


b) Slide the tube, up or down, to the correct length.

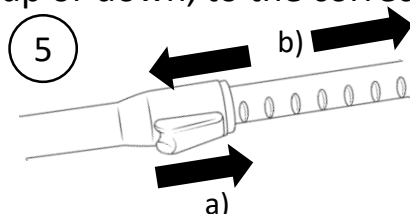


6. The suction of the vacuum cleaner can be adjusted by rotating the power dial on the back of the unit. You may want to use reduced power when cleaning furniture, upholstery or long pile rugs.

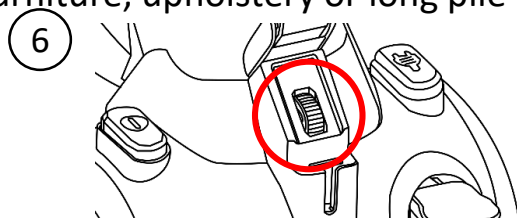

7. You can also adjust the suction using the tab on the hose handle. To use less suction power, move the suction control tab to the open position in the direction indicated. For maximum suction power, close the tab.

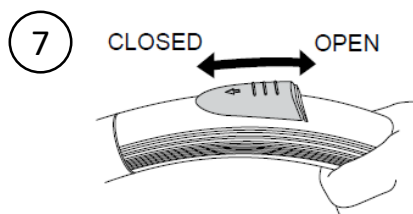

8. When using the floor head you can adapt the brush depending on floor type. Please refer to the diagram below:

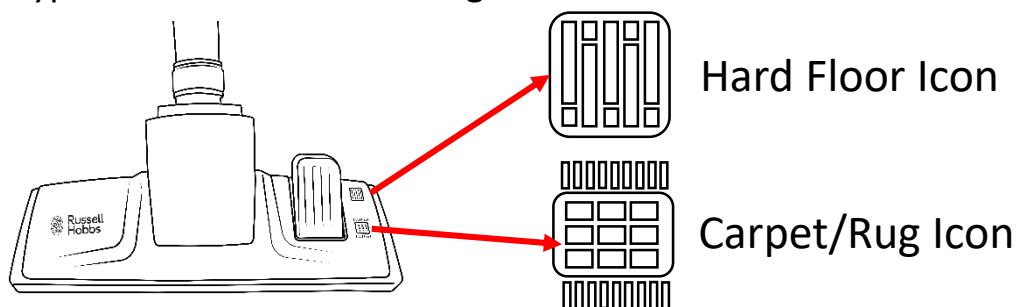

USING YOUR VACUUM CLEANER

Tool Selection


This vacuum cleaner is supplied with different tools designed for different cleaning tasks:

Crevice and Brush Tools:

Both attach to either the extension tube or the hose in the same manner as the floor head.

- The crevice tool is designed for narrow gaps and hard to reach places
- The brush tool can be used on delicate surfaces or for dusting.

Both the crevice and brush tools can be attached to the handle of the vacuum cleaner, as shown in the diagram below:

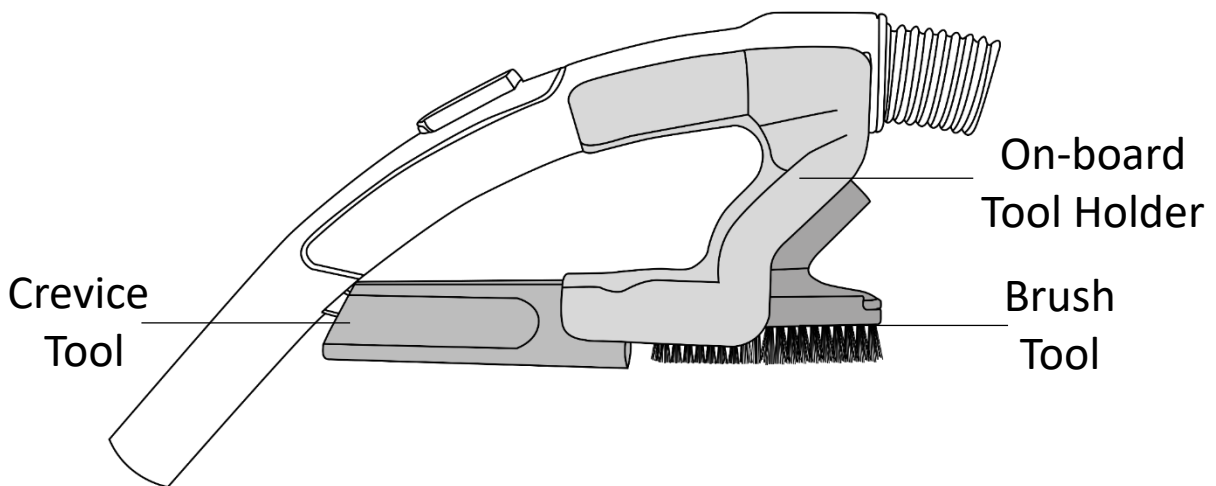

Turbo Brush Tool:

The turbo brush has an air driven rotating brush bar and is perfect for use on stairs, carpets and upholstery – particularly for the retrieval of pet hair.

It can be attached to either the extension tube or the hose in the same manner as the floor head. The turbo brush cannot be stored on the vacuum cleaner unit, so keep it safe when not in use.

USING YOUR VACUUM CLEANER

Emptying the dust container


When the dust container starts to fill it will need to be emptied.

1. To remove the dust container, press the release button located at the top of the lid handle.
2. Lift the container away from the unit base.
3. Locate the bin release clip on the cover at the back of the container.
4. Over a bin, pull the bin release clip to open the base of the container. You may need to tap the sides to empty all of the dirt. Close the base to secure.

Important:

You may wish to empty the dust container outdoors as emptying may create a dust cloud.

Place the dust container onto the unit, base first, then tilt forward to engage the top.

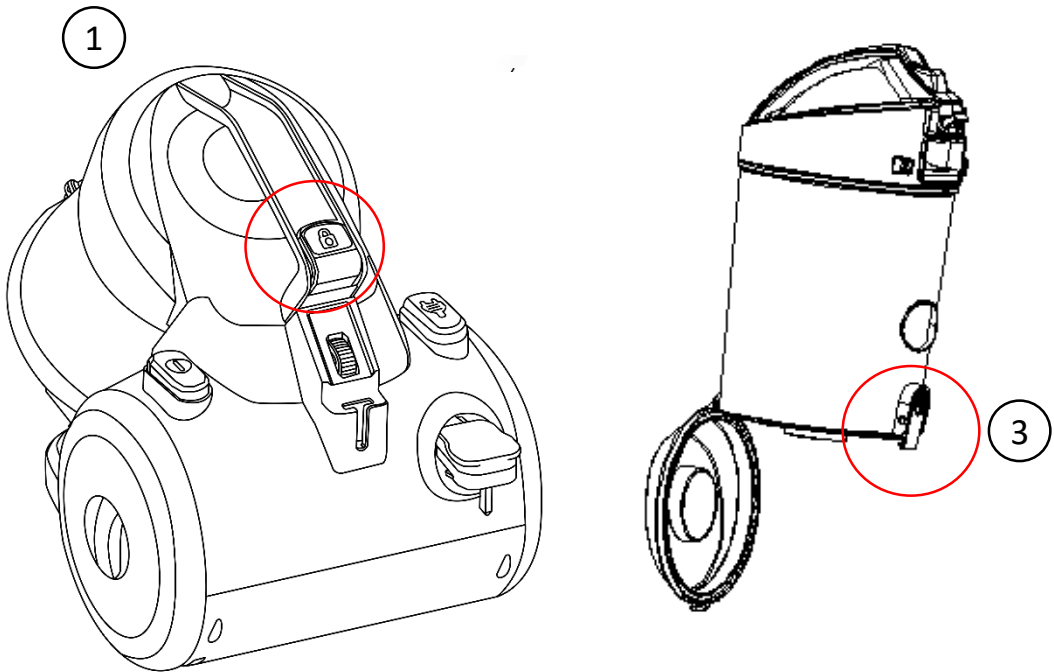

CLEANING AND CARE:


CLEANING THE EXHAUST FILTER

Before you clean the appliance, disconnect the mains plug from the wall socket.

Remove the filter cover on the wheel by rotating in a clockwise direction.

Rotate the filter in a clockwise direction, pull out and tap over a bin to remove any excess dust. Wash in warm water and allow to dry for 24 hours.


Once dried, put the filter back in place and refit the filter cover on the wheel by rotating in a clockwise direction.

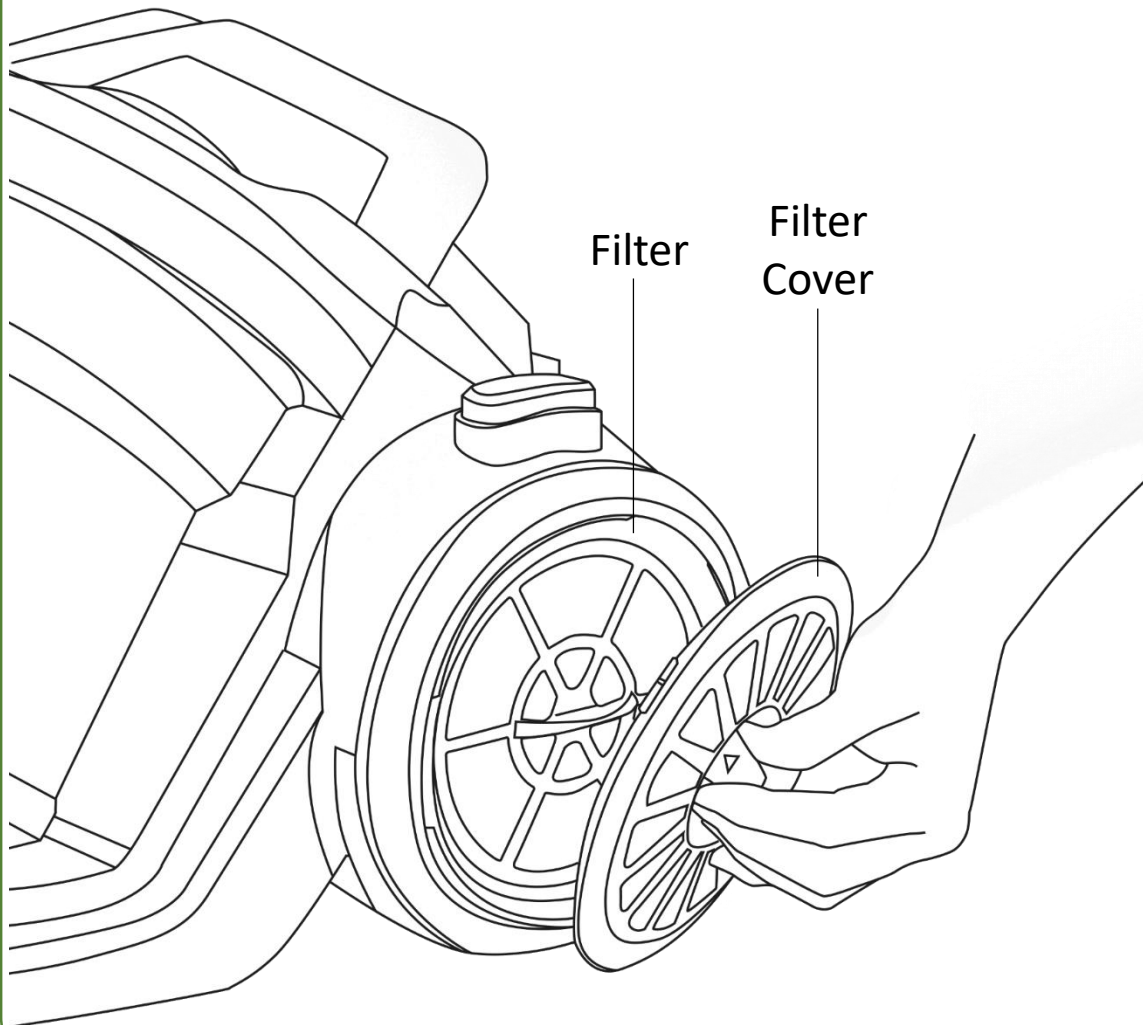

CLEANING AND CARE:


CLEANING THE INTERNAL FILTERS

1. Remove the dust container and rotate the lid anti clockwise so that the arrow is pointing to the unlock symbol.
2. Remove the dust container filter and get rid of excess dirt over a bin.
3. Wash in warm water. Allow to dry for 24 hours before reinserting.

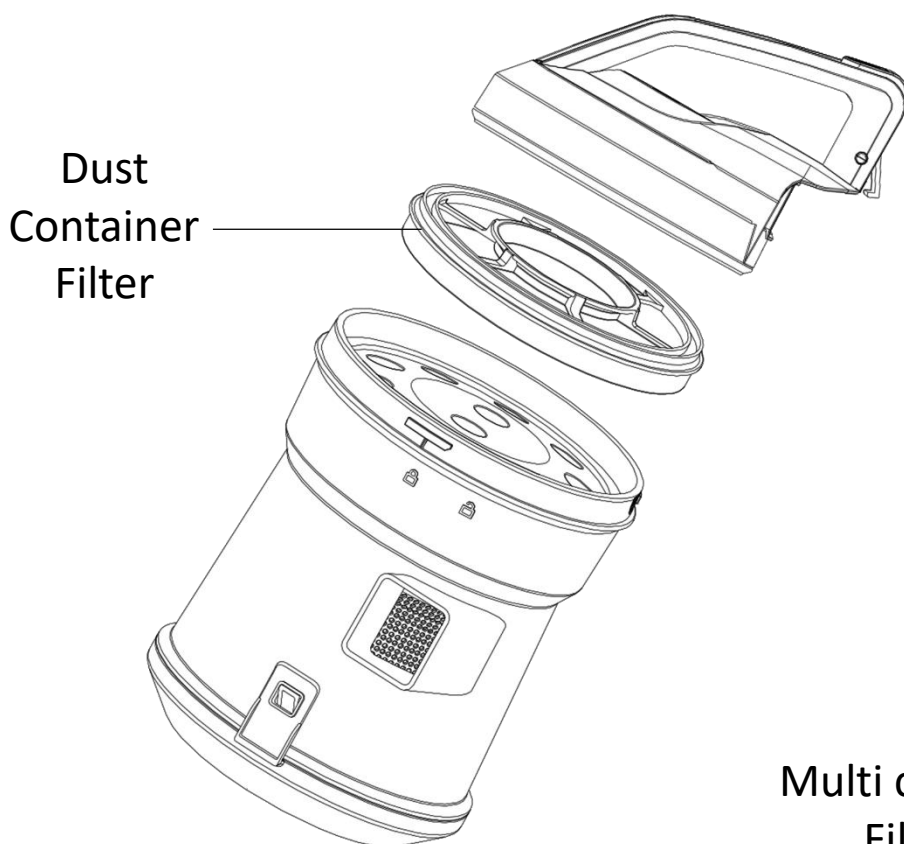


4. Once the dust container lid and filter are removed, lift out the multi cyclonic filter from the container.

Shake the multi cyclonic filter over a bin to remove any dust and then replace into the dust container.

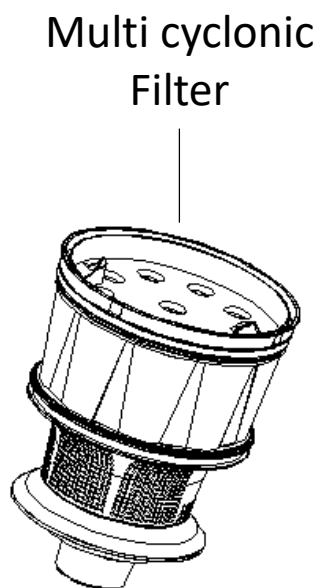



CLEANING AND CARE

Before you clean the appliance, disconnect the mains plug from the wall socket.

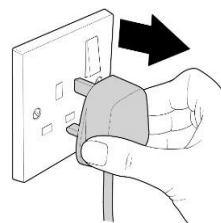

Disassembly

1. Press the cord rewind button to automatically bring the cord back inside the unit for storage.
2. To remove the extension tube, pull it away from the hose.
3. To remove the floor head/accessory, pull the extension tube/hose away from the head/accessory – you may need to ease it off.
4. To remove the hose from the vacuum cleaner unit, press both of the release buttons and pull the hose away from the unit.

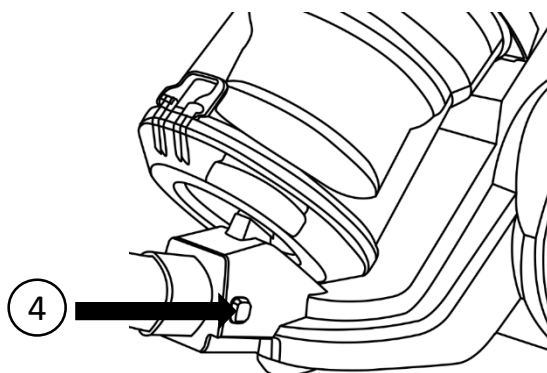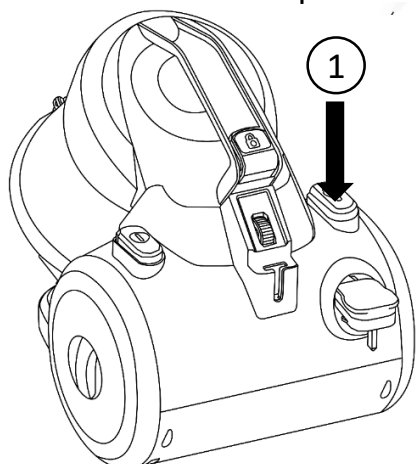

To clean the exterior of the device, use a damp, soft cloth and mild detergent.

NEVER IMMERSE THE VACUUM IN WATER.

Wash non-electrical removable accessories in warm soapy water and allow to dry thoroughly before next use.

If the vacuum is damaged, contact the customer service helpline using the details at the bottom of this page.

Storage

Store in a clean and dry environment.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**

PROBLEM SOLVING

<u>PROBLEM</u>	<u>POSSIBLE PROBLEM</u>	<u>POSSIBLE SOLUTION</u>
<i>The vacuum cleaner is plugged in but does not work</i>	Power cord/plug damage	Check the power cord and plug for signs of damage.
	Fuse is damaged	Check and replace the fuse in the plug.
<i>The suction is decreasing and the vacuum is not picking up dirt</i>	Dust container	Check if the dust container is full, if so, empty it.
	Filters are dirty	Clean the filters.
	Hose/head blockages	Check that there are no blockages in the hose or cleaning head.
<i>Vacuum cleaner is over heating</i>	Filters are dirty	Check that the filters are not blocked, if so, clean them following the instructions in this booklet.
<i>Automatic power cord rewind does not fully rewind the power cord</i>		Pull the power cord fully out and press the rewind button again.
<i>Dust is coming out of the vacuum cleaner</i>	Dust container fitting	The dust container has not been fitted correctly. Refit the container following the instructions in this booklet.
<i>The air coming out of the vacuum cleaner smells</i>	Filters are dirty	Clean the filters. Also clean the hose and dust container
	Filters are not dry	Ensure the filters have been left to dry for 24 hours before refitting back into the vacuum cleaner and using.

We're here should you need us.

For Customer Services & Spare Parts please call 0345 209 7461
 Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
 Or visit us at www.productcare.co.uk

GUARANTEE AND CUSTOMER SERVICES

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Product Care Team, on 0345 209 7461

**Monday – Friday: 8am-8pm & Saturday: 9am – 1pm,
who will be more than happy to assist you.**

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**

SPARE PARTS

To check the availability of the following spare parts, simply contact our friendly Customer Services team using the details provided at the bottom of this page.

Internal Filter

Wheel Exhaust Filter

Hose

Floor Head

Extension Tube

Crevice Tool

Dusting Brush

On Board Tool Holder

Turbo Brush

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**


CONNECTION TO THE MAINS SUPPLY

This appliance is designed to operate from a mains supply of
220-240V~ 50/60Hz.

Check that the voltage marked on the product corresponds
with your supply voltage.

How to change the fuse

1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
3. Replace the fuse and replace fuse holder, pushing down until locked into place.

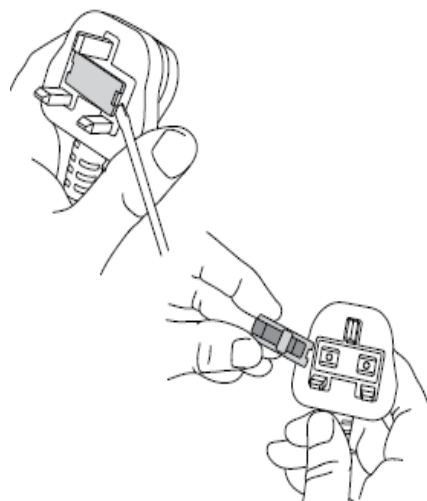

Important: Only ever use 13 amp fuses.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm
Or visit us at **www.productcare.co.uk**

NOTES



Russell Hobbs

For Customer Services & Spare
Parts please call

0345 209 7461

Opening times: Monday - Friday
8am – 8pm & Saturday 9am – 1pm

Or visit us at

www.productcare.co.uk

Revision 1.1

Model: **RHCV2103**

Produced for

G2S Ltd, Wigan, WN2 4AY



This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.