

# Beldray<sup>®</sup> Est 1872

Nobody Does It Better

## Premium 8 Litre Air Cooler Instruction Manual



THE **SCIENCE**  
BEHIND COOL



[www.beldray.com](http://www.beldray.com)



Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not cover the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

**Warning:** If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

### Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

### In the Box

8 Litre Air Cooler

2 ice packs

Instruction manual

### Features

3 speed settings

3 functions: purifier, humidifier and oscillation

60 W power

Water curtain system

8 litre water tank

2 ice packs

## Description of Parts



## Instructions for Use

### Assembling the 8 Litre Air Cooler

**STEP 1:** Ensure that the 8 Litre Air Cooler is switched off and unplugged from the mains power supply.

**STEP 2:** Open the water tank at the back of the 8 Litre Air Cooler by carefully pulling it out.

**STEP 3:** Check that the water stopper is securely plugged into the bottom of the water tank.

**STEP 4:** Using a suitable measuring vessel, fill the water tank with cold, clean water. The water level should be no lower than the Min. fill line and no higher than the Max. fill line.

**STEP 5:** The two ice packs can be used to achieve quicker, additional cooling; they should be  $\frac{2}{3}$  full of water and left to freeze for approximately 8 hours before use. Place them into the front compartment of the water tank before it has been filled with water.

**STEP 6:** To close the water tank, simply push it back into position.

**Caution:** Do not fill the 8 Litre Air Cooler with any liquid other than cold, clean water. Do not use any additives in the water.

### Using the 8 Litre Air Cooler

**STEP 1:** Plug in and switch on the 8 Litre Air Cooler at the mains power supply.

**STEP 2:** To turn on the 8 Litre Air Cooler and activate the 'Purifier' function, select the desired cooling speed by pressing any one of the cooling speed buttons numbered 1–3, 3 being the strongest cooling speed.

**STEP 3:** Activate the 'Oscillation' function by pushing the oscillation button; the vertical grills of the 8 Litre Air Cooler will begin to turn left and right. To stop the vertical grills from turning, press the oscillation button once more.

**STEP 4:** To regulate the airflow up or down, manually adjust the two levers on the right hand side of the horizontal grill.

**STEP 5:** Cool and humidify air by pressing the humidification button. The 8 Litre Air Cooler will begin to pump and draw water to the evaporation pad. To stop the function, press the humidification button once more.

**STEP 6:** Turn off the 8 Litre Air Cooler by pressing the '0' button.

**Note:** The 8 Litre Air Cooler is not designed to significantly reduce the room temperature but will however provide a cool breeze.

When positioning the 8 Litre Air Cooler, do not lift it by the front panel; move it using the handles and the 360 ° castor wheels.

**Warning:** Do not use the 'Humidifier' function when the water tank is empty or it is filled below the Min. fill line.

## Care and Maintenance

Always unplug the 8 Litre Air Cooler from the mains power supply before attempting any cleaning or user maintenance.

The water tank must be drained of any water after each use. To do so, carefully pull the water tank out from the 8 Litre Air Cooler, then holding a suitable vessel underneath to catch the water, remove the drain plug. Once the water tank has been drained, wipe away any excess water with a soft cloth.

To clean the mesh and water tank filters, pull them up and away from the water tank at the back of the 8 Litre Air Cooler, then wash them in warm water with a mild detergent and a soft brush. Take care not to pierce the mesh and water tank filters.

The evaporation pad can also be cleaned. To do so, push down the release latch above the evaporation pad and then pull it up and out of the water tank. Rinse it in clean water and allow to dry thoroughly.

Before replacing the evaporation pad and mesh filter, check the drain hole for any debris or blockages and remove if necessary.

Wipe the 8 Litre Air Cooler with a soft, damp cloth and dry thoroughly.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the 8 Litre Humidifier, as this may cause damage.

**Note:** Ensure that the 8 Litre Air Cooler and all of its parts are cleaned regularly to reduce the risk of limescale and bacteria forming.

## Storage

Ensure that the water tank has been drained and that the 8 Litre Air Cooler and all of its parts are cool, clean and dry before storing.

Loosely wrap the cord around the 8 Litre Air Cooler; do not wrap it tightly as this could cause damage. Store the 8 Litre Air Cooler in a cool, dry place.

## Troubleshooting

Problem	Possible Cause	Solution
The 8 Litre Air Cooler will not power on.	The 8 Litre Air Cooler is not connected to the mains power supply. The fuse has blown.  The desired cooling speed has not been selected.	Plug in and switch on the 8 Litre Air Cooler at the mains power supply.  Replace the fuse with one of the same rating.  Press any one of the cooling speed buttons numbered 1–3, 3 being the strongest cooling speed.
No air is blowing from the 8 Litre Air Cooler.	The desired cooling speed has not been selected.	Press any one of the cooling speed buttons numbered 1–3, 3 being the strongest cooling speed.
The air blowing from the 8 Litre Air Cooler is not strong enough.	The cooling speed is set too low.  The mesh filter or evaporation pad is blocked.	Select a higher cooling speed by pressing the relevant cooling speed button.  Clean the mesh filter or evaporation pad following the instructions in the section entitled 'Care and Maintenance'.
The vertical grills are not turning left and right.	The 'Oscillation' function has not been selected.	Activate the 'Oscillation' function by pressing the oscillation button.
The vertical grills are not facing forward.	The 'Oscillation' function has been stopped when the vertical grills were mid-movement.	Press the oscillation button and let the vertical grills move until they are facing forwards, then push the oscillation button once more to stop the 'Oscillation' function.
The 8 Litre Air Cooler is not cooling the air.	The 'Humidifier' function has not been selected.  The water tank has not been filled with enough water.  The ice packs are not $\frac{2}{3}$ full with water.  Ambient humidity is high.	To activate the 'Humidifier' function, press the humidification button.  Fill the water tank to the Max. fill mark.  Fill the ice packs with water so that they are $\frac{2}{3}$ full and left to freeze for approximately 8 hours before use.  The 8 Litre Air Cooler will not be able to cool due to the high humidity in the air.

## Specification

Product code: EH1315  
 Input: 220–240 V ~ 50 Hz  
 Output: 60 W  
 Water tank capacity: 8 L



## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

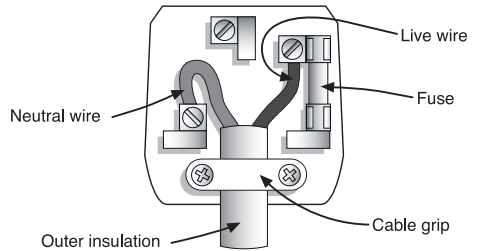

## UP Global Sourcing

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customersupport@beldray.co.uk](mailto:customersupport@beldray.co.uk)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Manufactured by:  
UP Global Sourcing,  
Victoria Street, Manchester OL9 0DD. UK  
+44 (0)333 577 9820  
customersupport@beldray.co.uk

© Beldray Trademark. All rights reserved.

Please retain all instructions for future reference.  
Made in China.  
CD121214/MD200916/V2