


BUSH *Classic*

Instruction manual

Stereo DAB/FM Radio with Bluetooth
WO268BT





You'll soon be enjoying your new Stereo DAB/FM Radio with Bluetooth.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



Help and Guidance

We're here to help you get the most from your Stereo DAB/FM Radio with Bluetooth. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH



Contents

1 Safety information

Safety information	8
--------------------	---

2 Getting to know your Stereo DAB/FM Radio with Bluetooth

Ready? Let's begin...	14
Power connection	16
Inserting batteries (optional)	16
Initial set-up	16
Adjusting the volume	17
Time and date	17
Change the mode	18
Using headphones	18
Connect to a Bluetooth device	18

3 Using your Stereo DAB/FM Radio with Bluetooth

DAB Radio mode	22
Telescopic aerial	22
Changing DAB stations	22
Scanning for DAB stations	22
Prune DAB stations	23
Storing a DAB station preset	23
Tune to a DAB preset station	24
DAB display information	24
Dynamic range control (DRC)	25
FM Radio mode	26
Tuning to an FM station	27
Changing the Scan setting	27

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Contents

Audio mode	27
Storing an FM station preset	28
Tune to an FM preset station	29
FM display information	29
Connect to a Bluetooth device	30
Listening to Music/Audio using Bluetooth	31
Setting the alarm	32
Stop the Alarm	33
Snooze	33
Turn off the Alarm	34
Sleep timer	34
Display backlight timeout	34
Display language	35
Software version	35
Factory reset	36
4 Other information	
Technical specification	40
5 Product support	
Troubleshooting	44
Help and assistance	46
Guarantee	48

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**.

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

 


This page is left intentionally blank



Safety information

1

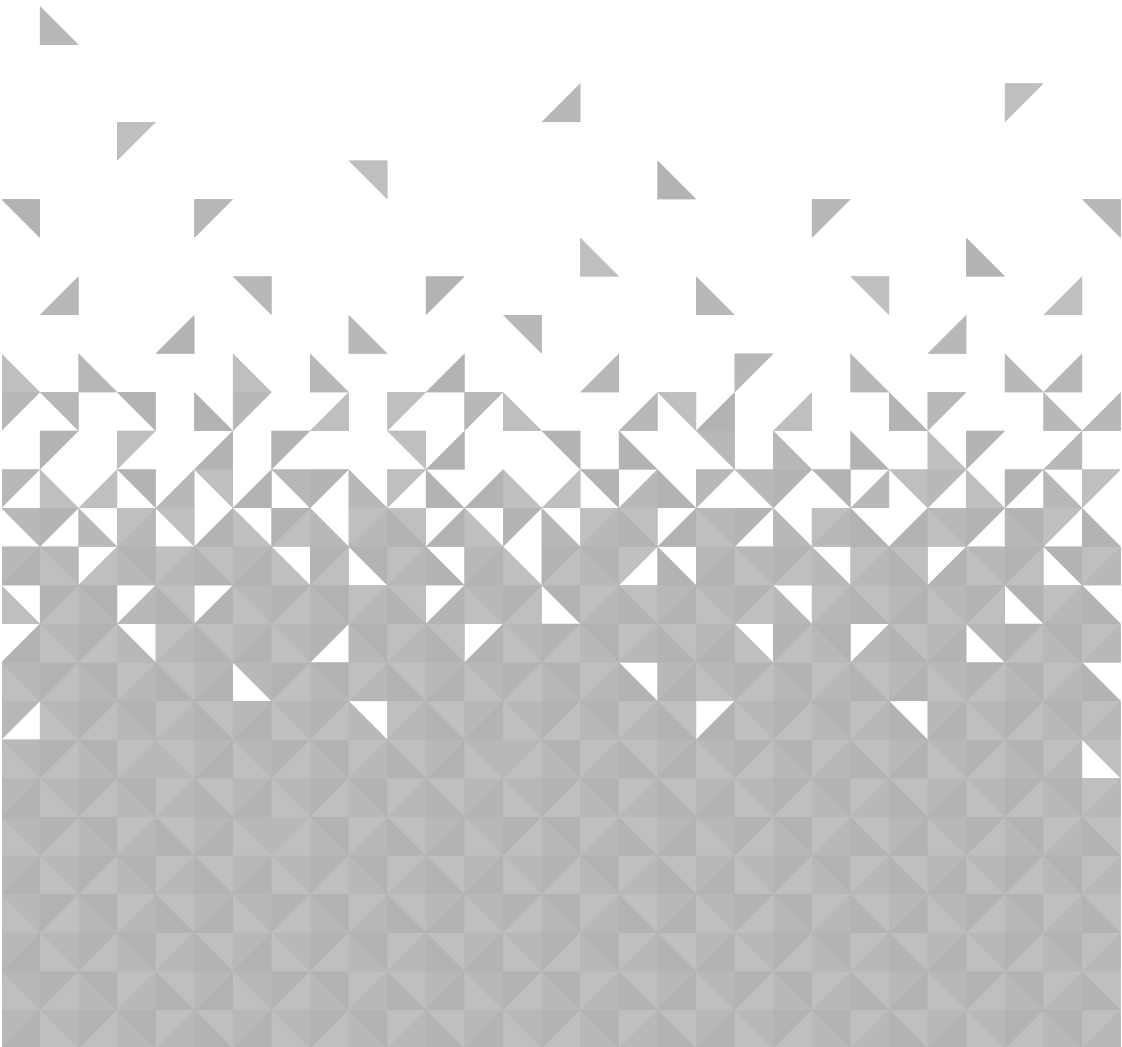



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Radio from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Radio, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and the mains power is unplugged.
- Only use recommended batteries or those of the same or equivalent type. Do not mix old and new batteries or batteries of different types.
- Batteries are to be inserted with the correct polarity. The supply terminals are not to be short-circuited.
- Remove the batteries from the Radio if they will not be used for an extended period of time.
- Never throw batteries in a fire or attempt to open the outer casing. Do not expose batteries to excessive heat, such as sunshine.
- Batteries are harmful if swallowed, so keep away from young children.
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

Positioning the Stereo DAB/FM Radio with Bluetooth

It is important that you consider carefully in advance where your Radio will be situated and make sure that it is:

- on a flat and stable surface.
- within 1.4 metres of a power socket (if using mains power). Please ensure that the mains power lead is not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- where there is enough height for the telescopic radio aerial.
- Never place your Radio directly onto antique or polished surfaces.



Caution

To avoid possible hearing damage, do not listen to this radio at high volume levels for long periods of time. Always keep the volume within reasonable limits.

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021



Safety information

Important - Please read these instructions fully before installing or operating

- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Radio near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

 


This page is left intentionally blank



Getting to know your Stereo DAB/FM Radio with Bluetooth

2

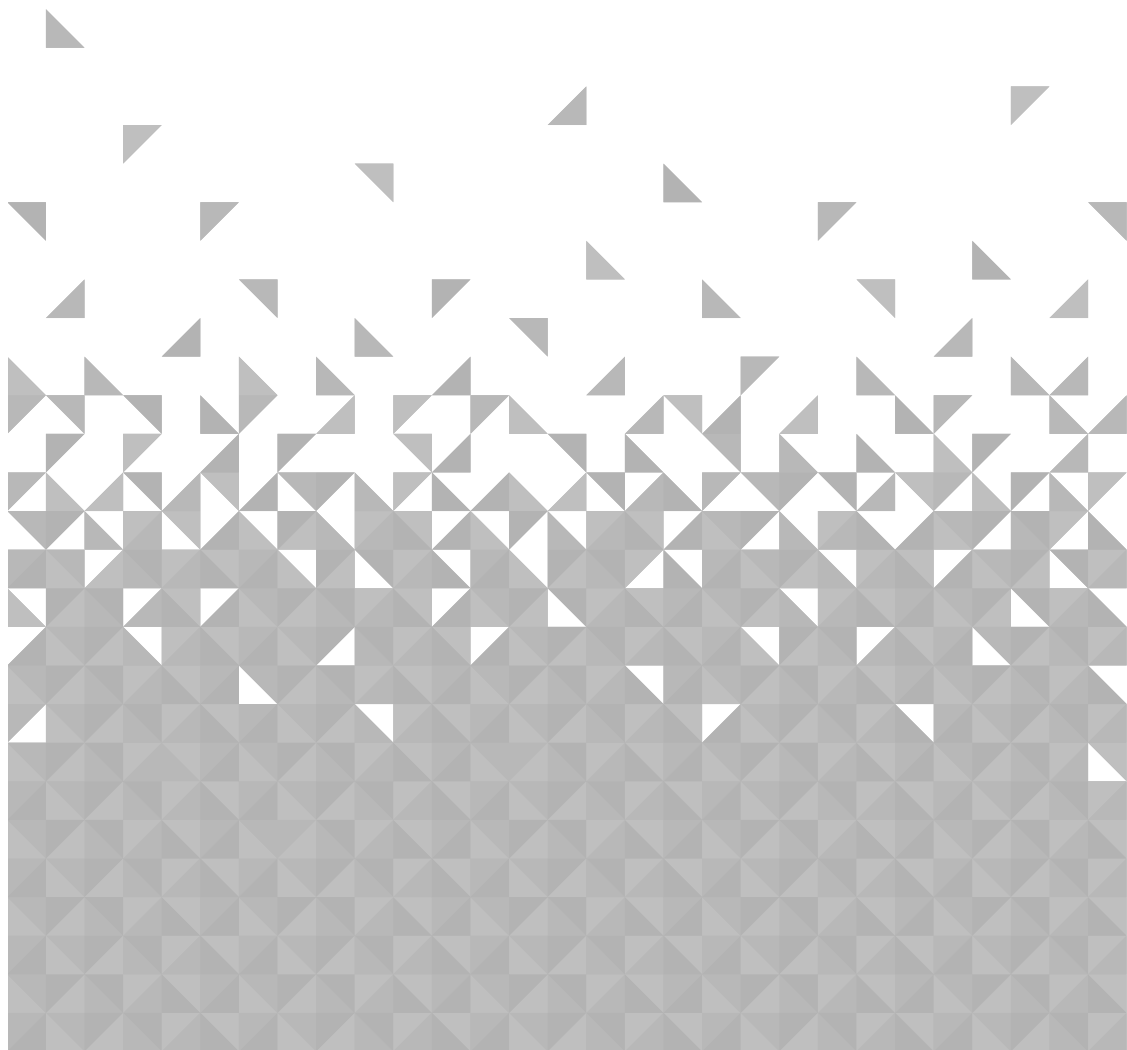



Getting to know your Stereo DAB/FM Radio with Bluetooth

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo DAB/FM Radio with Bluetooth

You'll be up and running in no time

Fig 1.

 
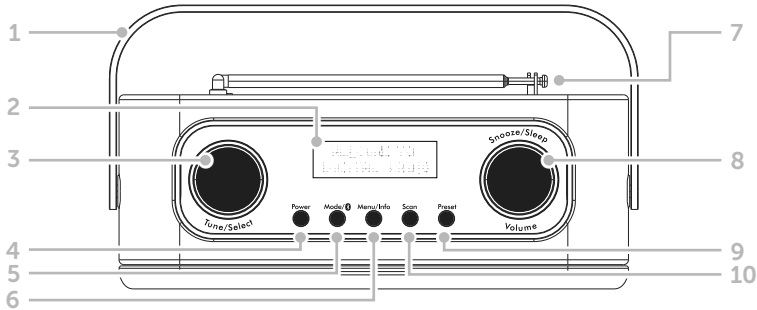 


Fig 2.

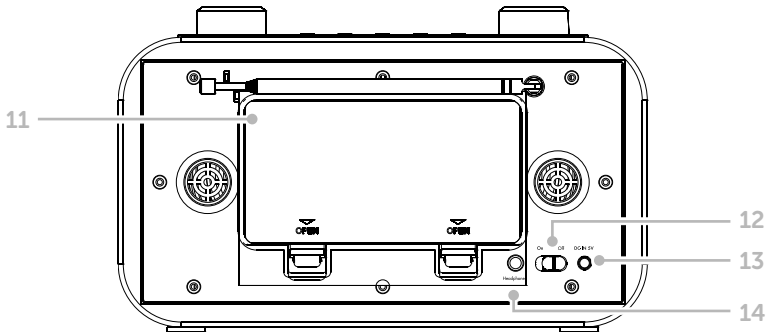

- | | |
|---------------------------------------|-----------------------------------|
| 1. Handle | 9. Preset |
| 2. Backlit display | 10. Scan |
| 3. Tune/Select rotary control | 11. Battery compartment. |
| 4. Power on/Standby | 4 x 1.5V C-size (LR-14) batteries |
| 5. Mode (DAB/FM/Bluetooth) | (not supplied) |
| 6. Menu/Info | 12. On/Off switch |
| 7. Telescopic aerial | 13. Power socket |
| 8. Rotary volume control/Snooze/Sleep | 14. Headphone socket |

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Stereo DAB/FM Radio with Bluetooth

You'll be up and running in no time

Power connection

1. Connect the mains power lead into the socket on the back of the Radio and fully extend the telescopic aerial in a vertical position to obtain the maximum signal strength.
2. Plug the power adaptor into the mains power wall socket and switch on.
3. Slide the switch on the back of the radio to On. The product display will light up and Welcome to Digital Radio will be displayed.
4. Your radio will now be in Standby mode.

Inserting batteries (optional)

1. Before installing the batteries (not included) please ensure that the Radio is switched off, slide the power switch on the back to Off, and unplug from the mains power supply. Remember to remove the mains power plug from the back of the radio.
2. On the back of the Radio, push down the two tabs to release and remove the battery compartment cover.
3. Insert 4 x 1.5V C-size (also known as LR-14) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around.
4. Replace the battery cover, making sure it 'clicks' shut.

Note: If used continuously on battery power, your radio has an approximate battery life of 5 hours, when using good quality alkaline batteries. When the battery power is low, 'Battery Low' will be displayed. Please switch off the radio and replace the batteries.

Initial set-up

1. Press and release the Power button on the top of your radio. Your radio will switch on and begin an automatic scan for DAB stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.
2. When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo DAB/FM Radio with Bluetooth

You'll be up and running in no time

Note: The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place. It is possible to scan manually for stations by pressing and releasing the Scan button.

3. Turn the rotary Tune control to scroll through the available stations in the station list.
4. When the station that you would like to listen is displayed, press to Select.. There will be a short delay whilst your radio tunes to your selected station.

Adjusting the volume

Turn the rotary volume control clockwise to increase the volume and anti-clockwise to decrease the volume.

Check the display, which will confirm the volume setting.

Time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, turn on the radio and follow the steps below:

1. Press and hold the Menu/Info button to enter the Menu options..
2. Use the Tune control to scroll to <System>. Press and release the Tune/Select control to select.
3. Use the Tune control to scroll to <Time>. Press and release the Tune/Select control to select. <Set Time/Date> is displayed. Press and release the Tune/Select control to select.
4. Set time is displayed and the hour digits will flash. Use the Tune control to scroll to the correct hour. Press and release the Tune/Select control to select.
5. The minutes will now flash. Use the Tune control to scroll to the correct minutes. Press and release the Tune/Select control to select.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Getting to know your Stereo DAB/FM Radio with Bluetooth

You'll be up and running in no time

6. Set date is displayed and the day will flash. Use the Tune control to scroll and press to select the day, month and year, using the same method as you used to set the time.

When you confirm the correct date. 'Time Saved' is displayed and the display returns to <Set Time/Date>.

You can now use the Tune control to scroll and press to select, the same method as you did to set the time and date, to change the settings for:

12/24 hour clock display. The date format, DD-MM-YYYY or MM-DD-YYYY and to auto update the time from the DAB signal, FM signal, DAB or FM signal or no update.

Change the mode

Press and release the Mode button to change between DAB, FM and Bluetooth modes. Please check the display, which will confirm the mode.

Using headphones

You can connect headphones with a 3.5mm plug (not included) to your radio. The stereo headphone socket can be found on the back of the radio at the bottom. When you have headphones connected the radio speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.

Connect to a Bluetooth device

Check that your Radio is in Bluetooth (BT) mode. If you are not already in BT mode, press and release the Mode button until you are in BT mode (check the display). 'Bluetooth' will be displayed and 'Searching', whilst your product searches for Bluetooth devices. If a device is already connected (paired) with your radio, 'Connected' will be displayed on the second line of the display.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo DAB/FM Radio with Bluetooth

You'll be up and running in no time

In Bluetooth (BT) Mode:

1. 'Searching' will be displayed on the second line of the display.
2. On the device that you would like to connect to your radio via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your radio will be displayed as 'BUSH Audio'. Select the device name to begin pairing.
5. When pairing is complete 'Connected' will be displayed on the second line of the display.
6. Now that you have paired your device with the radio, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the radio unless you decide to disconnect or 'unpair' it.

Note: If your device should be come unpaired for any reason, follow the steps above to 'pair' it again. You can press and hold the Scan button on the Radio to disconnect the current device and restart the Bluetooth pairing process.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

 


This page is left intentionally blank



Using your Stereo DAB/FM Radio with Bluetooth

3

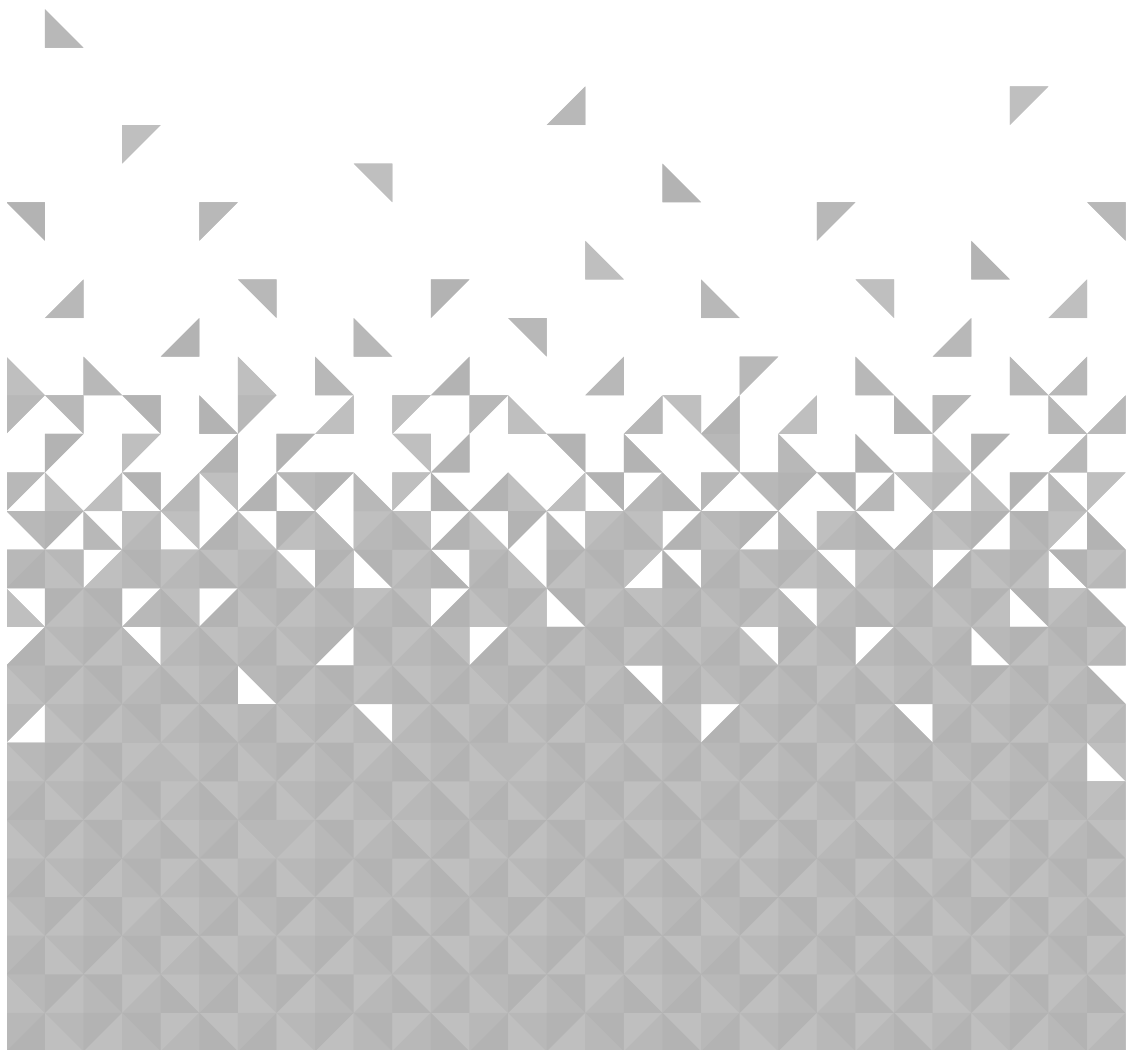

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

DAB Radio mode

Check that your radio is in DAB mode. If you are not already in DAB mode, press and release the Mode button to go to DAB mode (check the display).

The first time you use the radio or if the station list is empty, your radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

If you were listening to a DAB station when you switched the radio off then this station will be automatically selected when you switch the radio back on.

Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to a DAB station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

Changing DAB stations

In DAB mode:

1. If you are not already in DAB mode, press and release the Mode button to go to DAB mode.
2. Turn the left hand Tune/Select rotary control to scroll through the available stations in the station list. When the station that you would like to listen to is displayed press the left hand rotary control to Select. There will be a short delay whilst your DAB radio tunes to your selected station.

Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your radio. If you have moved your radio to another location e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

If you are not already in DAB mode, press and release the Mode button to go to DAB mode.

1. Press and release the Scan button to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

1. Press and hold the Menu/Info button until the display changes to 'DAB <Full Scan>' and use the Tune/Select rotary control to scroll to 'Prune'. Press the Tune/Select rotary control to select.
2. 'Prune ? <No> Yes' is displayed. Use Tune/Select rotary control to scroll to 'Yes'. Press the rotary control to select and prune the station list. Stations with a '?' prefix will now no longer be displayed. Press and release the Menu/Info button to return to the station display.

Storing a DAB station preset

Your radio can store up to 10 DAB stations in its preset memories for instant access to your favourite stations.

Note: When you store DAB radio station presets, these do not overwrite your FM station presets.

1. Tune your radio to the station that you wish to preset (see changing DAB stations on page 22).
2. Press and hold the Preset button. 'Preset Store <1: (Empty) >' is displayed if no previous station has been stored.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

3. Use the Tune/Select rotary control to scroll to the Preset location that you would like to store the radio station to (1-10).
4. Press the Tune/Select rotary control to select, the display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

Note: If there is already an existing DAB station stored under a preset, it will be overwritten when you store the new station.

Tune to a DAB preset station

In DAB mode:

1. Press and release the Preset button. 'Preset Recall <1: >' is displayed and the name or frequency of the station stored there, or '(Empty)' if no previous station has been stored.
2. Use the Tune/Select rotary control to scroll to the Preset location and station that you would like to listen to (1-10). Press and release the Tune/Select rotary control to Select. The radio will instantly tune to that station and begin to play.

Note: If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

DAB display information

When listening to a DAB station you can change the information that will appear on the second line of the display. There are several different types of information that are sent by the broadcaster.

- Dynamic Label Segment (DLS)

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

- Signal Strength

An empty will appear on the second line of the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.

- Program Type (PTY) - such as 'Rock', 'Pop', 'Talk' or 'News'

- Multiplex Name - displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.

- Channel and Frequency

e.g.: 12B 225.648 MHz

- Signal error

This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.

- Signal information

The data rate at which the signal is being transmitted.

- Time and date

Supplied by the broadcaster.

1. Repeatedly press and release the Menu/Info button to cycle through the different information options.

Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC Off: no compression. This is the default setting.
 - DRC Low: medium compression.
 - DRC High: maximum compression.
1. Press and hold the Menu/Info button until the display changes to 'DAB <Full scan>'.
2. Use the Tune/Select rotary control to scroll to 'DRC' and press to select. The current DRC setting will have an '*' in the top right of the display.
 3. Use the Tune/Select rotary control to scroll through the 3 compression level options available and press the rotary control to select. Press and release the Menu/Info button to return to the station display.

FM Radio mode

If you are not already in FM mode, briefly press and release the Mode button to go to FM mode (check the display). If you were listening to an FM station when you switched the Radio off then this station will be automatically selected when you switch the Radio back on.

Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to an FM station. This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Tuning to an FM station

1. Press and release the Scan button to scan up the frequency band.
2. Press and hold the Scan button to scan down the frequency band.
3. Use the left hand rotary control to fine tune each frequency in 0.05MHz steps, if necessary.

Note: If reception is still poor adjust the position of the aerial or try moving the radio to another location.

Changing the Scan setting

In FM mode:

1. Press and hold the Menu/Info button until 'FM <Scan setting>' is displayed. Press the Tune/Select rotary control to select. The current Scan setting will have an '*' in the top right of the display.

There are two different options to choose from:

- Strong stations
The scan will only stop when a strong signal strength is received which should also result in a better audio quality. It is possible that the station you are scanning for may be missed using this option.
 - All stations
The scan will stop for every station it receives, even if the signal strength is poor.
2. Use the Tune/Select rotary control to choose from the two options available and press to select. Press and release the Menu/Info button to return to the station display.

Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Note: You may wish to select 'Stereo' if you are listening to your radio using headphones.

1. Press and hold the Menu/Info button until 'FM <Scan setting>' is displayed.
2. Use the Tune/Select rotary control to scroll to <Audio setting>. Press the Tune/Select rotary control to select.

There are now two different options of 'Forced mono' and 'Stereo allowed' and the current setting will have an '*' next to it.

3. Use the Tune/Select rotary control to scroll to choose from the two options available. Press the Tune/Select rotary control on the radio to select.
4. Press and release the Menu/Info button to return to the station display.

Storing an FM station preset

Your radio can store up to 10 FM stations in its preset memories for instant access to your favourite stations.

Note: When you store FM radio station presets, these do not overwrite your DAB station presets.

1. Tune your radio to the station that you wish to preset (see Tuning to an FM station on page 27).
2. Press and hold the Preset button. 'Preset Store <1: (Empty) >' is displayed if no previous station has been stored.
3. Use the Tune/Select rotary control to scroll to the Preset location that you would like to store the radio station to (1-10).
4. Press the Tune/Select rotary control to select, the display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

Note: If there is already an existing FM station stored under a preset, it will be overwritten when you store the new station.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Tune to an FM preset station

In FM mode:

1. Press and release the Preset button. 'Preset Recall <1: >' is displayed and the name or frequency of the station stored there, or '(Empty)' if no previous station has been stored.
2. Use the Tune/Select rotary control to scroll to the Preset location and station that you would like to listen to (1-10). Press and release the Tune/Select rotary control to Select. The radio will tune to that station and begin to play.

Note: If no FM station has been stored under the preset button, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

FM display information

When listening to an FM station you can change the information that will appear on the second line of the display.

- Radiotext (RT)
This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
 - Program Type (PTY)
Such as 'Rock', 'Pop', 'Talk' or 'News'
 - Station name or frequency
Such as BBC R4 or 93.30MHz
 - Audio mode - Stereo or Mono
 - Time and date - Supplied by the broadcaster.
1. Repeatedly press and release the Menu/Info button to cycle through the different information options.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Connect to a Bluetooth device

Check that your Radio is in Bluetooth (BT) mode. If you are not already in BT mode, press and release the Mode button until you are in BT mode (check the display). 'Bluetooth' will be displayed and 'Searching', whilst your product searches for Bluetooth devices. If a device is already connected (paired) with your radio, 'Connected' will be displayed on the second line of the display.

In Bluetooth (BT) Mode:

1. 'Searching' will be displayed on the second line of the display.
2. On the device that you would like to connect to your radio via Bluetooth (e.g. iPhone/ iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your radio will be displayed as 'BUSH Audio'. Select the device name to begin pairing.
5. When pairing is complete 'Connected' will be displayed on the second line of the display.
6. Now that you have paired your device with the radio, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the radio unless you decide to disconnect or 'unpair' it.

Note: If your device should be come unpaired for any reason, follow the steps above to 'pair' it again. You can press and hold the Scan button on the Radio to disconnect the current device and restart the Bluetooth pairing process.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the radio speakers. Adjust the volume on the connected device and/or your radio

Note: If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select 'BUSH Audio' to reconnect.

2. You can use the controls on your paired Bluetooth device as well as those on your radio.

Controls available on your Radio:

- Volume:
Turn the volume control clockwise to increase sound and anti-clockwise to decrease sound.
- Play/Pause:
Press and release the Scan button to play/pause.
- Skip back:
Turn the Tune/Select control anti-clockwise to skip back to the previous track.
- Skip forward:
Turn the Tune/Select control clockwise to skip forward to the next track.

Note: If you do not use your radio for approximately 15 minutes and no audio signal is received, it will automatically go to Standby mode. Press and release the Power button and the radio will switch back on.

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Setting the alarm

Note: Check that the radio has the correct time and date before you set an alarm.

In DAB, FM or Bluetooth mode:

1. Press and hold the Menu/Info button to enter the menu options..
2. Use the Tune/Select rotary control to scroll to '<System>'. Press the Tune/Select rotary control to select.
3. Use the Tune/Select rotary control to scroll to '<Alarm>'. Press the Tune/Select rotary control to select.
4. 'Alarm 1 Setup' is displayed. Use the Tune/Select rotary control to change 'Alarm 2 Setup' as required. Press the Tune/Select rotary control to select.
5. 'Alarm 1 (or 2) Wizard On time' is displayed and the hour digits for the alarm will flash.
6. Use the Tune/Select rotary control to scroll to the hour for the alarm and press the Tune/Select rotary control to select.
7. The minutes will now flash. Use the Tune/Select rotary control to scroll to the minutes for the alarm and press the Tune/Select rotary control to select. The duration time will now flash.
8. Use the Tune/Select rotary control to scroll to the duration for the alarm. You can choose from 15, 30, 45, 60, 90 and 120 minutes. Press the Tune/Select rotary control to select. The source for the alarm will now flash.
9. Use the Tune/Select rotary control to scroll to the sound source for the alarm. You can choose from Buzzer, DAB or FM. Press the Tune/Select rotary control to select.

Note: If you select DAB or FM radio for the alarm source, 'Last listened' will flash in the display. Press the Tune/Select rotary control to select and the last listened to radio station in DAB or FM, as appropriate, will be used for your alarm.

10. Use the Tune/Select rotary control to scroll to the frequency for the alarm. You can choose from Daily, Once, Weekends or Weekdays. Press the Tune/Select rotary control to select.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Note: If you select 'Once', you will then be prompted to set the date for your alarm.

11. Use the Tune/Select rotary control to set the volume for your alarm. Press the rotary Tune/Select control to select.

Note: You will not be able to set the alarm for less than 4 volume bars. Remember to set the alarm radio volume to one that will wake you. The alarm volume will increase progressively until it reaches the alarm volume you have set.

12. 'Alarm 1 (or 2) Wizard' is displayed again, together with 'Alarm Off (or On)'. Use the Tune/Select rotary control to choose 'Alarm On' or 'Off' as appropriate and press the Tune/Select rotary control to select. 'Alarm Saved' is displayed.
13. In Standby mode a bell symbol in the top right of the display will confirm when an alarm has been set.

Note: If the time is not set or has failed to update from the radio signal, 'Time is not set' will be displayed when you try to set the alarm. The radio will then prompt you to set the time. An alarm can only be set after the time has been set.

Stop the Alarm

When the alarm sounds, press and release the Power button, 'Alarm off' is displayed. Alternatively, you can press and release the Snooze button (see Snooze function below).

Note: If you press the Power button to stop the alarm, the alarm symbol will remain in the display and the alarm will sound again at the same time the next day, unless it was set for 'Once' only.

Snooze

When the alarm sounds you can press and release the rotary volume control to activate the 9 minute snooze function.. 'Snooze' will be displayed, followed by the snooze time countdown, until the alarm sounds again.

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

Turn off the Alarm

Follow the steps for 'Setting an Alarm' and select 'Off' in step 12.

Sleep timer

You can set your radio to turn off automatically using the sleep timer. You can choose from Sleep off, 15, 30, 45, 60 and 90 minutes.

In DAB, FM or Bluetooth mode:

1. Press and release the rotary Volume control, 'Set sleep time' is displayed.
2. Use the Tune/Select rotary control to scroll through the available options of Sleep off, 15, 30, 45, 60 and 90 minutes. Stop when the sleep time you would like is displayed and press the Tune/Select rotary control to select.
3. Press the Menu/Info button to return to the radio display. The sleep time minutes that you have selected will be displayed on the top right of the display, e.g. S15 for 15 minutes, and will countdown until the radio switches off.

Note: To cancel the sleep time, follow the steps to set the sleep time but stop when 'Sleep off' is displayed.

Display backlight timeout

You can adjust the display backlight timeout. Options of permanently On, 10, 20, 30, 45, 60, 90, 120, and 180 seconds are available.

Note: An '*' will be displayed next to the current setting.

In DAB, FM or Bluetooth mode:

1. Press and hold the Menu/Info button to enter the menu options.
2. Use the Tune/Select rotary control to scroll to '<System>'. Press the Tune/Select rotary control to select.
3. Use the Tune/Select rotary control to scroll to '<Backlight>'. Press the Tune/Select rotary control to select.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

4. '<Timeout>' is displayed. Press the Tune/Select rotary control to select. Use the Tune/Select rotary control to scroll through the available backlight timeout options of On, 10, 20, 30, 45, 60, 90,120 or 180 seconds. Press and release the Tune/Select rotary control to select.
5. Press and release the Menu/Info button until you return to the station display.

Display language

You can change the display language of your radio, there are 4 options available; English, French, German and Italian.

Note: An '*' will be displayed next to the current setting.

In DAB, FM or Bluetooth mode:

1. Press and hold the Menu/Info button to enter the menu options
2. Use the Tune/Select rotary control to scroll to '<System>'. Press the Tune/Select rotary control to select.
3. Use the Tune/Select rotary control to scroll to '<Language>'. Press the Tune/Select rotary control to select.
4. Use the Tune/Select rotary control to scroll to the language you would like. Press the Tune/Select rotary control to select.
5. Press and release the Menu button until you return to the station display.

Software version

You can check the software version of your radio.

In DAB, FM or Bluetooth mode:

1. Press and hold the Menu/Info button to enter the menu options
2. Use the Tune/Select rotary control to scroll to '<System>'. Press the Tune/Select rotary control to select.
3. Use the Tune/Select rotary control to scroll to '<SW Version>'. Press the rotary control to select.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Stereo DAB/FM Radio with Bluetooth

Let's get started

The software version will be displayed and you may wish to make a note of it here:

.....

4. Press and release the Menu/Info button until you return to the station display.

Factory reset

You can reset your radio and restore all of the original factory settings.

Note: If you reset your radio all of your stored station presets will be deleted.

In DAB, FM or Bluetooth mode:

1. Press and hold the Menu/Info button to enter the menu options
2. Use the Tune/Select rotary control to scroll to '<System>'. Press the Tune/Select rotary control to select.
3. Use the Tune/Select rotary control to scroll to '<Factory reset>'. Press the Tune/Select rotary control to select.
4. 'Factory Reset? <No> Yes' will be displayed. Use the Tune/Select rotary control to scroll to '<Yes>'. Press the Tune/Select rotary control to select.
5. 'Restarting...' is displayed. After a few seconds 'Welcome to Digital Radio' will be displayed and your radio will go to Standby mode.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

 


This page is left intentionally blank



Other information

4

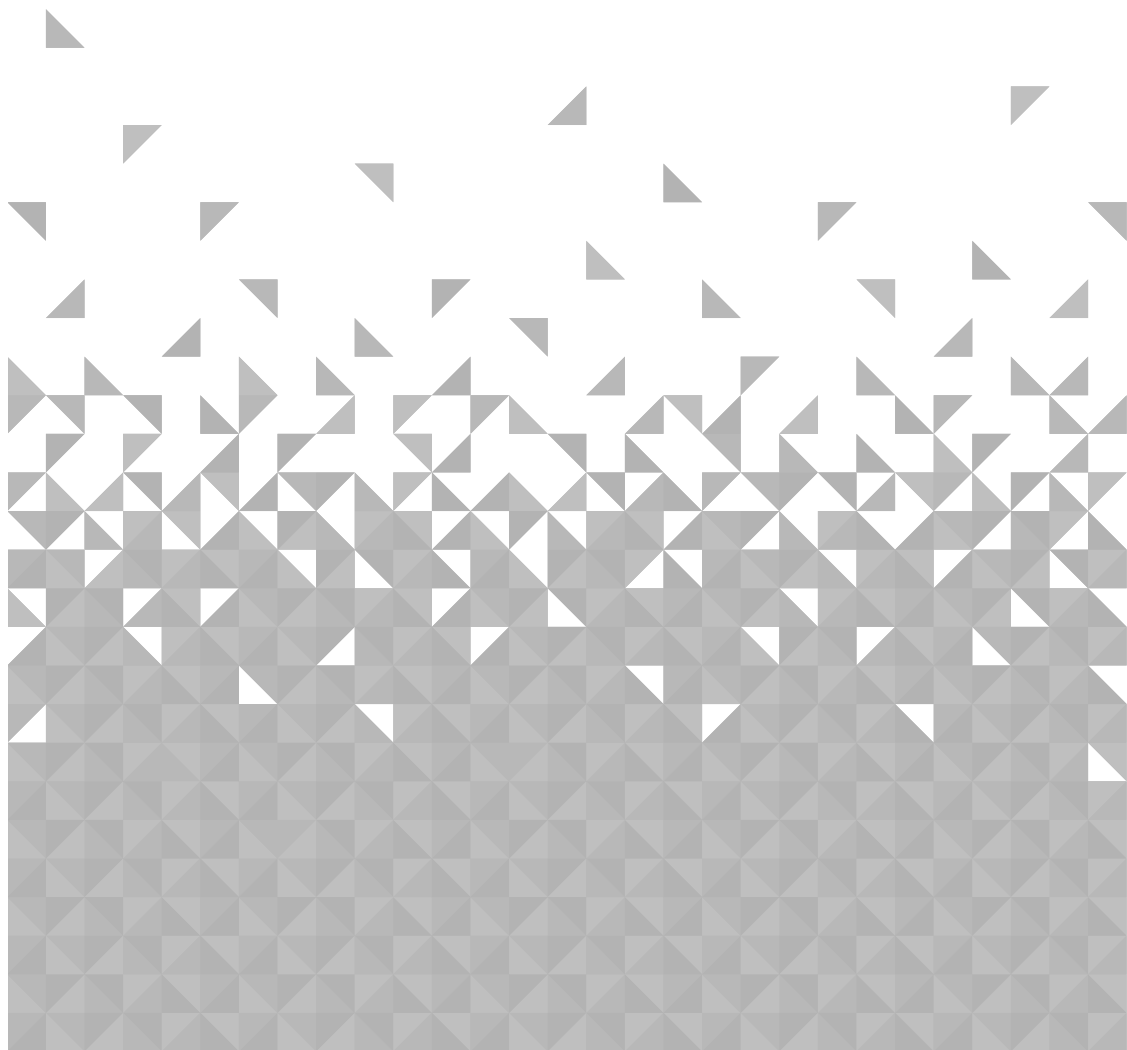

Other information

Helpful technical information

Technical specification

Power adaptor:	Output DC 5V 1.2A Input AC 100-240V 50/60Hz
Batteries:	4 x 1.5V C size (LR14) (Optional, not supplied)
Output:	2 x 2W RMS
Frequency range:	DAB: Band III, 174 MHz to 240 MHz FM: 87.5 MHz to 108 MHz
Bluetooth:	Version 4.1 Pairing name: BUSH Audio Profiles HFPV1.5, A2DPV1.2, AVRCPV1.4, GAVDP1.2, AVDTP1.2, SPP1.2, AVCTP1.3. Frequency range: 2.4GHz-2.480GHz

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

 


This page is left intentionally blank



Product support

5

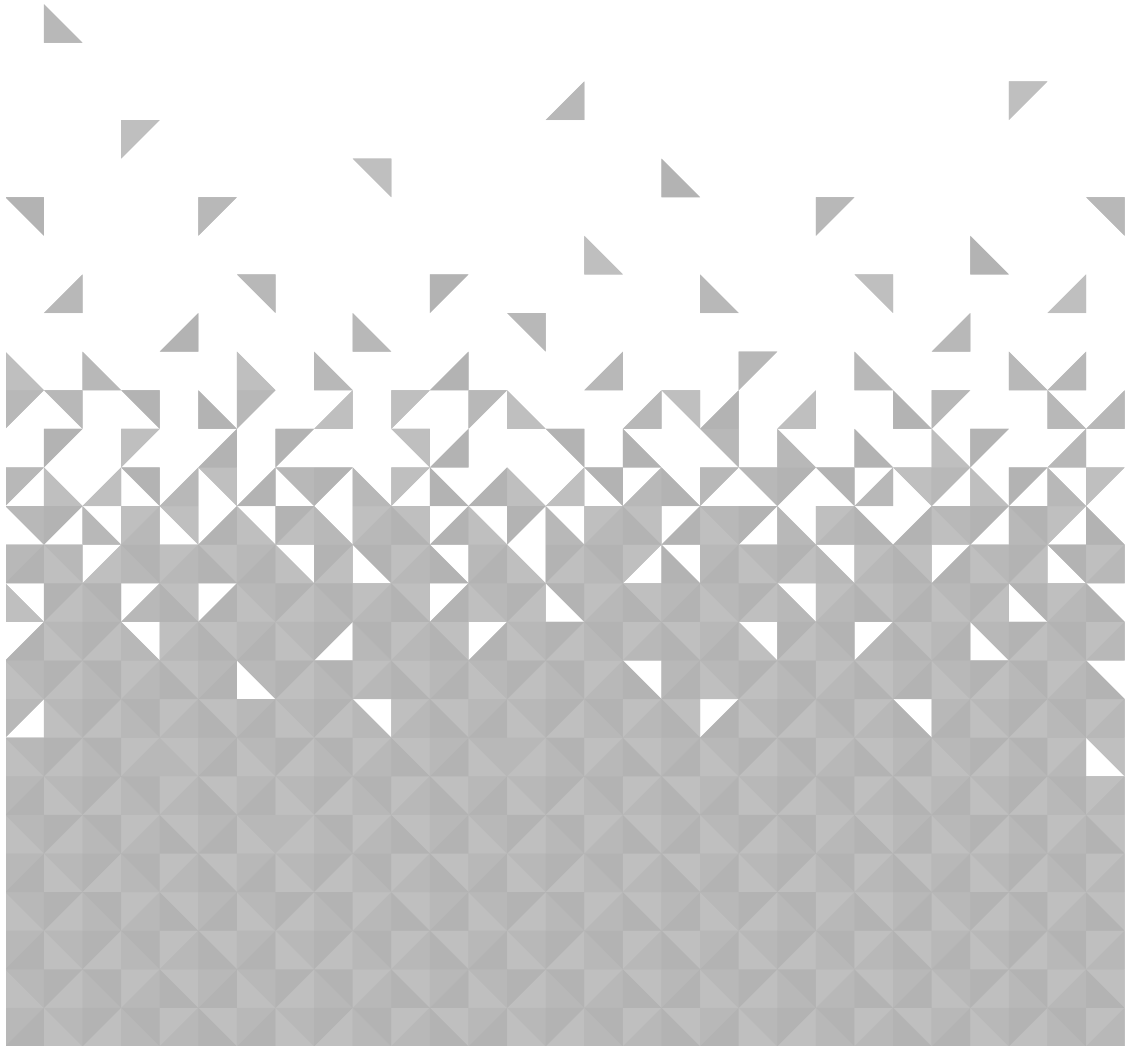

Product support

Help is always at hand

Troubleshooting

If you are experiencing problems with your radio, there are some quick and easy checks that you can do, which may help to solve the problem.

No sound / power:

Adjust the volume using the rotary control on your radio.

Check that the mains power wall socket is switched on, the power switch on the back of the radio is On and that your radio is not in Standby mode.

You may have headphones connected. Either use the headphones to listen to your radio or unplug the headphones.

If you have batteries fitted, they may be exhausted and need to be replaced. Please use only good quality C size batteries.

Radio reception is poor:

Fully extend the aerial to get the best reception and sound quality.

Retune for radio stations, see pages 22 and 27.

Try moving your radio to another location to see if reception improves.

Check that you do not have other electrical equipment too close to your Radio, causing interference.

Visit www.digitalradionow.com for information about DAB reception in your area.

Unable to pair with a Bluetooth device:

Check that you are in Bluetooth mode.

Ensure that you are within range of the radio for Bluetooth functionality, 10 metres or less (33 feet or less).

Move the radio and Bluetooth device away from other Bluetooth devices/electrical equipment.

If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

The function buttons do not respond:

Check that the mains power wall socket is switched on, the power switch on the back of the radio is On and that your radio is not in Standby mode.

If you are using batteries, they may be exhausted and need to be replaced.

Unplug the mains power and remove the batteries. Leave the radio for 3 minutes and then reconnect the power.

Try a reset to factory defaults. See page 36.

Note: All of your settings, including the radio station list and any presets will be deleted when you reset the Radio.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Stereo DAB/FM Radio with Bluetooth is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Stereo DAB/FM Radio with Bluetooth is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH *Classic*

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021.

 DAB Digital
Radio