



IMPORTANT SAFETY INFORMATION

Read these instructions. Do not use this apparatus near water.
Keep these instructions. Clean only with a slightly damp cloth.
Heed all warnings. Do no block and ventilation openings.
Follow all instructions.

Install in accordance with the manufacturer's instructions.
Do not install or operate near any heat sources such as radiators, stoves or other apparatus that produce heat.
Attention should be drawn to the environmental aspects of battery disposal.
Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Changes or modifications not expressly approved by the manufacturers could void the user's authority to operate this device.



 
 
CAUTION: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU.
Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting www.argos-support.co.uk

OPERATION

TO LISTEN TO THE RADIO

1	2
	
To turn the radio on, rotate the VOLUME/ON/OFF control until a click is heard. Then, rotate the VOLUME/ON/OFF control to a comfortable level.	Slide the Band switch to the AM or FM position.
3	4
	
Rotate the Tuning control to tune a station.	To turn the unit off, rotate the VOLUME/ON/OFF control until a click is heard.

Antennas

FM: Extend FM Antenna for best reception
AM: Rotate the unit for best reception.

TROUBLESHOOTING GUIDE


Should this unit develop a problem, check the following before seeking service.


SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
RADIO		
No sound.	The Headphones are not connected.	Plug in the Headphones.
	VOLUME control at minimum position	Increase the VOLUME control.
Noise or sound distorted on AM or FM	AM Interference	Rotate unit for best reception.
	FM: Poor Reception.	Extend FM antenna.

SPECIFICATIONS

Batteries DC 3V ("AAA size x 2) (not included)
Frequency Range AM: 520-1620kHz
..... FM: 87-108MHz

Disposal

 You should now recycle your waste electrical goods and in doing so help the environment. The symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

 Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

SAFETY INFORMATION CONTINUED

IMPORTANT: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



To prevent possible hearings damage, do not listen at high volume levels for long periods.

 
CONTENTS

The carton should contain:
1 x Pocket AM/FM Radio
1 x Operating manual


If any items are missing or damaged, contact your nearest Argos store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regards to any recycling regulations in your area.

BATTERY INSTALLATION

1. Slide off the battery cover.
2. Insert 2 x AAA batteries as shown. Take care to match the + & - polarity markings.
3. Replace the battery cover.

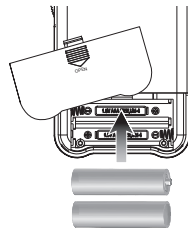

Parts and Controls

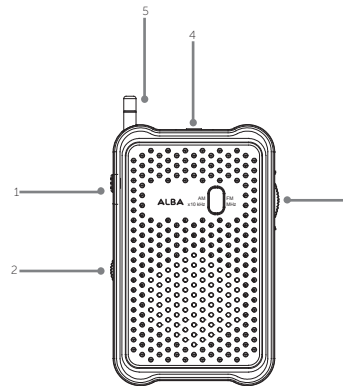 

1. FM / AM - Adjust to switch between AM and FM radio modes.
2. Volume / Power - Adjust the dial to turn the unit on and adjust the volume level
3. Tuning - Adjust the dial to tune the radio channel
4. Stereo Headphone Jack (top)
5. Telescopic FM Antenna

ALBA

Your Alba Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Alba disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW