 



URC 7955

ENGLISH SIMPLE SET UP GUIDE


WELCOME, PREPARE YOUR REMOTE FOR INSTALLATION

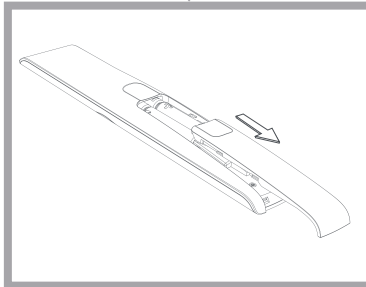

 Open the battery door.

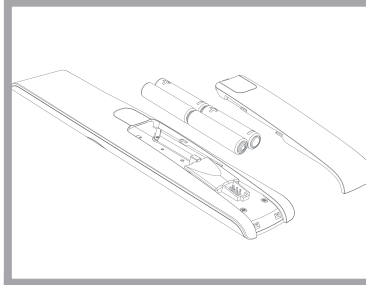

Insert 4 AAA batteries.

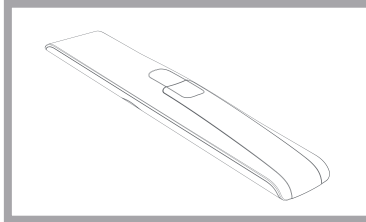 

PRODUCT DISPOSAL
(EUROPEAN DIRECTIVE 2002/96/EC)
The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according to European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

BATTERY DISPOSAL AND SAFETY
(EUROPEAN DIRECTIVE 2006/66/EC)
Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health. Keep batteries away from fire, out of direct sunlight, and away from other sources of heat.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remember that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

UK
www.oneforall.com

New Zealand
0800 1425569
sales@amber.co.nz
www.amber.co.nz
www.oneforall.com

Ireland
www.oneforall.com

South Africa
0861100551
support@oneforall.co.za
www.connoisseur.co.za
www.oneforall.com

Australia
1 300 888 298
ofa.support@ambertech.com.au
www.ambertech.com.au
www.oneforall.com

Universal Electronics BV -
Europe & International
P.O. Box 3332, 7500 DH Enschede
The Netherlands



KEY TABLE

DEVICES – Scroll through the devices your remote is set up to control

AV – Select the input on the current device

INFO – Displays info of current playback

VOL – Volume Up, Down and Mute

 
MENU – Shows the menu of the current device

GUIDE – TV Guide, EPG

SMART – Access internet and Smart features of your TV or internet-connected device

Red, Green, Yellow, Blue – Fasttext/Quick access keys

LIST – Displays a list of recorded programmes

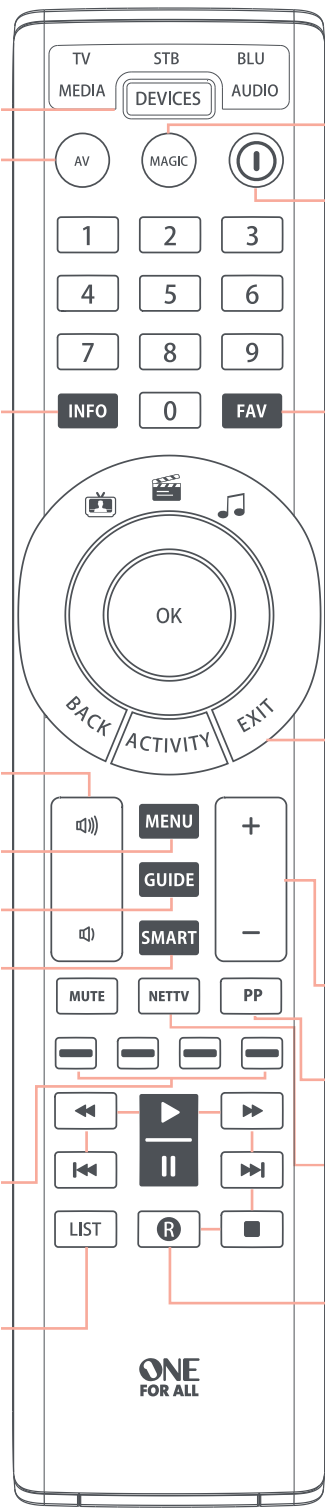

MAGIC – Used to set up your remote

POWER – Power on/off

FAV – Favourite Channels

BACK – Back one step in the Menu of the current device

ACTIVITY – Scrolls through up to 3 Activity Modes – Watch TV, Watch Movie and Listen to Music. See Activities for details.

EXIT – Exit from the Menu of the current device

+/- – Channel Up and Down

PP – Previous Program, Last Channel

NETTV – Access TV Streaming - See Net TV Feature

PLAYBACK – Playback keys for the current device

Thank you for purchasing the One For All Smart Control.
Now you can control all of your Audio/Video devices with a single remote, while enjoying extra features such as the ability to combine devices in a single Activity Mode, sending multiple commands on a single key press (macros) and being able to customise the remote control to your exact requirements.

There is also a handy companion app for iPhone and Android phones which will allow you to keep your remote up to date with the latest devices and codes. It also offers you an alternative way to set up your remote and store the settings.

To get started with your new remote, the first step is to set it up to control all of your Home Cinema devices.

HOW TO SET UP YOUR REMOTE

A – SIMPLESET

SimpleSet is a quick and easy way of setting up the remote to control the most popular brands of each device type with only a few key presses, typically in under a minute per device. The first step is to select which device you are going to set up. The following is a list of Device Modes on the remote control, and the Device types that can be set up on that mode:

Device Mode	Type of device
	TV TV, HDTV, LED, LCD, Plasma, Projector
	STB Set Top Box, Satellite Receiver, Cable Converter, Freeview, DVB-T, IPTV
	BLU Blu-ray, DVD, DVD Home Cinema, VCR, Laser Disk
	MEDIA Digital Media Receiver, Streamer, Game Console*
	AUD Audio, AV Receiver, Amplifier, Tuner, Sound Bar, Active Speaker System

* The One For All remote can only control games consoles operated by Infra-Red, either directly or via an adapter. Consoles that are controlled by Bluetooth only cannot be operated.

For each Device type, there is a list of the top brands, each with a number assigned to it, for example 6 for a Samsung TV. Locate your device and brand in the list that follows:

HOW TO SET UP YOUR REMOTE

A – SIMPLESET

TV

- | | |
|--------------------------|-----------------|
| 1 Alba / Bush / Goodmans | 6 Samsung |
| 2 Grundig | 7 Sharp |
| 3 LG | 8 Sony |
| 4 Panasonic | 9 TCL / Thomson |
| 5 Philips | 0 Toshiba |

STB – Sat, Cable, DVB-T

- | | |
|---|--|
| 1 BskyB / Sky Ireland / Orange | 5 freebox / Tricolor TV / Vu+ |
| 2 Canal+ / CanalSat / Digital+ | 6 Humax |
| 3 Dream Multimedia / TechniSat | 7 Samsung |
| 4 DStv / Multichoice / Foxtel / Sky New Zealand | 8 Sky Italia / SFR / Neuf TV |
| | 9 Sky Deutschland / Österreich / T-Home / Deutsche Telekom |
| | 0 UPC / Cablecom / UPC Direct / Virgin Media |

BLU – Blu-ray, DVD

- | | |
|------------------------|-----------|
| 1 Denon, Harman/Kardon | 6 Pioneer |
| 2 JVC | 7 Samsung |
| 3 LG | 8 Sony |
| 4 Panasonic | 9 Toshiba |
| 5 Philips | 0 Yamaha |

MEDIA – Games Consoles (5 & 8), Media Players

- | | |
|---|---|
| 1 Apple | 7 Roku / Sky Austria / Sky Deutschland / Sky Ireland / Sky UK |
| 2 Asus | 8 Sony |
| 3 Dune | 9 Sumvision |
| 4 Emtec / A.C.Ryan / DVICO / Fantec / iconBIT / iNext | 0 Western Digital |
| 5 Microsoft | |
| 6 Popcorn Hour / Philips | |

HOW TO SET UP YOUR REMOTE

A – SIMPLESET

AUD – AV Receiver, Amp, Tuner, Sound Bar, Speaker Systems

- | | |
|---------------------|------------------------|
| 1 Denon | 6 Panasonic / Technics |
| 2 Harman/Kardon | 7 Pioneer |
| 3 JVC / LG | 8 Samsung |
| 4 Marantz / Philips | 9 Sony |
| 5 Onkyo | 0 Yamaha |

To set up your device

- Turn on your device (not on standby) and point the OFA remote towards it.
- Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
- Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.
- Hold down the digit for your brand and device as listed above (e.g. 6 for Samsung TV).
- The remote will send Power every 3 seconds until your device switches off.
- As soon as your device switches off, release the digit.
- The LED will blink twice and go out. The remote should now operate your device.

* If you find one or more keys do not work as you expect, start again at step 1 – the remote will start with the next code in the memory.

HOW TO SET UP YOUR REMOTE

B – SET UP BY CODE

If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

 
- Turn your device on (not on standby).
- Locate the brand of your device in the code list (pages 160-176). Codes are listed by Device Type and Brand.
- Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
- Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.
- Enter the first 4 digit code listed for your brand (e.g. 0556 for a Bennett TV).
- The LED will blink twice and go out.
- Now aim the remote towards your device and press the POWER key.
- If the device turns off, your remote is ready to use. If not, repeat steps 3-7 with the next code in the list.







* Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.

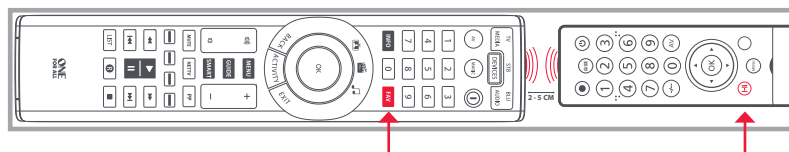LEARNING

Your One For All remote control can learn any function from any other working remote control. This can be useful if you are missing one or more functions from your original remote control and would like to add them to the Smart Control. You can learn onto any key except Magic, Devices or Activity.

You can also learn a complete device if you can't find a code. To learn, firstly make sure you have all your original remote controls to hand, and that they have working batteries in. To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:






-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
-  Using the DEVICES key, make sure the LED for the device you want to learn functions on is lit.
-  Press 975 – the LED will blink twice.
-  Press and release the key you want to learn a function onto (for example the FAV key) – The Watch TV and Listen To Music LEDs will light up.
-  Press and release the key on the original remote.
- The LED under the device will blink twice to indicate the key has been learned correctly.
- Repeat steps 4 and 5 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
-  When you have learned all the functions you require, press and hold the MAGIC key until the LED blinks twice and turns off.

Hints

- If the LEDs shows one long blink at step 6, the function was not learned correctly, please try again from step 4.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.

LEARNING

TO DELETE A LEARNED FUNCTION, THE PROCEDURE IS:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
-  Using the DEVICES key, make sure the LED for the device you want to delete functions from is lit.
-  Press 976 – the LED will blink twice.
- Press the key to delete twice – the LED will blink twice.

Repeat the above procedure for each key you want to delete.

ACTIVITIES

An Activity is a grouping of two or more devices into a single mode based upon what you're doing while using your remote - for example TV and Set Top Box can be combined together into a Watch TV mode. In this mode keys will control only the relevant device, so in this example the Volume keys would control the TV, but the channel keys would control the Set Top Box.

The OFA Smart Control features 3 Activity Modes; Watch TV, Watch Movie and Listen To Music. Each of these modes has a choice of devices to combine. These are:

WATCH TV

- Combination 1: **TV + STB (Default)**
- Combination 2: **TV + STB + AUD**
- Combination 3: **TV + AUD**

WATCH MOVIE

- Combination 1: **TV + BLU (Default)**
- Combination 2: **TV + BLU + AUD**
- Combination 3: **TV + MEDIA**
- Combination 4: **TV + MEDIA + AUD**

LISTEN TO MUSIC

- Combination 1: **TV + AUD + MEDIA (Default)**
- Combination 2: **AUD + BLU**
- Combination 3: **AUD only**



- TV + STB (Default)**
- TV + STB + AUD**
- TV + AUD**



- TV + BLU (Default)**
- TV + BLU + AUD**
- TV + MEDIA**
- TV + MEDIA + AUD**






- TV + AUD + MEDIA (Default)**
- AUD + BLU**
- AUD only**



ACTIVITIES

If you set up the default devices for any Activity on the remote (for example a TV and STB for Watch TV) that Activity will be set up automatically on the remote. If you would like to change to a different combination, the procedure is as follows:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
-  Use the ACTIVITY key to scroll through the Activities until the one you want to set is flashing.
-  Press the number of the combination you want to set – e.g 2 for TV + STB + AUD in Watch TV.

- The LED will blink twice and go out.

To access the Activities, simply press the ACTIVITY key to scroll through until the desired one is lit. You can return to controlling by device by using the DEVICES key.

AV Shift

As the AV key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the AV key is pressed in an Activity, the Menu Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling the relevant device for the Activity (e.g. STB in Watch TV Mode).


Power Macro

If you hold down the Power key for 2 seconds in any Activity, the remote will send the Power function for each device contained within that Activity. So for example, holding Power in the default setting for Watch TV will turn both the TV and Set Top Box on or off.





MACROS

PROGRAM A MACRO

You can program any key on your OFA remote (except Magic and Devices) to send multiple commands on a single press – a Macro. This can be useful for controlling multiple devices to put them in a certain state – for instance you could put your TV on HDMI 1 and press Play on the Blu-ray player to start watching a movie. A key programmed with a Macro will send the same Macro regardless of the device mode, so it is best to select a key you don't use. To program a macro, the procedure is as follows:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

MACROS




-  Press 995 – the LED will blink twice.
- Next select the key you want to program the Macro on.
-  Now use the DEVICES key to select the device you want the first function of the Macro to come from, for example TV.
-  Next, press the key you want to include in the Macro, for example the AV key.
- Repeat steps 4 (if necessary), and 5 to add more keys to the Macro. You can include up to 15 key presses.
-  To store the Macro, hold down the MAGIC key until the LED blinks twice.

* Remember to press the keys in the same order you would using your original remotes – so if you pressed AV on the TV remote and then Play on the Blu-ray remote to watch a movie, do it in the same order on the Smart Control.

* If the LED shows a long blink when you press a key in steps 4 or 5, you have entered too many keys, please try again.

TO DELETE A MACRO

If you want to remove a macro from a key, please perform the following:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
-  Press 995 – the LED will blink twice.
- Press the key the macro is programmed on.
-  Now hold down the MAGIC key until the LED blinks twice – the Macro is deleted.

MACROS ON ACTIVITIES

Another handy feature of the Smart Control is to put Macros on Activities; you could for example program the Watch TV Activity to send a Macro to turn on the TV and Set Top Box when selected. To do this, simply use the Activity key to select the Activity in step 3 of the procedure "Program a Macro". Next time you use the Activity, the Macro will be sent 3 seconds after you select it using the Activity key.

If you want to delete a Macro from the Activity, select it during step 3 of "To Delete a Macro".

VOLUME LOCK

If you always use one device to control volume, for example your TV or an AV Receiver, you can set up the Smart Control to always control that device, regardless of which device your remote is controlling. To do this:

- Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
- Press 993 – the LED will blink twice.
- Use the DEVICES key to select the Device you want to lock the Volume to.
- Press MAGIC once – the LED will blink twice and volume is now locked.

To unlock the volume and set every device back to controlling its own volume, the procedure is:

- Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.
- Press 993 – the LED will blink twice.
- Press VOLUME UP – the LED will blink four times and Volume is now unlocked.



Please note that Volume Lock only applies in Device Mode – Activities are unaffected.

THE NETTV FEATURE


The Smart Control features a "NETTV" key for viewing digital TV, streamed over the internet. If your original remote control already had a key for this - for example many newer TVs have a Netflix key - then this key will perform exactly the same as the key on your original remote. However if you did not have a key like this, but still had the ability to watch a streaming service, you can use this key as a shortcut by programming a macro on it. Most AV devices which are connected to the internet, such as Smart TVs or streaming Set Top Boxes have one or more applications they can run to access TV viewing via the internet. Examples of these would be Netflix, YouTube, Amazon Prime, BBC iPlayer or similar.


To program the macro, you first need to know the device you use to access the service, and then the sequence of keys you need to press to always bring up the service you prefer. For example, some Panasonic TVs will start Netflix by pressing the Apps key, then Menu Down Twice, and finally the OK key. Or on an Apple TV, the sequence is Menu, Menu Down and OK.

Once you have determined the sequence for your device, follow these steps:

- Sit in front of your device with It switched on (not on standby)
-  Hold down the NETTV key until the LED blinks twice and stays lit
-  Use the DEVICES key to select the device you want to use for the NETTV macro (e.g. TV)

THE NETTV FEATURE

-  Now perform the sequence of keys exactly as would normally. The remote will operate your device and the macro is recorded in real time - so if it normally takes a few seconds for your device to react don't worry.

-  One you have finished the sequence - and the Streaming Service has started on your device - hold down the NETTV key until the LED blinks twice and goes out. The macro is now stored.

Tips

- Make sure the Smart Control Is operating the device in question before programming
- If you find the Macro doesn't work as expected, you can just repeat the same sequence to reprogram
- When programming, wait for your device to respond first, the remote will remember the timing
- The NETTV macro is tied to one device, remember to make sure you are watching the correct device.

THE OFA APP

Your One For All Smart Control contains codes for all popular devices and brands, but new codes are added to our online database every day. Using the One For All App on your iPhone or Android phone will allow you to upgrade any new codes into your remote using Bluetooth Smart, also known as Bluetooth Low Energy*. This will ensure that the remote will never become obsolete. You can also use the app to set up all devices, giving you the ability to enter the model numbers of your equipment to get the right code first time. It can also help with selecting the right inputs for your Activities.*

* Dependent on device and commands available.

If you would like to download the app, follow the links below:



www.ofa.com/smartcontrol

* Please ensure your phone is compatible with Bluetooth Smart. A list can be found by scanning the QR code above.

Universal Electronics, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the EC declaration of Conformity is available at http://www.oneforall.com/DOC_URC7955

ONE FOR ALL One For All is a registered trademark of Universal Electronics B.V. P.O. Box 3332, 7500 DH, Enschede, The Netherlands