Safety information important- please read the instructions fully before operating. → For household and indoor use only.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- Use only the voltage specified on the rating plate of the heater.

WARNING: in order to avoid overheating do not cover the heater. WARNING: To reduce the risk of fire, keep textiles, curtains, or other

- flammable materials at least 1 m away from the air outlet. Only use this heater on a horizontal and stable surface.
- Do not place the heater immediately below a socket outlet.
- Do not use this appliance with a programmer, timer, separate remotecontrol system, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned
- To avoid risk of overloading your plug socket, the use of an extension lead with this heater is not recommended.

Important- this heater is intended for floor use only. Do not mount on

- · Do not use this heater in the immediate surrounding of a bath, a
- shower, or a swimming pool.
- Do not leave the appliance unattended.
- **WARNING:** Do not use this heater in small rooms, when they are occupied by people unable to leave the room alone, unless
- constant supervision is provided. • This appliance is not intended for use by persons (including children)
- with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.
- Children should be supervised to ensure that they do not play with the
- Children less than 3 years should be kept away unless continuously Children aged from 3 years and less than 8 years shall only switch on/off
- the appliance provided that it has been placed or installed in its intended normal operating position and they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.

CAUTION- some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid
- Always switch off the heater before removing the plug from the power
- Do not remove the plug from the power socket by pulling on the cord, always grip the plug to remove.
- Always unplug the appliance when not in use, when moving the appliance or before cleaning.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not twist, kink, or wrap the cord around the appliance as this may cause the insulation to weaken and split.
- Do not run the power cord under carpets, rugs etc. • Do not cover or restrict the airflow to the inlet or exhaust grilles,
- restricted airflow can cause the appliance to overheat and become a fire • Do not insert or allow any foreign objects to enter any ventilation or
- exhaust opening, as this may cause an electric shock, fire, or damage the appliance.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Do not use the heater on deep pile carpets or long hair type rugs. Keep combustible materials such as drapes and other soft furnishings away from the heater.

BATTERY WARNING CAUTION – Danger of explosion if batteries are incorrectly fitted

• Batteries should be installed by an adult. Keep new and used

- batteries away from children
- Only use CR2025 3V batteries in this remote control. Be sure to insert correctly taking care to observe the correct child's oesophagus (food pipe). polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- Do not recharge non-rechargeable batteries.
- Never mix old and new batteries (replace all batteries at the
- Never try to crush. Puncture or dismantle batteries.
- Do not short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage. Dispose of used batteries responsibly at local authority
- household waste recycling facility. DO NOT dispose of batteries in a fire as the batteries may
- In the event of a battery pack leaking, do not allow the liquid to
- come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. WARNING: CONTAINS COIN OR BUTTON BATTERY!

- Hazardous if swallowed, a coin or button battery can cause serious internal chemical burns if swallowed.
- WARNING: Dispose of used batteries immediately. Keep new and used batteries away from children.
- If you think batteries have been swallowed or placed inside any part of

the body, seek immediate medical attention.

B<u>US</u>H

Test Data for DF2360R	
Description	Value
For electric local space heaters-ηth,nom	100%
The electric to primary energy 'conversion coefficient-CC	1.9
correction factor accounting for a positive contribution to the seasonal space heating energy efficiency due to adjusted contributions of controls of indoor heating comfort, the values of which are mutually exclusive, cannot be added to each other-F(2)	0.160
correction factor accounting for a positive contribution to the seasonal space heating energy efficiency due to adjusted contributions of controls for indoor heating comfort, the values of which can be added to each other-F(3)	0.005
Seasonal space heating energy efficiency in active mode-ηS,on ηS,on = ηth,nom · [0.75+F(2)+F(3)] ηs=ηs,on/CC	48.2%
Verdict	Pass

Before using your new heater, the feet (supplied) must be fitted.

ALWAYS KEEP BUTTON OR COIN BATTERIES AWAY

FROM CHILDREN.

There are no specific symptoms associated with this.

Appear to have a stomach upset or a virus.

• Have pain in their abdomen, chest, or throat.

Lose their appetite or have a reduced appetite; and

Not want to eat solid food/ be unable to eat sold food.

Be quieter or more clingy than usual or otherwise "not themselves"

These sorts of symptoms vary or fluctuate, with the pain increasing and the

The lack of clear symptoms is why it is important to be vigilant with "flat" or

spare button or coin batteries in the home and the products that contain

subsiding. A specific symptom to button and coin battery ingestion is

vomiting fresh (bright red) blood. If the child does not seek immediate

Symptoms from battery ingestion

Cough, gag or drool a lot.

Be tired or lethargic.

Point to their throat or stomach.


The child might:

Be sick

medical help.

Unfortunately, it is not obvious when a button or coin battery is stuck in a

- Carefully turn the unit upside down. Use the Screws to fix the Feet onto the Heater. Take care to ensure that they are located correctly in the bottom ends of the Heater side moldings.
- Only Fit 2 screws to each foot in the positions as shown below.

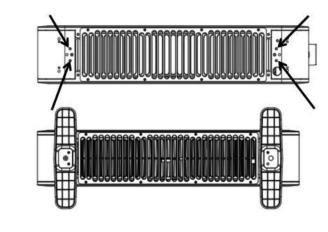


WARNING: in order to avoid overheating do not cover the

Getting to know your heater.




Operating instructions

Remote Control

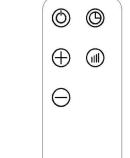

 - Follow the manufacturer's instructions when installing new batteries.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -). Do not mix old and new batteries



Before using your heater.

- Make sure you have read and fully Understood the safety instructions before operating the fan heater. • Choose a safe, horizontal, stable surface to place your heater and position the power cord so not to create a trip hazard.
- · Plug the power cord into a suitable power socket.

Once the heater is connected to a suitable plug socket the display panel will show '--' indicating

highest power setting 'H3' and the display will show a preset temperature of 35°C. Whilst the heater is in power mode select this button again to switch the heater off. The display will revert to '--' indicating the heater has returned to standby mode.

POWER SETTING – Press the power button to change the power level of the heater. On first power on, the heater will automatically start on H3 (high). Each press will cycle through the power levels: H1 (Low) H2 (mid) H3 (high).

temperature range is 5-35°C. After setting the temperature, the display will flash the corresponding temperature for 5 seconds before saving it. The heater will then begin to heat. Once the set temperature is reached, the heater will stop heating. When the ambient

TIMER - When the heater is turned on, pressing the timer button will initiate the timer shutdown setting. The timer can be set for a range of 1-24 hours. Pressing the '+' and '-' buttons will adjust the desired time. Once set, the corresponding number on the screen will flash for 5 seconds before saving. At this point, the Timer icon will light up, and the heater will operate normally. Once the countdown time is reached, the heater will automatically shut off.

In standby mode, pressing the 'Timer' button will initiate the timer start-up setting. The timer can be set for a range of 1-24 hours. Pressing the '+' and '-' buttons will adjust the desired

time. Once set, the corresponding number on the screen will flash for 5 seconds before

The heater is fitted with a safety switch which cuts the heater off if it falls over. This switch is located under the base. The heater needs to be placed on a firm and level surface in order to operate. Standing the unit on the long pile carpet may not activate the switch.

saving. At this point, the screen will display the currently set value. Once the countdown time

Auto Dim Function - If there is no operation for 30 seconds, the brightness of the display and

indicator light will reduce to 50% of the original brightness. When there is no operation for 60

Overheat safety cut-out. Your heater is fitted with a safety device the switches off the heater in the event of overheating.

Should the heater stop working, turn the heater off and inspect for blockage of air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater. If the heater fails to operate or the safety device switches the heater off again, return heater to you nearest service centre for examination or repair.

Care and Maintenance.

The heater requires regular cleaning to ensure trouble free operation:

is reached the heater will automatically turn on.

seconds, the screen will automatically enter rest mode.

- Always turn off and unplug the heater from the mains supply before cleaning.
- Make sure the appliance has cooled down completely before cleaning. Use a slightly damp cloth to wipe the exterior of the heater to remove dust and dirt.
- Ensure the heater is dry before plugging back into the mains supply. Do not immerse cord, plug or the appliance in any liquid or allow moisture to come into contact with the electrical parts.

- Do not store appliance while it is still hot.
- When not in use, clean the heater before storing away in the original or similar sized box.
- Store the heater in a safe, clean, and dry place, away from direct sunlight and out of reach of

Model number Input rated voltage 220-240V 50Hz 750/1250/2000W Output rated wattage W515xD194xH315mm Recommended room size

Produced in China for Argos Limited. Sainsbury's Supermarkets Ltd, London, EC1N 2HT, UK. Argos (N..) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

Recycling electrical products.

Technical Specifications

Bush 2kW Digital Convector Heater with Remote.

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Plug and wiring advice.

The wires in this mains lead are coloured in accordance with the BLUE = NEUTRAL following UK electrical code: GREEN + YELLOW = EARTH Non-rewireable plug

This appliance may be fitted with a "non-rewireable" plug. If you need to change the fuse in a "non-

rewireable" plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

The colours of the wires in the mains lead of this appliance may not correspond with the coloured

markings identifying the terminals in a rewireable plug. Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.



- The BLUE wire must be connected to the terminal marked with the letter The BROWN wire must be connected to the terminal marked with the
- The GREEN & YELLOW wire must be connecting to the terminal marked BLUE OR BLACK - BROWN OR RED WIRE - LIVE (L) WITH the letter E or the earth symbol (1)

Information requirement for electrical space heaters

B<u>US</u>H

Produced in China for Argos Limited.Sainsbury's Supermarkets Ltd, London, EC1N 2HT, UK. Argos (N. I.) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK. Model identifier(s):DF2360R

em	Symbol	Value	Unit	Item	Unit
eat output				Type of heat input/room termperature cor (select one)	ntrol
ominal heat output	Pnom	2.000	kW	single stage heat output and no room temperature control	No
inimum heat output ndicative)	Pmin	0.750	kW	two or more manual heat stage, no room temperature control	No
aximum continuous eat output	Pmax,c	2.000	kW	with mechanic thermostat room temperature control	No

adaptive start control working time limitatio

self-learning functionality

black bulb sensor

control accuracy

neat output				temperature control	
Power consumption		1	1	with electronic room temperature control	
In off mode	Ро	0.24	W	electronic room temperature control plus day timer	
In standby mode	Psm	0.00	W	electronic room temperature control plus week timer	
In idle mode	Pidle	0.36	W	Other control options (multiple selections possible	ĺ
In network standby	Pnsm	0.00	W	room temperature control, with presence detection	
Standby mode with display information or status		No	room temperature control, with open window detection		
Seasonal space heater energy efficiency in	ηS,on	48.2	%	distance control option	

Test Data for DF2360R	
Description	Value
For electric local space heaters-nth,nom	100%
The electric to primary energy 'conversion coefficient-CC	1.9
correction factor accounting for a positive contribution to the seasonal space heating energy efficiency due to adjusted contributions of controls of indoor heating comfort, the values of which are mutually exclusive, cannot be added to each other-F(2)	0.160
correction factor accounting for a positive contribution to the seasonal space heating energy efficiency due to adjusted contributions of controls for indoor heating comfort, the values of which can be added to each other-F(3)	0.005
Seasonal space heating energy efficiency in active mode- η S,on = η th,nom \cdot [0.75+F(2)+F(3)] η s= η s,on/CC	48.2%
Verdict	Pass

PRODUCT GUARANTEE This product is guaranteed against manufacturing defects for a period of

This product is guaranteed for twelve months from the date of original purchase.

The guarantee is subject to the following provisions:

• The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from

inexpert repair.

www.argos-support.co.uk

• The manufacturer disclaims any liability for the incidental or consequential damages.

Guarantor: Argos Ltd

Panel 4 x Screws for Feet

Only use CR2025 3V batteries in this remote

Any defect that arises due to faulty materials or workmanship will either be replaced, whom you purchased the unit.

The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or

 It must be used solely for domestic purpose • The guarantee will be rendered invalid if the product is re-sold or has been damaged by

· Specifications are subject to change without notice.

• The guarantee is in addition to and does not diminish your statutory or legal rights.

EC1N 2HT www.argos-support.co.uk

ON/OFF - press this button to switch the heater on. The heater will automatically select the

UP or DOWN - When the heater is turned on, pressing the '+' or '-' buttons will adjust

temperature falls below the set value, the heater will resume heating.

(+) the set temperature of the heater, with the display showing the corresponding temperature value. The default temperature upon turning on is 35°C, and the adjustable