

Manhattan T1

GETTING STARTED



For assistance,
call us on 020 8450 0005
or visit manhattan-tv.com/support



Check Freeview HD coverage
in your area by visiting
freeview.co.uk

INSTALLING YOUR T1

Unpack the following from your Giftbox:




Remote control




Manhattan T1



2x AAA batteries

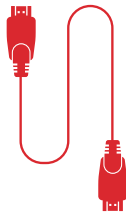

HDMI cable

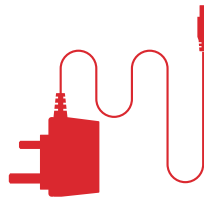

Power adapter

You'll need:

- A TV with an HDMI input
- A coaxial aerial cable



Before you plug in, please read the Safety section of the Important Information booklet.

Connect Up


- Take the coaxial cable from your aerial wall socket and connect it to your T1.
- Next, connect the T1 to your TV using the HDMI cable provided.
- To view Freeview's free and premium streaming channels or receive software updates over the internet, connect the T1 to your router using an Ethernet cable.
- Finally, plug the AC power adapter into a wall socket that is turned off, then connect the other end to the T1.

💡 If you want to use your TV's tuner, connect the Loop Out connector to the Aerial input of your TV. See the back cover for details of using Loop Out in Standby.

💡 If your TV doesn't have an HDMI input, the T1 has an analogue AV output that you should be able to connect to your TV using the Manhattan T1 AV Kit (not supplied). See the included leaflet or contact us for more details.




Switch On

- Remove the battery compartment cover from the back of the remote by pushing the catch. Insert the batteries, matching the + and – symbols to what is marked on the inside of the compartment.
- Turn on the wall socket you connected the Manhattan T1 to and it will switch on.
- Turn on your TV set and choose the HDMI input you connected your Manhattan T1 to. Most TV remotes use a button labelled 'AV', 'SOURCE', 'INPUT' or , with each press cycling through your inputs.

Follow the on-screen instructions to set up your T1. It takes about 5 minutes, which is the perfect amount of time to read the rest of this Guide!

WATCHING TV

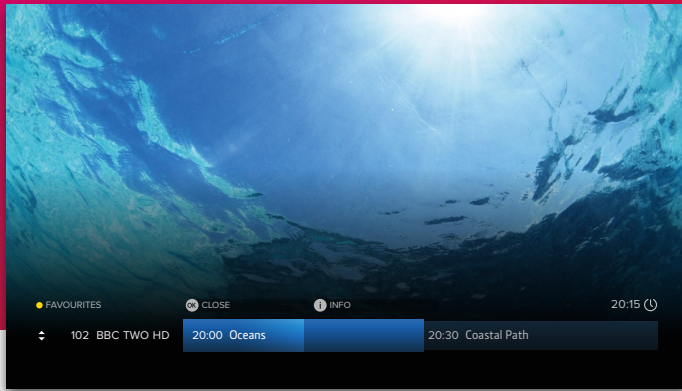

Now & Next Browser

The T1 makes it easy to browse what's on whilst watching full screen TV. Press **OK** to display the Now & Next Browser for the current channel then press **▲** or **▼** to browse other channels.

- To watch programmes on now and change channel, press **OK**
- To set a reminder for programmes on next, press **▶** to highlight it and press **OK** (see 7. Reminders)
- To view detailed info about a highlighted programme, press **i**

Quickly Changing Channel

There are 3 ways to directly change channel whilst watching TV:


1. Press **P▲** or **P▼** to change to the channel above or below
2. Enter a channel number with the number buttons
3. Press **SWAP** to change to the last channel you were watching

Volume & Accessibility



Turn the volume up or down with **V+** or **V-**. To mute and unmute the sound altogether, press **🔇**

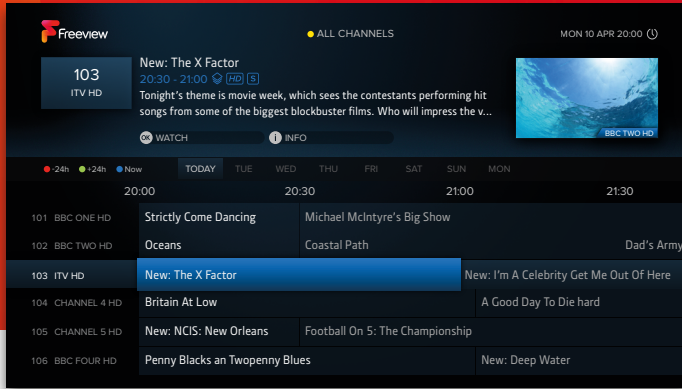


Toggle Subtitles and Audio Description on and off with the **SUB** and **AD** buttons.

TV GUIDE









Basics

Press  to display the full TV Guide and browse what's on across the next 7 days. Move around the Guide using the directional pad , then:

- Press  to watch programmes on now
- Press  to set a reminder for programmes on later (see: 7. Reminders)
- Press  to view detailed info about a highlighted programme

Quickly Navigating





As there are lots of channels and programmes to browse, you can get around more quickly by:

- Pressing  and  to page up and down
- Holding  or  to skip through time
- Pressing  or  to skip 24 hours backwards or forwards


When you've browsed ahead, simply press  to skip back to what's on now.


Lists

The TV Guide can be filtered to show only HD, Radio or your Favourite Channels:





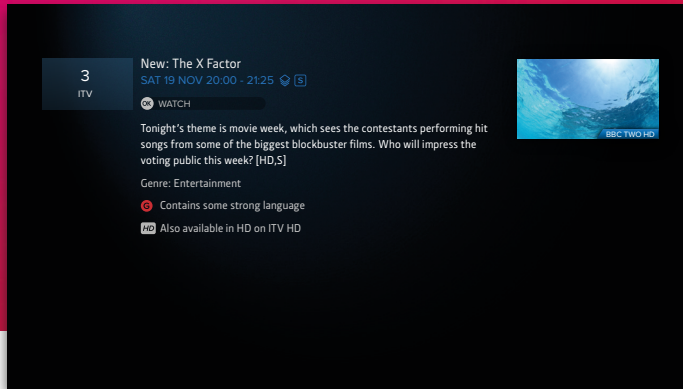


- Press 
- Choose a list using  or 
- Press  to select it

PROGRAMME INFO



The info screen displays the description, genre and other key information for a programme. It is displayed by pressing  when watching TV, using the Now & Next Browser or the TV Guide.

The full list of icons that can be displayed are:

-  Part of a series
-  In HD
-  Surround sound audio
-  Programme is in two or more parts (e.g. a movie split by the evening news).
-  Subtitles
-  Audio Description
-  Guidance

MENUS



Press **MENU** to display the Main Menu. Use **←** & **→** to highlight an option and **OK** to select it.

Press **↶** to go back to a previous menu or press **EXIT** to return to full screen TV.

The Main Menu has the following options:

TV Guide

View what's on across the next 7 days. You can also press **GUIDE** on the remote (see section 2, TV Guide).

Schedule

View and cancel reminders that have been set.

Channels

Manage your favourite and protected channel lists or choose channels for deletion (see section 5, Channels).


Settings

View and modify the T1's settings.

Help

View Help with using the T1 and detailed System Info for troubleshooting.

CHANNELS

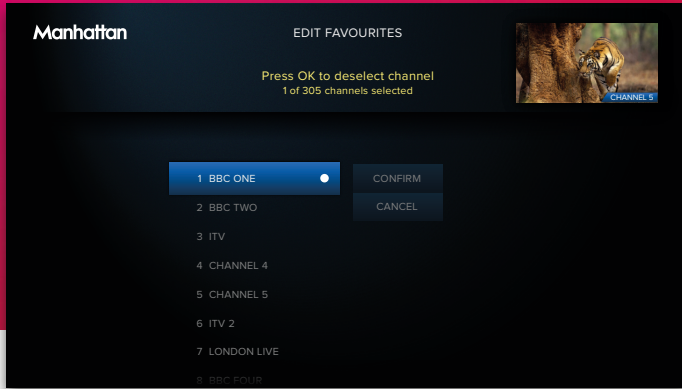

Favourite Channels

Select 'Edit Favourites' in the Channels Menu to choose channels for your favourites list. As explained in section 2, TV Guide, your favourites can be used to filter the TV Guide. They can also be quickly browsed using the Now & Next Browser:

- Whilst Watching TV, press **OK** to display the Now & Next Browser
- Notice in the top left of the browser it shows: **FAVOURITES**
- Whilst the Browser is displayed, each press of **OK** cycles through your favourite channels

Protected Channels

Protected Channels are hidden and can only be shown by entering your PIN. To choose channels to protect, select 'Protected Channels' in the Channels menu and then enter your PIN.

When you want to temporarily show your protected channels, highlight 'Protected Channels' in the Channels Menu and then select the 'Show' option that appears to the right. After entering your PIN, all Protected Channels will be shown until the T1 next enters standby or you choose the option to hide them again.

Deleting Channels

Channels can be deleted entirely by selecting the 'Delete Channels' option in the Channels Menu. If you want to restore them in the future, select the 'Smart Retune' option in the Tuning section of Settings.

REMINDERS



Using Reminders

When a programme is highlighted in the TV Guide or the Now & Next Browser that is on later, press **OK** to add a reminder. To cancel it, just press **OK** again.

Reminders are displayed 60 seconds before a programme is scheduled to start. The T1 has an option in the Tuning section of Settings called 'Reminder AutoTune' that is turned off by default, meaning:

- A reminder will only be displayed if the T1 is on
- You must choose to watch the programme within 60 seconds to change the channel
- If you don't, the reminder will be cancelled and the channel will not change

When 'Reminder AutoTune' is turned on:

- If the T1 is in standby it will turn on for the reminder and the channel will change automatically
- If the T1 is on the reminder will be displayed as normal but at the end of the 60 seconds the channel will change automatically

The Schedule

All reminders that have been set can be viewed in the Schedule Menu by pressing **MENU** and selecting 'Schedule'.

YOUR REMOTE



Turns the receiver on & off



Increases or decreases the volume



Mutes & unmutes the receiver's sound



Turns Audio Description On & Off



Turns Subtitles On & Off



Switches to the next or previous channel

Moves one page up or down the TV Guide & Schedule



Opens the Main Menu



Displays programme information



Chooses options in menus



Navigates the menus



Displays Now & Next when watching TV

Selects highlighted options in menus

Performs the action displayed on-screen



Opens the TV Guide



Swaps to the last channel viewed



Returns to the previous menu or if there is no previous menu, returns to full screen TV



Takes you back to full screen TV



Displays teletext service, if available



Enter a channel number

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
There's no picture or sound and even the T1's menus can't be seen	The HDMI/AV cable may be disconnected.	Check the HDMI or AV cable connections between the T1 and your TV.
	The input the Manhattan T1 is connected to may not be selected on your TV	Select the correct HDMI/AV input (see your TV's manual for guidance).
	Your TV may not correctly communicate the resolutions it is capable of and an incompatible resolution may be selected	<ul style="list-style-type: none"> • Turn the T1 on and wait 30 seconds • Press MENU • Press & Hold '0' for 5 seconds • The T1 will try each of the 3 HD resolutions for 15 seconds in this order: 1080p, 1080i and 720p. Select 'Confirm' when you can see the picture.
The picture and sound keep breaking up or 'No signal' is displayed on screen	Inadequate signal from your aerial.	<p>You can check your signal in the System Info section of Help. If it's weak or not present, get a professional to check your installation: your aerial may provide a better signal if it is realigned or moved somewhere else. We don't recommend using an indoor aerial.</p> <p>As a last resort, try using a signal amplifier or booster to improve reception.</p>
	Some antennas that are installed with a signal amplifier need a power supply from the receiver because they do not have their own.	If you have connected a signal amplifier, you can have the T1 supply it with a +5V DC supply by selecting the option in the System section of Settings.
Channels not working after moving to a new home	The new home is in a different Freeview transmission area.	Select 'Smart Retune' in the Tuning section of Settings.
The TV picture is not HD	You may be watching an SD channel or you are using the AV connection to your TV.	Connect the receiver with an HDMI cable to an HD-Ready TV and select an HD channel.
Your remote control does not work	<p>Receiver is not turned on or its front is obstructed.</p> <p>Batteries are weak in the remote control.</p>	<p>Ensure the front of the receiver is not obstructed.</p> <p>Replace batteries in the remote control.</p>
Your T1 switches off after 3 hours	The T1 is set to go to standby by default after 3 hours without interaction.	Set Auto Standby to Off in the System section of Settings.
You can't remember your PIN	You've forgotten it or someone has changed it.	Your PIN can be reset with the master PIN. Please contact us.

SOFTWARE UPDATES

From time to time we may release software updates to add features or address bugs. When registering your T1, unless you opt-out we will contact you by email whenever a new version is released.

The T1 will automatically check for an update each night and install one if it's available. This can be disabled by turning 'Automatic Updates' to off in the System section of Settings. You can also manually check for an update by selecting 'Check for Update Now'.

Please note that unless the update is considered critical, it will only be released over the internet and not broadcast over the air, so we recommend keeping your T1 connected to your internet router by Ethernet cable. If you can't connect your T1 to your router using an Ethernet cable, the update can be installed using USB instead. Full information about the update and how to install it via USB will be available on our website.

ENERGY SAVING

Please note the following is required to meet EU requirements:

1. Loop Out is disabled in standby by default

The Loop Out connector is disabled by default when in standby. It can be enabled in the System section of Settings.

2. Auto Standby is enabled by default

The T1 will go into standby automatically if no buttons are pressed for 3 hours. The length of Auto Standby can be changed or disabled altogether in the System section of Settings.

The details in this guide are correct at the time of going to print and are for guidance only. Product features outlined are subject to change at any time without notice. © 2017 Manhattan TV Limited. Manhattan is a registered trademark of Manhattan TV Limited; registered company no. 2247629. The FREEVIEW words and logos are trade marks of DTV Services LTD. © DTV Services Ltd. v2 (13/2/17).