


Cuggl Elder Twin Pushchair

Assembly & User Instructions- Please keep for future reference

701/9348

cuggl 

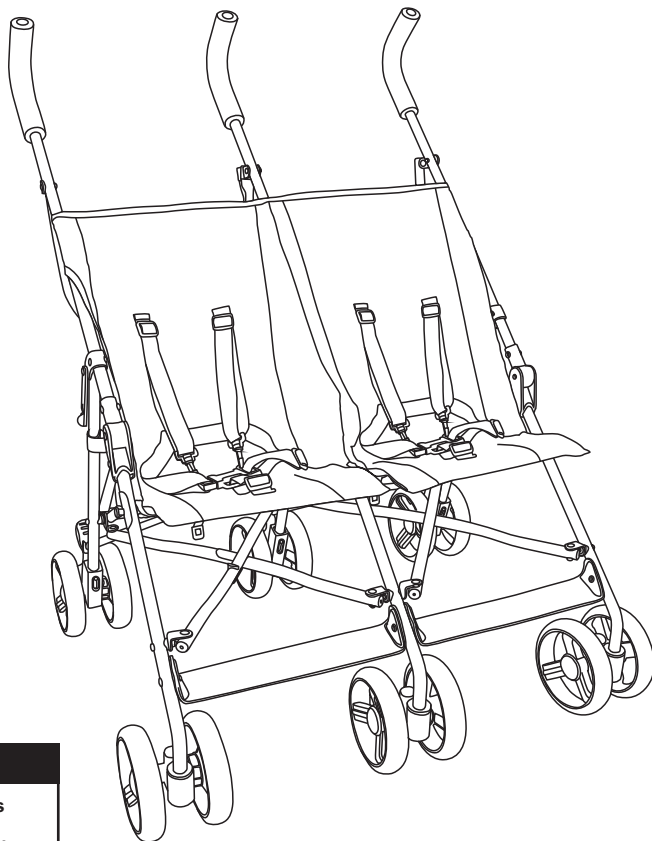

Important

Age: 7-36 months
Maximum user
Weight: 15kg each
seat

Important-please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

 
If you have any questions, call the **Customer Helpline: 03456 400 800**

Parts

If you have any questions,
call the **Customer Helpline: 03456 400 800**

Please check you have all the parts listed below:

Stroller x1



Front wheel X3




IMPORTANT - KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Thank you for choosing our product. Please always read all the instructions provided carefully before use and remember, your child's safety may be affected if you do not follow these instructions. This seat unit is not suitable for children under 6 months. The maximum load of the pushchair is 30kg (Maximum 15kg in each seat), never overload.

Pushchair was designed for two children, one child each seat.

- **WARNING:** Never leave your child unattended.
- **WARNING:** Always use the restraint system.
- **WARNING:** Make sure every locking device is locked before use.
- **WARNING:** Hanging or putting things on the handle could damage the stability of the pushchair.
- **WARNING:** Never use the bumper bar as a hand lift to lift the stroller and your child in case any damage could happen.
- **WARNING:** Don't leave the pushchair at a slope.
- **WARNING:** Always use braking device when putting in or picking up the child.
- **WARNING:** Do not fold the stroller when the child is on the pushchair.
- **WARNING:** Do not detach the stroller and adjust any accessories when the child is on the stroller.
- **WARNING:** Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
- **WARNING:** To avoid injury ensure that our child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** The parking device shall be engaged when placing and removing the children.
- **WARNING:** This product is not suitable for running or skating.


Name of parts

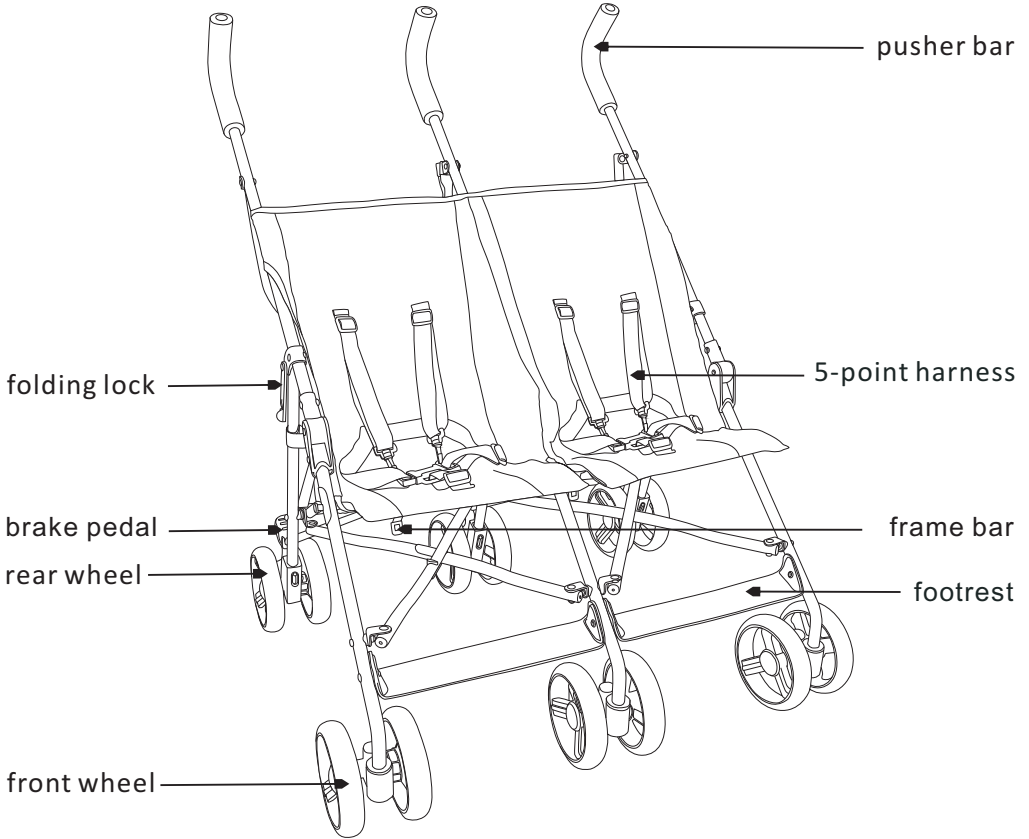

Assembly Instructions


Step 1 Unfold the stroller

1. Locate the folding lock on side frame of the stroller, pull to release the folding lock.
2. Position the stroller upright on its rear wheels. Grasp a handle with one hand. With your other hand, push down the front of the stroller to open.
3. Press the frame bar until it "clicks" into place.

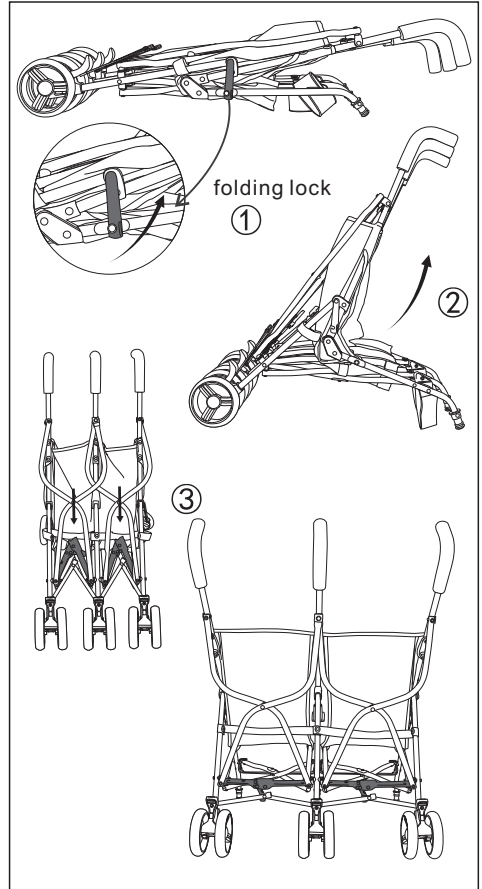

Step 2 Assemble the front wheels

1. With the word UP facing toward the front wheel caster onto a front leg. Make sure you hear a "click".
2. Pull on the front wheel assembly to make sure it is securely attached to the front leg.
3. Repeat this procedure to attach the other front wheel assemblies.

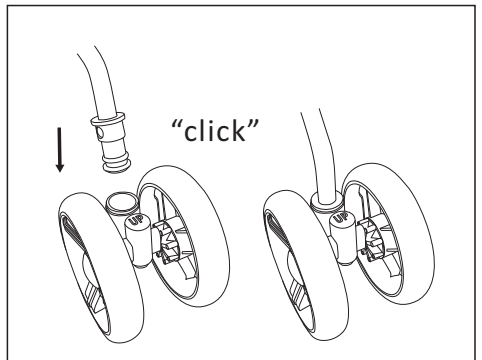

Use and operation after assembly

To lock the front wheels


To lock the rear wheel brakes:

Press the three linked brake pedals down until they “click” into the locked position.

Push the pushchair forward and backward to make sure the three brake pedals are pressed down completely.

To unlock the rear wheel brakes:

Lift the linked brake pedals until they “click” into the unlocked position.

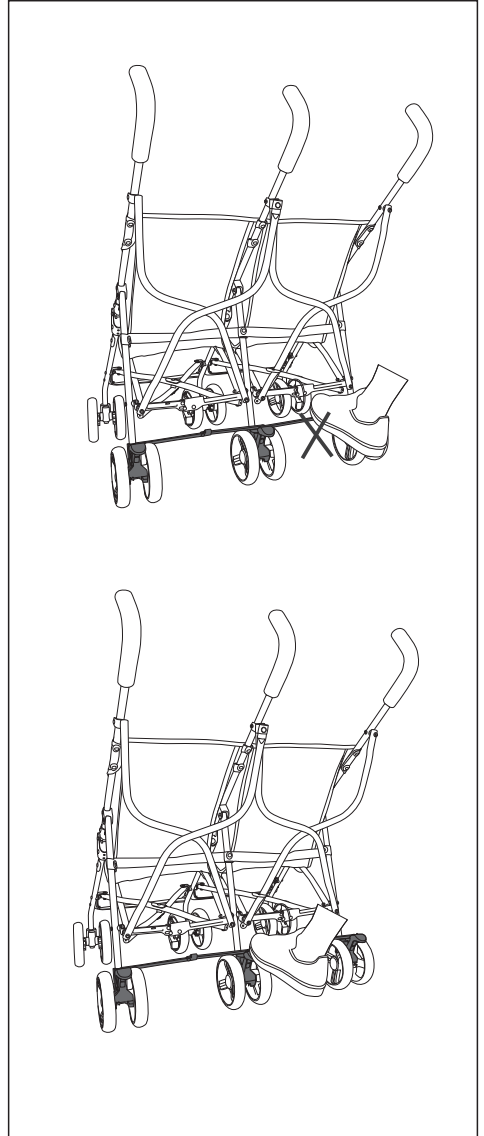

Use and operation after assembly


Use the safety belt

Harness & Buckle:

To release the harness:

Press the buckles ① and pull them ② apart.

To fasten the waist harness, insert both buckle clips into each side of the buckle until they "click" into correct position. To adjust the shoulder straps move the slides as shown on.

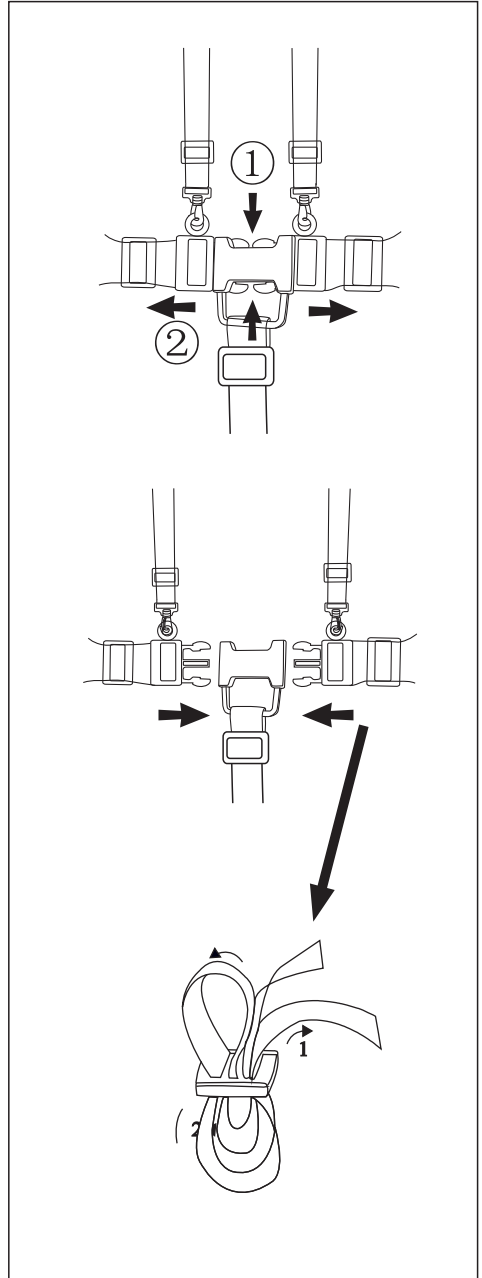

Use and operation after assembly

To fold the stroller

1. Release the frame bar

With your foot, slide the frame release to the left, then push up on the frame bar.


Make sure to do so on the both sides.

2. Fold the stroller

Lift the front wheel toward the handle bar.

3. Hook the folding lock

Slide the folding lock onto the side frame to secure in the folded storage position.

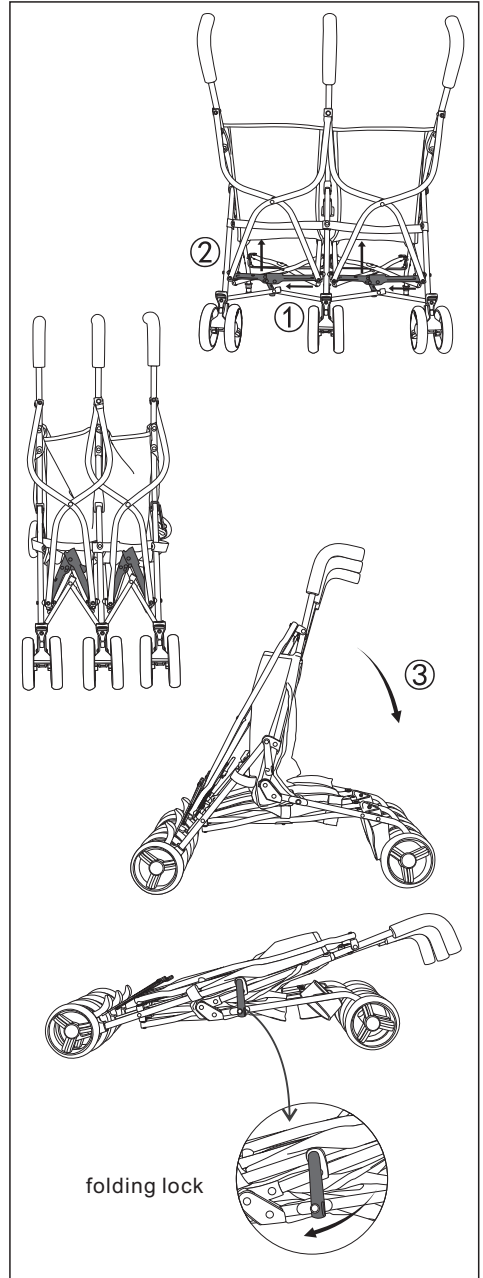

Care and Maintenance

General

This pushchair was designed and manufactured with qualified materials and craftsmanship.

Always use the safety harness.

Inspect regularly for:

- Worn parts, torn materials or stitching
- Loose screws, bent or broken frame part
- Broken, damaged or missing parts.

Should any of the above be evident do not use and contact the Helpline: 03456 400 800 for advice.

Care and Maintenance:

Fabric parts may be cleaned in accordance with the fabric care labels. Do not machine wash.

Seat: Sponge clean only

Canopy/Basket: Hand wash only.

Do not leave the stroller exposed to heat i.e. by a radiator or indirect sunlight.

If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed down with fresh (tap) water as soon as possible afterwards. Do not fold or store the product while wet and never store in a damp environment as this can cause mildew to form.

If you need help or have further question, call the Customer Helpline **03456 400 800**

This pushchair has been designed to comply with the EN1888:2012.

Country of origin: China

Argos LTD, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW