



SEKONDA

Instruction Guide and 2 Year Guarantee

IS50

SERVICE AND REPAIRS

Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components.

IMPORTANT - Not covered by Guarantee

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetrations, except in watches marked as 'Water Resistant'.
4. General wear and tear.
5. Unauthorised repairs.

SERVICING AND REPAIRS UNDER GUARANTEE

Please post your watch, together with the guarantee slip and a brief note to explain the nature of the fault, by Registered Post or Recorder Delivery to the address shown. DO NOT send the presentation box as this will NOT be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE

Available at a reasonable charge after an estimation has been sent by T.P. (UK) Ltd. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

Important Note

If, after reading this instruction guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.

WATER RESISTANCY

If your watch is water resistant, it will clearly state 'Water Resistant' or have a static water pressure indication (e.g. 30/50/100/200 metres) on the dial and/or case back. If it is not marked as water resistant, it should not be allowed to come in to contact with water or be worn in conditions that could expose it to moisture (e.g. washing, heavy rain etc). Certain chemicals in water may damage the watch seals. To maintain water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by T.P. (UK) Ltd.

IMPORTANT

Buttons must not be operated while in contact with water.

WATER RESISTANT or RESISTANT TO 30 METRES

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used whilst bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming.


WATER RESISTANT TO 100 METRES

As 50 metres plus pool side diving and snorkelling, but NOT high board diving or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but NOT high board diving.

DUAL TIME WITH DATE

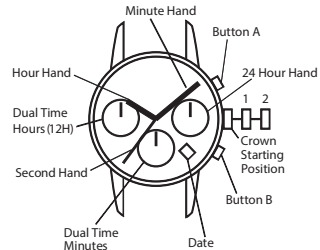

Date of Purchase

Retailers stamp if required or full name and address

Attach Receipt or Proof of Purchase;
failure to attach may invalidate guarantee.



**Guarantee**

Block Capitals

Name.....

.....

Address.....

.....

.....

Post Code.....

Daytime Phone.....

For free bracelet adjusting service, return the watch to the address below.

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester LE18 2EZ

This guarantee should be retained by the owner of the watch and should be sent to T.P. (UK) Ltd. together with the watch and £6.00 to cover the handling and postage when service under guarantee is required. Please refer to servicing and repairs under guarantee for further information on service under guarantee.

This guarantee does not affect your statutory rights.

DUAL TIME WITH DATE**SETTING THE TIME**

1. When the second hand reaches the 12 position, pointing straight up, pull the crown out to position '2'.
2. Turn the crown clockwise or anti-clockwise to adjust the hour and minute hands until your desired time is shown.
The 24 hour hand moves correspondingly with the hour hand. The 24 hour hand should display the same time as your watch
3. Push the crown back in to the starting position.

Important Note

When you set the time, you must make sure that the AM /PM is set correctly. The date changing indicates that it is midnight.

SETTING THE DATE

1. Pull the crown out to position '1'.
2. Turn the crown clockwise until your desired date is shown.
3. Push the crown back in to the starting position.

Important Note

DO NOT attempt to set the date between 9:00pm and 1:00am as the date cycle is already in progress. This can cause the date to change incorrectly. If you do need to change the date during this period of time, first change the time to any time that is not between 9:00pm and 1:00am; Then set the date. After you have set your desired date, you may re-set the time.

DUAL TIME WITH DATE**RE-ALIGNING THE DUAL TIME HANDS****Important Note**

In some cases the dual time hands may be out of alignment. ALWAYS re-align the dual time hands before setting the dual time - as instructed on the following page. To re-align the dual time hands, please follow the instructions below.

1. Pull the crown out to position '2'.
2. Press and hold the 'A' & 'B' buttons at the same time for more than 2 seconds. Release both buttons 'A' & 'B' at the same time. *Both the 12hr hand and the dual time minutes hand will rotate and then bounce back to the positions at which they started*
3. Press the 'B' button repeatedly to turn the dual time minutes hand clockwise or press the 'A' button repeatedly to turn the dual time minutes hand anti-clockwise. Continue to turn the dual time minutes hand clockwise or anti-clockwise until it reaches the 60 position. (Pointing straight up).
4. Press and hold the 'B' button to turn the 12hr hand clockwise or press and hold the 'A' button to turn the 12hr hand anti-clockwise. Continue to turn the 12hr hand clockwise or anti-clockwise until it reaches the 12 position. (Pointing straight up). *Both the 12hr hand and the dual time minutes hand will turn at the same time*

DUAL TIME WITH DATE**Re-aligning The Dual Time Hands – Continued**

5. Repeat step 3 to re-align the dual time minutes hand back to the 60 position, after you have aligned the 12hr hand. *ALWAYS choose the shortest route back to the 60 position*
6. Push the crown back into the normal position.

Important Note

The dual time minute hand may rotate one whole time every -time you add or subtract 15 minutes - while re-aligning the dual time hands. Do not be alarmed as this is a normal function.

SETTING THE DUAL TIME**Note**

When you are in another country/area with a different time zone, adjust the dual time hands to show the local time by following the instructions below.

Dual Time Hour Setting

1. Start with the crown at the normal position.
2. Adjust the 12hr hand by pressing the 'A' button (-1 hour) or by pressing the 'B' button (+1 hour) until your desired hour is shown. *Every time you press the 'A' button (-1 hour) or press the 'B' button (+1 hour) the dual time minutes hand will rotate 4 whole times. Do not be alarmed as this is a normal function*

DUAL TIME WITH DATE**Setting The Dual Time – Continued****Dual Time Minute Setting**

1. When the second hand reaches the 12 position, pointing straight up, pull the crown out to position '2'.
2. Adjust the dual time minutes hand by pressing the 'A' button (-1 minute) or by pressing the 'B' button (+1 minute) until your desired time is shown. *The dual time minutes hand will rotate 1 whole time every time 15 minutes is added or subtracted by pressing the 'A' & 'B' buttons – while setting the dual time minutes* *The 12hr hand may also rotate in accordance with the dual time minutes hand. Do not be alarmed as these are normal functions*
3. Push the crown back in to the normal position.