 




# Russell Hobbs

## UV Pro Handheld UV Vacuum Cleaner

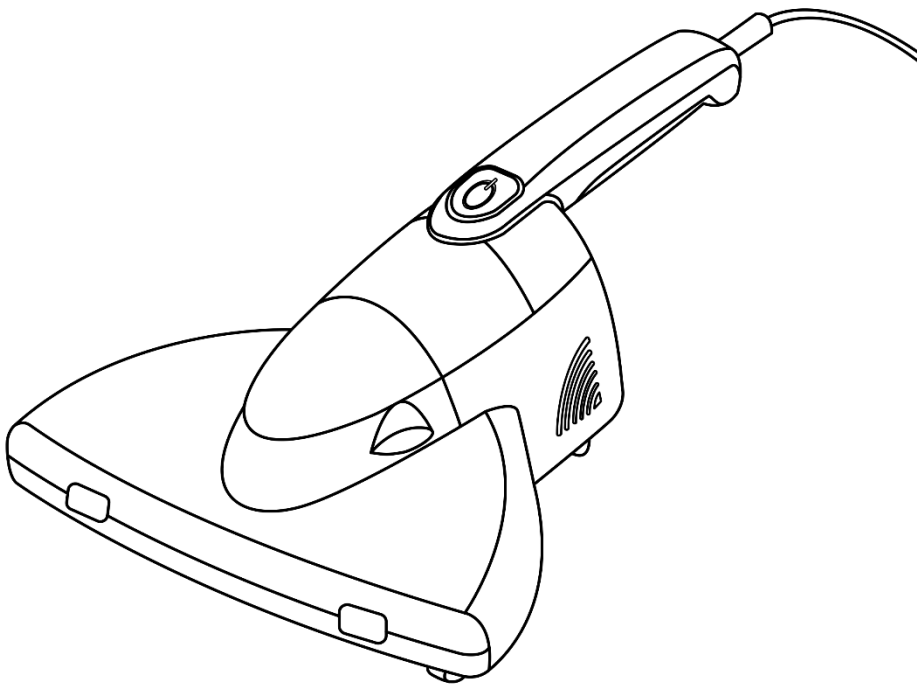

**Model Number: RHBV1001**

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**

**PLEASE RETAIN**  
**FOR FUTURE REFERENCE**

# Contents

	Page
Safety instructions .....	2-5
Feature diagram .....	6
Unpacking your vacuum cleaner .....	7
Assembling your vacuum cleaner .....	8
How to use your vacuum cleaner .....	9
How to empty the dust container and clean the filter .....	10
How to change the UV bulb .....	11
How to change the fuse .....	12
Troubleshooting .....	13
Connection to the mains supply .....	14
Notes .....	15-17
Guarantee & Customer Services .....	18
Spare Parts .....	19

Thank you for purchasing your UV Pro Handheld Stick Vacuum.

To get the best from your new cleaner, take a few moments to read these instructions and keep them in a safe place for future reference.

Should you require any further assistance, our friendly Product Care team will be happy to help.

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**

# Safety instructions

---

**IMPORTANT SAFETY INSTRUCTIONS**  
**READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

## **WARNING:**

- **It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.**
- **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- **This product is intended for household use only. Do not use outdoors.**
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.**
- **Do not operate this appliance for anything other than its intended use.**
- **Do not immerse in water or other liquids for cleaning.**

# Safety instructions

---

- Do not direct at people, animals, electrical outlets, or equipment containing electrical components.
- Unplug from outlet when not in use. Do not leave the cleaner unattended while plugged in.
- Do not use with damaged cord or plug.
- Do not use vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water.
- Keep the vacuum cleaner away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.
- Do not handle the vacuum cleaner with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer.
- Do not let the cord hang over the edge of the worktop, or touch hot surfaces.

 
# Safety instructions

---

- This cleaner is intended for internal household use only, do not use outside or for anything other than its' intended purpose.
- Do not use this vacuum to pick up water or any other liquids, combustible substances or hot/burning objects.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the cleaner. Be aware that loose clothing or hair may become trapped in the cleaner if improperly used.
- Before use, ensure that all of the air vents of the cleaner are clear and there is no restriction of air flow.
- Caution: Exhaust air discharged from the sides of the cleaner may extinguish a gas fire, pilot light, or disturb ashes in an open fire. Always avoid directing the cleaner toward naked flames.
- Important: This cleaner has a thermal safety device which automatically cuts off the power supply in case of over heating. If the safety device has switched the cleaner off, unplug from the mains and allow the cleaner to cool down. Once the cleaner has cooled it can be plugged back in to the mains and used as normal. This takes approximately 15 minutes to reset.

# Feature diagram

---

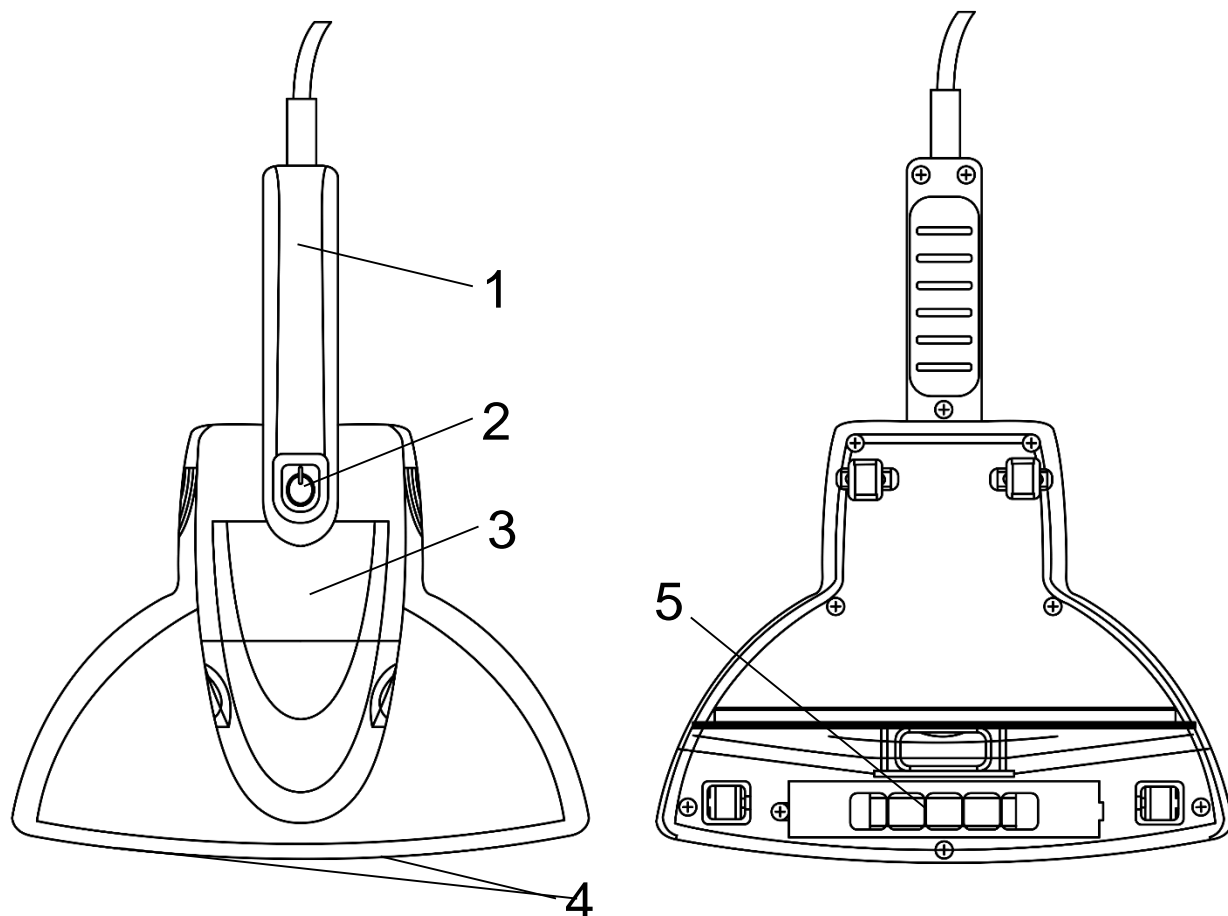

1. Handle
2. Power Switch
3. Dust Container
4. LED Light
5. UV Lamp

# Unpacking your vacuum cleaner

---

## **Before using your vacuum cleaner**

Remove all packaging and lay out the separate components.

 
Check the unit after unpacking for any visual damage such as:

- Misaligned or damaged parts
- Damage to the main body and separate components
- Damage to the plug or cable.


If you can see any damage do not use the vacuum cleaner and contact customer services

# Assembling your vacuum cleaner

1. Ensure the HEPA filter is correctly inserted in the Dust Tank.

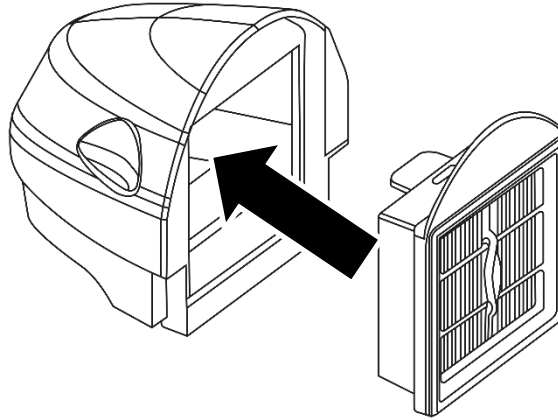

 2. Insert the Dust Tank into the Vacuum Cleaner Unit.

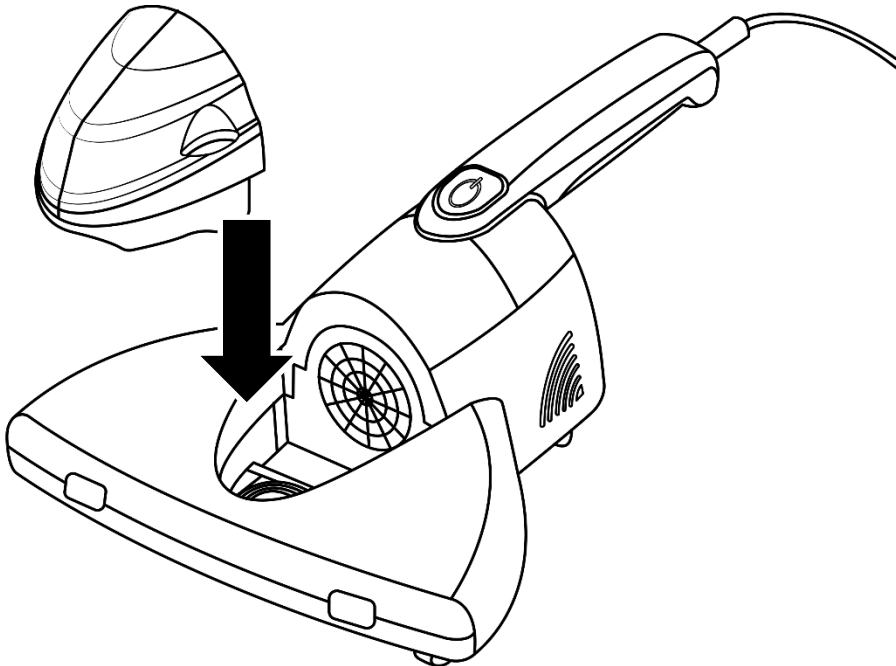




# How to use your vacuum cleaner


*The Russell Hobbs UV Pro is designed for use on soft furnishings such as mattresses, sofas, rugs and upholstery. It's purpose is to tackle the allergens such as dust mites, bed bugs, bacteria and pollen - all things that may worsen the symptoms of asthma, eczema and other irritations.*

*The UV-C light attacks the DNA of bed bugs, dust mites and bacteria such as E-Coli, which prevents them from reproducing and spreading, effectively sterilising your mattresses and soft furnishings*

 1. Plug the power cord into a wall socket.

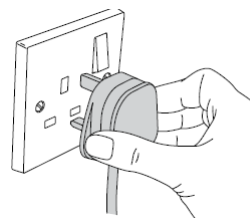

 2. Push down the power switch on the top of the machine to switch the cleaner on and off.

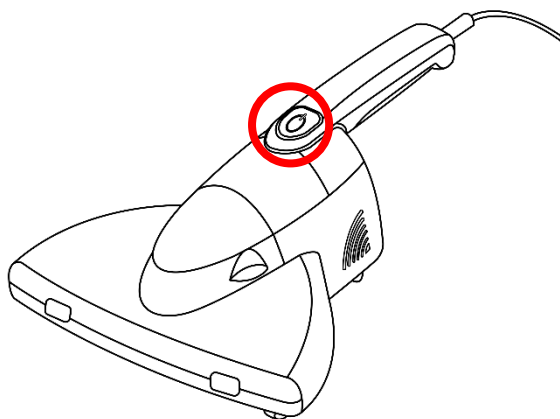


3. Ensure the two large wheels on the underside of the product are in contact with a flat surface, such as a mattress, then slowly move the vacuum cleaner back and forth over the surface.

**Important:** The UV light will only activate if both large wheels are in contact with the surface being vacuumed. This function is indicated by the LED lights on the front of the unit.


# How to empty the dust container and clean the filter.

 Ensure the unit is switched off.  
Make sure to empty the dust container before it gets full.  
Grasp the dust container and pull upwards.

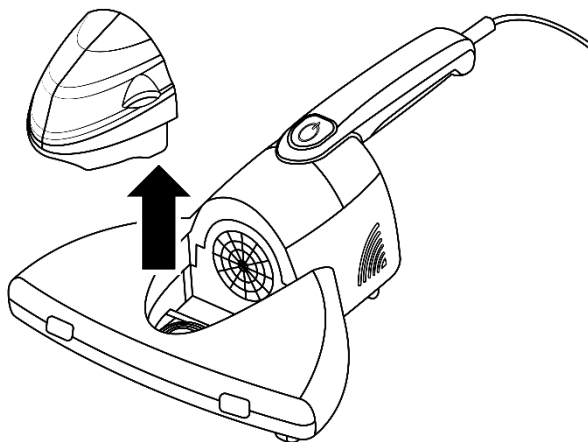


Pull out the HEPA filter and tap the dust container over a bin to empty.

 **Important:** You may wish to empty the dust container outdoors as emptying may create a dust cloud.

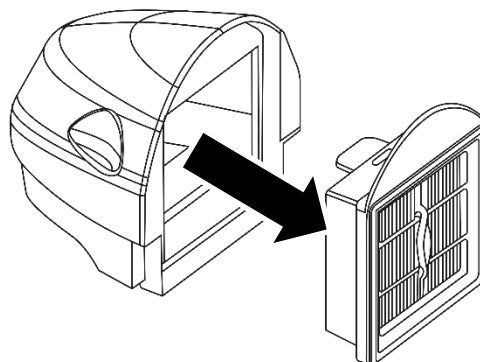

 
Remove the sponge filter from the HEPA filters. To clean, remove excess dust from the filter using a soft brush. Wash in warm water and allow to dry for 24 hours.

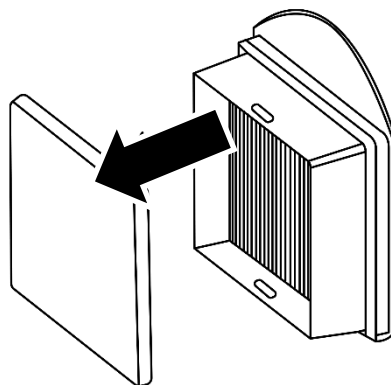


Once dry, replace the filters and the dust container into the vacuum cleaner unit.

# How to change the UV bulb

 To replace the UV bulb unscrew the bulb cover and pull the cover away.

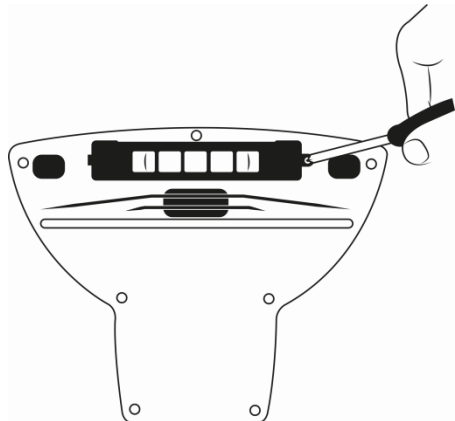


With both of your thumbs placed on each end of the bulb rotate downwards to unlock it until you can see the pins. Slightly pull out the terminals to remove the bulb. To install the new bulb align the pins of the bulb to the holder at each end and slot the bulb into place. Using your thumbs at each end of the bulb rotate the bulb upwards this time to lock the bulb into the holder. Install the bulb cover and screw.

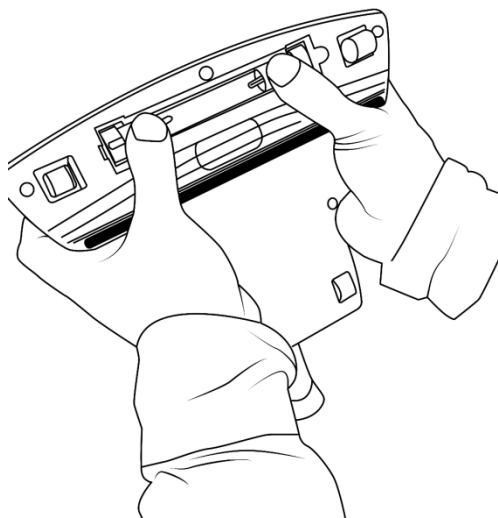 

# How to change the fuse

 - 1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
- 2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
- 3. Replace the fuse and replace fuse holder, pushing down until locked into place.

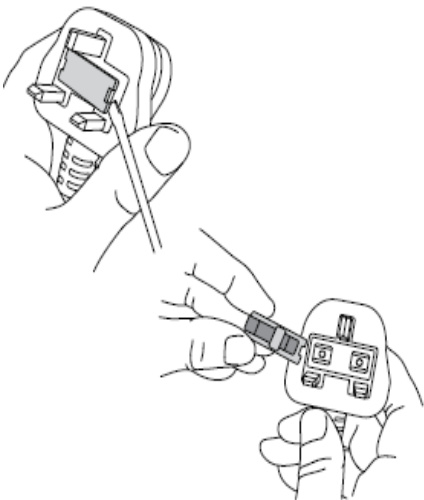

**Important:** Only ever use 13 amp fuses.

Supplier Trade Mark	Russell Hobbs
Model Number	RHBV1001
Rated Voltage	220 – 240V
Rated Power	350W

# Troubleshooting

---

Problem	Solutions
The vacuum cleaner is plugged in but does not work	Check the power cord and plug are not damaged. Check and replace the fuse in the plug
The UV light is not working	The UV light will only work when both wheels at the front of the product are in contact with a flat surface.
The suction is decreasing and the vacuum cleaner is not picking up dirt	Check if the dust container is full, if so, empty it Clean the filters
Vacuum cleaner is overheating	Check that the filters are not blocked. If so, clean them
The air coming out of the vacuum cleaner smells	Clean the filters and dust container Ensure the filters have been left to dry for 24 hours before refitting back into the vacuum cleaner

# Connection to the mains supply

---

## **WARNING:**

This appliance is designed to operate from a mains supply of AC220V - 240V ~ 50/60HZ.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.

If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

BLUE-NEUTRAL

BROWN-LIVE



**DANGER**  
**Electric**  
**Shock Risk**

# Notes

---

# Notes

---



# Notes

---

# **GUARANTEE AND CUSTOMER SERVICES**

At Russell Hobbs, we take all our customer feedback seriously.

**Feel free to contact our Product Care Team, on 0345 209 7461**

**Monday – Friday: 8am-8pm & Saturday: 9am – 1pm,  
who will be more than happy to assist you.**

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

## **The following conditions apply:**

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

**This does not affect your statutory rights.**

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**

# SPARE PARTS

To check the availability of the following spare parts, simply contact our friendly Customer Services team using the details provided at the bottom of this page.

Sponge and HEPA Filters

Replacement Bulb

For Customer Services & Spare Parts please call **0345 209 7461**  
Opening times: Monday - Friday 8am – 8pm & Saturday 9am – 1pm  
Or visit us at **[www.productcare.co.uk](http://www.productcare.co.uk)**



# Russell Hobbs

For Customer Services & Spare  
Parts please call

**0345 209 7461**

Opening times: Monday - Friday  
8am – 8pm & Saturday 9am – 1pm

Or visit us at

**[www.productcare.co.uk](http://www.productcare.co.uk)**

Revision 1a

**Model: RHBV1001**

Made by G2S Ltd  
under license.

G2S Limited, Wigan,  
WN2 4AY



This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or ask in store for details.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

