


CUGGL FOLDING HIGHCHAIR

IMPORTANT! KEEP THE INSTRUCTION FOR FURTHER REFERENCE

709/4143

cuggl 

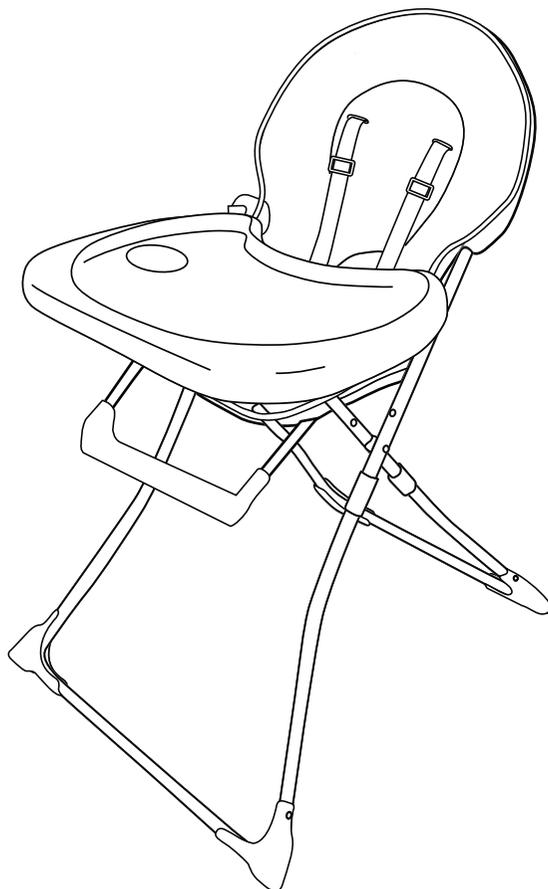

Important

Age: 6-36m
Maximum user
weight: 15kgs

Important-Please read the instruction fully before starting assembly

If you need help or have damaged or any further question, call the Customer Helpline 03456 400 800

Important information

IMPORTANT ! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE .

WARNING!

- Do not use the highchair if any part is broken, torn or missing.
- The product is intended for children able to sit up unaided and up to 3 years or maximum weight of 15kg.
- Do not use the highchair if any of the components are not correctly fitted and/or adjusted.
- Never leave the child unattended in the highchair even for the shortest time.
- Always use the restraint system.
- Be aware of the open fires and other sources of strong heat in the vicinity of the products.
- Ensure all users are familiar with the products operation.
- The highchair should be opened and folded easily. If it does not fold easily, do not force the mechanism , stop and read the instruction.
- Only use the highchair on flat and stable ground.
- Ensure your highchair is fully erected before placing your child inside.
- Ensure children are clear of all moving parts before making any adjustments.
- Do not move the highchair with your child inside.
- Keep your children away when unfolding and folding the products to avoid injury.
- Falling hazard: Prevent your child from climbing on the products.
- Any additional hazards such as electrical cords should be kept out of reach of children.
- Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

Complies with EN 14988 :2017

Introduction


This cleverly designed highchair folds flat for ease of storage. It has a large tray with a cup holder, a five point integral harness and its vinyl seat unit is easy clean to help maintain a hygienic environment for your child.

List of parts


The following is contained in one carton:

1.1 Seat unit.	X 1
1.2 Front leg	X 2
1.3 Rear leg*	X 2
1.4 Seat back	X 1
1.5 Crotch	X 1

* Please note that the rear leg is narrower at the top.

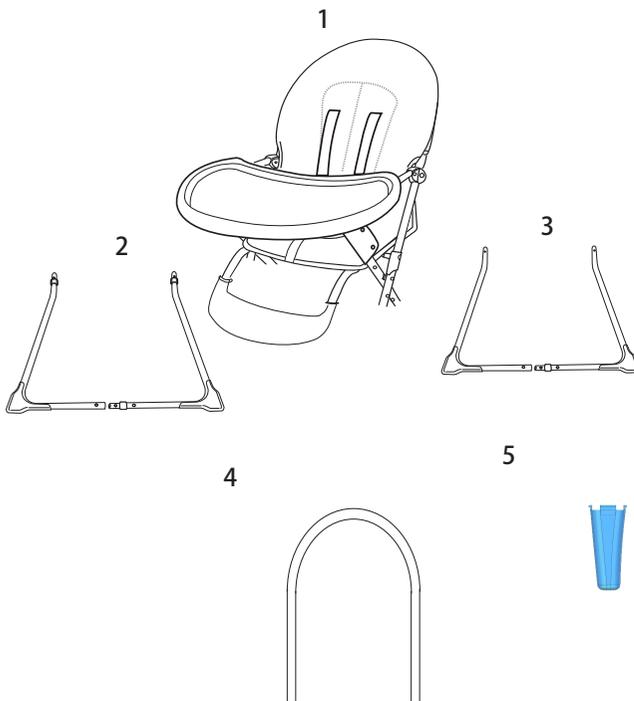

Fitting the seat back

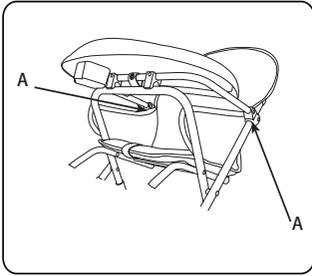


2.1 Unclip the press studs (A) on either side of the highchair as shown.

2.2 Slide the curved part of the seat back bar into the fabric pocket on the seat back whilst the highchair is still folded.


2.3 Slide the two bar ends into the seat frame tubes and push in the spring pips, continuing to push the bar ends until the pips appear in the holes.

2.4 Secure the seat into position by re-clipping the seat to the tube using the press studs on each side

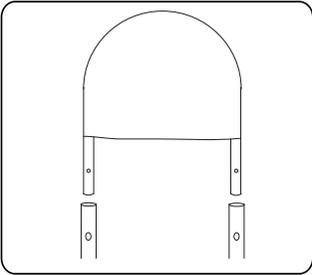


2.5 Ensure this is secure.

Opening your highchair

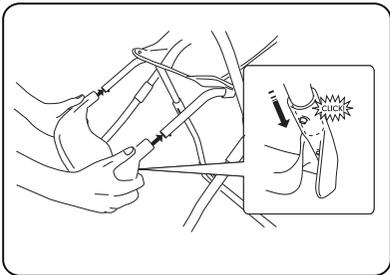


3.1 Please install the footrest on the frame. It is assembled completely when you hear "click"

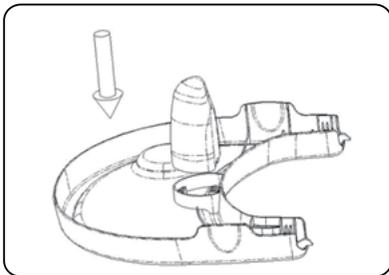

3.2 Insert the crotch into the tray, push it firmly until the corresponding pieces click together.



Opening your highchair

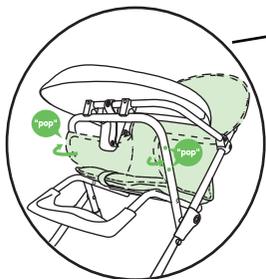

4.1 When you open the front tray, please fix the side seat panel stud by crossing the webbing on the frame.

4.2 Please make sure that the front tray can be locked on the frame by the plastic connecting parts.


4.3 Last step to assemble the front tray : Fix the stud under the tray by crossing the webbing .

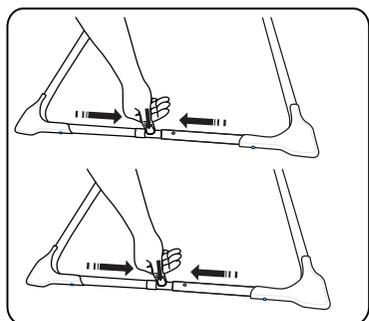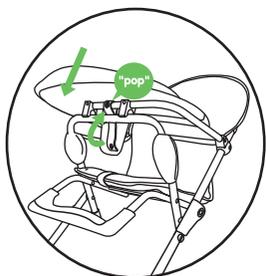

5.1 Insert the front leg with plastic part into another front leg , fix it by a screw.

5.2 Insert the rear leg into another rear leg , fix it by a screw.

Fitting the legs

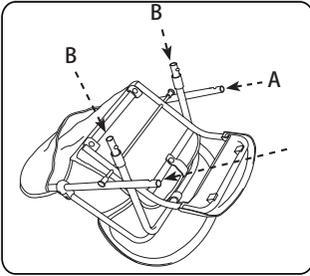

6.1 The front and rear legs have a different width. Please be aware that the rear leg is narrower at the top, than the front leg.

6.2 Identify which leg is the rear and which is the front.


6.3 Remember that the front leg attaches to the back of the highchair (A) whilst the rear leg is attached to the front (B).

6.4 Push a pair of the legs a little way into the seat frame tubes and push in the spring pips, continuing to push the legs until the pips appear in the holes.


6.5 Repeat this process until each leg is fitted securely.

6.6 Should the highchair need to be taken apart, gently push in the spring pips with a small screwdriver and evenly ease out the leg assemblies.

6.7 The fit of the legs in the frame is very tight for added security. Do not force the legs into position, but apply an even and constant pressure.

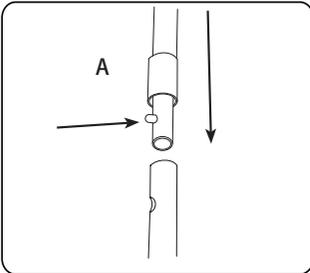

To operate harness

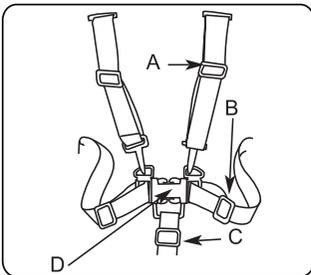


7.1 To fit harness insert both waist clips into clasp (D). Listen for the “click”.

7.2 To release the harness press the top and the bottom of the waist clips and pull apart. The shoulder straps can be unhooked from the waist clips if required.

7.3 Your harness is fully adjusted by moving the slide A,B,C, to make fitting easy.

Folding your highchair

You must undo the snap fastener before folding the highchair. Unclip the tray and lift upwards. Fold legs together.

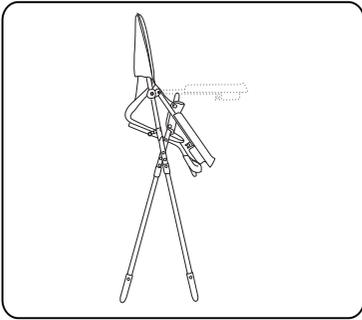

Care and Maintenance

Ensure all locking devices work correctly & regularly check the locks & fittings for security.

Regularly check all parts for wear & tear.

DO NOT use spray lubricants, simply wipe clean after use.

Cleaning

The highchair can be cleaned by sponging with warm soapy water and a mild detergent. A mild disinfectant may be used if desired.

Stubborn marks may be removed with a non abrasive cream cleaner. Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

The basket (if specified) can be removed for easier cleaning but must not be immersed in water.

Argos Limited
489-499 Avebury Boulevard, Saxon Gate West,
Central Milton Keynes, MK9 2NW,