



Instruction Manual

Bluetooth and WiFi speaker with Amazon Alexa,
AS1



Important: Please read these instructions fully before using your product

CONTENTS

INDEX	2
CHAPTER 1	
SAFETY INFORMATION.....	3
DEVICE.....	4
CHAPTER 2	
INSTRUCTION / SETTING.....	5~12
INDICATOR LIGHT.....	13
CHAPTER 3	
TECHNOLOGY INFORMATION.....	14
TROUBLESHOOTING.....	15
DISPOSAL.....	16
GENERAL INFORMATION	17
CHAPTER 4	
GUARANTEE LETTER.....	18

HELP AND GUIDANCE

WE'RE HERE TO HELP YOU GET THE MOST FROM YOUR AS1, WI-FI AND BLUETOOTH SPEAKER WITH AMAZON ALEXA. SHOULD YOU REQUIRE ANY GUIDANCE, A SIMPLE SOLUTION CAN OFTEN BE FOUND ONLINE AT:
WWW.ARGOS-SUPPORT.CO.UK

IF YOU STILL REQUIRE FURTHER ASSISTANCE, CALL ONE OF OUR EXPERTS ON 0345 604 0105

Important safety information

Your Wi-Fi & Bluetooth speaker should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.




- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do NOT store in dusty or dirty areas.
- Do NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Disconnect your WiFi & Bluetooth speaker from the mains power supply during thunderstorms.
- Always check that you have completely switched off your WiFi & Bluetooth speaker, before you change or disconnect the power supply.
- Only use the mains power plug that came with the product. Using an unauthorised cable and power supply will invalidate your guarantee and may irreversibly damage the product.
- Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do NOT use your WiFi & Bluetooth speaker near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.
- Do NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- Dispose of old batteries carefully.
- Never throw batteries in a fire or attempt to open the outer casing.



WARNING:

To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.


Function & Control:

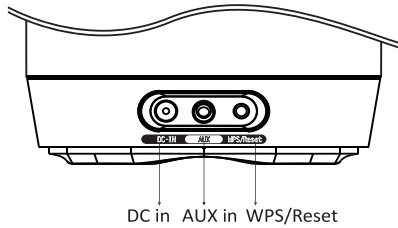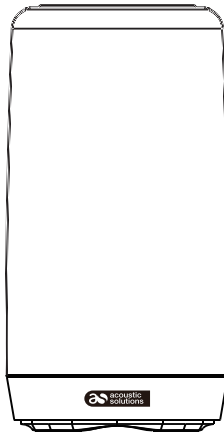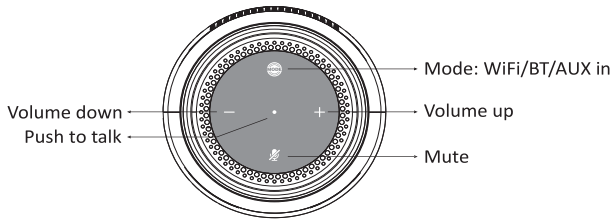


Instructions:

1. Control & Features

1.1 Top panel push bottom

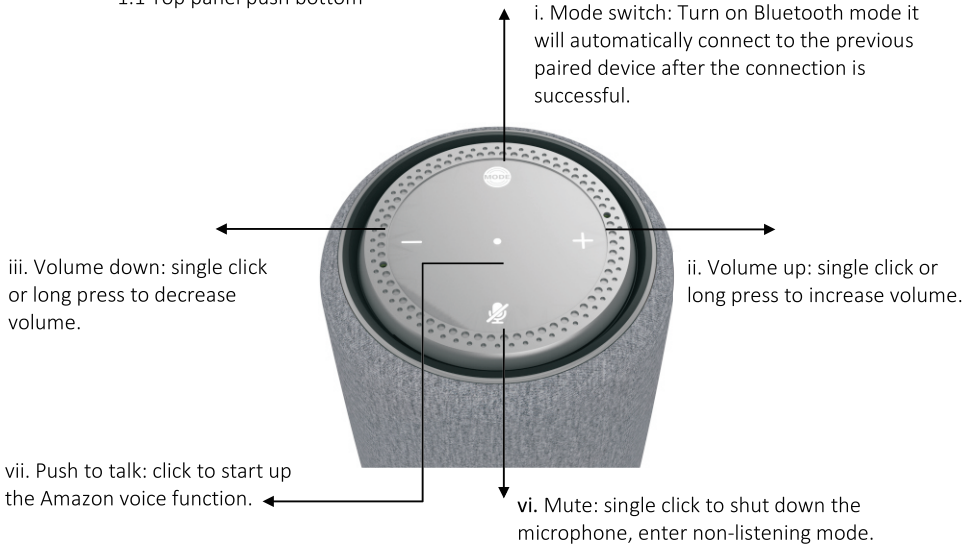

 1.2 Back port

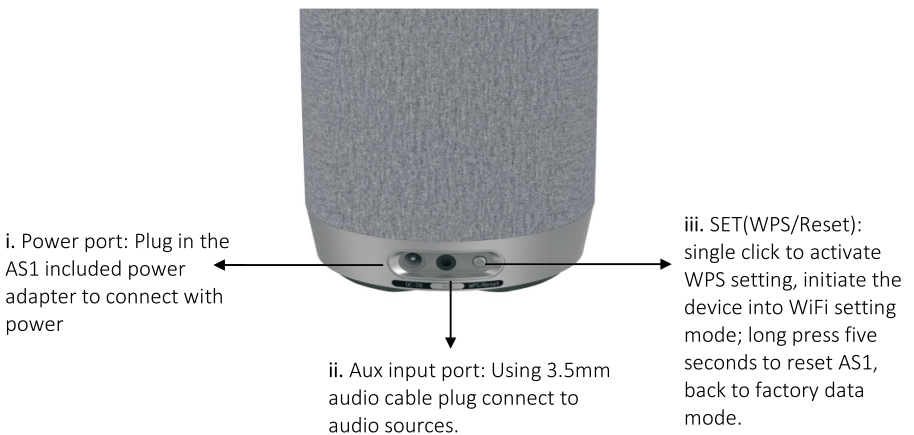

2. Get Started

a. Get ready before start

Make sure you download and set up the apps before you start

i. **Muzo player**- available in IOS/Android

MUZO Player
By Linkplay Tech Inc.



Android



IOS

ii. Amazon Alexa Apps

Amazon Alexa- available in IOS/Android

Amazon Alexa
By AMZN Mobile LLC



 
iii. Create an Amazon Account before you start.

iv. Get ready of home network with wireless access.


3. Set up AS1 through WiFi




1. Open “Muzo” to Start up.

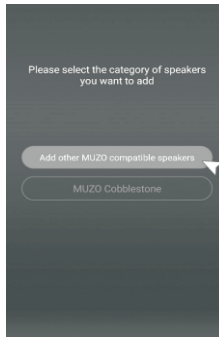

 
2. Click “Add other Muzo compatible Speaker”.

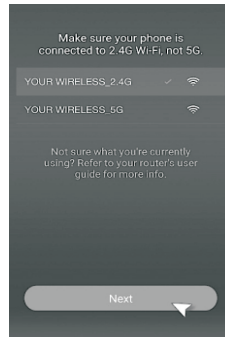


 
3. Select “YOUR WIRELESS_2.4G”

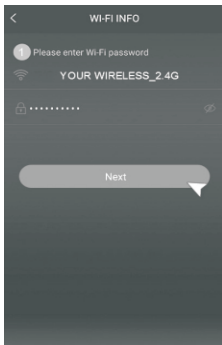

 
4. Type in password

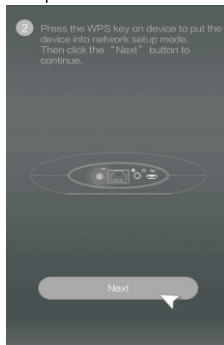

  
5. Short press “WPS” button for connecting.

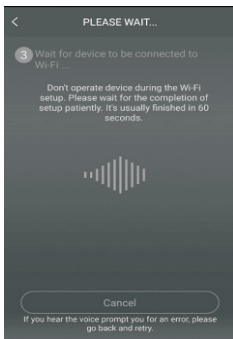

 
6. Connecting

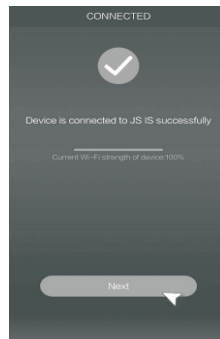

 
7. Done

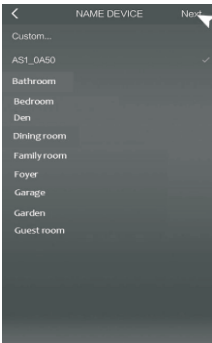

 
8. Enter a name or choose from the room list.

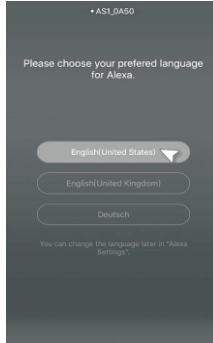

 
9. Choose your preferred language for Alexa

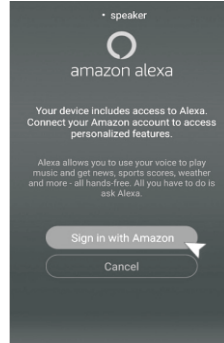

 
10. Sign into Amazon Alexa Account

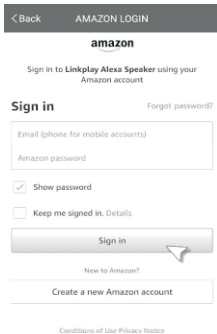

 11. Account/Password

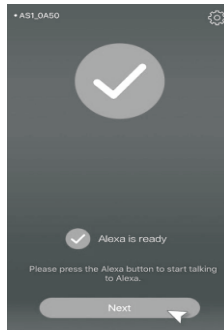

 12. Click "Next"

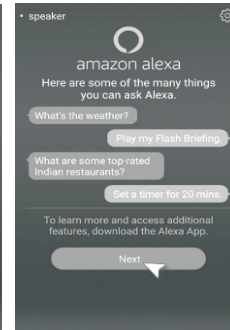

13. Press "Next" to start using Alexa

*When asking Alexa questions please always say "Alexa" first and the blue light will indicate Alexa is listening.

*Note: you will need an account to play music and other devices.

3.1 Things to try

Music-

“Alexa, shuffle my playlist”

“Alexa, what song is this?”

“Alexa, play my hit station.”

“Alexa, buy this song.”

Alarms & Timers-

“Alexa, set an alarm for 5:30 am.”

“Alexa, set a timer for 1 hour”

Radio-

“Alexa, play CNN radio”

News & Weather-

“Alexa, what’s the weather today?”

“Alexa, is there any traffic today?”

Questions & Answers-

“Alexa, what is the top 5 restaurants in London?”

“Alexa, what is the nearest restaurant?”

“Alexa, tell me a joke.”

Smart home-

“Alexa, turn all the light to blue.”

“Alexa, turn room 1 to red.”

“Alexa, dim hue lights to 50%”

 
others-

“Alexa, stop!”

“Alexa, volume up to 5.”

4. Play AS1 Music

4.1

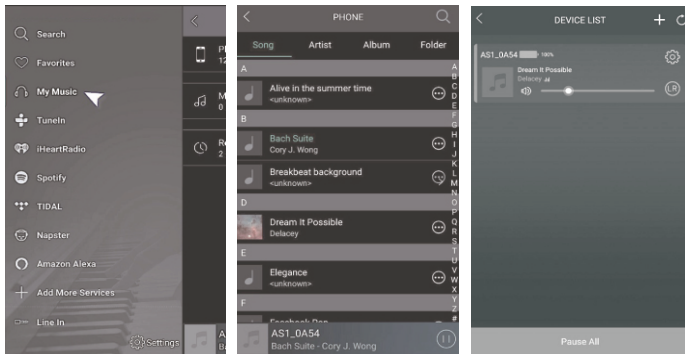


1. My Music

2. Pick random song

3. Play music

 
4.2 Radio Services

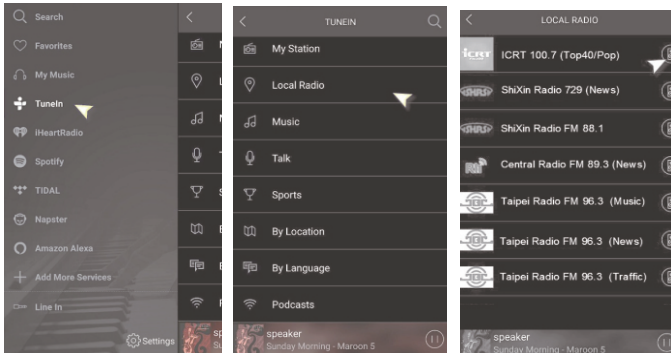

1. "Tunein"

2. Select station you like

 
3. Select icon on right side

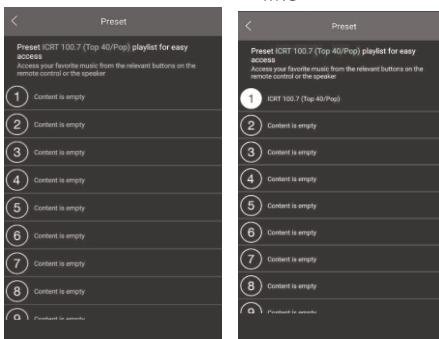

4. Pressed for 3 sec


5. Preset content

 4.3 Multi-room Grouping:

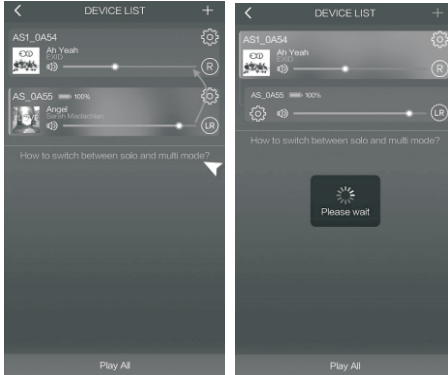


1. Follow the step “Set up AS1 through WiFi” to add a new speaker.
2. Drag the bottom device to the upper one.

 Ungrouping:

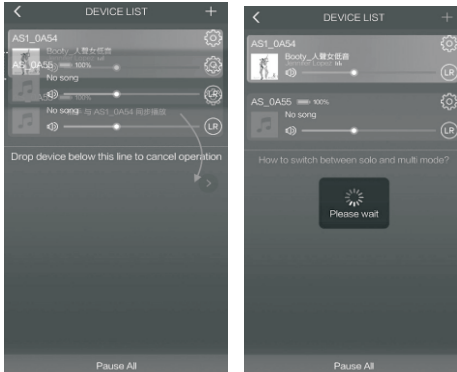

1. Drop the device below the time to cancel.
2. Done

 
5. Bluetooth Pairing

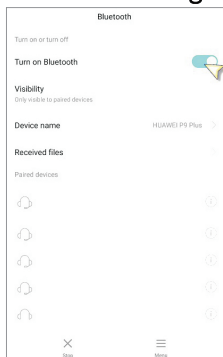


1. Turn on the Bluetooth function on your mobile device.



 2. Pressed the Mode button switch to Bluetooth Mode.

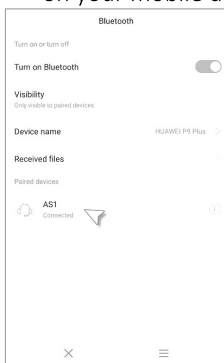

 3. The speaker will appear as "AS1 Speaker" in your mobile device, press and start pairing.

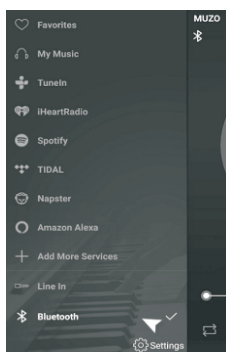













4. Bluetooth connected successfully.

6. Return to factory setting

- If system errors or an error occurs, press the Reset(WPS/Reset) button for 10 seconds, it will enter to reset mode.
- Press the Reset button wait after the LED single light from the red flash to white fast flashing, the system starts to reset then the lights will become the normal white flashing mode. System reset job completed.
- For network configuration, refer to the above section for network setting.
NOTE! After the AS1 is reset, all the setting parameter will be cleared.

7. LED lighting definition:

Lighting	Status	Indication	Instruction
white light	Quick blink		(1) When turn on WiFi connect status (2) Original status, attempted to connect WiFi.
white light	Blinking		Switch to WiFi mode and there is no valid WiFi connection.
white light	Blinking after 5 seconds		Connected to valid WiFi.
blue light	Blinking		switch to BT mode, and there is no valid BT connection.
blue light	Blinking after 5 seconds		Connected to valid BT.
green light	Blinking after 5 seconds		Switch to Aux mode (make sure is connecting to audio cable)
cyan+ blue light	Blinking		Activate voice mode on
cyan+ blue light	Alternative		Cloud processing after receive voice input
cyan+ blue light	Breeze		Voice prompt after cloud processing
red light			Press mute bottom
cyan+ orange light	Alternative		System error
LED off			Switched to WiFi mode and connected to valid WiFi .

8. Software update

- When software is updating, white light LED will blink quickly.
- When software finished updating, AS1 will reset automatically and back to WiFi mode.
- When software is updating, there's a voice remind "Don't turn off the power."

Technical information:

	Acoustic Solution
Model	AS1 speaker
System	BT & WiFi speaker
Power Consumption	20W
Channel	1
Driver	3"
PR	Yes
Tweeter	No
360 Degree	Yes
Voice Assistant	Far Field
	Near Field
WiFi	Yes
Cloud Service	Amazon
Voice Service	Amazon Alexa
Bluetooth (A2DP)	Yes
DLNA	Yes
Multi-room	Yes
Mute-speaker	Yes
Internet Radio	Yes
IO	
DC port	Yes
AUX in	Yes
WPS Rese	Yes
Control	Yes
Touch Control	Volume +/-, Mute, Mode(BT/WiFi/AUX in), Near/Far-field .
Bluetooth Version	BT 4.0
WiFi Version	802.11 b/g/n
Power adaptor AC input voltage and current	100-240V~50-60Hz 0.9A
Power adaptor DC output voltage and current	18V 2000mA 36W

Accessories package:

1. Main Unit *1
2. Instruction manual *1
3. Power adaptor *1

Troubleshooting :

There's no power-

- Make sure the speaker is turn on correctly.
- Make sure the main socket is switched on.
- Make sure main adaptor is connected properly.

If the WiFi cannot be connected-

- Ensure the speaker is turn on and charged.
- Ensure the correct network is connected.
- Ensure device is connected to the WiFi.
- Test internet connection.
- If you are trying to use AS1 in office environment, WiFi protective firewalls may be in operation. Please try to connect with Bluetooth.
- Uninstall Muzo app and re-install again. Turn off the speaker and restart set up.
- Use factory reset to reset the AS1.

Cannot sign into Alexa-

- Press back and try again, make sure WiFi is connected.
- Ensure you have Amazon account

Audio doesn't work-

- Be sure the volume is not too low.
- Use factory reset to restart the AS1.
- Other electronic household item may interfere the signal, move the speaker to another location.

There is no sound being played-

- Adjust volume on your device and AS1.
- Ensure Bluetooth is in effective area.
- Make sure Bluetooth has been paired.
- Make sure you select the correct source.

No response from speaker-

- Switching the speaker on and off check if it reconnects automatically.
- Use Bluetooth on your device to reconnect the speaker.

Disposal



- When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by European Directive.
- All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product



Amazon Term & Policies

The AS1 Speaker WiFi and Bluetooth speaker is an Alexa-enabled device. Before using this speaker, please read all rules and policies for Alexa, including the Amazon.com Privacy Notice at www.amazon.com/privacy and the terms found in the Alexa App in Help>Legal & Compliance. These terms, notices, and policies are, collectively, the “Agreements” By using Alexa, you agree to be bound by the Agreements.

Radio Equipment Directive

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

General information :

This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

The batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available. Never throw batteries in a fire or attempt to open the outer casing.

Help and Guidance

We're here to help you get the most from your **AS1, Wi-Fi and Bluetooth Speaker with Amazon Alexa**.

Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed against manufacturing defects for a period of Year
This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit. The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages. The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.,
489-499 Avebury Boulevard
Central Milton Keynes
MK9 2NW