

**SEKSY<sup>®</sup>**  
**SEKSY**

wrist wear by  

---

**SEKONDA**

**INSTRUCTION  
GUIDE**



**TWO YEAR  
GUARANTEE**

[www.seksy.co.uk](http://www.seksy.co.uk)

## Contents

- 1 Service and Repairs/  
Setting the Time – AM/PM
- 2 Water Resistancy
- 3–12 Operation and Adjustment

For free bracelet adjusting service, return the watch to the address below.

T.P. (UK) Ltd, Alexander House, Chartwell Drive,  
Wigston, Leicester LE18 2EZ

**For maximum protection, please keep your watch in its presentation box when not in use.**

### **Important Note**

It is important to identify your watch correctly.

If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on **0116 288 2500**

## **SERVICE AND REPAIRS**

Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of **2 years** from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components.

### **IMPORTANT – Not covered by Guarantee**

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetration except in watches marked as "Water Resistant". (see page 2).

## **SERVICING AND REPAIRS UNDER GUARANTEE**

Please post your watch, together with the Retailer's Sales Receipt or Proof of Purchase, the completed Guarantee slip on the back cover of this booklet, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will not be returned.

## **SERVICING AND REPAIRS OUTSIDE OF GUARANTEE**

Available at a reasonable charge after an estimate has been sent by SEKONDA. Send your watch to us by Registered Post or Recorded Delivery to the address shown on the inside front cover.

## **SETTING THE CORRECT TIME (AM/PM) – DATE WATCHES**

- If the DATE changes when the hands are turned past 12 o'clock, the time shown is "am".
- If the DATE does not change, the time shown is "pm".

## **WATER RESISTANCY**

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (eg "30/50/100 metres") on the dial and/or case back.

If it is NOT marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (eg washing, heavy rain etc). Certain chemicals in water may damage the watch seals. To maintain its water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by SEKONDA.

**IMPORTANT** Buttons must not be operated while in contact with water.

### **WATER RESISTANT or RESISTANT TO 30 METRES**

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used while bathing or swimming.

### **WATER RESISTANT TO 50 METRES**

As 30 metres plus bathing or swimming.

### **WATER RESISTANT TO 100 METRES**

As 50 metres plus poolside diving and snorkelling, but NOT highboard or scuba diving.

### **WATER RESISTANT TO 200 METRES**

As 100 metres plus scuba diving, but NOT high board diving.

### **MODELS WITH A SCREW-DOWN CROWN (BUTTON)**

Unlock the crown by turning it anti-clockwise until free. Lock it by pressing in while turning clockwise. WATER RESISTANCE is lost when the crown is in the UN-LOCKED position.

## **OPERATING AND ADJUSTING YOUR WATCH**

Your quartz analogue watch is powered by a battery which was inserted at the time of manufacture and will require periodic replacement. New batteries can be supplied and fitted by your nearest SEKONDA stockist.

**Quartz analogue watches do NOT require winding.**

The button is used for hand/function setting only. When in use, ensure that the button is pushed FULLY IN to position "A". Failure to do so can result in excessive battery drain or damage to the hand setting/date mechanism.

The instructions and diagrams on the following pages are designed to demonstrate the adjustment of all models within our range.

**Your watch may not have all of the characteristics shown and may have other buttons and dials in addition to those shown on individual diagrams.**

## QUARTZ NON-DATE WATCH

### TIME SETTING:

- Pull button out to position "B".
- Advance hands to correct time.
- Return button to position "A".



## QUARTZ DATE WATCH

### DATE SETTING:

- Pull button out to position "B".
- Turn clockwise or anti-clockwise to set correct date.
- Return button to position "A".

**NOTE:** Do not use this function between 8.30 pm and 1.30 am as date change cycle is in progress.



## DAY/DATE MOON PHASE WATCH

### MOON PHASE SETTING:

 
- Pull button out to position "B".
- Turn button clockwise to set correct moonphase (see enclosed leaflet for dates of moonphase).
- Return button to position "A".

### DATE CORRECTION:

- Pull button out to position "B".
- Turn button anti-clockwise to set date.
- Return button to position "A".

### DAY/TIME SETTING:

- Pull button out to position "C".
- Turn hands forwards until correct day and time are reached.
- Return button to position "A".

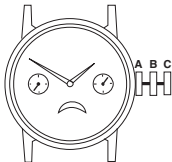

## QUARTZ 3 EYE CHRONOGRAPH WITH DATE

### TIME/DATE SETTING:

See instructions on pages 4 and 5.

 
### OPERATING CHRONOGRAPH:

- Push PB1 to start/stop chronograph.
- Push PB2 to reset.

### CHRONOGRAPH ZERO RESET:

- Pull button out to position 'C'  
(Chrono second hands return to zero position).
- Push PB1 to set Chrono second hand  
to 12.00 (zero) position.
- Return button to position 'A'.
- Push PB2 to set Chrono minute to 12.00 (zero) position.

## HAND DISPLAYS

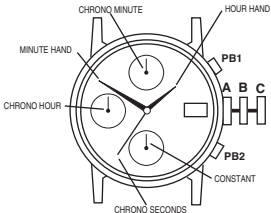

NOTE: This hand should be at zero (12 o'clock position) when chrono is not in use.



## QUARTZ DAY/DATE WATCHES

### TIME SETTING:

- Pull button out to position "C".
- Advance hands to correct time.
- Return button to position "A".

### DAY/DATE SETTING:

- Pull button out to position "B".
- Turn clockwise or anti-clockwise to set correct date.
- Turn clockwise or anti-clockwise to set correct day.

**NOTE:** Days of the week can be set in English or Spanish. Once set the watch will automatically indicate the day in the chosen language.

- Return button to position "A".

**NOTE:** Do not set day/date between 8.30 pm and 5.00 am as day/date change cycle is in progress.



## **QUARTZ "TWO-EYE" (MONTH & DAY) WITH DATE WATCH DAY & TIME SETTING:**

- Pull button out to position "C".
- Turn button to advance hands until day changes;  
repeat until correct day and time is shown.
- Return button to position "A".

## **DATE & MONTH SETTING:**

- Pull button out to position "B".
- Turn button clockwise until month changes  
(every 31 days).
- Repeat until correct month and date are shown.
- Return button to position "A".



## **QUARTZ "TWO-EYE" (DAY & DATE) WATCH**

**IMPORTANT** – The position of the day/date "eyes" referred to in these instructions **MAY BE REVERSED** on certain Models.

## **DATE IN RIGHT EYE – DAY & TIME SETTING:**

- Pull button out to position "C".
- Turn button to advance hands until day changes;  
repeat until correct day and time is shown.
- Return button to position "A".

**QUARTZ "TWO-EYE" (DAY & DATE) WATCH (continued)**  
**DATE IN RIGHT EYE (continued)**

**DATE SETTING:**

- Pull button out to position "B".
- Turn button clockwise until date changes.
- Repeat until correct date is shown.
- Return button to position "A".

 
**DATE IN LEFT EYE**

**TIME SETTING:**

- Pull button out to position "C".
- Turn button to advance hands.
- Return button to position "A".

**DAY/DATE SETTING:**

- Pull button out to position "B".
- Turn button anti-clockwise to set correct DAY.
- Turn button clockwise to set correct DATE.
- Return button to position "A".

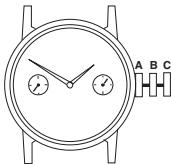

## MODELS WITH ELECTRO LUMINESCENT DISPLAY (E.L.D.) FACILITY

### NON-DATE MODELS

#### TIME SETTING:

- See instructions on page 4.

### DATE MODELS

#### TIME/DATE SETTING:

 
- See instructions on pages 4 and 5.



### E.L.D. DISPLAY

- Press PB1 to activate display  
(Display only visible in subdued light).

**Note:** Display should only be activated for short periods, e.g. 1 or 2 seconds as excessive use will greatly reduce the life of the battery.

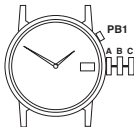

## **E.L.D. – THREE EYE WITH DAY-DATE- 24 HOUR FUNCTIONS**

### **DAY SETTING:**

- Pull button out to position “C”.
- Turn button clockwise to advance hands.
- Continue until correct day is shown.
- Return button to position “A”.

NOTE: Date change takes place between approximately midnight and 5.30 am.

### **TIME/24 HR FUNCTION SETTING:**

- Pull button out to position “C”.
- Turn button clockwise to set the hour, minute and 24 hour hands to the correct time. \*When setting the hour hand, be sure to check that the 24 hour hand is set properly. (E.G. 12 midnight = 24.00 hrs)
- Return button to position “A”.

 
NOTE: When setting the minute hand first advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute.

### **DATE (QUICK CHANGE FUNCTION) SETTING:**

- Pull button out to position “B”.
- Turn button anti-clockwise to advance date hand to correct date.
- Return button to position “A”.

### **E.L.D. DISPLAY:**

See instructions on page 10.

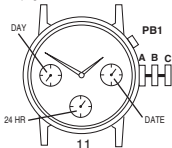

**A**

## **MULTIPLE CLASPS**

Some of our bracelet models are now fitted with a multiple clasp system which is designed to make bracelet adjustment easier for you.

To reduce the size of the bracelet simply open and remove one or both of the adjustable clasps indicated as (A) and (B) on the diagram.

Should you feel that your bracelet is in need of further adjustment, please follow the procedures in Instruction 3 of the bracelet gauge included in this leaflet.

**B**



---

## Guarantee

Block Capitals

Name

---

---

---

Address

---

---

---

Post Code

---

Day time Phone

---

T.P. (UK) Ltd, Alexander House, Chartwell Drive,  
Wigston, Leicester LE18 2EZ

### **Important**

This guarantee should be retained by the owner of the watch and should be sent to Sekonda together with the watch and £4.00 to cover handling and postage when service under guarantee is required. Please refer to page 1 of the instruction guide for further information on service under guarantee. This guarantee does not affect your statutory rights.

## **Date of Purchase**

---

Retailers Stamp if required or full name and address

Attach Receipt or Proof of Purchase;  
failure to attach may invalidate guarantee.  
This guarantee does not affect your  
statutory rights.

IS01/10-10

