

THE KAHUNA GUARANTEE

Kahuna certify that this watch has been produced using first class materials and fully tested before leaving our Manufacturing Centre. Subject to the conditions stated below, this watch is guaranteed against defects of material and manufacture for the period of 2 years from the date of purchase.

Please note that this guarantee does not cover the following:

1. Breakages caused through mishandling or accidental damage.
2. Normal wear and tear.
3. Battery, Glass and Strap

WARNING: This watch should only be opened by a qualified technician with water-resistancy testing equipment. Do NOT attempt to open it yourself. This guarantee does not affect your statutory rights. In the unlikely event of a fault arising under the terms of the guarantee, return the watch DIRECTLY to the Kahuna service centre, where it will receive expert

KAHUNA RETURNS FORM

Name:

Address:

Post Code:

 
Day Time Tel:

Email:


Reason for Return:

OPERATING INSTRUCTIONS TIME SETTINGS (Non-Calendar Models)

1. To set the time pull out the crown to the first click position 2.
2. Turn the crown to set the hour and minute hands.
3. When the time is set, push the crown back to the normal position 1.

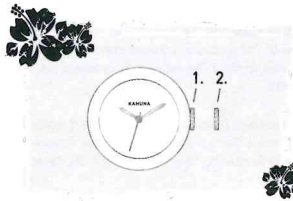

BRACELET ADJUSTMENT

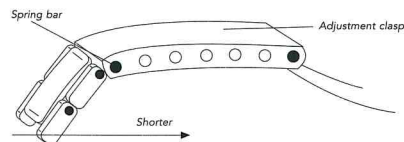 

1. Press in the end of the spring bar with a pin or sharp instrument. **Beware** - the spring bar may fly out when released from the locking hole.
2. Move the bracelet to the desired position and relocate the spring bar into the nearest locating hole. If there is not sufficient adjustment available in the adjustable clasp, please return the watch for removal of links to the address on the guarantee. Please include the wrist size duly marked.

OPERATING INSTRUCTIONS TIME SETTINGS (Analogue/Digital Models)

To set digital time and calendar

In normal time display press and hold S3 for 3 seconds, alarm time flashing.
Press S3 again to enter time setting mode with seconds flashing.
Press S2 to reset second digits to zero - note this will increase the minute by 1 minute if digits were between 30-59 seconds.
Press S1 - minutes flashing, Press S2 to adjust.
Press S1 - hour flashing, press S2 to adjust.
Press S1 - month flashing, press S2 to adjust.
Press S1 - date flashing, press S2 to adjust.
Press S3 to confirm settings.

To change time display format

 
In normal time display press and hold S2 and then press S3 to toggle between 12 hour (A = AM, P = PM) or 24 hour format.

To use chronograph

In normal time display press S3 once.
Press S1 to start / stop count.
When stopped, press S2 to reset.
During count, press S2 for split count, press S1 to stop then S2 to show split count.
Press S2 again to reset.
Press S3 to return to normal time display.

To use back light

Press S1 to illuminate back light for approx 4 seconds.

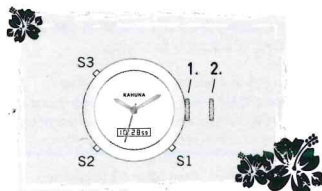

To change calendar format

In normal time display press and hold S1 and then press S2 to toggle between "month - date" or "date - month" formats.
In normal time display, press and hold S1 to view calendar. Release to return to normal time display.

To set alarm time

In normal time display press and hold S3 for 3 seconds, Alarm time hour flashing - press S2 to adjust.
Press S1 - minutes flashing, press S2 to adjust.
Press S3 to confirm.
Alarm now armed with (Ψ) symbol showing.
In normal time display press and hold S2 to view alarm time. Release to return to normal time display.

To turn alarm (Ψ) and hourly chime (Δ) on/off

In normal time display press and hold S2 then press S1 to turn alarm on (Ψ) symbol showing and daily alarm on (Δ) symbol showing or alarm and hourly chime off, no symbol showing.
When the alarm sounds, press S2 or S3 to disarm.

OPERATING INSTRUCTIONS TIME AND DATE SETTINGS (Calendar Models)

1. Pull out crown two clicks to position 3 (time setting) and move the hands forward until they pass through 12:00 midnight and the calendar changes. Continue turning to the appropriate time of day taking care to pass through 12:00 once more if setting at a time after 12:00 noon.
2. Push the crown in one click to position 2 (rapid date setting). By rotating the crown, the date can be quickly set without altering the time. This date setting procedure will need to be followed after the last day of each month not having 31 days.
3. Push the crown back fully to position 1 for the watch to operate normally.

