

BUSH

Instruction manual

NE-2722

731/6900



You'll soon be enjoying your new DAB+/FM Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your DAB/FM Radio. Should you require any guidance, a simple solution can often be found online at: **www.bush-support.com**

If you still require further assistance, call one of our experts on **0345 604 0105**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your DAB/FM Digital Radio

Ready? Let's begin	12
Unpacking	12
Product overview	13

3 Using your DAB/FM Digital Radio

Power source	18
Basic operation	19
DAB operation	20
FM operation	23
Bluetooth® operation	26
Alarms and snooze	28
System settings	30
Using earphones	32
Auxiliary input	33

4 Other information

 
Maintenance	36
Specification	36

5 Product support

Help and assistance	40
Disposal	41
Guarantee	42

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105

Safety information 1

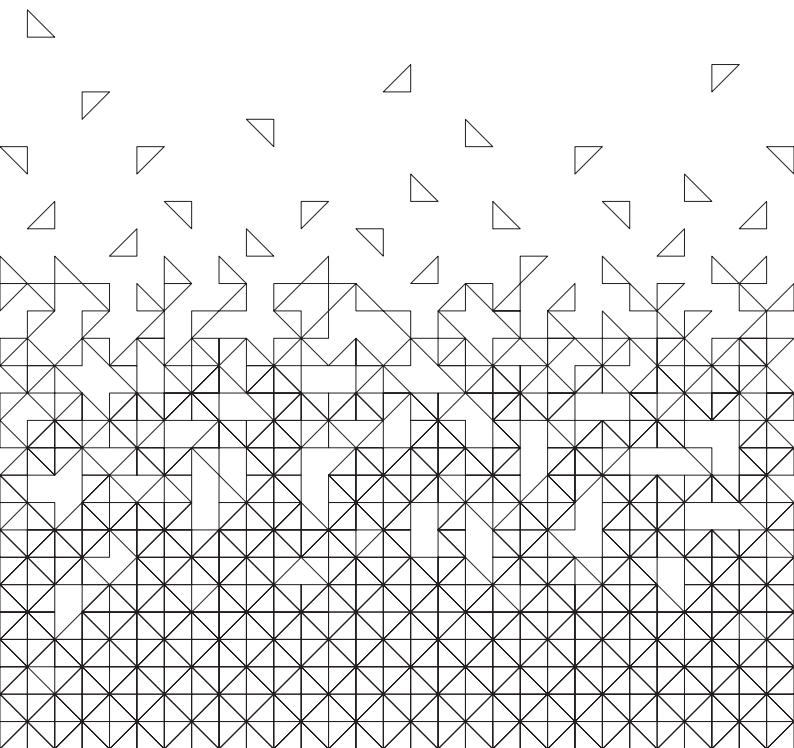



Safety information

Important - Please read these instructions fully before installing or operating

Safety precautions

- Read all the instructions carefully before using the unit and keep them for future reference.
- Check that the voltage marked on the rating label matches your mains voltage.
- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires. Avoid exposure to direct sunlight and other sources of heat.
- Never place any type of candle or naked flame on the top of or near the unit.
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure that a minimum of 10cm should be kept around the apparatus for ventilation.



Safety information

Important - Please read these instructions fully before installing or operating

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.

Mains adapter

- Make sure the unit is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.
- If the mains adapter is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted sound.

Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Service/maintenance

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.



Safety information

Important - Please read these instructions fully before installing or operating

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.



The symbol indicates DC voltage



The symbol indicates polarity of d.c. power connector



The symbol indicates AC voltage



The symbol indicates class II equipment



For indoor use only



RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

- The mains plug of power adapter is used as the disconnect device, The socket-outlet shall be installed near the equipment and shall be easily accessible.



Safety information

Important - Please read these instructions fully before installing or operating

- Caution

Risk of explosion if battery is replaced by an incorrect type

- Warning

To avoid replacement of a battery with an incorrect type

Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.


Don't leaving a battery in an extremely high temperature surrounding environment

To avoid battery subjected to extremely low air pressure.

Under the environment with radio-frequency disturbance, the product may malfunction and could self-recover when the interference disappear.

Getting to know your DAB/FM Digital Radio

2

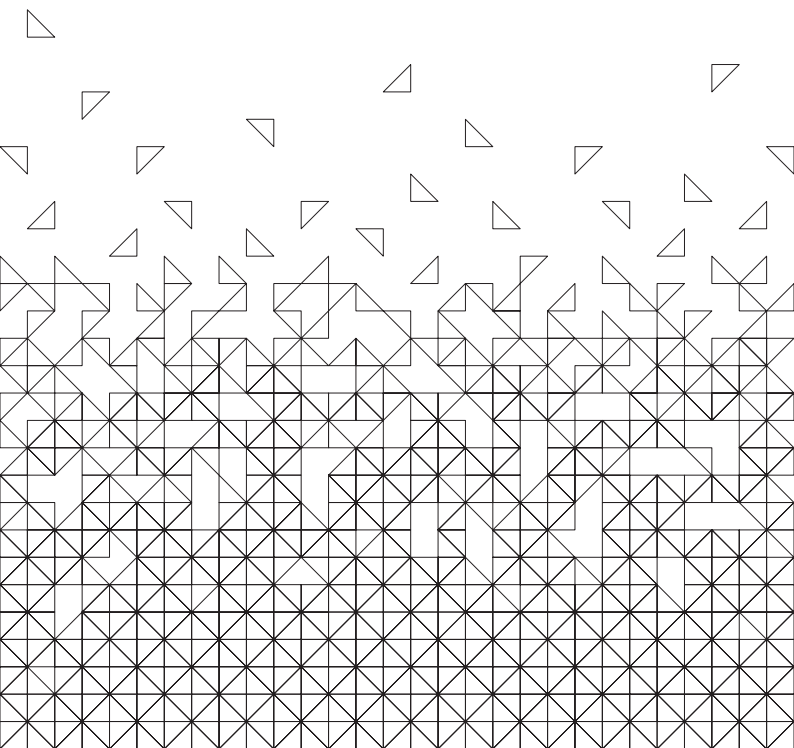

Getting to know your DAB/FM Digital Radio

You'll be up and running in no time

Ready? Let's begin...

 
Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.


Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it, please do so according to local regulations.

The following items are included:



Main Unit

 

Mains Adapter



 
Instruction Manual

Getting to know your DAB/FM Digital Radio

You'll be up and running in no time

Product overview

Top view

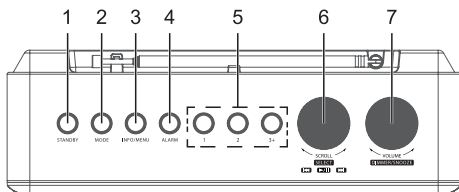


- | | |
|---------------------|------------------------------|
| 1. STANDBY button | 5. PRESET buttons |
| 2. MODE button | 6. SCROLL/SELECT dial |
| 3. INFO/MENU button | ⏮ ⏭ ⏸ ⏭ ⏮ |
| 4. ALARM button | 7. VOLUME/DIMMER/SNOOZE dial |

Getting to know your DAB/FM Digital Radio

You'll be up and running in no time

 Front view

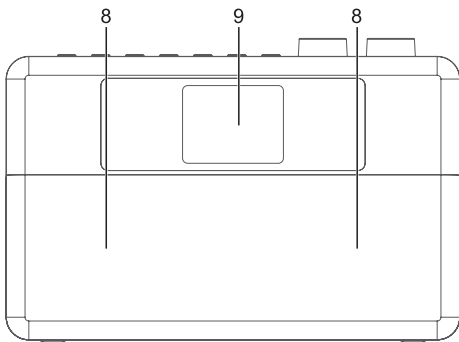


8. Speaker

9. Display

Getting to know your DAB/FM Digital Radio

You'll be up and running in no time

 Rear view

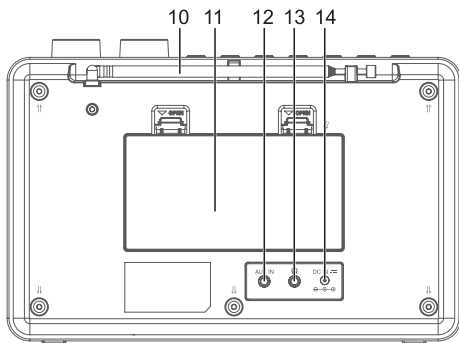

10. Rod Antenna

11. Battery Compartment

 
12. AUX IN Socket

13. Earphone Jack

14. DC IN Socket

Using your DAB/FM Digital Radio

3

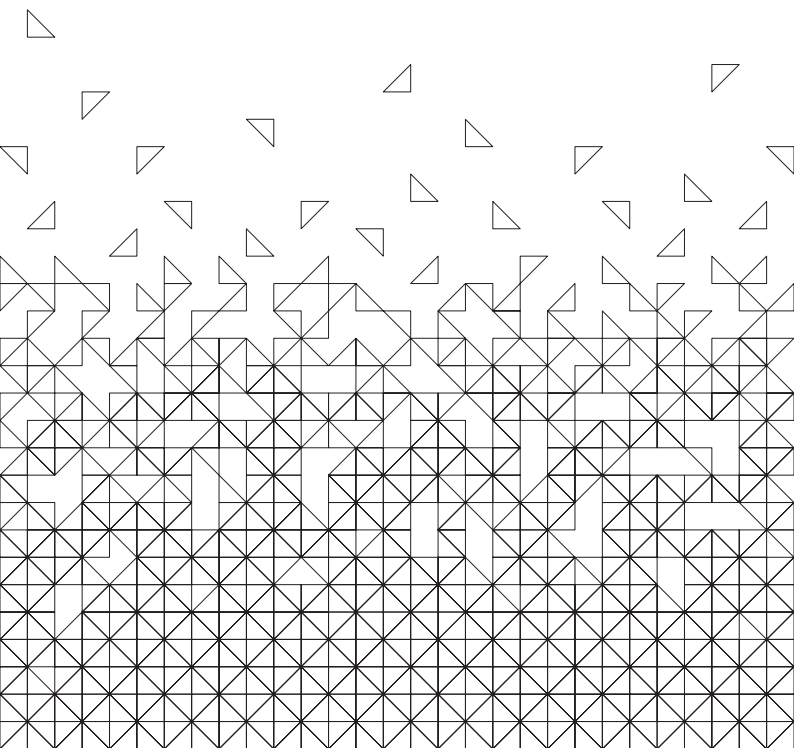


Using your DAB/FM Digital Radio

Let's get started

Power source

Mains power

1. Connecting the unit to any other power source may damage the unit. Unwind the mains adapter cable to its full length. Connect the end of the cable to the **DC IN**  Socket at the rear of the unit and then connect the mains adapter to the mains socket. Make sure the mains adapter is firmly inserted into the mains socket. The unit is now ready to use.
2. To switch the unit off completely, unplug the mains adapter from the mains socket.

DC (battery) operation

1. Ensure the AC/DC adaptor is disconnected from the radio and AC mains.
2. Installed the batteries (4x1.5V R14/C batteries) into the battery compartment by following the polarity (+ or -) indications.
3. Press the **STANDBY** button to turn the radio on.

Remarks: To obtain the best performance in DC operation, the use of alkaline batteries is highly recommended.



- Using your radio at high volume will reduce your battery life. When the batteries lose power, the sound becomes weak/distorted and display backlight becomes unstable.
- When the batteries become weak, the display will show "Battery Low". The batteries should be replaced.
- When the batteries are completely exhausted, the power is turned off.

Using your DAB/FM Digital Radio

Let's get started

Handling the Batteries

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause personal injury or damage to property.
- Install the batteries correctly by following the polarity (+ and -) indications in the battery compartment.
- Use only the types of batteries which are indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of the used batteries as domestic waste. Dispose of them in accordance with local regulations.
- If you are not going to use the unit for a long time, remove the batteries to avoid damage from battery leakage and corrosion.

Basic operation

Powering ON/OFF

After connecting the mains adapter to the unit and the mains socket, the unit will enter Standby mode.

1. Press the **STANDBY** button to switch on the unit.
2. Press the **STANDBY** button again to switch the unit back to Standby mode.
3. Disconnect the power cable of the mains adapter from the mains socket if you want to switch the unit off completely.

While using battery power,

1. Press the **STANDBY** button to switch on the unit.
2. Press the **STANDBY** button again to switch off the unit.

Selecting modes

Press **MODE** button repeatedly to switch between modes (DAB/FM/Bluetooth/Auxiliary Input).

Using your DAB/FM Digital Radio

Let's get started

Adjusting the volume

Turn the **VOLUME/DIMMER/SNOOZE** dial to adjust the volume.

Automatically Setting the Clock


The clock will be updated automatically if you can receive DAB/FM signal in your location.

In order to synchronise to the current local time, you must leave the unit to receive signals from the DAB/FM station for a period of time.

DAB operation

If the unit is connected to the mains power and then switched on for the first time, the unit will automatically enter into the DAB mode and perform full scan. During the scan the display will show "**Scanning...**" together with a slide bar that indicates the progress of the scan and the number of stations that have been found so far.

Once the scan has finished, the unit will select the first alphanumerically found station. To explore the found stations, turn the **SCROLL/SELECT** dial and then press the **SCROLL/SELECT** dial to confirm selection.

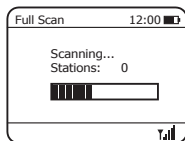

Station list

1. During **DAB** mode, press and hold the **INFO/MENU** button to access DAB menu.
2. Turn the **SCROLL/SELECT** dial to select **<Station List>** and then press the **SCROLL/SELECT** dial to confirm.
3. A list of DAB stations will show on the display.

Using your DAB/FM Digital Radio

Let's get started

Full scan

The full scan will search for the entire DAB Band III channels. After the scan has finished, the first alphanumerically found station will be automatically selected.

1. To activate Full Scan, press and hold **INFO/MENU** button then turn the **SCROLL/SELECT** dial to select **<Full scan>**. Press the **SCROLL/SELECT** dial to confirm. The display will show "Scanning..." and a progressing slide bar.
2. All the stations that have been found will be stored automatically. To explore and listen to the found stations, turn the **SCROLL/SELECT** dial and then press the **SCROLL/SELECT** dial to confirm selection.

Manual tune

As well as the normal method of scanning, you can also manually tune to a particular channel / frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list.

1. Press and hold **INFO/MENU** button and then turn the **SCROLL/SELECT** dial to select **<Manual Tune>**. Press the **SCROLL/SELECT** dial to confirm selection.
2. Turn the **SCROLL/SELECT** dial to go through the DAB channels, which are numbered from **5A** to **13F**.
3. Press the **SCROLL/SELECT** dial to select the station that you would like to listen.
4. To listen to any stations found, return to the now playing screen and turn the **SCROLL/SELECT** dial to select the required station from the station list as normal.

Using your DAB/FM Digital Radio

Let's get started

Now playing information (Slideshow)

While a station is playing, the screen shows its name and DLS (Dynamic Label Segment) information broadcast by the station such as programme name, track title and contact details.

Press the **SCROLL/SELECT** dial to cycle through the following slideshow displays:

1. Station name, slideshow image and DLS text being broadcast by the current station.
2. Full screen version of the slideshow image and DLS
3. Slideshow image only.



If no slideshow image is available a default DAB thumbnail image is displayed.

DAB display modes

Every time you press **INFO/MENU** button, the display will show the following display modes:

DLS text

This is a scrolling message giving real-time information, e.g. song titles, news headlines, etc.



DL Plus information - This is only displayed if broadcast by the station.

Programme type

This describes the "style" or "genre" of the programme that is being broadcast.

Using your DAB/FM Digital Radio

Let's get started

Ensemble name

This displays the name of the multiplex that contains the station you are listening to. A multiplex is a collection of radio stations that are bundled and transmitted on one frequency. There are national and local multiplexes. Local ones contain stations that are specific to that area.

Channel number/frequency

This displays the frequency of the present station, such as "11C 220.352MHz".

Signal strength

This shows a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

Date

This displays the current date provided automatically by the broadcaster.

FM operation

Switching from DAB to FM Mode

Press **MODE** button to switch the unit from **DAB** to **FM** mode.

Auto scan

To search for an FM station, turn **SCROLL/SELECT** dial clockwise or counter-clockwise and then press the **SCROLL/SELECT** dial to start the forward or reverse scanning.

Once a station has been found, the scanning will stop automatically.



Using your DAB/FM Digital Radio

Let's get started

Manual scan

To search for FM stations manually, turn **SCROLL/SELECT** dial until your desired frequency is reached.



With FM radio, it may be necessary to fine tune each station by turning **SCROLL/SELECT** dial to your desired by adjusting the frequency by 0.05 MHz. If reception is still poor, adjust the position of the aerial or try moving the radio to another location.

Scan setting

This is a scanning option to scan all stations, or just scan stations with strong signal.

1. Press and hold **INFO/MENU** button and then turn **SCROLL/SELECT** dial to select **<Scan Setting>**. Press the **SCROLL/SELECT** dial to confirm selection.
2. Turn **SCROLL/SELECT** dial to select **<Strong Stations Only>** or **<All stations>**. Press the **SCROLL/SELECT** dial to confirm selection.

Audio setting

FM is able to search for Stereo or Mono stations.

1. Press and hold **INFO/MENU** button and then turn **SCROLL/SELECT** dial to select **<Audio setting>**. Press the **SCROLL/SELECT** dial to confirm selection.
2. Turn **SCROLL/SELECT** dial to select **<Stereo Allowed>** or **<Forced Mono>**. Press the **SCROLL/SELECT** dial to confirm selection.

Using your DAB/FM Digital Radio

Let's get started



The unit will automatically switch between stereo and mono when <Stereo allowed> is selected depending on the signal strength, but you can override this and switch this function manually. This is helpful when receiving poor signal reception.

FM display modes

Every time you press **INFO/MENU** button, the display will show the following display modes:

RDS radio text

This is a scrolling message information about the current programme.

Programme type

This describes the "style" or "genre" of programme that is being broadcast.

Name/frequency

This display the frequency of the present station, such as "87.50 MHz".

Mono/stereo

This displays if the station being received is in mono or stereo.

Date

This displays the current date provided automatically by the broadcaster.

Presetting stations

You can store up to 10 of your favourite DAB or FM stations to the memory. This will enable you to access your favourite stations quickly and easily.

Using your DAB/FM Digital Radio

Let's get started

Presets 1-2

To store a preset, you must first be listening to the station that you would like to save. If you want to store the station in preset positions 1 - 2, press and hold the **Preset (1 or 2)** buttons for 2 seconds. The words "**Preset # saved**" will show on the display.

Presets 1-10

1. In **ON** mode, press and hold the **+3** button, and then turn the **SCROLL/SELECT** dial to select **<Save to P1/P2...P10>**. Press the **SCROLL/SELECT** dial to confirm.
2. The words "**Preset # saved**" will show on the display.

Recalling a preset station

Presets 1-2

To recall preset stations that are stored in positions 1-2, just press the **Preset 1 or 2** button.

Presets 1-10

1. In **ON** mode, press the **3+** button, and then turn the **SCROLL/SELECT** dial to select the desired preset station. Press the **SCROLL/SELECT** dial to confirm.
2. If you choose a preset station number that has not been allocated a station, the display will show "**Preset Empty**".

Bluetooth® operation

The unit has a Bluetooth function that can receive a signal within 8 metres.

Pair the unit with a Bluetooth device to listen to music:

1. Press the **MODE** button repeatedly on the unit to select **BLUETOOTH**.

Using your DAB/FM Digital Radio

Let's get started

2. If the unit is not paired with any Bluetooth device, the display will flash "**Disconnected**".
3. Activate your Bluetooth device and select the search mode.
4. "**BUSH NE-2722**" will appear on your Bluetooth device list.
5. Select "**BUSH NE-2722**" and enter "0000" for the password if necessary.
6. When playing a soundtrack, press the **SCROLL/SELECT** dial ►/|| to pause the playback and press the **SCROLL/SELECT** dial ►/|| again to resume playback.
7. Turn the **SCROLL/SELECT** dial ◀◀ / ▶▶ anticlockwise to skip backwards to the beginning of the track or continuously turn anticlockwise to skip backwards to previous track.
8. Turn the **SCROLL/SELECT** dial ◀◀ / ▶▶ clockwise to skip forwards to next track.
9. To disconnect the Bluetooth function, switch to another function on the unit or disable the function from your Bluetooth device.



- The operational range between the unit and the device is approximately 8 metres.
- If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- For better signal reception, remove any obstacles between the unit and the Bluetooth device.
- Compatibility with all devices and media types is not guaranteed.
- Some mobile phones with the Bluetooth function may connect and disconnect as you make and end calls. This is not an indication of a problem with your unit.

Using your DAB/FM Digital Radio

Let's get started

Alarms and snooze

As well as a clock/calendar, there are two wake-up alarms with snooze facility. Your clock radio can be set to wake you to DAB, FM radio or buzzer alarm.

Alarms (mains power only)

1. Press **ALARM** button to enter Alarm menu
2. Turn **SCROLL/SELECT** dial to select <**Alarm 1**> or <**Alarm 2**> and press the **SCROLL/SELECT** dial to confirm selection.
3. Turn **SCROLL/SELECT** Dial to select the option below:

Alarm

Press **SCROLL/SELECT** dial to select On/Off, then turn the **SCROLL/SELECT** dial to select to next parameter.

Frequency

Turn **SCROLL/SELECT** dial to select Daily, Once, Weekends or Weekdays to active the alarm, then press the **SCROLL/SELECT** dial to confirm selection.



If you choose 'Once', you are prompted to enter the required date.

Wake up time

Turn **SCROLL/SELECT** dial to adjust the hour and minute, then press the **SCROLL/SELECT** dial to confirm.

Using your DAB/FM Digital Radio

Let's get started

Source

Turn **SCROLL/SELECT** dial to select Buzzer, Digital Radio or FM, then press the **SCROLL/SELECT** dial to confirm.

If DAB or FM is chosen as the audio source you will also be prompted to select the Last Listened or preset station (if set).

Duration

Turn **SCROLL/SELECT** dial to select alarm duration 15, 30, 45, 60, 90 or 120 minutes, then press the **SCROLL/SELECT** dial to confirm.

If the alarm is not cancelled, the unit returns to standby after this time period.

Volume

Turn **SCROLL/SELECT** dial to adjust the alarm volume (0-16), then press the **SCROLL/SELECT** dial to confirm. Initially the alarm sounds at a low volume and gradually gets louder to the set volume.

In all listening modes active alarms are indicated by displaying the relevant Alarm 1 and/or Alarm 2 icons.

At the set time, the alarm will sound, quietly at first, then gradually building up to the set volume.

Press **INFO/MENU** to exit the Alarm setting.

To cancel a sounding alarm and switch the radio to standby, press the **STANDBY** or **ALARM** button.

Snooze (mains power only)

To temporarily silence a sounding alarm, press **VOLUME/DIMMER/SNOOZE** dial. You can change the snooze period by repeatedly pressing **VOLUME/DIMMER/SNOOZE** dial. Snooze periods are 5, 10, 15 and 30 minutes. The radio returns to standby for the set time period with a snooze countdown displayed. When the countdown reaches 0 (zero) the alarm is triggered again.

Using your DAB/FM Digital Radio

Let's get started

Press **STANDBY** or **ALARM** button to fully cancel a sounding alarm and switch the radio to standby.

Display Backlight (Mains Power Only)

There are four backlight levels to choose.

To set the backlight level, repeatedly press the **VOLUME/DIMMER/SNOOZE** dial and the brightness of the display will change in sequence: OFF>High>Medium>Low

In DC operation, the display will turn off when the radio is powered off. When the radio is on, it be at full brightness and go dimmed after 10 seconds, and will turn full brightness for 10 seconds any key is pressed..

System settings

Sleep

1. To set the sleep timer, press and hold **INFO/MENU** to display the menu.
2. Turn **SCROLL/SELECT** dial to select <**System Settings**>, and then press the **SCROLL/SELECT** dial to confirm selection. Turn **SCROLL/SELECT** dial to select <**Sleep**>, then press the **SCROLL/SELECT** dial to confirm.
3. The sleep delay time in minutes from: Sleep Off / 10 / 20 / 30 / 60/70/80/ 90 minutes, when you release the button the sleep time will be set accordingly.
4. Once you select a sleep delay period, and returns to the now playing. The screen will display a crescent moon icon to indicate that the sleep function is activated.

Using your DAB/FM Digital Radio

Let's get started

Time/date

1. To set the time & date, press and hold **INFO/MENU** to display the menu.
2. Turn **SCROLL/SELECT** dial to select **<System Settings>**, and then press the **SCROLL/SELECT** dial to confirm selection. Turn **SCROLL/SELECT** dial to select **<Time/Date>**, then press the **SCROLL/SELECT** dial to confirm.
3. Turn **SCROLL/SELECT** dial to select the option below:

Set time/date

Turn **SCROLL/SELECT** dial to adjust the time and date, then press the **SCROLL/SELECT** dial to confirm

Auto update

Turn **SCROLL/SELECT** dial to select **Update from Any, Digital Radio, FM** or **No Update** then press the **SCROLL/SELECT** dial to confirm.

Set 12/24 hour

Turn **SCROLL/SELECT** dial to select **12 Hour** or **24 Hour**, then press the **SCROLL/SELECT** dial to confirm.

Set date format

Turn **SCROLL/SELECT** dial to select **MM-DD-YYYY** or **DD-MM-YYYY**, then press the **SCROLL/SELECT** dial to confirm.

Clock style

Turn **SCROLL/SELECT** dial to select **Normal Digital, Big Digital, Classic Analog** or **Modern Analog** then press the **SCROLL/SELECT** dial to confirm

4. Press **INFO/MENU** to exit the menu.

Using your DAB/FM Digital Radio

Let's get started

Factory reset

1. To perform factory reset, press and hold **INFO/MENU** to enter Menu.
2. Turn **SCROLL/SELECT** dial to select **<System Settings>** and press the **SCROLL/SELECT** dial to confirm
3. Turn **SCROLL/SELECT** dial button to select **<Factory Reset>** and press the **SCROLL/SELECT** dial to confirm.
4. Turn **SCROLL/SELECT** dial to select **<Yes>** to perform factory reset or **<No>** to cancel.

Software version

1. To view the software version, press and hold **INFO/MENU** to enter Menu.
2. Turn **SCROLL/SELECT** dial to select **<System Settings>** and press the **SCROLL/SELECT** dial to confirm
3. Turn **SCROLL/SELECT** dial to select **<Software Version>** and press the **SCROLL/SELECT** dial to confirm

Using earphones

You can connect your earphones (not include) by plugging into the earphone socket at the rear of the unit. Turn down the volume before connecting earphones. Slowly raise the volume with the earphones on until you reach your desired level.



Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones, especially for extended periods of time.

Using your DAB/FM Digital Radio

Let's get started

Auxiliary input

4. There is an AUDIO IN socket located at the rear of the unit.
Analogue audio sound signals from other audio sources can be input to the unit through this socket.
5. Connect the input to another audio device via an AUX cable (not included) with AUDIO IN socket.
6. Press the **MODE** button repeatedly to select "Auxiliary Input".
7. Turn **VOLUME** dial to adjust the volume control for your desired sound output level.
8. In "Auxiliary Input" mode, operate your connected audio device directly for playback features.




- When connecting the external audio device, refer to the owner's manual of the external device.
- Examples of External Audio Device that can be connected to the unit are: Portable MP3 Players, Cassette Players, Mini Disc Players, DVD Players, etc.



4-hour playback:

- If the unit is in "Auxiliary Input" mode more than 4 hours, it will automatically switch to standby mode.
- 10 minutes before entering standby, "AUTO-OFF" will flash on the display.
- Press the INFO/MENU button to continue cancel auto off function.

Other information 4

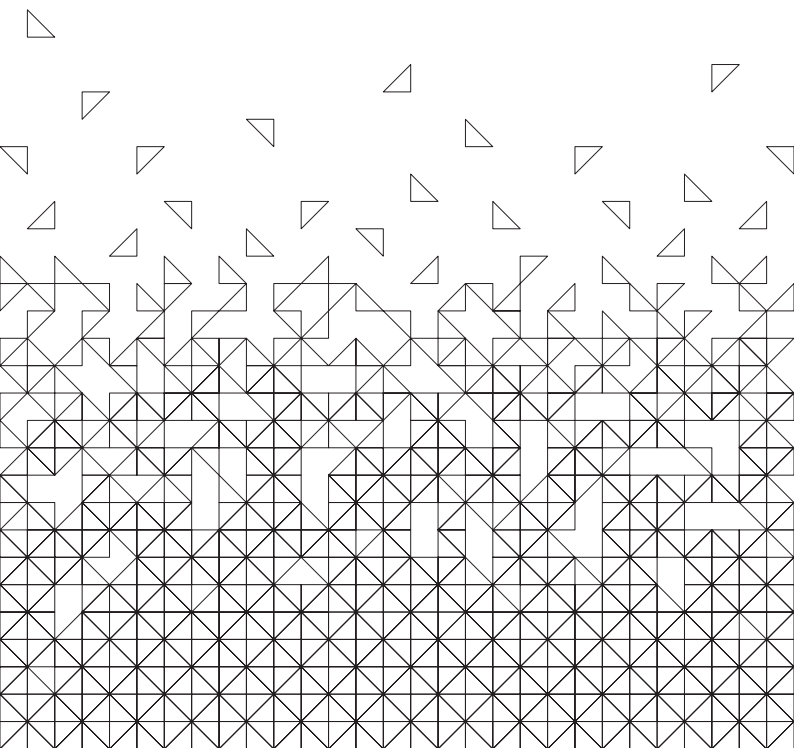

Other information

Helpful technical information

Maintenance

Cleaning the unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.

Specification

Model	NE-2722
Battery	DC 1.5V R14/C size x 4
Power Supply	Input: 100–240V ~50/60Hz, Max.400mA Output: DC 5.9V $\overline{\overline{\overline{\text{---}}}}$ 1.5A
Power Consumption	8.85 W
Speaker Output Power	2 x 2W RMS
Operating Temperature	0 ~ 40°C
Net Weight	approx. 760g
Dimension	240 (L) x 75 (W) x 163 (H) mm
Radio Frequency	FM 87.5 – 108 MHz DAB+ 174 – 240 MHz

Other information

Helpful technical information

Bluetooth information

Bluetooth pairing ID :	BUSH NE-2722
Bluetooth Profile:	A2DP and AVRCP
Bluetooth Range:	Max. 8M
Bluetooth Version:	5.0
Frequency range:	2402 MHz - 2480 MHz
Max RF power:	≤ 0dbm

Power adapter information

Manufacturer's name and address:


DONGGUAN BECKY ELECTRONICS TECH CO., LTD

Yinyong Industrial Zone, Jinma Road, HengLi Town, Dongguan City,
Guangdong Province, China

Model Number:	BQ12E-0591500-B
Input Voltage and Frequency:	100-240V ~ 50-60Hz Max. 400mA
Output Voltage:	DC 5.9V
Output Current:	1.5A
Output Power:	8.85W
Average Active Efficiency:	77.9%
No-Load Power Consumption:	0.09W

Features and specifications are subject to change without prior notice.

 Product support 5

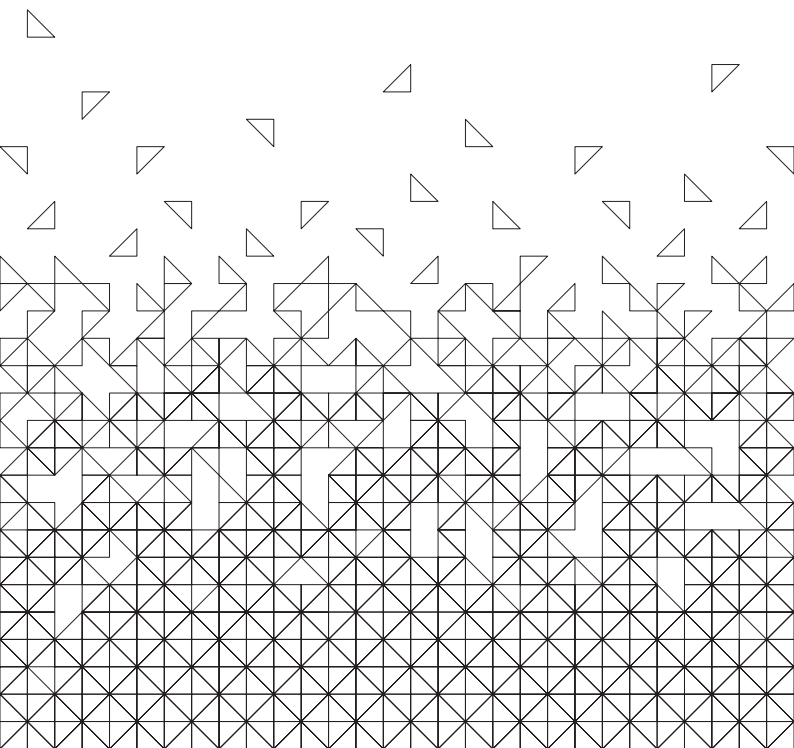

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your DAB/FM Digital Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.bush-support.com**

If you still require further assistance, call one of our experts on **0345 604 0105***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Date of
purchase

This will be shown on your receipt

Local call rates applies*

**Line open 8am-7pm Monday to Saturday and 10am-4pm
Sunday**

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations.

Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.



This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*
0800 597 8548

Lines are open 8am - 8pm, 365 days a year.

*Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Product support

Help is always at hand

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited-489-499 Avebury Blvd. - Milton Keynes- NK9 2NW

BUSH

Contact:

www.bush-support.com

Helpline: 0345 604 0105

 DAB Digital
Radio