

# BUSH

## Instruction Manual

CR-169USB



## Table of content

Help and guidance .....	1
Safety information .....	2
Battery installation .....	2
Location of Control .....	3
Power Supply .....	4
Main supply .....	4
Battery back up .....	4
Setting the clock and alarm .....	4
Setting the Clock .....	4
Setting the Alarm .....	4
Using the Alarm Function .....	5
Snooze Function .....	5
Sleep Function .....	5
Using the Radio .....	5
Using the USB Charging Function .....	6
Specification .....	6
Product support .....	7
Disposal .....	7
Guarantee .....	8~9
Important Data Protection information .....	9

## **You'll soon be enjoying your new USB FM Clock Radio.**

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

### **Help and Guidance**

We're here to help you get the most from your radio. Should you require any guidance, a simple solution can often be found online at:

**[www.argos-support.co.uk](http://www.argos-support.co.uk)**

If you still require further assistance, call one of our experts on 0345 604 0105.



# Safety Information

**Important – Please read these instructions fully before installing or operating**


- ▶ This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.
- ▶ Ventilation
  - ▶ Allow at least a 10 cm gap all around the product.
  - ▶ The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- ▶ No naked flame sources, such as lighted candles, should be placed on the apparatus.
- ▶ Attention should be drawn to the environmental aspects of battery disposal.
- ▶ This apparatus is not suitable for use in a tropical climate.
- ▶ The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- ▶ Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- ▶ Never let anyone push objects into holes and ventilation slots.
- ▶ Do not attempt to repair this product yourself; always get a qualified service agent carry out adjustments or repairs.
- ▶ The marking plate is located at the rear of the apparatus.


## Battery installation (back up only)

- ▶ Only adults should handle battery. Do not allow a child to use this apparatus unless the battery cover is securely attached to the unit.
- ▶ Insert 2 x 1.5V AAA size batteries (not included) in to the compartment, taking care to match the battery orientations marked on the inside of the compartment.
- ▶ Replace the battery compartment cover.

**Important:** You need to reset the clock and the preset stations when inserting new batteries.

## LOCATION OF CONTROL

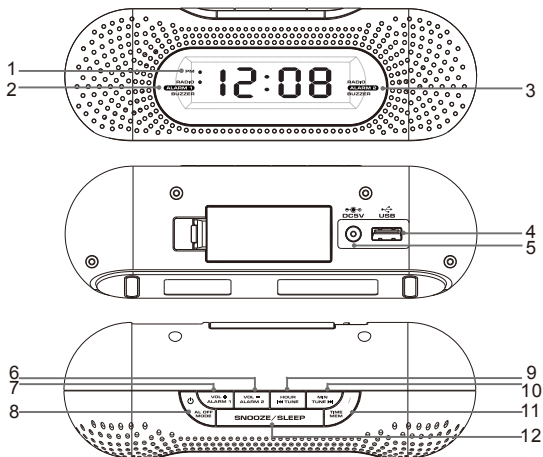

1. PM indicator
2. ALARM 1 indicator
3. ALARM 2 indicator
4. USB charging port
5. DC5V jack
6. VOLUME - / ALARM 2 button
7. VOLUME + / ALARM 1 button
8.  POWER ON/OFF / ALARM OFF / MODE button
9. HOUR / TUNING < button
10. MINUTE / TUNING > button
11. TIME / MEMORY button
12. SNOOZE / SLEEP button

## POWER SUPPLY

### MAIN SUPPLY

Insert the AC adaptor into a 230V-240V AC ~ 50Hz mains outlet and the other end of the cord into the **DC 5V** jack on the back of the unit.

### BATTERY BACKUP

The clock time and alarm (if set) can be maintained during a power failure by 2 x AAA/ LR03 batteries (not supplied).

Once the power is restored, check the time to make sure it is accurate and re-set if necessary.

### INSERTING THE BATTERIES

1. Open the battery compartment at the bottom of the unit by pressing on the catch and removing the cover.
2. Insert 2 x AAA/ LR03 batteries (preferably alkaline batteries) into the battery compartment, following the polarity as shown on the diagram inside the compartment.
3. Replace the battery compartment cover.

## SETTING THE CLOCK AND ALARM

### SETTING THE CLOCK

1. Press and hold the **TIME** button(11) and the hour/minute digits will flash.
2. Use the **HOURL** button(9) to set the hours. The **PM indicator**(1) will light when the hour is advanced into the PM time.
3. Use the **MINUTE** button(10) to set the minutes.
4. Press the **TIME** button(11) to confirm.

### SETTING THE ALARM

Before setting the alarm time, make sure the clock has been set.

1. In standby mode, press and hold the **ALARM 1/2** button(6,7), and the hour/minute digits will flash.
2. Set the alarm time by repeatedly pressing **HOURL / MINUTE** button(9,10).  
**Note:** Press and hold **HOURL/MINUTE** button (9, 10) respectively for fast advance.
3. Repeatedly press **ALARM 1/2** button(6,7) to select the desired alarm mode (buzzer or radio). The corresponding **ALARM 1/2** buzzer and/ or radio indicator(2,3) will light up on the LED display.
4. Disabling alarm functions, press the **ALARM 1/2** button(6,7) repeatedly until the buzzer and/or radio indicators have disappeared.

## USING THE ALARM FUNCTION

1. To enable the alarm function, use the **ALARM 1/2** buttons(6,7) to select buzzer or radio. The selected alarm mode indicator (2,3) will light up.
2. The buzzer or radio will come on at the set time.
3. To stop the alarm, press the **AL OFF** button(8). The alarm will sound again the next day.


**Note:** While the buzzer alarm volume is fixed and cannot be adjusted, the radio alarm volume can be adjusted to your desired level using the **VOLUME** buttons(6,7). To select a radio station to wake up to, see the section on **"USING THE RADIO"**.

## SNOOZE FUNCTION



When the alarm sounds, press the **SNOOZE** button(12). The alarm mode indicator will flash and the alarm will sound again after 9 minutes. To cancel the SNOOZE function and repeat the alarm the next day, press the **AL OFF** button(8).

## SLEEP FUNCTION

With this function, you can listen to the radio for up to 120 minutes, after which it will turn off automatically.

1. When the unit is switched on, press the **SLEEP** button(12) repeatedly to select the duration: 120, 90, 60, 45, 30, 15, 05 minutes or OFF.
2. At the end of the set time, the radio turns off automatically.
3. To cancel the sleep function before the end of the set time, press the  button(8) to turn off the radio immediately.

## USING THE RADIO

1. Press the  button(8) to turn on the radio.
2. Press and hold one of the **<TUNING>** buttons(9,10) to start automatic tuning up/down. Release the button when the unit is receiving a station you would like to listen to. For manual fine-tuning, you can press it briefly to adjust the frequency step by step.
3. Press the  button(8) to turn off the radio.

## FOR OPTIMUM RECEPTION

Extend and position the FM antenna to achieve optimum reception.

## PRESET RADIO STATIONS

You can store up to 20 stations.

Use the **<TUNING>** buttons(9,10) to search for a station. Press and hold the **MEMORY** button(11) to store the station and a number to be assigned for the preset will be displayed.

## LISTENING TO A PRESET STATION

While listening to the radio, press the **MEMORY** button(11) to select a preset station.

The current time is always displayed. When you change to Radio mode, the frequency will be displayed for 5 seconds and then the unit will go back to displaying the time.

## USING THE USB CHARGING FUNCTION

To charge, connect your USB device like smartphone to the **USB port**(4) of this clock. Use only with devices that require 5V USB power. USB port provides 800mA recharging current. Charging time may vary for difference devices.

**Note:** *Charging function may not be supported for all phones or electronic devices.*

## SPECIFICATIONS

Power source: AC 230-240V ~ 50Hz, 8W

Power consumption (clock only): <1W

Power output (RMS): 0.4W

FM: 87.5 - 108MHz

Back-up battery: 2 x 1.5V "AAA" size battery or equivalent (not included)

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.



## Help and assistance

If you require any technical guidance or find that your USB FM Alarm Clock Radio is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk).

If you still require further assistance, call one of our experts on 0345 604 0105.

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

## Disposal



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), click on "bank locator" and enter your postcode to find your nearest recycling site.

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU.



## Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

# BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*  
0800 597 8548

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.  
Your Bush Guarantee

## **Your Bush Guarantee**

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

### **The guarantee is subject to the following provisions:**

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

### **Important Data Protection Information**

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

