OK A C



Binatone Helpline (for UK only)

Mon - Fri - 8.00am to 8.00pm Sat - 8.30am to 2.00pm 0844 557 9677 (UK only - Calls cost 7p per minute

plus your telephone company's access charge.) 0818 762092 (ROI)

Or visit our website: www.binatoneglobal.com

THIS EQUIPMENT IS NOT DESIGNED FOR MAKING **EMERGENCY TELEPHONE CALLS WHEN THE POWER** FAILS, ALTERNATIVE ARRANGEMENTS SHOULD BE MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.

> Before operating this set, please read these instructions carefully.

TECHNICAL DETAILS

Frequency range Operating range

1.728 MHz RF power output(EIRP): Below 24 dBM Up to 300m outdoors; up to 50m indoors Operating time

Temperature range

Standby: 100 hours: Talking: 10 hours Battery charge time:15 hours Operating 0°C to 40°C; Storage -20°C to 60°C

1.88 to 1.9 GHz (bandwidth = 20 MHz)

Digital Enhanced CordlessTelecommunication(DECT)

VTech - VT04EUK06045 / VT04FFI I06045 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Ruijing - RJ-AS060450B001 / RJ-AS060450E002 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA

Charger unit: VTech - VT04EUK06045 / VT04EEU06045 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Ruijing - RJ-AS060450B001 / RJ-AS060450E002

input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Battery information (each handset): CORUN-Ni-MH AAAJ400, Type Ni-MH (Rechargeable battery) Voltage Rating 400mAh, 2 X 1.2V AAA Size

Use only adaptors and batteries listed above.

Risk of explosion if battery is replaced by an incorrect type Dispose of used batteries according to the your local authority regulations. Port specification

The port (connected to the mains power supply) is a SELV port with respect to EN41003. The port (connected to the telephone line) is a TNV port with respect to EN41003. **CLEANING AND CARE**

Do not clean any part of your phone system with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the

When necessary, clean it with a damp cloth.

Keep your phone system away from hot, humid conditions or strong sunlight, and don't let it get wet.

Every effort has been made to ensure high standards of reliability for your phone system. However, if something does go wrong, please do not try to repair it yourself, but consult your supplier or the Helpline.

3 GETTING TO KNOW YOUR PHONE

3.1 Handset Overview

1 UP (Calls)

1) Plug the power supply \blacksquare and line cord \blacksquare into the base station 2) Plug the power adapter into a 100-240V 50/60Hz

mains socket, and the line cord into your telephone line socket. 3) Always use the cables provided in the box.

Warning: Use only the provided power adapter, as others may cause a hazard. Warning: Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket. Never try to lengthen the mains power cable. Note: The base unit needs mains power for normal operation, not just for charging the handset batteries.

2.2 Installing and charging the batteries

2 INSTALLING YOUR PHONE

2.1 Connecting the base station

1) Place the 2 supplied batteries into the battery compartment with the polarity markings as shown. Use only the NiMH rechargeable battery type provided.

2) Position the battery compartment cover over the batteries and slide up to click into place.

3) Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

If you have a Broadband line

4.8 Turn on the Keypad Lock

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.

In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to.

If you need more broadband micro-filters, contact your broadband supplie

You can lock the keypad so that it cannot be used accidentally while carrying it around. In idle, press and hold $< * / \frac{1}{12} >$ to turn on the keypad lock and show the $\left[\frac{1}{12}\right]$ icon.

4.9 Redial the last numberYou can redial any of the 20 last numbers called from any handset. If you have stored

a name in the phonebook to go with the number, the name will be displayed instead.

Note: If an entry shows a name or has more than 12 digits, press <# / ♣> to view the

Press <OK/Menu> and then enter the name you want to use in the phonebook

Press <UP>/<DOWN> to browse the ringtone list. The respective ringtones play

You can locate the handset by pressing the <FIND> key on the underside of the base

station. All the handsets registered to the base will produce the paging tone and show

PAGING on the display for 60 seconds. You can stop the paging by pressing <TALK

Note: If there is an incoming call during paging, the phone will ring with the incoming

ON>, <TALK OFF> or < C/INT on any handset or <FIND> on the base again.

while browsing the list. (Note: the selected melody only plays when you receive a

Note: You can still use <TALK ON> to answer a call when the handset is ringing.

To turn the keypad lock off, press and hold < * / ੴ > again.

4.9.1 Redial a Number from the Redial List

Press <UP>/<DOWN> to browse the redial list.

4.9.2 Store a Redial Number into the Phonebook

Follow Steps 1 and 2 in section 4.9.1.

. Press <OK/Menu> to show ADD TO PB.

Press <OK/Menu> to show MELODY 1.

Follow Steps 1 and 2 in section 4.9.1.

Follow Steps 1 and 2 in section 4.9.1

Press <OK/Menu> to display CONFIRM?.

4.9.3 Delete a Redial Number

4.10 Find the Handset

4.9.4 Delete all Redial List entries

call instead of paging.

Press <TALK ON> to dial to the selected redial number

number or additional digits.

The most recent last number will display at the top of the redial list.

Note: If there are no numbers in the redial list, the display shows EMPTY.

Press <OK/Menu> and then modify the number, if necessary.

call with Caller Display that matches the stored numbe

7. Press <OK/Menu> to confirm, and the entry will be stored.

2. Press <OK/Menu> then <UP>/<DOWN> to show **DELETE**.

3. Press <OK/Menu> to confirm, and the entry will be deleted.

Press <OK/Menu> to delete all entries and display -EMPTY.

. Press <OK/Menu> then <UP>/<DOWN> to show DELETE ALL.

From idle: access the Call List In lists: move up the options During calls / ringing: increase the volume. 2 LEFT SOFT KEY (OK Menu Use with icons on display above, to open menu and confirm options. 3 TALK ON (Talk) Make or answer calls. In Phonebook list / Redial list / Call list: Press to make a call. 4 DOWN (Redial) In lists: move down the options. During calls / ringing: decrease the volume. From idle: access the Redial List. 5 SPEAKERPHONE (**■¹)**) (4 shi) (5 ii) (6 kh) During a call: Press to turn on / off the speakerphone. 7 R 8 Tuy 9 WZ

(*A)(0)(#3)

-(1) (1) (1) (1)

6 RIGHT SOFT KEY (Mute)

Use with icons on display above, to clear characters, go back to previous menu, mute the microphone or make an intercom call.

7 TALK OFF (Off)

End a call or return to previous menu From idle: press and hold to turn the handset on / off.

8 R - RECALL (Flash) also called Flash

Sends a recall (R) signal, used for some PBX / Calling Features

9 CALL BLOCKER () Press to enter CALL BLOCKER menu.

4.11 Make an Internal Call (Multi - handset versions only)

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 nanae comerciac can: If the called handset is not answered whilm of seconds, it will stop ringing and the calling handset will return to standby mode.

Note: If only one handset is registered to the base station, when < CINT Mute > is pressed.

it will display NOT POSSIBLE. 4.11.1 Intercom Another Handset

1. In idle mode, press < $\frac{\text{C/INT}}{\text{Mute}}$ > and the first other registered handset number

displays. Press <UP>/<DOWN> to see other handset numbers or ALL. ter the number of the handset to call, or press <9> to call ALL. The called handset rings and <TALK ON> must be pressed on that handset to establish the intercom call.

Note: If only two handsets are registered to the base station, pressing

Mute > will call the other handset immediately. Note: If there is an external call while you are on an intercom call, you'll hear warning beeps, and you have to end the intercom call, before you can answ the external call

4.11.2 Call All Handsets

1. In idle mode, press $< \frac{\text{C/INT}}{\text{Mute}} >$ and the first registered handset will display.

2. Press the < 9 > key to ring to all registered handsets

4.11.3 Transfer an External Call to another handset

During an external call:

Press <OK/Menu> to show INTERCOM.

2. Press <OK/Menu> to show any other registered handset numbers or ALL.

Enter the number for the handset you want to transfer the call to.

The external call is put on hold automatically and the called handset rings

. Press <TALK ON> on the called handset to establish an internal call. 5. Press <TALK OFF> on the calling handset or put the calling handset on the

charging cradle to end the current call with the external party. The external call is transferred to the called handset.

Note: If the other handset has not answered the intercom call, you can stop the intercom and return to the external call by pressing <TALK OFF>

4.11.4 Make a 3-way Conference Call The conference call feature allows one external call to be shared with two handsets (in intercom) so that three parties can share the conversation and no additional network

subscription is required During an external call Follow Steps 1 to 4 in section 4.11.3.

Press and hold $< * / \frac{1}{12} > 0$ on the calling handset to establish the conference call.

Either handset can exit the conference by pressing <TALK OFF>, leaving the other handset still connected to the external call.

Press to page your registered handset(s). Press and hold to put base into registration mode

CONTENTS

3.3

3.4

4.2

4.5

5.2

IMPORTANT SAFETY INSTRUCTIONS...

2 INSTALLING YOUR PHONE...

Handset Overview .

Menu Structure

4 USING YOUR PHONE...

Answer a Call

Adjust Volume...

4.9 Redial the last number.

5 PRIVATE PHONEBOOK

Review an Entry ..

Edit a Phonebook Entry.

Delete a Phonebook Entry....

Check Phonebook Status...

5.8 Add a Phonebook Entry to VIP list.

5.10 Remove an Entry from the VIP list.

5.11 Delete all VIP Phonebook entries.

3.2 Base Station Overview

1. FIND •))

5.9 View a VIP Phonebook Entry.

Delete All Phonebook Entries.

5.3 Dial an Entry

4.10 Find the Handset ...

Mute a Call ...

4.1 Make a Call.

4.3 End a Call ...

3.5 Text and Digit Entry Table.

Handset Speakerphone.

Turn off the Handset Ringer

5.1 Store a Number Entry in the Phonebook

4.11 Make an Internal Call (Multi - handset versions only).

Turn on the Keypad Lock

Base Station Overview


Display icons and symbols.

Connecting the base station.

2.2 Installing and charging the batteries.

3 GETTING TO KNOW YOUR PHONE...

2. HANDSET CHARGING CRADLE

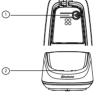

3.3 Display icons and symbols The LCD screen gives you information on the current status of the telephone.

<u>\(\mathref{\P} = \langle \equiv \) \(\mathref{\P} \) \(\mathref{\</u>



Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.

Steady when an intercom call is in progress. Flashes when there is an incoming internal call

Indicates the speakerphone is being used. Indicates a call is in progress with any handset using the base. Flashes when there is an incoming call.

Indicates that your answering machine (TAM) is on and flashes when there Indicates that the handset ringer is switched off.

Steady when an alarm is set. Flashes when the alarm is sounding.

Indicates that the keypad is locked

5 PRIVATE PHONEBOOK

5.1 Store a Number Entry in the Phon

the phonebook, it will show EMPTY.

Press <OK/Menu> to save.

Press 6 three times to enter O.

5.1.1 Entering Names

Press 8 once to enter T.

Press 6 once to enter M.

5.1.2 Writing Tips

Press <OK/Menu> to show ADD.

Press <OK/Menu> and then enter the name.

Press < OK/Menu> and then enter the number.

Use the keypad letters to enter names, e.g. to store TOM:

Press and hold < Mute > to delete all characters or digits.

Press < C/NT > to delete the last character or digit.

phonebook list.

Indicates when you have a new Voice Mail message. (This is a Caller Display service and is not usually available from UK network providers.)

Indicates when the battery is fully charged Whole icon flashes when the battery is charging.

The phone system can store up to a total of 100 entries shared between the

Phonebook (including VIP entries) and the Black List (see section 8). All handsets

will share the same phonebook list due to the feature requirements, and therefore

can have a maximum of 24 digits for the phone number and 12 characters for the

only one handset can access the phonebook at any one time. Each phonebook entry

name. You can also select different melodies for your phonebook entries, but they will

only play when you receive a call if you subscribe to Caller Display and the incoming

viewed from the main menu can be seen as ALL CONTACTS or just the VIP contacts.

. Press <OK/Menu> and <UP>/<DOWN> to select **PHONEBOOK**, then Press

<OK/Menu> to show ALL CONTACTS, then <OK/Menu> again to open the full

number matches the stored number. The entries are stored alphabetically, and when

Note: The first entry in the phonebook will be displayed. If there is no entry stored in

Press <OK/Menu> and <UP>/<DOWN> to select the desired melody.

entry, and you will have to delete an entry before being able to add another

but you only need to wait if the next character requires the same key.

(Note: the melody will only play when you receive a call from this number, if you

subscribe to caller display and the incoming number matches the number stored.)

NOTE: If the phonebook is full, it will show PB FULL when you try to ADD a new

After a character is entered, the cursor moves to the next position after a short pause,

When entering a number, press and hold < 0 > to insert a 3-second dialling pause (will

Press <UP>/<DOWN> to move backward or forward through the characters / digits.

Indicates when the battery needs charging, and flashes when very low.

being displayed. Indicates when there are more characters or numbers after those being

Indicates when there are more characters or numbers in front of those

LEFT SOFT KEY function. Press to access the main menu.

OK LEFT SOFT KEY function. Press to confirm the current selection.

Indicates a new TAM message is playing or a new Call List entry is being displayed.

Indicates you can scroll up / down the menu items / Phonebook list

RIGHT SOFT KEY function. Press to start an intercom call.

RIGHT SOFT KEY function. Press to go back to the previous menu level or (BACK) cancel the current action. RIGHT SOFT KEY function. Press to clear a character, stop the alarm, or

C

In idle mode, press <OK/Menu> to go to CALL LIST, the first option in the menu list.

6 CALLER DISPLAY (NETWORK DEPENDENT) ..

Delete an entry in the Call List...

Add a Number to the Black List.

Delete all Call list entries .

View a Black List Entry.

Delete a Black List Entry

Delete All Black List Entries

Edit a Black List Entry

Call Blocker Settings

Date and Time Settings

PHONE SETTINGS

Alarm Settings.

Handset Settings

Reset Your Phone.

Record Memo ...

TROUBLESHOOTING ..

12 GUARANTEE AND SERVICE.

ANSWERING MACHINE (TAM) ..

Answering Machine Settings.

11 DECLARATION OF CONFORMITY...

Turn On/Off the Answering Machine.

Listen to the Messages in the Answering Machine.

Delete All Messages in the Answering Machine

Base Settings

Registration

8 4

8.5

9.2

9.3

9.4

Store a Call List Number into the Phonebook .

6.1 View the Call List.

CALL BLOCKER...

Press <UP> or <DOWN> to go to other options in the menu list.

Press <OK/Menu> to enter a sub-menu or function Press < C/INT > to go back to the previous level.

Refer to the following for the menu structure.

<UP/DOWN> y Press | <MENU> ← DOWN ← DOW ADD ADD TO VIP VIFW

5.2 Review an Entry In idle mode, press <OK/Menu> then <UP>/<DOWN> to show PHONEBOOK, and then <OK/Menu> to select, and <OK/Menu> again to open the ALL CONTACTS list. The first entry in the phonebook will be displayed.

2. Press <UP>/<DOWN> to find the phonebook entry you want to review.

TIP: To find quickly, enter the first character of the name using the keypad letters (e.g. if it begins with C, press the 2 key three times), and then press <UP>/<DOWN> to scroll to the entry you want.

Press <OK/Menu> and <UP>/<DOWN> to select **VIEW**.

4. Press <OK/Menu> to show the number of the selected entry. If the number is longer than 12 digits, press <OK/Menu> or < $\frac{\text{C/INT}}{\text{Mute}}$ > to see the others. Press <UP>/<DOWN> to see the Name or Melody.

5.3 Dial an Entry

While in the phonebook list, press <UP>/<DOWN> to find the entry you want, or enter the first character of the name using the keypad letters (e.g. if it begins with C, press the 2 key three times), and then press <UP>/<DOWN> to find the entry you want. Press <TALK ON> to dial the selected entry.

5.4 Edit a Phonebook Entry1. Press <OK/Menu> and <UP>/<DOWN> to show PHONEBOOK, then <OK/Menu> to select, and <OK/Menu> again to open the ALL CONTACTS list.

2. Press <UP>/<DOWN> to select the entry you want to edit. Press <OK/Menu> then <UP>/<DOWN> to select EDIT.

Press <OK/Menu> then use the keypad to edit the name (if applicable) Press <OK/Menu> then use the keypad to edit the number (if applicable

Press <OK/Menu> then <UP>/<DOWN> to change the melody (if required). 7. Press <OK/Menu> to save.

5.5 Delete a Phonebook Entry1. Press <OK/Menu> and <UP>/<DOWN> to show PHONEBOOK, then <OK/Menu>

to select, and <OK/Menu> again to open the ALL CONTACTS list. Press <UP>/<DOWN> to select the entry you want to delete

Press <OK/Menu> then <UP>/<DOWN> to select **DELETE**. Press <OK/Menu> to confirm the delete. 5.6 Delete All Phonebook Entries

Press <OK/Menu> to confirm the delete all

Press <OK/Menu> and <UP>/<DOWN> to show PHONEBOOK, then <OK/Menu> to select, and <OK/Menu> again to open the ALL CONTACTS list. Press <OK/Menu> and <UP>/<DOWN> to select **DELETE ALL**. Press < OK/Menu> to show CONFIRM?.

3.5 Text and Digit Entry Table

The following table shows you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset. In editing mode, a cursor is displayed to indicate the current text entry position

It is positioned at the right of the last character entered Writing Tips: Once a character is selected, the cursor moves on after a short pause

IMPORTANT SAFETY INSTRUCTIONS

Follow all warnings and instructions marked on the product

cleaners or aerosol cleaners. Use a damp cloth for cleaning.

· When the power supply cord or plug is damaged or frayed.

If the product exhibits a distinct change in performance.

12) Please ensure the batteries are inserted in the correct polarity.

1) Read and understand all the instructions

a bath tub, kitchen sink, swimming pool).

fire or electric shock.

such non-compliance.

where they could get punctured.

under the following conditions:

When using your telephone equipment, basic safety precautions should always be

3) Unplug this product from the wall outlet before cleaning. Do not use liquid

4) Keep your Veva 1915 Call Blocker away from hot, humid conditions or strong

5) Do not overload wall outlets and extension cords as this can result in the risk of

6) Unplug this product from the wall outlet and refer servicing to our Repair Centre

If the product has been dropped and the cabinet has been damaged.

your area. Damage caused by lightning is not covered by the guarantee

8) Do not use the telephone to report a gas leak in the vicinity of the leak.

7) NEVER use your Veva 1915 Call Blocker outdoors during a thunderstorm - unplud

9) Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation

periods for the handsets are only applicable with the default battery capacities.

10) The use of other battery types or non-rechargeable batteries/primary cells car

11) Do not use third party charging bays. Damage may be caused to the batteries

13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them

be dangerous. These may cause interference and/or damage to the unit of

surroundings. The manufacturer will not be held liable for damage arising from

· If the product does not operate normally by following the operating instructions.

the base from the telephone line and the mains socket when there are storms in

sunlight, and don't let it get wet or use this product near water (for example, near

followed to reduce the risk of fire, electric shock or injury, including the following:

2. Move the cursor within the text using <UP>/<DOWN> for text editing. Press < C/INT > to delete the last character.

Press and hold < C/INT > to delete the entire text string.

3.5.1 E	nglis	h Ch	narac	ter S	et						
	Alphanumeric Editing (For phonebook name editing and renaming handset)							Number Editing (For phone number editing, date/time editing)			
Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	-	1								1
2	Α	В	С	2							2
3	D	E	F	3							3
4	G	Н	ı	4							4
5	J	K	L	5							5
6	M	N	0	6							6
7	Р	Q	R	S	7						7
8	Т	U	V	8							8
9	W	X	Υ	Z	9						9
0	0										0, or P (Pause) if press and hold
*	*	?	/	\	()					*
#	0	ľ	,	-	&						#

"Other characters are available with other handset languages (see 8.3.5)."

4 USING YOUR PHONE

4.1 Make a Call 4.1.1 Preparatory Dialling

Enter the phone number and press <TALK ON> to dial the number. When entering the number, if you make a mistake, press < C/INT > to delete digits.

4.1.2 Direct Dialling Press <TALK ON> to connect to the line and then enter the phone number (Note: if you enter a wrong digit you cannot correct it with the < Key.)

4.1.3 Call from the phonebook

Press <OK/Menu> then <DOWN>(Redial) to show PHONEBOOK. Press <OK/Menu> to show ALL CONTACTS, and <OK/Menu> again to open the

phonebook ,then press <UP>/<DOWN> to select the desired entry. Press <TALK ON> to dial out the selected entry

5.7 Check Phonebook Status

You can check how many entries are in your phone and how many spaces are available for more entries in the phonebook 1. Press <OK/Menu> and <UP>/<DOWN> to show PHONEBOOK, and <OK/Menu>

to select, and <OK/Menu> again to open the ALL CONTACTS list.

Press <OK/Menu> then <UP>/<DOWN> to select PB STATUS. Press <OK/Menu> to view the Memory Status, for example 14/100 USED means 14 entries are stored out of the total 100 available spaces

Note: The total spaces will be less than 100 if Black List entries are stored. 5.8 Add a Phonebook Entry to VIP list

Press <OK/Menu> and <UP>/<DOWN> to select PHONEBOOK, then <OK/Menu> to show ALL CONTACTS, and <OK/Menu> again to access the phonebook.

Press <UP>/<DOWN> to select the desired phonebook entry. Press <OK/Menu> and <LIP>/<DOWN> to select ADD TO VIP 4. Press <OK/Menu> to add the entry to the VIP list, as indicated by a *

5.9 View a VIP Phonebook Entry1. Press <OK/Menu> and <UP>/<DOWN> to show PHONEBOOK, then <OK/Menu> to select.

Press <UP>/<DOWN> to show VIP then <OK/Menu> to open the VIP list. Press <UP>/<DOWN> to select the desired VIP phonebook entry.

Press <OK/Menu> to show VIEW. 5. Press <OK/Menu> to show the number and if more than 12 digits, press <OK/ Menu> or < C/INT Mute > for others and <UP>/<DOWN> for Name or Melody.

5.10 Remove an Entry from the VIP list Press <OK/Menu> and <UP>/<DOWN> to show PHONEBOOK, then <OK/Menu>

to select, and <OK/Menu> again to open the ALL CONTACTS list. Press <UP>/<DOWN> to select the desired VIP phonebook entry, indicated by a ' Press <OK/Menu> and <UP>/<DOWN> to select **DEL FROM VIP**.

. Press <OK/Menu> to remove it from the VIP list, but not the Phonebook Alternatively: In idle mode, Press <OK/Menu> then <UP>/<DOWN> to show PHONEBOOK.

Press <OK/Menu> then <I IP>/<DOWN> to show VIP Press <OK/Menu> then <UP>/<DOWN> to select the desired VIP entry. Press <OK/Menu> then <UP>/<DOWN> to show **DELETE**.

5. Press <OK/Menu> to delete the VIP entry but keep it in the Phoneboo

5.11 Delete all VIP Phonebook entries1. In idle mode, press <OK/Menu> then <UP>/<DOWN> to show PHONEBOOK.

Press <OK/Menu> and <UP>/<DOWN> to show VIP. Press <OK/Menu> and <UP>/<DOWN> to show **DELETE ALL**. Press < OK/Menu> to display CONFIRM?.

5. Press <OK/Menu> to confirm. All VIP entries will be deleted and the display

will show EMPTY, but all will remain as normal Phonebook entries.

It is shown in hours, minutes and seconds format (HH:MM:SS) 4.2 Answer a Call If the handset is not on the charging cradle, or if AUTO ANSWER is set to OFF:

Press <TALK ON> to dial out the selected redial number.

Your handset automatically times the duration of every call.

and remains on the screen for 5 seconds after the end of the call

Package contents

1 Mains power adapter

1 Telephone line cord

1 Handset

1 Base station

1 User manual

otherwise.

The package contains the following items

2 AAA NiMH rechargeable batteries

Connection and conditions for use:

Handset - Base Connection

may be cut off.

desired Call List entry.

the desired numbe

4.1.6 Call timer

4.1.5 Call from the redial list

link to it when they are all powered up.

Note: If you have a Twin, Triple or Quad system, you will also have the requisite extra

exchange with its own phone number; to an extension socket connected to a DEL; or

to an extension on an approved compatible PBX. Do not connect as an extension to a

The ringer equivalence numbers (REN) of all equipment (phones, fax machines,

modems, etc.) connected to an exchange line must not add up to more than 4, otherwise one or more of them may not ring and/or answer calls correctly. The

phone has a REN of 1, and most other telephones have a REN of 1 unless marked

1) When purchased, all handsets are already registered to the base unit and should

To use your cordless handset and base unit together, you must be able to establish a radio link between them. The signal between the handset and the base is in

> Other electrical equipment may cause interference and/or affect the range.

3) Do not place close to another telephone, a TV or audio equipment - it may cause

4) Out of Range warning. If you hear a warning tone during a call, and/or the sound

in the earpiece becomes faint or distorted, you may be going out of range of the

base unit, so move nearer to the base unit within 20 seconds, otherwise the cal

accordance with the normal standards for a DECT phone: Maximum range up to

Any large metal object, such as a refrigerator, mirror or filing cabinet, between

handset(s) and batteries, and a charger pod for each extra handset.

300 metres outdoors or 50 metres indoors. Be aware that:

the handset and the base unit may block the radio signal.

4.1.4 Call from the Call List (only available with Caller Display)

Note: You can also access the Call List by pressing <OK/Menu> twice.

Press <TALK ON> to dial out the selected entry.

Press <UP>(Calls) to access the Call List and press <UP>/<DOWN> to select the

Press <DOWN>(Redial) to access the redial list and press <UP>/<DOWN> to select

The call timer is displayed as soon as you answer a call or 15 seconds after dialling

> Other solid structures, like walls, may reduce the signal strength

You can connect your phone to a direct exchange line (DEL) on a local

When the phone rings, press <TALK ON> to answer the call.

Note: If AUTO ANSWER is set to ON, lift the handset off the base or charger to

answer the call automatically, without pressing buttons. 4.3 End a Call

During a call press TALK OFF> to end the call or put the handset on the base station or charger to end the call. 4.4 Handset Speakerphone During a call you can press <SPEAKERPHONE> to alternate between handsfree

4.5 Adjust Volume There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of the earpiece and speakerphone volumes.

During a call press <UP>/<DOWN> to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level

You can talk to someone nearby without letting the caller hear you during a call. During a call press < C/NT > to mute the microphone and display MUTED. Your caller

cannot hear you. Press $< \frac{\text{C/INT}}{\text{Mute}} >$ again to unmute the microphone. 4.7 Turn off the Handset Ringer
In idle, press and hold <# / ☼> to turn off the handset ringer. The "♣" icon is

Note: The display will still flash the Call icon and show CALL or the Caller Display number, when there is an incoming call, even if the ringer is turned off. To turn the ringer back on, press and hold <# / A> again.

 $\omega N \rightarrow$

ng a tile yoy y in yo

g N

pr pr

Q *

12 13 14

S of the SO.

£, ₫

side the ph

을 다

this e will

6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 30 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the

ringtone associated with that phonebook entry.

If the call is from someone who withheld their number, e.g. by dialling 141, WITHHELD If the call is from someone whose number is unavailable, e.g. an international call or

from a private exchange, **OUT OF AREA** will display.

If you've got new Caller Display records, the handset will display **X NEW CALLS** in standby mode. The New Calls indication will remain until all the new call records have

All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a * icon at the centre of the bottom

line of the display.

1. Press <UP>(Calls) to access the call list

OR Press <OK/Menu> to show **CALL LIST** and then press <OK/Menu>. Press <UP>/<DOWN> to select the desired entry. Press <#> to view the caller's number if applicable.

Press <OK/Menu>, then <UP>/<DOWN> to show **DETAILS**, and then <OK/Menu>

to display the date and time of the call. Press <OK/Menu> to go back to the previous

6.2 Store a Call List Number into the Phonebook
1. Follow Steps 1 and 2 in Section 6.1 .
2. Press < OK/Menu> to show ADD TO PB.

6.1 View the Call List

- Press <OK/Menu> and then enter the name.

 Press <OK/Menu> and the selected call list number is displayed.
- Edit the number if necessary.

 Press <OK/Menu> then <UP>/<DOWN> to select the ringtone.
- Press <OK/Menu> to store the phonebook entry and return to the calls list.

6.3 Delete an entry in the Call List

Follow Steps 1 and 2 in Section 6.1 .

Press <OK/Menu> then <UP>/<DOWN> to show **DELETE**. Press <OK/Menu> to delete the entry immediatel

6.4 Delete all Call list entries Follow Steps 1 and 2 in Section 6.1

- Press <OK/Menu> then <UP>/<DOWN> to show **DELETE ALL**. Press <OK/Menu> to display CONFIRM?.
- Press <OK/Menu> to confirm. All entries will be deleted and the display will show

17

8.3.4 Set Alert Tones

Three different alert tones are set on by default, but can be turned off, if desired. **Key Tone** - a single beep is emitted when you press a key. Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.

Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

- 1. Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS.
 2. Press <OK/Menu> then <UP>/<DOWN> to show TONE SETUP.
- Press <OK/Menu> and then <UP>/<DOWN> to select KEY TONE / BATTERY TONE / OUT OF RANGE.
- 4. Press <OK/Menu> then <UP>/<DOWN> to turn **ON** or **OFF** these tones.
- . Press <OK/Menu> to confirm. 8.3.5 Set the Handset Language

Press <OK/Menu> then <UP>/<DOWN> to show **HS SETTINGS**. Press <OK/Menu> then <UP>/<DOWN> to show **LANGUAGE**.

- Press <OK/Menu> then <UP>/<DOWN> to select the desired language.
- 4. Press <OK/Menu> to confirm. 8.3.6 Rename the Handset

. Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS 2. Press <OK/Menu> then <UP>/<DOWN> to show RENAME HS

- 3. Press <OK/Menu> and change the name of your handset, using < C/INT > to delete letters and the alphanumeric keys to enter up to 10 letters for the name that will be displayed on the screen in idle mode.
- 4. Press <OK/Menu> to confirm.

8.3.7 Choose the Information to be Displayed in Idle You can choose to display time or handset name in your idle screen

- Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS
- . Press <OK/Menu> then <UP>/<DOWN> to show HS DISPLAY. Press <OK/Menu> then <UP>/<DOWN> to select HANDSET NAME or TIME.
- Press <OK/Menu> to confirm. 8.3.8 Set the Auto Answer
- If you turn on the Auto Answer, you can answer a call automatically by just lifting the

handset off the base or charger, without having to press any key.

1. Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS.

23

29

- 2. Press <OK/Menu> then <UP>/<DOWN> to show AUTO ANSWER.
 3. Press <OK/Menu> then <UP>/<DOWN> to turn ON or OFF the auto answer feature. 4. Press <OK/Menu> to confirm.

9 8 7 6 5

off th

7 CALL BLOCKER If you subscribe to Caller ID, you can use the call blocker feature to reject certain calls

automatically by adding numbers into the black list or rejecting a Call Type (see 7.6.5) The phone stores up to 100 entries shared between the phonebook (including the VII

When a blocked call is received the telephone will not ring, but the handset will show the caller details. If the answering machine is active it will answer the call and you can still screen from a handset (see 9.5.6). In order to use the call blocker you must first activate the feature (see 7.6). See section 5.1 and 5.8 for how to store numbers to the phonebook and VIP list. See section 7.1 for how to store numbers to the black list.

7.1 Add a Number to the Black List

The Black List is used to hold numbers that will always be blocked when the Call Blocker is set to BLOCK BLIST

- **Note:** Each Black List entry reduces the capacity of the Phonebook / VIP List store. In idle, press <CALL BLOCKER> or press <OK/Menu> and <UP>/<DOWN> to
- select CALL BLOCKER, then <OK/Menu> to show BLACK LIST. Press <OK/Menu> twice to open the Black List and then to show ADD.

 Press <OK/Menu> and then enter a name, then <OK/Menu> and the number.
- Press <OK/Menu> to store the number to the black list.
- 7.2 View a Black List Entry1. In idle, press <CALL BLOCKER> or press <OK/Menu> and <UP>/<DOWN> to
- select CALL BLOCKER, then <OK/Menu> to show BLACK LIST.
- Press <OK/Menu> then <UP>/<DOWN> to select the desired black list entry. Press <OK/Menu> and <UP>/<DOWN> to select VIEW.
- 4. Press <OK/Menu> and <UP>/<DOWN> to see the number or name of the selected entry, and <OK/Menu> or < C/INT > for longer numbers.

- 7.3 Edit a Black List Entry1. In idle, press <CALL BLOCKER> or press <OK/Menu> and <UP>/<DOWN> to select CALL BLOCKER, then <OK/Menu> to show BLACK LIST.
- Press <OK/Menu> then <UP>/<DOWN> to select the desired black list entry.
- Press <OK/Menu> and <UP>/<DOWN> to select EDIT.
- Press <OK/Menu> to display the current name.
- . Edit the name and press <OK/Menu> 6. Edit the number and press < OK/Menu> to confirm the change.
- 7.4 Delete a Black List Entry1. In idle, press <CALL BLOCKER> or press <OK/Menu> and <UP>/<DOWN> to

- select CALL BLOCKER, then <OK/Menu> to show BLACK LIST.

 Press <OK/Menu> then <UP>/<DOWN> to find the entry you want to delete.

 Press <OK/Menu> and <UP>/<DOWN> to select DELETE.

 Press <OK/Menu> to confirm, and the BLACK LIST entry will be deleted.

18

8.4 Base Settings 8.4.1 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to

de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and REGISTER on the display. Note: You cannot de-register the handset that you are currently using.

1. Press <OK/Menu> then <UP>/<DOWN> to show BS SETTINGS.

- Press <OK/Menu> to show **DELETE HS**.
- Press <OK/Menu> and the display shows PIN?----
- Enter the 4-digit system PIN.
- Press <OK/Menu> and the first handset number is displayed.
- 6. Press <UP>/<DOWN> to scroll through the list of registered handsets and select
- the number of the handset you want to de-register. 7. Press <OK/Menu> to confirm, and the chosen handset will be de-registered.
- 8.4.2 Change the Flash (Recall) Time You may need to change the recall (flash) time if your phone is connected to a private

exchange (PBX). The recall time options are SHORT (the default value of 100ms), MEDIUM (300ms) or LONG (600ms). Press <OK/Menu> then <UP>/<DOWN> to show **BS SETTINGS**.

- Press <OK/Menu> then <UP>/<DOWN> to show FLASH TIME.
- Press <OK/Menu> then <UP>/<DOWN> to select your desired flash time (SHORT, MEDIUM, LONG - an asterisk indicates the current setting).
- 4. Press < OK/Menu> to confirm 8.4.3 Change the System PIN Code

A 4-digit system PIN code is used to protect your phone against unauthorised use when changing some system settings of the base station. The default system PIN

- code is 0000 Press <OK/Menu> then <UP>/<DOWN> to show BS SETTINGS.
- Press <OK/Menu> then <UP>/<DOWN> to show CHANGE PIN.
- Press <OK/Menu> to show OLD PIN? ----
- Enter the current system PIN.
- Press <OK/Menu> to display **NEW PIN?---**, and enter your new 4-digit system **PIN**. Press <OK/Menu> to display CONFIRM?----, and enter your new 4-digit system
- Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, you must enter the new system PIN at step 5 again.

24

Press <OK/Menu> to start call screening via its earpiece. Any registered handset can listen to who is leaving the message and decide whether to pick up the call or

You can adjust the earpiece volume by pressing <UP> or <DOWN>. OR
 Press <SPEAKERPHONE> to switch to listening through the handset loudspeaker

recording.

At any time if you want to pick up the call, you can press <TALK ON> and the message

recording will be stopped automatically. If the answering machine is in the process of

Three different compression rates (HIGH, MEDIUM and LOW) are provided for

different quality levels for recording incoming messages. The lower the compression rate, the higher the recording quality level attained, but the shorter the total recording

time available. (LOW=15 minutes, MEDIUM=20 minutes, HIGH=35 minutes approx)

Press <OK/Menu> then <UP>/<DOWN> to select your desired compression rate.

Your phone lets you check your messages, or otherwise operate your answering

machine, by calling the answering machine when you are away from home and then

dialling a 4-digit remote access PIN from a tone-dialling phone. The 4-digit remote

access PIN code is used to prevent other people from unauthorised access of your

Also, the Remote Access function must be activated using the TAM SETTINGS menu,

Press <OK/Menu> and enter the Old PIN. (Default Remote Access PIN is 0000). Press <OK/Menu> and enter your New PIN.

Note: If the new PIN entered in Step 6 is not the same as the new PIN entered in Step 5,

Press <OK/Menu> then <UP>/<DOWN> to show ANS, MACHINE

Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS

Press <OK/Menu> then <UP>/<DOWN> to show COMPRESSION.

Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE. Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS.

Press <OK/Menu> then <UP>/<DOWN> to show CHANGE PIN.

OR Press < C/INT Aute > to return to the previous screen and stop listening to the

7 Press <OK/Menu> to confirm

will display SCREENING?

The handset will display SCREENING.

9.5.7 Change the Compression Rate

9.5.8 Activate Remote Access

see 9.5.8.2, otherwise it will not be permitted.

9.5.8.1 Change the 4-Digit Remote Access PIN

Press <OK/Menu> and enter the New PIN again.

7. Press <OK/Menu> to confirm your new PIN.

you must enter the new system PIN at step 5 again.

ding, the message already stored will be saved.

select CALL BLOCKER, then <OK/Menu> to show BLACK LIST.

Press <OK/Menu> to confirm the Black List delete all, and display EMPTY.

select CALL BLOCKER, then <OK/Menu> to show BLACK LIST.

2. Press <OK/Menu> then <UP>/<DOWN> to select ALWAYS ON.

. Press <OK/Menu> and <UP>/<DOWN> to select **TIMED**.

Follow Steps 1 to 3 in Section 7.6.1 to show BLOCK MODE.

2. Press <OK/Menu> and <UP>/<DOWN> to select **OFF**.

You can change the settings for the block mode and call type.

Press <UP>/<DOWN> to show SETTINGS

B. Press <OK/Menu> to show BLOCK MODE.

Press <OK/Menu> to confirm the selection.

Press <OK/Menu> twice to select TIME ON.

All calls will ring normal when the block mode is off.

Press <OK/Menu> to select TIME OFF.

7.6.4 Turn the Block Mode Off

3. Press <OK/Menu> to confirm

7.6 Call Blocker Settings

7.6.1 Choose the Block Mode

BLOCK BLIST, or OFF.

7.6.2 All-Time Blocking

7.6.3 Timed Blocking

Press < OK/Menu> to proceed

- 7.5 Delete All Black List Entries1. In idle, press <CALL BLOCKER> or press <OK/Menu> and <UP>/<DOWN> to
- Press <OK/Menu> to open the Black List.
- Press <OK/Menu> and <UP>/<DOWN> to select DELETE ALL. Press <OK/Menu> to display CONFIRM?.

You can choose to block all calls, allow only VIP LIST entries, or block black list

1. In idle, press <CALL BLOCKER> or press <OK/Menu> and <UP>/<DOWN> to

. Press <OK/Menu> and <UP>/<DOWN> to select, BLOCK ALL, ALLOW VIP,

1. Follow Steps 1 to 4 in Section 7.6.1 and choose **BLOCK ALL** for the block mode.

1. Follow Steps 1 to 4 in Section 7.6.1 and choose BLOCK ALL for the block mode.

6. Enter the time information in 24 hour format, and then press <OK/Menu> to confirm.

4. Enter the time information in 24 hour format, and then press <OK/Menu>

8.5 Registration IMPORTANT: When you purchase a phone system, all handsets are already registered to your base, so you do not need to register them. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty You can register up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.) To register a new handset to your base: 1. Press and hold <FIND> on the base underside for more than 5 seconds to put it

19

- into registration mode for about 1 minute, so the following handset sequence must be completed within this time.

 2. Press <OK/Menu> then <UP>/<DOWN> to show **REGISTRATION**
- Press <OK/Menu> to display PIN?----
- 4. Enter the 4-digit system PIN (default 0000).
- Press <OK/Menu> to confirm, and the display will show PLEASE WAIT. If the handset registration is successful, you will hear a confirmation tone and the
- antenna icon will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the antenna icon will still flash and the display will return

to REGISTER, so you will need to repeat the registration process 8.6 Reset Your Phone You can reset your phone to the default settings. After a reset, all your personal

- settings including your Call Block settings and PINs will be reset to their factory defaults, and all answering machine messages, call list entries and redial list entries will be deleted, but your phonebook remains unchanged
- Press <OK/Menu> then <UP>/<DOWN> to show DEFAULT. . Press <OK/Menu> to display PIN?----. Enter the 4-digit system PIN (default 0000)
- Press < OK/Menu> to display CONFIRM? 5. Press <OK/Menu> to confirm, and the phone will be reset to its default settings.

9 ANSWERING MACHINE (TAM)

Your phone includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 35 minutes. As well as recording incoming messages, you can record memos for other users of your phone If the answering machine memory is full, the Handset will display TAM FULL alternately

with other handset information, and you will have to delete messages before more new ones can be recorded, but it will answer calls and play your Answer Only outgoing

25

9.1 Turn On/Off the Answering Machine

Press <OK/Menu> to show DATE FORMAT.

7.6.5 Block Calls by Call Type

You can choose to block different types of incoming calls that normally do not have a

caller ID number by setting the respective call type to **ON**.

1. In idle, press <CALL BLOCKER> or press <OK/Menu> and <UP>/<DOWN> to

3. Press <OK/Menu> and <UP>/<DOWN> to select CALL TYPE.

4. Press <OK/Menu> and <UP>/<DOWN> to select WITHHELD, INTERNAT'L,

If for any reason the Caller display is not received or you do not have the Caller display service the call will be treated as a black listed call.

If you do not have the Caller display service it is advised that you do not use the Call

When storing a number to the phonebook, white list or black list, please ensure that

you store the number with the relevant area code.
When viewing all contacts stored in the phonebook, white list numbers will be marked

1. In idle, press <CALL BLOCKER> or press <OK/Menu> then <UP>/<DOWN> to

Press <OK/Menu> and <UP>/<DOWN> to select the desired black list number

Your phone comes with a selection of settings that you can change to personalise your

8.1 Date and Time Settings
If you subscribe to Caller Display the time and date settings will be automatically

updated by the network when you receive an incoming call.

The Caller Display service only sends the month and date, not the year, so you may

It is also possible to dial a black listed number directly from the black list.

Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS
Press <OK/Menu> then <UP>/<DOWN> to show DATE & TIME.

4. Press <OK/Menu> then <UP>/<DOWN> to select your desired date format

20

3. Press <TALK ON> to dial out the selected black list entry.

select CALL BLOCKER, then <OK/Menu> to show BLACK LIST.

select CALL BLOCKER, then <OK/Menu> to show BLACK LIST.

Press <OK/Menu> and <UP>/<DOWN> to select **ON** or **OFF**Press <OK/Menu> to confirm the setting for that call type.

Press <UP>/<DOWN> to show SETTINGS.

To set for other call types, repeat from step 5.

UNAVAILABLE, or PAYPHONE.

Blocker > Block Black List option.

8 PHONE SETTINGS

phone the way you like it to work.

8.1.1 Change the Date Format

(DD-MM-YY or MM-DD-YY).

need to set the year

When turned ON, calls will be answered after the set answer delay and callers will hear When turned OFF, calls will be answered after 14 rings and the answer only message

will play and callers will not be able to leave messages.

1. Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE. Press <OK/Menu> then <UP>/<DOWN> to show TAM ON/OFF

- Press <OK/Menu> then <UP>/<DOWN> to select **ON** or **OFF**. Press <OK/Menu> to confirm.
- If answering machine is set to ON, the TAM icon displays on the handset LCD. If answering machine is set to OFF, the TAM icon is not displayed.
- 9.2 Listen to the Messages in the Answering Machine When new messages are recorded on the answering machine, the TAM icon flashes on the handset display until all the new messages are played.
- After a new message plays it is saved as an old message unless you delete it.
- Old messages will be played after all new messages are played completely Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE. Press <OK/Menu> to show MSG PLAYBACK.
- Press <OK/Menu> to start message playback and the screen displays the date and time information of the message received. Note: A star icon at the bottom, centre of the display indicates a new message Note: If there are no messages, the handset display will briefly show "00-00 00-00"
- then return to MSG PLAYBACK. During playback, press <UP>/<DOWN> to change the playback volume. During playback, press<OK/Menu> then <UP>/<DOWN> for the following functions STOP: Stop the current message playback and return to the ANS. MACHINE menu
- FORWARD: Skip to play the next message. PREVIOUS: Repeat playing the current message from the beginning.

 DELETE: Delete the current message and the next message will be played.
- Note: Alternatively, use the following keys during message playback. Press <Key 5> to stop message playback. Press < Key 4> once to repeat playing the current message from the beginning. Press <Key 4> twice to skip backward to play the previous message
- Press <Key 2> to delete the current message playing 9.3 Delete All Messages in the Answering Machine
- Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE.
- Press <OK/Menu> then <UP>/<DOWN> to show **DELETE ALL**. Press < OK/Menu> to display CONFIRM?

Press <Key 6> to skip forward to play next message

Press <OK/Menu> to delete all old messages Note: EMPTY displays, but new messages will not be deleted and can still be played.

26

- Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE.
 Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS.
 Press <OK/Menu> then <UP>/<DOWN> to show REMOTE ACC. When the answering machine is on and takes a call, you can listen to the caller leaving a sage. You can then identify the caller and decide whether to take the call in person a answering machine is set to ON, when there is an incoming message, the handse Press <OK/Menu> then <UP>/<DOWN> to select **ON** or **OFF** to turn the remote
 - access on or off respectively. Press <OK/Menu> to confirm
 - 9.5.8.3 Access Your Answering Machine Remotely You can ring your phone from another tone-dialling phone to switch the answering machine on or off, and/or listen to your messages remotely.

 1. Place a call from a tone-dialling phone to your phone.

Activate or Deactivate the Remote Access

- 3. Enter the 4-digit Remote Access PIN (default PIN is 0000).
- Note: The * must be entered while the OGM is still playing, and the 4-digit PIN should be follow without any delays.

 Note: If the 4-digit Remote Access PIN is entered incorrectly three times consecutively,

the line will be released automatically.

4. Press the following keys to carry out your desired function. Functions

	While message is not	While message is playing						
	playing							
2		Delete the current message playing						
4		Repeat playing the current message from the beginning. Press twice to skip backward to play the previous message						
5	Start playing messages.	Stop the current message playback.						
6		Skip to play the next message.						
7	Turn on the answering machine							
8		Stop the current message playback						
9	Turn off the answering machine							

Note: If your answering machine is switched off, the phone will enter into the remote access mode after 14 rings.

You can then enter the < * > key and the 4-digit remote access PIN (Default Remote Access PIN is 0000) to activate the remote access feature. 9.5.9 TAM Language

Press <OK/Menu> then <UP>/<DOWN> to show ANS, MACHINE.

- Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS.
 Press <OK/Menu> then <UP>/<DOWN> to show TAM LANGUAGE. Press <OK/Menu> then <UP>/<DOWN> to select an alternative language for the
- pre-set OGMs.
 5. Press <OK/Menu> to confirm.

10 TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Causes	Solutions		
No dialling tone when pressing <talk on=""> key</talk>	The connection cord of the base station is not plugged in. The adapter cord is not plugged in correctly in the base station. Another handset is using the base to make a call. Wrong telephone line cord	Check the connections. Unplug and plug back in the mains. Check that the telephone cord has been plugged into the base station and the phone socket. Check the base station plug and the 230V plug (remove and plug-in). Wait until the line is unoccupied. Use the original telephone line cord supplied.		
When connected to a PBX, no / or wrong connection after dialling	Dialling prefix is needed.	Insert the dialling prefix.		
OUT OF RANGE is displayed	Base station out of range. Base station not connected to mains.	Reduce the range. Connect base station to mains.		
The call does not work.	Service not activated or wrong operator or wrong setting.			
No display.	Empty battery	Recharge battery.		
Answering Machine				
The unit does not record new message.	The answering machine is turned off.	Turn on the answering machine.		
The caller cannot leave a new message.	The answering machine is turned off. Message memory is full. Answer only mode is set.	Turn on the answering machine. Erase unnecessary messages. Change to Ans & record mode.		
I cannot operate the answering machine remotely.	You are entering the wrong remote access code. You are pressing the dial keys too quickly. You are using a pulse telephone. The Remote Access mode is Deactivated.	If you forget the remote access code, reset to the default settings. Press each key firmly. Try again using a touchtone phone. Activate the Remote Access mode.		
While recording an outgoing message or listening to message the unit rings and recording stops		Answer the incoming call and try again to record your outgoing message later.		

This telephone is not equipped with a grounding function, and therefore some of the functions may be limited when used in PBX systems. If the fault persists...

If the call does not work, and you are using a two-way socket adapter, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be

Disconnect all other instruments connected to the same line as the phone system and try to make a call Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket. Try making a call. If this works, the line is OK.

(signature of authorized

EMC:

06 May 2017

d. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.

8.2.1 Turn on/off the Alarm

Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS.

Press < OK/Menu> to show ALARM.

3. Press <OK/Menu> then <UP>/<DOWN> to select ON or OFF. 4. Press <OK/Menu> to confirm

Note: If ON is selected, you will be prompted to set the alarm time. 8.2.2 Set the Alarm Time (If Alarm time is set to be ON)

Follow Steps 1 to 4 in Section 8.2.1

Enter the alarm time in 24 hour forma Press <OK/Menu> to display SNOOZE.

Press <OK/Menu> then <UP>/<DOWN> to select snooze ON or OFF. 5. Press < OK/Menu> to confirm.

8.3 Handset Settings

1. Set the Ringer Melody for Internal Calls
1. Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS .
2. Press <OK/Menu> then <UP>/<DOWN> to show RING SETUP

Press <OK/Menu> to show INT RING.

Press <OK/Menu> then <UP>/<DOWN> to show **EXT RING**.

internal calls. Note: The respective melody will be played while browsing the ringtone list.

5 Press <OK/Menu> to confirm 8.3.2 Set the Ringer Melody for External Calls

4. Press <OK/Menu> then <UP>/<DOWN> to select the melody you want to hear for

Press <OK/Menu> then <UP>/<DOWN> to show **HS SETTINGS**. Press <OK/Menu> then <UP>/<DOWN> to show **RING SETUP**.

4. Press <OK/Menu> then <UP>/<DOWN> to select the melody you want to hear for external calls.

Note: The respective melody will be played while browsing the ringtone list. 5. Press <OK/Menu> to confirm.

5. Press <OK/Menu> to confirm.

9.5.3.1 Playback the OGM

8.3.3 Set the Ringer Volume
1. Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS.

Press <OK/Menu> then <UP>/<DOWN> to show RING SETUP Press <OK/Menu> then <UP>/<DOWN> to show RING VOLUME. Press <OK/Menu> then <UP>/<DOWN> to select the desired ringer volume (a

total of 6 ringer volume levels including **VOLUME OFF**). The respective ringer volume will be played during your selection If **VOLUME OFF** is selected, the Ringer Off icon will be displayed.

22

9.5.3 Playback and Delete the Outgoing Message (OGM) You can playback your own personal OGM or the pre-set OGM for ANS & REC mode or ANSWER ONLY mode and choose to delete your personal OGM during playback and record a new one whenever you want.
Please note that pre-set OGM cannot be deleted.

Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS. Press <OK/Menu> then <UP>/<DOWN> to show OGM SETTINGS.

Press <OK/Menu> then <UP>/<DOWN> to select ANS & REC or ANSWER ONLY. Press <OK/Menu> to show PLAYBACK. Press <OK/Menu> to playback your current OGM, with PLAYING OGM displayed.

7. Press <OK/Menu> to stop the OGM playback and return to the previous menu

Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE.

Note: If a personal OGM has not been recorded, the pre-set OGM will be played. 9.5.3.2 Delete a Personal OGM Repeat Steps 1 to 6 in Section 9.5.3.1.

2. Press < Mute > while the OGM is playing to delete your personal OGM and return to the previous menu with the pre-set OGM restored automatically. Note: If the pre-set OGM is playing, you cannot delete it, so pressing < C/INT Mute > will just

stop the playback and return to the previous menu. 9.5.4 Set the Answer Delay You can set the number of rings before the answering machine answers and starts playing your OGM to be after two to eight rings or TIME SAVER. If Time Saver is set it will answer after 4 rings if there are no new messages, or after 2 rings if there is a

new message, so if it doesn't answer after 2 or 3 rings, you can hang up and save

on call charges if you are phoning remotely to check your messages. (NOTE: If voice messaging, e.g. 1571, is active, set the Answer Delay to 2 or 4 rings.) 1. Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE.

Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS. Press <OK/Menu> then <UP>/<DOWN> to show ANSWER DELAY. Press <OK/Menu> then <UP>/<DOWN> to select 2 RINGS, 4 RINGS, 6 RINGS, 8

RINGS or TIME SAVER. Press < OK/Menu> to confirm.

9.5.5 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time for each incoming message Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE

Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS. Press <OK/Menu> then <UP>/<DOWN> to show RECORD TIME

Press <OK/Menu> then <UP>/<DOWN> to select 60S, 120S, 180S or UNLIMITED. 5. Press <OK/Menu> to confirm.

Alternatively, press < C/NT > to return to the previous screen without saving the 28

The conformity to the requirements is validated by the **CE** symbol.

batteries helps protect the environment and prevent health hazards

11 DECLARATION OF CONFORMITY

8.1.2 Change the Time Format

1. Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS.

Press <OK/Menu> then <UP>/<DOWN> to show DATE & TIME

(12 HR or 24 HR).

8.1.3 Set the Time

8.1.4 Set the Date

Section 8.1.1.

the alarm rings.

9.4 Record Memo

answering machine is turned off

9.5 Answering Machine Settings

MACHINE menu.

9.5.1 Set the Answer Mode

5. Press < OK/Menu> to confirm.

5 Press <OK/Menu> to confirm

5. Press < OK/Menu> to confirm

Press <OK/Menu> then <UP>/<DOWN> to show TIME FORMAT

Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS.

Press <OK/Menu> then <UP>/<DOWN> to show **DATE & TIME**.

Press <OK/Menu> then <UP>/<DOWN> to show **SET TIME**.

Press <OK/Menu> then <UP>/<DOWN> to show HS SETTINGS.

Press <OK/Menu> then <UP>/<DOWN> to show DATE & TIME.

Press <OK/Menu> then <UP>/<DOWN> to show SET DATE.

Note: If the date is not set, it will start running from 01/01/17.

to stop the alarm and turn off the snooze function

display will revert to the call duration.

Note: If the time is not set, it will start running from 00:00.

4. Press <OK/Menu> then <UP>/<DOWN> to select your desired time format

Press <OK/Menu> and then enter the time information in 24 hour format.

4. Press <OK/Menu> and then enter the date information in the format you set in

8.2 Alarm SettingsYou can set an alarm time on a handset. When an alarm is set, the alarm icon is

shown on the handset display. When the alarm time is reached, the alarm icon and

ALARM ON flash on the handset display, and the alarm tone rings for 45 seconds.

You can press any key (except <CALL BLOCKER>) to disable the alarm. If the snooze

function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold <TALK OFF> while the alarm is sounding,

a. A key press will still disable the alarm even if the handset keypad is locked when

b. The alarm volume level is the same as the settings of the handset ringer volume

c. During an external call or internal call, if an alarm is set and when the alarm time

21

You can record a memo message for another user. When you record a memo, the

message counter will increase by one and the message can be played back in the same

way as answering machine messages. Memo recording can still function even when the

5. Press < $\frac{\text{C/INT}}{\text{Mute}}$ > to stop memo recording without saving and return back to ANS.

You can use the TAM SETTINGS menu through the handset to change the settings of

By default, the answer machine is set in ANS & REC mode which allows callers to leave

a message. This mode can be changed to ANSWER ONLY which does not allow callers

Press <OK/Menu> then <UP>/<DOWN> to select ANS & REC or ANSWER ONLY

Press <OK/Menu> to confirm.
 When your answering machine memory is full and the answer mode is in ANS & REC,

the answer mode will change to ANSWER ONLY automatically. It will return to ANS &

You can record your own OGM for ANS & REC mode or ANSWER ONLY mode. When

you record your own OGM, it will be used when the answering machine answers the

Press <OK/Menu> then <UP>/<DOWN> to select ANS & REC or ANSWER ONLY.

7. Press <OK/Menu> to stop and save your personal OGM. Your newly saved OGM

27

call. If your personal OGM is deleted, the pre-set OGM will be restored automatically.

Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE.

Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS.

Press <OK/Menu> then <UP>/<DOWN> to show **OGM SETTINGS**.

Press <OK/Menu> then <UP>/<DOWN> to show **RECORD MESS**.

Press <OK/Menu> to start recording your personal OGM and RECORDING is

to leave a message. In that case, your callers will be prompted to call back later.

1. Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE.

REC mode automatically after some messages have been deleted.

Press <OK/Menu> to show ANSWER MODE.

9.5.2 Record Your Own Outgoing Message (OGM)

Press <OK/Menu> then <UP>/<DOWN> to show TAM SETTINGS.

Press <OK/Menu> to start memo recording and **RECORDING** is displayed

Press <OK/Menu> then <UP>/<DOWN> to show ANS. MACHINE

4. Press <OK/Menu> to stop memo recording and save the memo. OF

Press <OK/Menu> then <UP>/<DOWN> to show MEMO.

If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME** 1

is reached, the alarm icon and ALARM ON will still flash. An alarm tone will be

emitted from the earpiece to alert the user the alarm time is reached. Once the

user presses any key or presses and holds <TALK OFF> to disable the alarm, the

BINATONE TELECOM PLO 1 Apsley Way London NW2 7HF,United Kingdom. Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 887 e-mail: binatoneuk@binatonetelecom.co.uk

displayed on the screen.

will playback automatically

EC Declaration of Conformity We the manufacturer / Importer : Binatone Telecom Plc 1 Apsley Way London NW2 7HF, United Kingdon Declare under our sole responsibility that the following product

Type of equipment: Digital Cordless telephone /eva 1915 Call Blocker Series Country of Origin: China Binatone

 Directive 2009/125/EC - ErP Applicable Standards ETSI EN 301 406 V2.2.2

EN 55032:2012

EN 55024:2010

Health Safety: EN 50360:2001 + A1:2012

EN 50385:2002

Directive 2014/53/EU - RED

Directive 2014/30/EU - EMC

EN 61000-3-2:2014 EN 61000-3-3:2013 ETSI EN 301 489-1 V2.2.0 Electrical Safety: EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 +A2 :2013

EN 50564:2011+Annex II of EC 1275/2008+ amendment 801/2013 EU Type Examination Certificate Issued By: Intertek Testing Certification Ltd (NB0359) The product is labelled with the European Approval Marking CE as show. Any Unauthorized

> WM (100 mm) Signature

Binatone

This equipment and all its components, subsystems and consumable materials formed an integral part of this product and when you decide to dispose of them you have to take them to a local recycling centre for appropriate waste disposal, in compliance with Details about the location of these centres can be obtained from your local authority. Notes for battery disposal ns batteries covered by the Europ be disposed of with normal household waste. Please be aware of the local rules on separate collection of batteries. The correct disposal of

NOTE: In compliance with Directive 2002/96/EC, when you purchase a product that comes with

the symbol shown on the right, you are required to dispose of electrical and electronic equipment

by separate waste collection and you cannot dispose of the product as normal waste.

12 GUARANTEE AND SERVICE The phone system is guaranteed for 12 months from the date of purchase shown on your

sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents Please keep your sales (till) receipt this is your guarantee. In the unlikely event that you need to return your phone system to our Repair Centre while it is under guarantee, there may be handling charge.

While the unit is under Guarantee Disconnect the base unit from the telephone line and the mains electricity supply. Pack up all parts of your phone system, using the original packaging. Return the unit to the shop where you bought it, making sure you take your sales receipt.

After the Guarantee has expired If the unit is no longer under Guarantee, first follow steps 1 and 2 as for repair under Guarantee. Then.

A brief description of the fault

Manufactured and Imported by Binatone Telecom plc, 1 Apsley Way, London, NW2 7HF

UK BTP v2 May 2017

30 31 32 33

You should also keep the original packaging material.

Remember to include the mains adapter.

3. Call Helpline on 0844 557 9677 (for UK only) and ask for a quotation of the repair charge and details of where to send for repair 4. Make sure you include with your phone system

5. Return your phone system to the address given by the Service Department.

* This does not affect your statutory rights

Your name and address
A cheque or postal order for the value of the repair