


# BUSH

## Instruction manual

HD-717





You'll soon be enjoying your new Pocket DAB Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



## Help and Guidance

We're here to help you get the most from your Pocket DAB Radio. Should you require any guidance, a simple solution can often be found online at:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

**BUSH**



# Contents

## 1 Safety information

Power source	8
Moisture and water	8
Heat source and flames	8
Ventilation	8
General safety information	9
Care and cleaning	9

## 2 Getting to know your Pocket DAB Radio

Ready? Let's begin...	12
Check the package contents	14
Charging the battery	14
Switch on	15
Switch off	15
Time and date	15
Using the menu	16

## 3 Using your Pocket DAB Radio

Using the DAB radio	20
Changing DAB stations	20
Scanning for DAB stations	20
Prune DAB stations	21
Storing a DAB station preset	21
Tune to a DAB station preset	22
DAB display information	22
Using the FM radio	25
Tuning to an FM station	25

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021



# Contents

Changing the scan setting	25
Audio mode	26
Storing an FM station preset	26
Tune to an FM station preset	27
FM display information	27
System menu options	28

## 4 Other information

Technical specification	32
-------------------------	----

## 5 Product support

Troubleshooting	36
Help and assistance	37
Disposal	38
Your Bush Guarantee	39
Important Data Protection Information	39



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



This page is left intentionally blank





 
This page is left intentionally blank





# Safety information

1

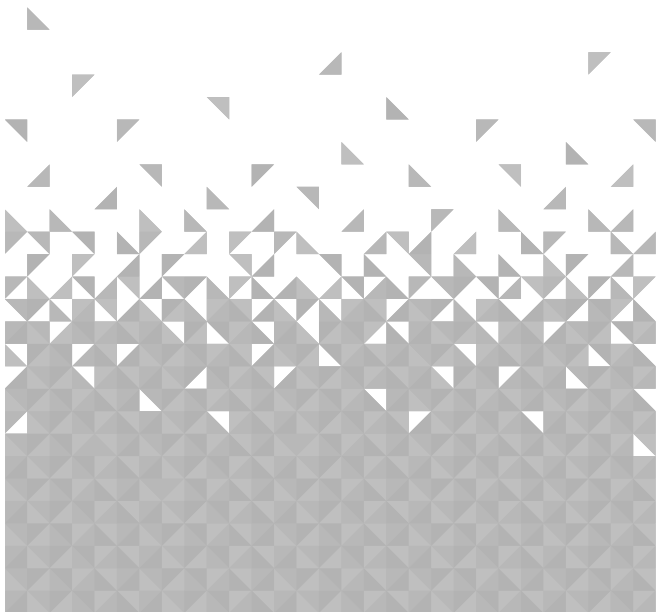



## Safety information

**Important** - Please read these instructions fully before installing or operating

### Power source

- Only use the USB cable that came with the product. Using an unauthorised cable will invalidate your guarantee and may irreversibly damage the product.
- This product has an integral rechargeable battery and should not be disposed of in the normal household waste but taken to an appropriate recycling facility, where and when these are available
- Never throw batteries in a fire or attempt to open the outer casing.

### Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

### Heat source and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Never place any type of candle or naked flame on the top of, or near, the unit.

### Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







## Safety information

**Important** - Please read these instructions fully before installing or operating

### General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Radio near emergency/intensive care medical equipment or during an electrical storm.



### Caution

- To avoid possible hearing damage, do not listen to the Pocket DAB Radio at high volume levels for long periods of time. Always keep the volume within reasonable limits.

### Care and cleaning

- Occasionally wipe the cabinet with a lint free cloth.
- Never clean the unit with liquids or solvents.



 


This page is left intentionally blank



# Getting to know your Pocket DAB Radio

# 2

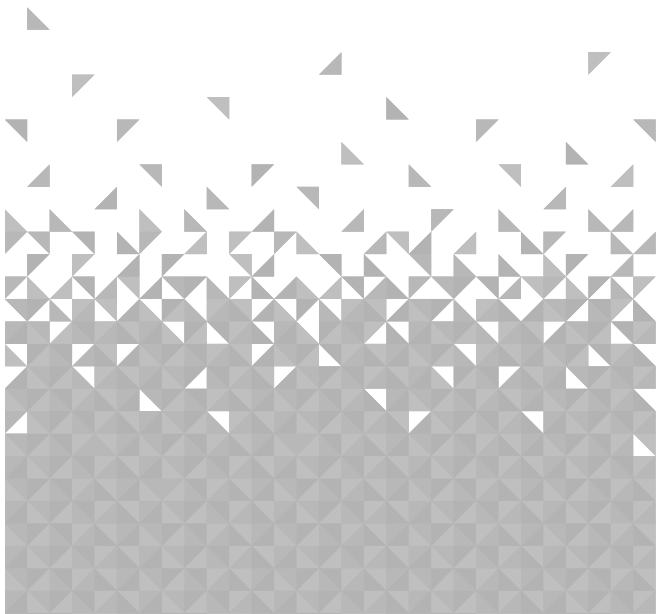


## Getting to know your Pocket DAB Radio

You'll be up and running in no time

### Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

 If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

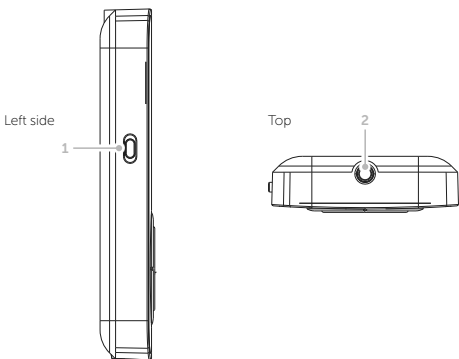


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

## Getting to know your Pocket DAB Radio

 You'll be up and running in no time

Front

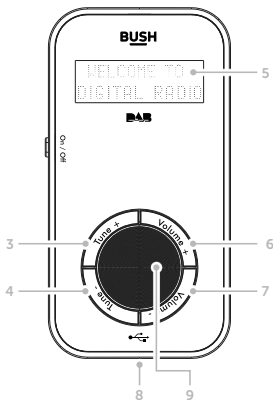

1. On/Off switch
2. Headphone socket
3. Tune +
4. Volume +
5. Display
6. Tune -
7. Volume -
8. USB charging socket (on end)
9. Menu/Select

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0545 600 3021



## Getting to know your Pocket DAB Radio

You'll be up and running in no time

### Check the package contents

The package contains:

- 1 x BUSH Pocket DAB Radio
- 1 x Earphones
- 1 x USB charging cable
- 1 x Instruction manual

### Charging the battery

Your pocket radio has an integral rechargeable battery. Before you use your radio for the first time, you need to charge the battery. From a full charge you will be able to listen to your radio continuously for approximately 7 hours.

1. Connect the micro USB end of the charging cable to the USB socket on the end of the pocket radio..
2. Plug the standard USB end of the charging cable into a computer or other USB charging device.
3. Plug the earphones supplied into the headphone socket on the other end of the pocket radio. The earphones also work as the radio aerial and so these need to be connected when you first switch your radio on and it scans for DAB radio stations.
4. Slide the On/Off switch on the pocket radio to On. When the radio has powered up and has scanned for DAB stations, 'Charging' will be displayed. The display will change from 'Charging' to 'Full Charge', when the battery has been fully charged.

---

**Note:** If the battery is completely exhausted, you will need to wait a short while after it has been on charge, before the radio will power on and you are able to check the battery status information.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





# Getting to know your Pocket DAB Radio

You'll be up and running in no time

## Check the battery status

With the USB cable unplugged and the product switched on, you can check the battery status % at any time.

1. Press and release the large middle button until the battery charge status information is displayed e.g.: Battery 25.

## Switch on

---

**Note:** Plug the earphones supplied into the headphone socket on the end of the pocket radio. The earphones also work as the radio aerial and so these need to be connected when you first switch your radio on and it scans for DAB radio stations.

---

1. Slide the power switch on the end of the pocket radio to 'On'. 'Welcome to Digital Radio' will be displayed and your pocket radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

2. After a short while, when the radio is playing, the display backlight will turn off to save battery power, when you press and release any button the display backlight will turn back on.

## Switch off

Slide the power switch on the side of the pocket radio to 'Off'. The radio and display will switch off.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021





## Getting to know your Pocket DAB Radio

You'll be up and running in no time

### Time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, please see page 29.

### Using the menu

You can change some of the factory default settings, as well as switching between DAB and FM mode, on your pocket radio within the product Menu.

To access the Menu in DAB or FM mode:

1. Press and hold the large middle button to access the Menu. '<Switch To FM>' or '<Switch To DAB>' will be displayed, as appropriate.
2. Use the Tune + or Tune – buttons to scroll through the available options in each mode.
3. Press and release the large middle button to select or confirm an option.
4. Press and hold the large middle button to exit the Menu options, or you can wait and the product will return to the radio station display after a short period of time.

### Change the mode

1. Press and hold the large middle button to change between DAB and FM mode. '<Switch To FM>' or '<Switch To DAB>' will be displayed..
2. Press and release the large middle button to change to DAB or FM mode, as appropriate. 'DAB' or 'FM', will be displayed to confirm the mode.

### Adjusting the volume

- Press and release the Volume + button to increase the volume.
- Press and release the Volume – button to decrease the volume.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







This page is left intentionally blank



 


This page is left intentionally blank



# Using your Pocket DAB Radio

# 3

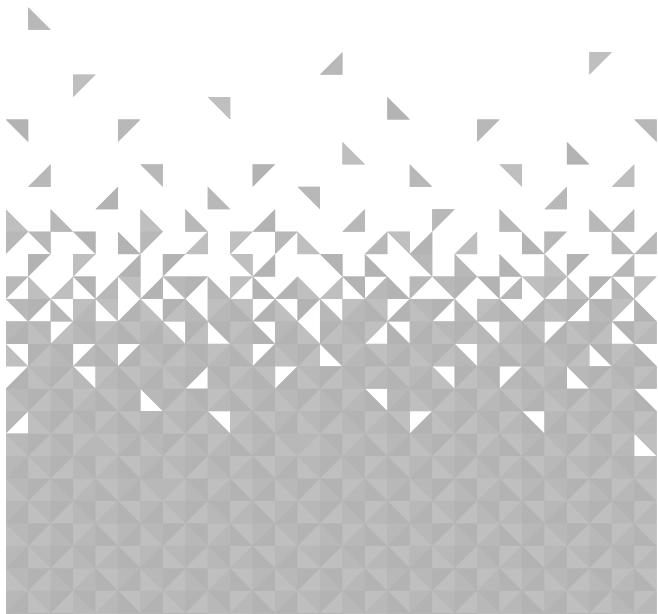



## Using your Pocket DAB Radio

Let's get started

### Using the DAB radio

Check that your Radio is in DAB mode. The first time you use the pocket radio or if the station list is empty, your radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

### Changing DAB stations

In DAB mode:

1. Press and release the Tune- or Tune+ buttons to scroll through the available stations in the station list.
2. When the station that you would like to listen to is displayed press and release the large middle button. There will be a short delay whilst your DAB radio tunes to your selected station.

### Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your pocket radio. If you have moved your pocket radio to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

---

**Note:** Plug the earphones supplied into the headphone socket on the end of the pocket radio. The earphones also work as the radio aerial and so these need to be connected when you scan for DAB radio stations.

---

In DAB mode:

1. Press and hold the large middle button to enter the menu. '<Switch To FM>' is displayed.
2. Press and release the Tune - or Tune + buttons to scroll to '<Full scan>'

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





## Using your Pocket DAB Radio

Let's get started

3. Press and release the large middle button. 'Scanning...' will be displayed and a progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

### Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

1. Press and hold the large middle button to enter the menu. '<Switch To FM>' is displayed.
2. Press and release the Tune - or Tune + buttons to scroll to '<Prune>'. Press and release the large middle button.
3. 'Prune? Yes <No>' is displayed. Use the Tune - button to move to 'Yes'. Press and release the large middle button to confirm and prune the station list. Stations with a '?' prefix will now no longer be displayed.

### Storing a DAB station preset

Your pocket radio can store up to 10 DAB radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Radio to the DAB radio station that you wish to preset.
2. Press and hold the large middle button to enter the menu. '<Switch To FM>' is displayed.
3. Press and release the Tune - or Tune + buttons to scroll to '<Preset Store>'. Press and release the large middle button.
4. 'Preset Store <1:(Empty)>' is displayed. Press and release the Tune - or Tune + buttons to scroll to the preset location that you would like to store the radio station to (1-10).
5. Press and release the large middle button, the display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

---

**Note:** If there is already an existing DAB station stored under a preset, it will be overwritten when you store the new station.

---

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021





## Using your Pocket DAB Radio

Let's get started

### Tune to a DAB station preset

In DAB mode:

1. Press and hold the large middle button to enter the menu. '<Switch To FM>' is displayed.
2. Press and release the Tune – or Tune + buttons to scroll to '<Preset Recall>'. Press and release the large middle button.  
'Preset Recall <1:>' is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
3. Press and release the Tune – or Tune + buttons to scroll to the Preset location and station that you would like to listen to (1-10).
4. Press and release the large middle button. The radio will instantly tune to that station and begin to play.

---

**Note:** If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

### DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

#### Dynamic Label Segment (DLS)

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

#### Signal Strength

An empty  will appear on the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





# Using your Pocket DAB Radio

Let's get started

## Program Type (PTY)

Such as 'Rock', 'Pop', 'Talk' or 'News'

## Multiplex Name

Displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.

## Channel and Frequency

e.g.: 12B 225.648 MHz

## Signal error

This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above.

## Signal information

The data rate at which the signal is being transmitted.

## Pocket radio battery charge level

Battery 100 indicates a full charge.

## Time and date

Supplied by the broadcaster.

1. Repeatedly press and release the large middle button to cycle through the different information options.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021





## Using your Pocket DAB Radio

Let's get started

### Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC off: no compression. This is the default setting.
  - DRC low: medium compression.
  - DRC high: maximum compression.
1. Press and hold the large middle button to enter the menu. '<Switch To FM>' is displayed.
  2. Press and release the Tune - or Tune + buttons to scroll to '<DRC>'. Press and release the large middle button. The current DRC setting will have an '\*' next to it.
  3. Press and release the Tune - or Tune + buttons to scroll through the options and press the large middle button to confirm.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







# Using your Pocket DAB Radio

Let's get started

## Using the FM radio

Check that your Radio is in FM radio mode. When your radio is in FM mode it can receive Radio Data System or 'RDS' information if this is being transmitted by the broadcaster. RDS information will often include the station name, detail about the programme and the current time.

## Tuning to an FM station

---

**Note:** Plug the earphones supplied into the headphone socket on the end of the pocket radio. The earphones also work as the radio aerial and so these need to be connected when you scan for FM radio stations

---

In FM mode:

1. Press, hold and then release the Tune + button to scan up the frequency band. Press, hold then release the Tune – button to scan down the frequency band. 'Scanning...' will be displayed and your radio will search for the next available station and then stop on that station.
2. Press and release the Tune – or Tune + button to fine tune each frequency in 0.05MHz steps, if necessary.

## Changing the scan setting

In FM mode:

1. Press and hold the large middle button. 'Switch To DAB' is displayed.
2. Press and release the Tune – or Tune + buttons to scroll to '<Scan setting>'.  
3. Press and release the large middle button. There are now two different options to choose from and the current setting will have an '\*' next to it.

**Strong stations** - the scan will only stop when a strong signal strength is received which should also result in a better audio quality.

It is possible that the station you are scanning for may be missed using this option.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021





## Using your Pocket DAB Radio

 
Let's get started

**All stations** - the scan will stop for every station it receives, even if the signal strength is poor.

4. Press and release the Tune – or Tune + buttons to scroll and choose from the two options available and press the large middle button to confirm.

### Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

1. Press and hold the large middle button. 'Switch To DAB' is displayed.
2. Press and release the Tune – or Tune + buttons to scroll to '<Audio setting>'.  

3. Press and release the large middle button. There are now two different options of 'Forced mono' and 'Stereo allowed' and the current setting will have an '\*' next to it.
4. Press and release the Tune – or Tune + buttons to scroll to and choose from the two options available and press the large middle button to confirm.

### Storing an FM station preset

Your pocket radio can store up to 10 FM radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Radio to the FM radio station that you wish to preset.
2. Press and hold the large middle button to enter the menu. '<Switch To DAB>' is displayed.
3. Press and release the Tune – or Tune + buttons to scroll to '<Preset Store>'. Press and release the large middle button.
4. 'Preset Store <1:(Empty)>' is displayed. Press and release the Tune – or Tune + buttons to scroll to the preset location that you would like to store the radio station to (1-10).
5. Press and release the large middle button, the display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





# Using your Pocket DAB Radio

Let's get started

---

**Note:** If there is already an existing FM station stored under a preset, it will be overwritten when you store the new station.

---

## Tune to an FM station preset

In FM mode:

1. Press and hold the large middle button to enter the menu. '<Switch To DAB>' is displayed.
2. Press and release the Tune – or Tune + buttons to scroll to '<Preset Recall>'. Press and release the large middle button.  
'Preset Recall <1:>' is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
3. Press and release the Tune – or Tune + buttons to scroll to the Preset location and station that you would like to listen to (1-10).
4. Press and release the large middle button. The radio will tune to that station and begin to play.

---

**Note:** If no FM station has been stored under the preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

## FM display information

When listening to an FM station you can change the information that will appear on the second line of the display. There are several different types of information that are sent by the broadcaster.

### Radiotext (RT)

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

### Program Type (PTY)

Such as 'Rock', 'Pop', 'Talk' or 'News'

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021





## Using your Pocket DAB Radio

Let's get started

### Station name or frequency

Such as BBC R4 or 92-95MHz

### Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'. Please refer to 'Audio Mode' on page 26.

### Pocket radio battery charge level

Battery 100 indicates a full charge.

### Time and date

Supplied by the broadcaster.

1. Repeatedly press and release the large middle button to cycle through the different information options.

## System menu options

There are several system menu setting options available on your pocket radio that you can change.

To access the System Menu in DAB or FM mode:

1. Press and hold the large middle button to access the Menu. '<Switch To FM>' or '<Switch To DAB>', as appropriate, will be displayed.
2. Use the Tune + or Tune – buttons to scroll to '<System>'.
3. Press and release the large middle button.
4. Use the Tune + or Tune – buttons to scroll through the available options.
5. Press and release the large middle button to select or confirm an option.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





## Using your Pocket DAB Radio

Let's get started

Available options are:

<Time>

<Set Time/Date> to manually set the time and date

<Auto update> to auto update the time from the DAB signal, FM signal, DAB or FM signal or no update.

<Set 12/24 hour> to choose between a 12 or 24 hour clock display

<Set date format> to choose between a DD-MM-YYYY or MM-DD-YYYY date display

<Backlight>

<Timeout> 10 sec, 20 sec, 30 sec, 45 sec, 60 sec, 90 sec, 120 sec, 180 sec and permanently 'On' settings are available.

<On level> High, Medium and Low brightness settings are available.

<Language> changes the display language. English, French, German and Italian options are available

<Factory Reset> restores the original factory default settings.

---

Note: When you reset your radio, all of your DAB and FM radio station presets will be deleted.

---

<SW version> displays the software version of your pocket radio.





 
This page is left intentionally blank





**Other information**

4

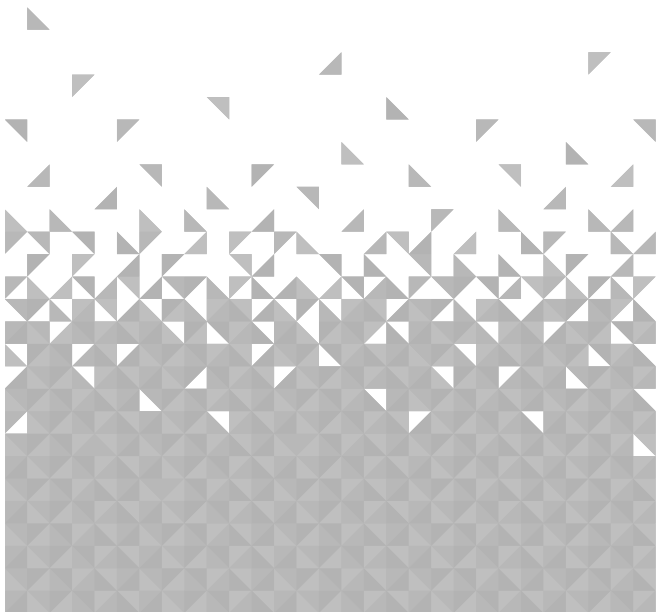



## Other information

Helpful technical information

### Technical specification

Micro USB charging socket:	Input DC 5V 1A
Headphone socket:	3.5mm
Frequency range:	DAB: Band III, 174 MHz to 240 MHz FM: 87.5 MHz to 108 MHz
Integral rechargeable lithium battery:	3.7V 1050 mAh



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

#### Declaration of Conformance

Hereby, Argos Ltd, declares that this Pocket DAB Radio is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







This page is left intentionally blank



 


This page is left intentionally blank



**Product support**

5

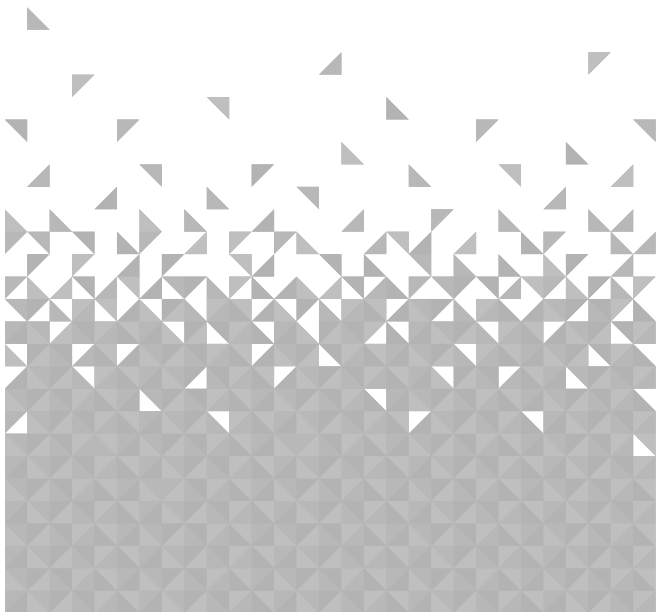



## Product support

Help is always at hand

### Troubleshooting

If you are experiencing problems with your pocket DAB radio, there are some quick and easy checks that you can do, which may help to solve the problem.

#### **No sound / power:**

Adjust the volume using the Volume + button. .

The rechargeable battery may be exhausted, please recharge the battery, see page 14.

#### **Radio reception is poor:**

Are the headphones connected? Plug the earphones supplied into the headphone socket on the end of the pocket radio. The earphones also work as the radio aerial and so these need to be connected when you scan for DAB or FM radio stations

Retune for radio stations, see pages 20 and 25.

Check that you do not have other electrical equipment too close to your pocket radio, causing interference.

The rechargeable battery may be exhausted, please recharge the battery, see page 14.

Visit [www.digitalradionow.com](http://www.digitalradionow.com) for information about DAB reception in your area.

#### **The function buttons do not respond:**

The rechargeable battery may be exhausted, please recharge the battery, see page 14.

Try a reset to factory defaults. See page 29.

---

Note: All of your settings, including the radio station list and any presets will be deleted when you reset the Radio.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





## Product support

Help is always at hand

### Help and assistance

If you require any technical guidance or find that your Pocket DAB Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and  
10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 600 3021**



## Product support

Help is always at hand

### Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



## Product support

Help is always at hand

# BUSH

### Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

#### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

#### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Awebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021



**Contact:**

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 600 3021

The logo for DAB Digital Radio, featuring the text "DAB Digital" in a small font above the word "Radio" in a larger, bold font. To the left of the text is a stylized icon of three curved lines representing radio waves.