

BUSH

Instruction manual

80W RMS 2.1 Soundbar with Subwoofer

B-3515A

SKU : 136848887



You'll soon be enjoying your new Soundbar with Subwoofer.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your soundbar with Subwoofer. Should you require any guidance, a simple solution can often be found online at:

<http://www.bush-support.com>

If you still require further assistance, call one of our experts on **0345 604 0105**.

Contents

1 Safety information

Safety information 5

2 Getting to know your Soundbar

Ready? Let's begin 7

Accessories 7

Soundbar 8

Remote control 9

Making the connections 10

Connecting the sub woofer 11

Installing the remote battery 11

Switching inputs 11

Soundbar indicators 11

3 Using your Soundbar

Using the stereo RCA inputs 13

Using the optical input 13

Using the line in 13

Pairing a bluetooth device 14

Controlling a paired device 14

Bluetooth notes 14

4 Other information

Wall mounting the soundbar 16

Technical specification 17

Care & maintenance 17

5 Product support

Troubleshooting 19


Help and assistance 20

Disposal 21

Guarantee 22



 1 Safety information

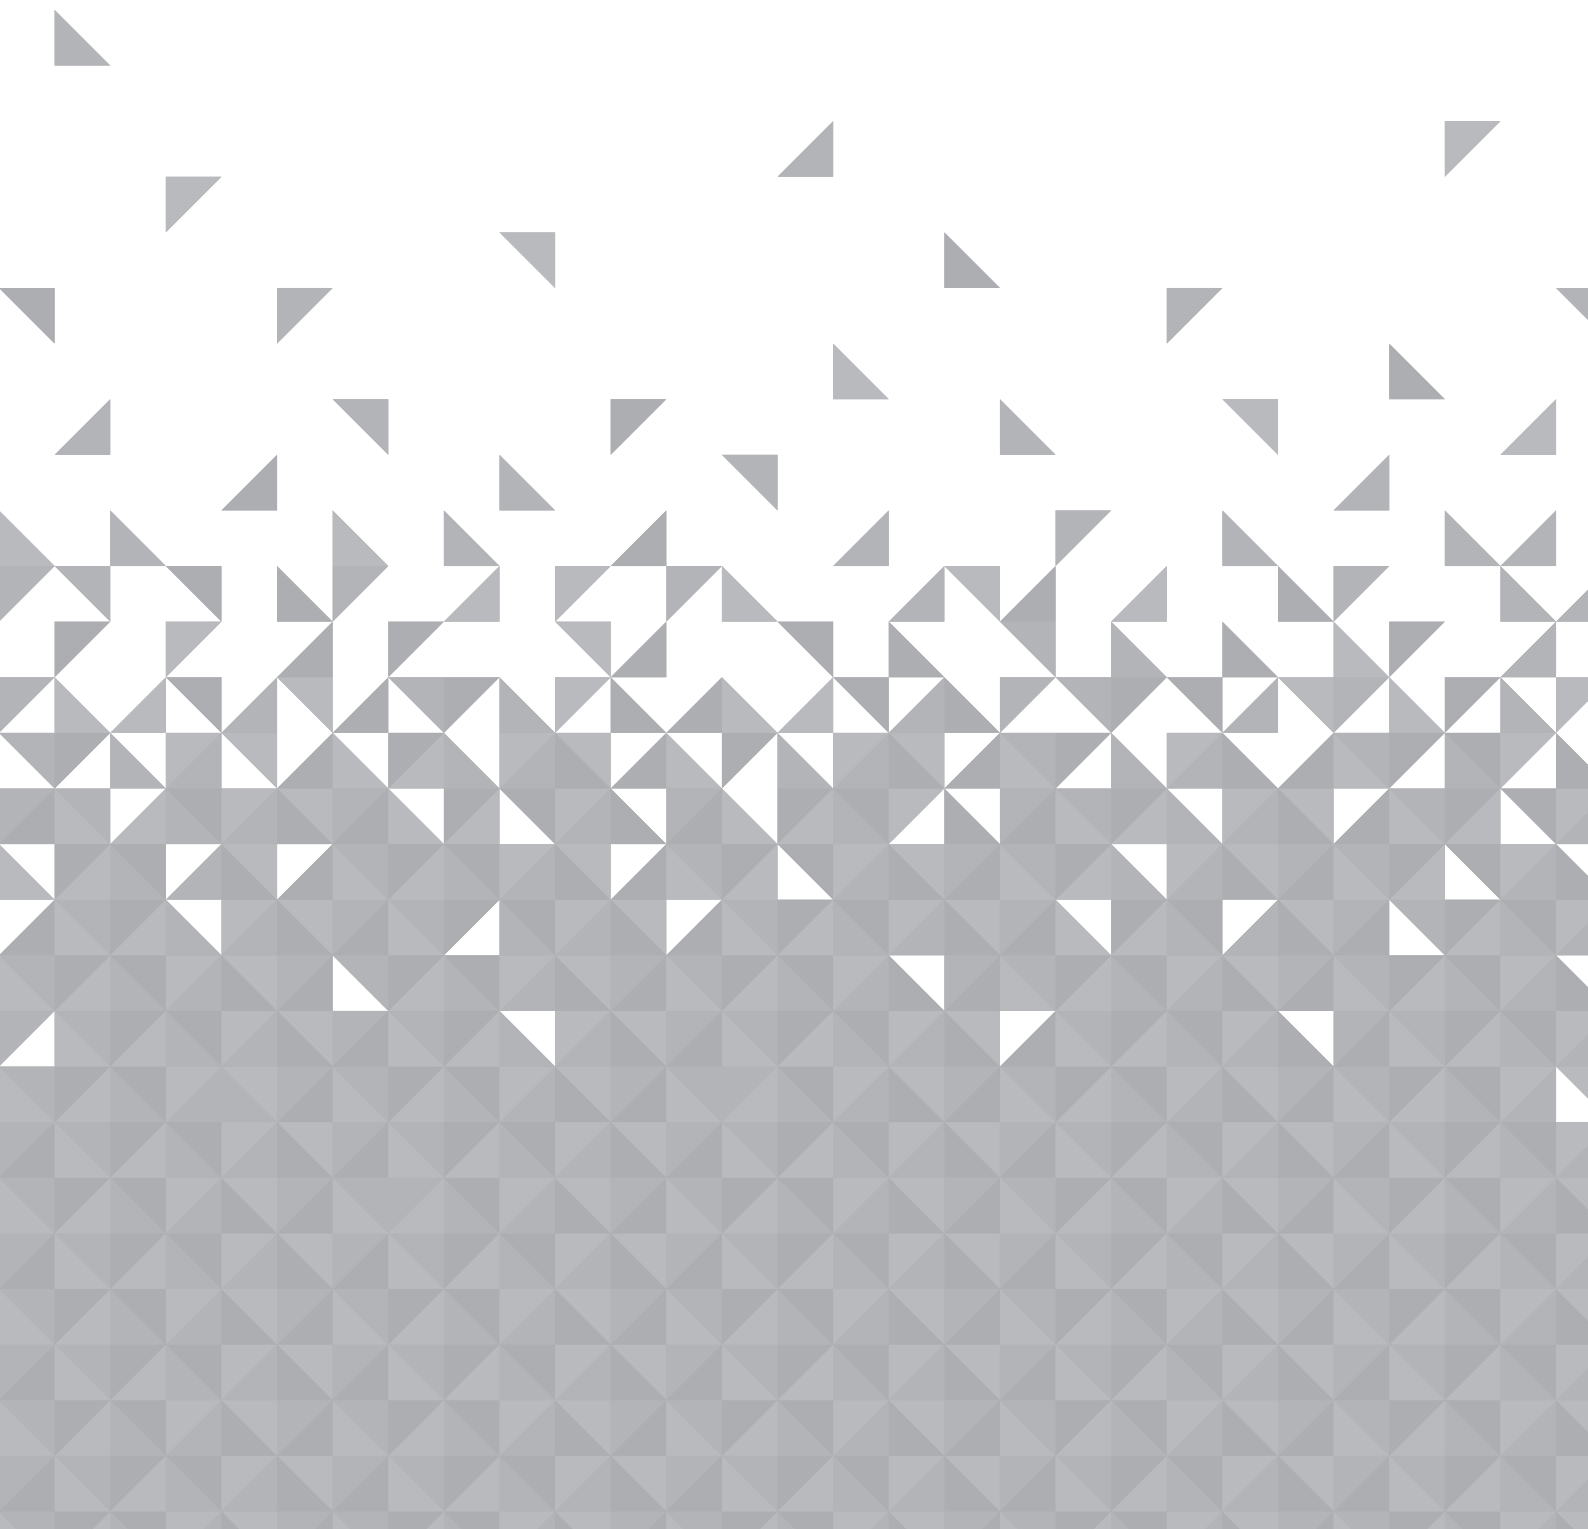



Safety information

Important - Please read these instructions fully before installing or operating

Power source



- This symbol means that this unit is double insulated. An earth connection is not required.
- The appliance must be connected to a 100-240 volt 50/60Hz AC supply by means of a three pin socket.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.



- Opening or removing covers may expose you to dangerous voltages or other hazards.



- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plug completely.



- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- When installed, the power socket must be within easy reach.
- Do not install the unit in a confined space. Allow adequate ventilation to prevent heat build-up.
- For indoor use only.

Heat build up

- During use the unit will heat up, this is not a malfunction. If the unit is used continuously at high volume levels, the unit temperature will rise considerably. Do not touch the unit to avoid potential burns.
- Do not block or cover slots, holes or openings on the product as these are provided for functionality and/or ventilation to ensure safe operation of the product.

Colour irregularity on TV screen

Colour irregularities may be seen on certain types of TV.

- If such an irregularity is seen turn off the TV, then turn on again after 15 to 30 minutes.
- If the colour irregularity is still seen place the soundbar unit further away from the TV.

Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

Heat sources and flames



 
- Batteries shall not be exposed to excessive heat such as sun, fire or the like
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Do not leave this product in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep product away from bright sunlight or heat sources such as radiators.
- Do not place items with naked flames on or near this product

Servicing and repairs

- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

2 Getting to know your Soundbar

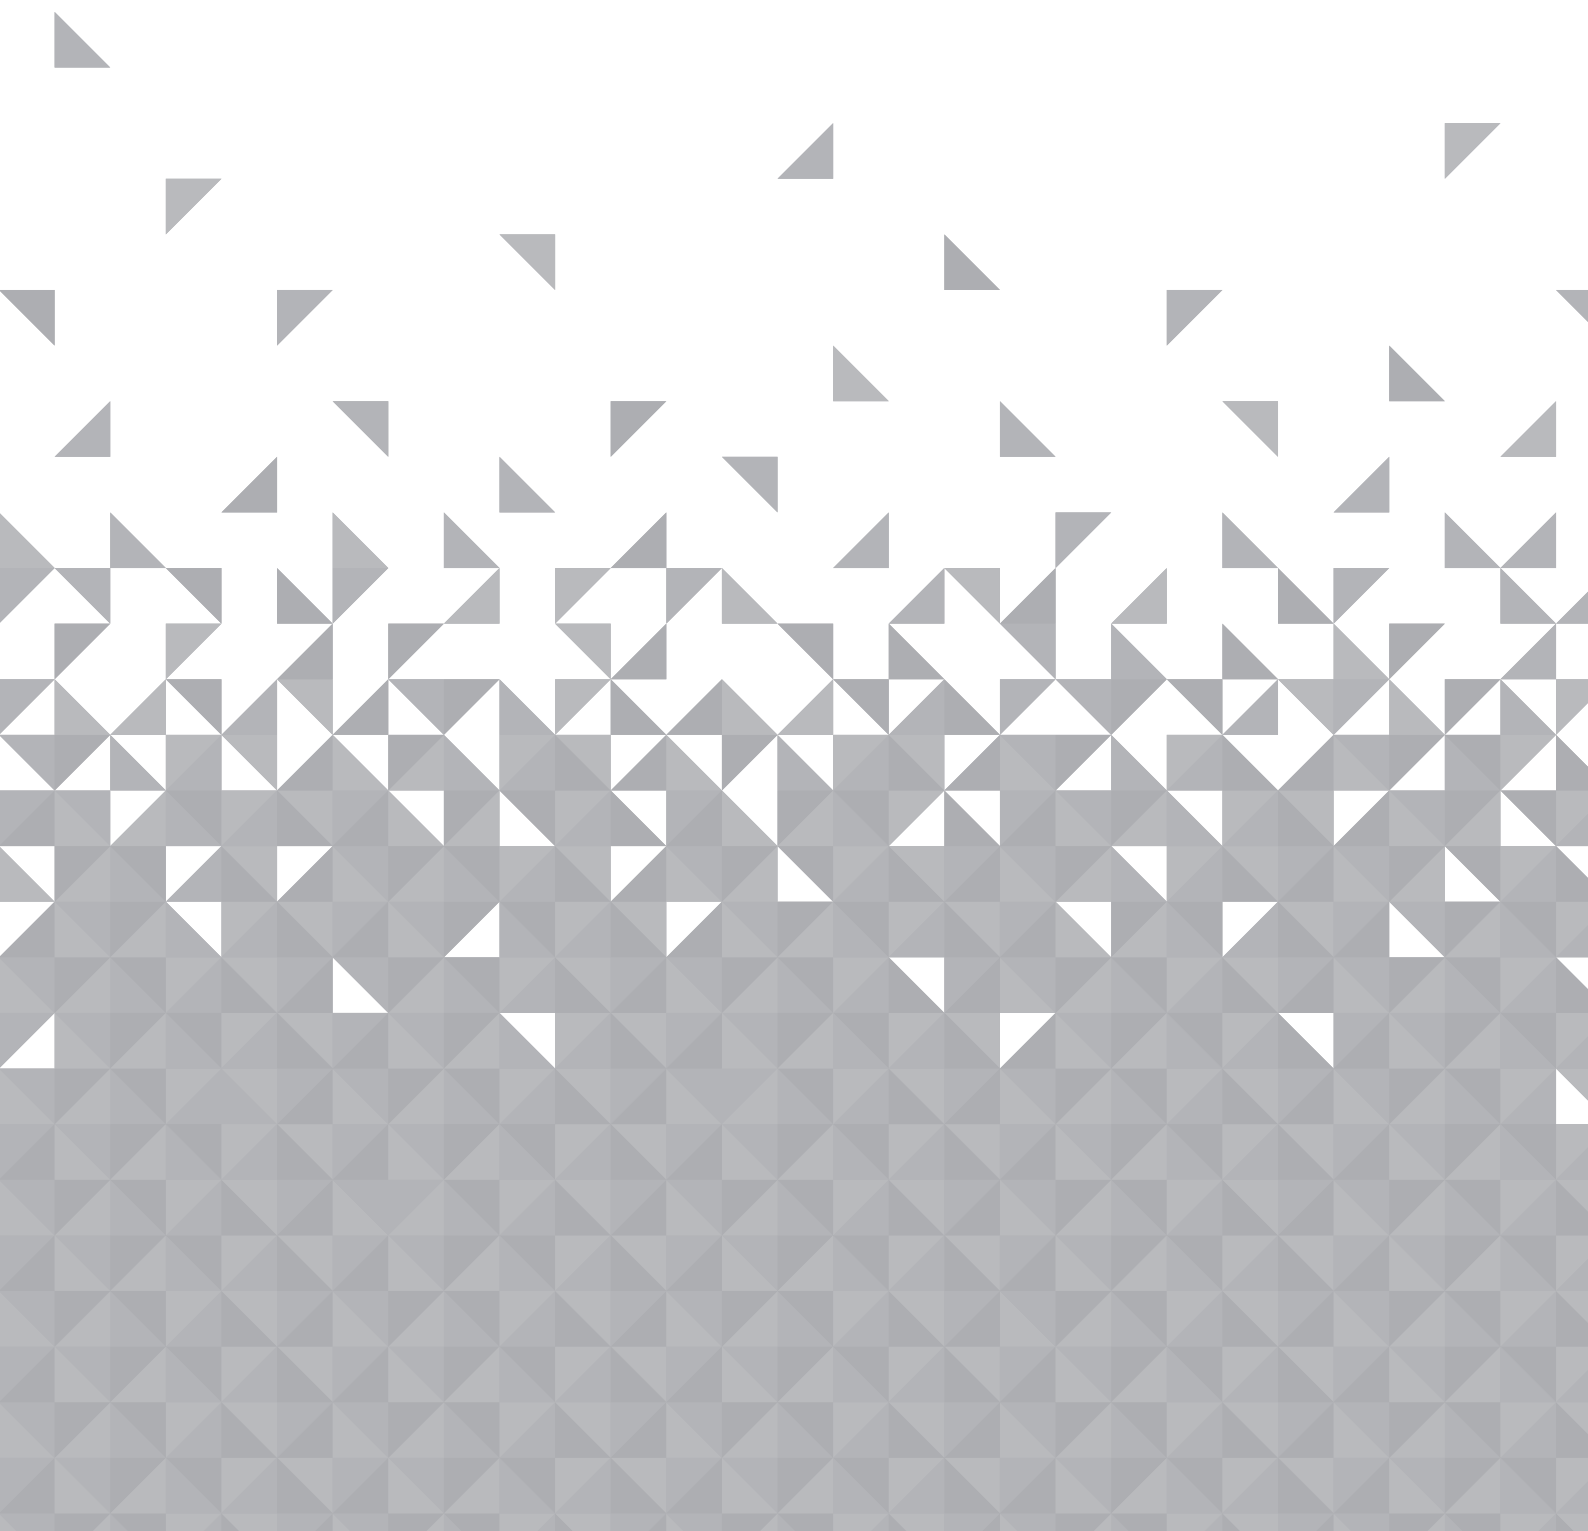

Getting to know your Soundbar

You'll be up and running in no time

 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your soundbar and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories


1. Soundbar
2. External subwoofer
3. Remote control
4. Twin phono to twin phono cable
5. 3.5mm jack to 3.5mm jack cable
6. Optical cable
7. 2x AAA batteries
8. 6mm Rawl Plug x 2
9. Screws x 2

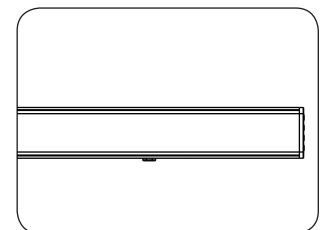


Soundbar

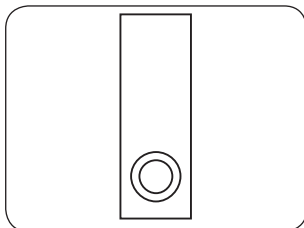 


Subwoofer

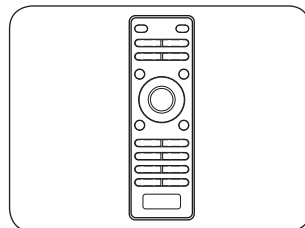 


Remote control

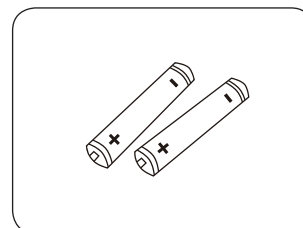 


2x AAA batteries

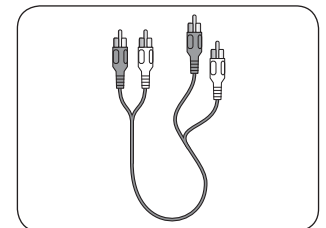 


Twin phono to twin phono cable

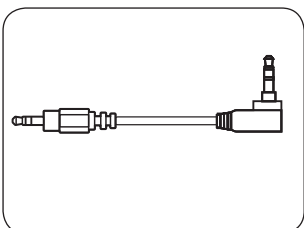 

 
3.5mm jack to 3.5mm jack cable

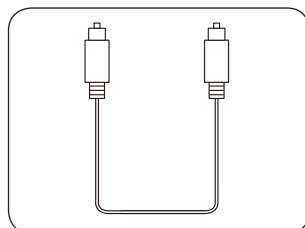

Optical cable

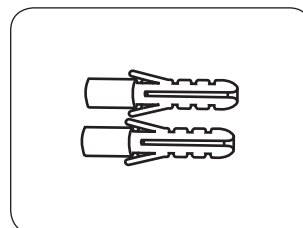 

6mm Rawl Plug

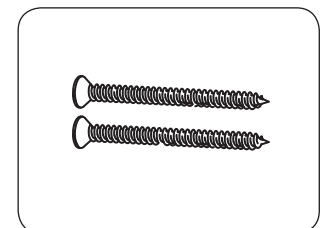 


Screws

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.


Getting to know your Soundbar

You'll be up and running in no time

 
Soundbar

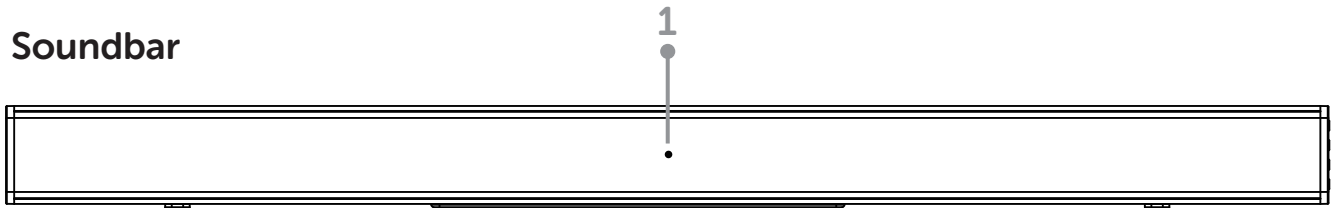

Front view

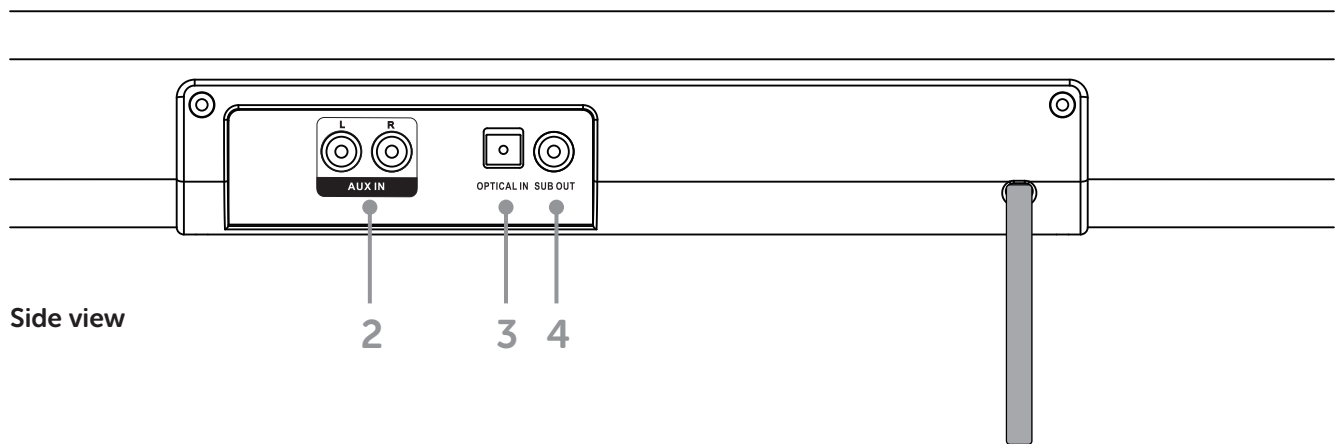 

Side view

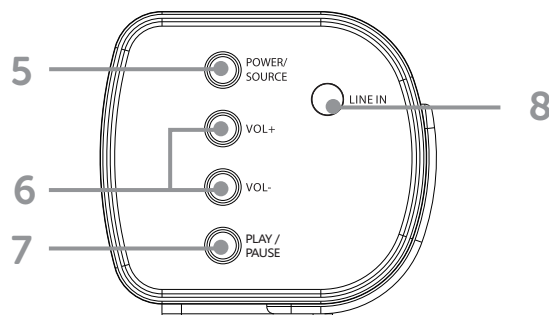 


- 1. Mode indicator LED**
- 2. Stereo RCA Audio inputs**
- 3. OPTICAL input**
- 4. Subwoofer Output**
- 5. Power and Source button:** Press and hold 2 seconds to switch the unit on or off. One touch to select a input: Line in, Aux in, Optical in or BT.
- 6. Volume + and - :** Press to adjust the volume up or down.
- 7. PLAY/PAUSE:** Press to Play or Pause a paired Bluetooth device.
- 8. 3.5mm LINE input**

or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105.

Getting to know your Soundbar

 You'll be up and running in no time

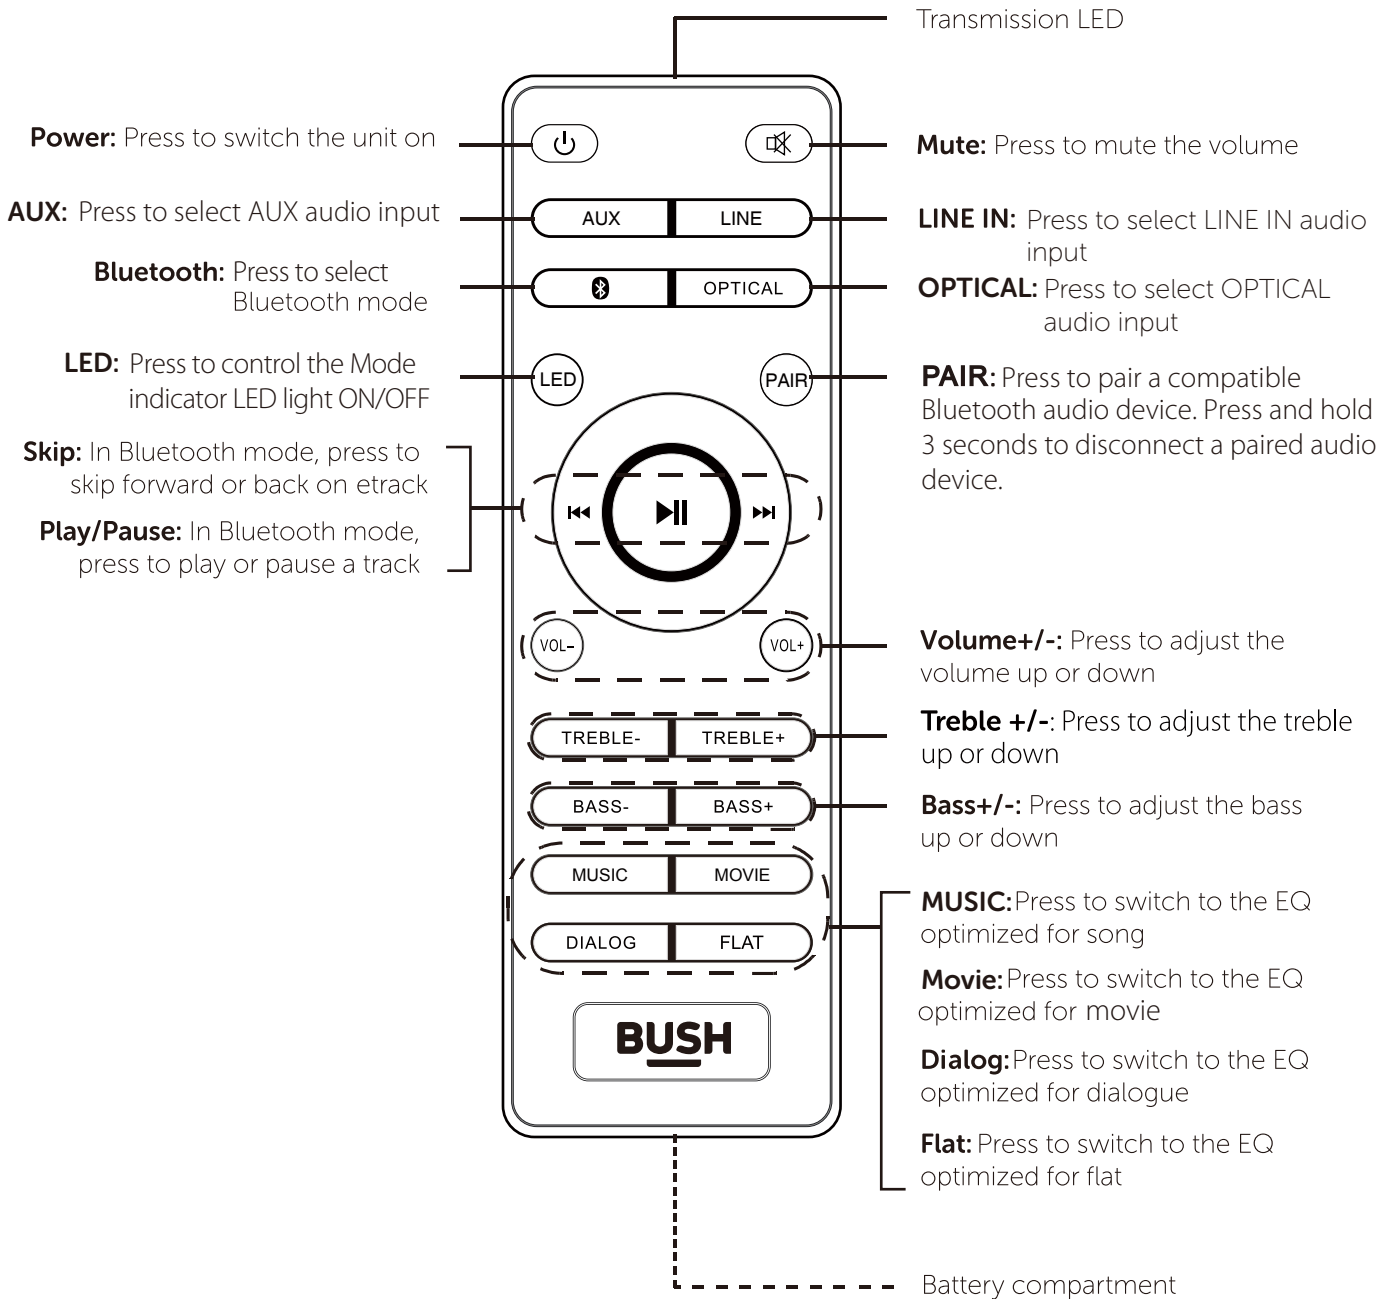

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Getting to know your Soundbar

 
You'll be up and running in no time

Making the connections

Follow the below connection guide to connect the soundbar to a TV with or without a digital output, a Bluray/DVD player or an audio source such as an MP3 player.

Only one digital connection to a TV is required. Use the optical connection.

DO NOT power on the mains until all other connections are made.

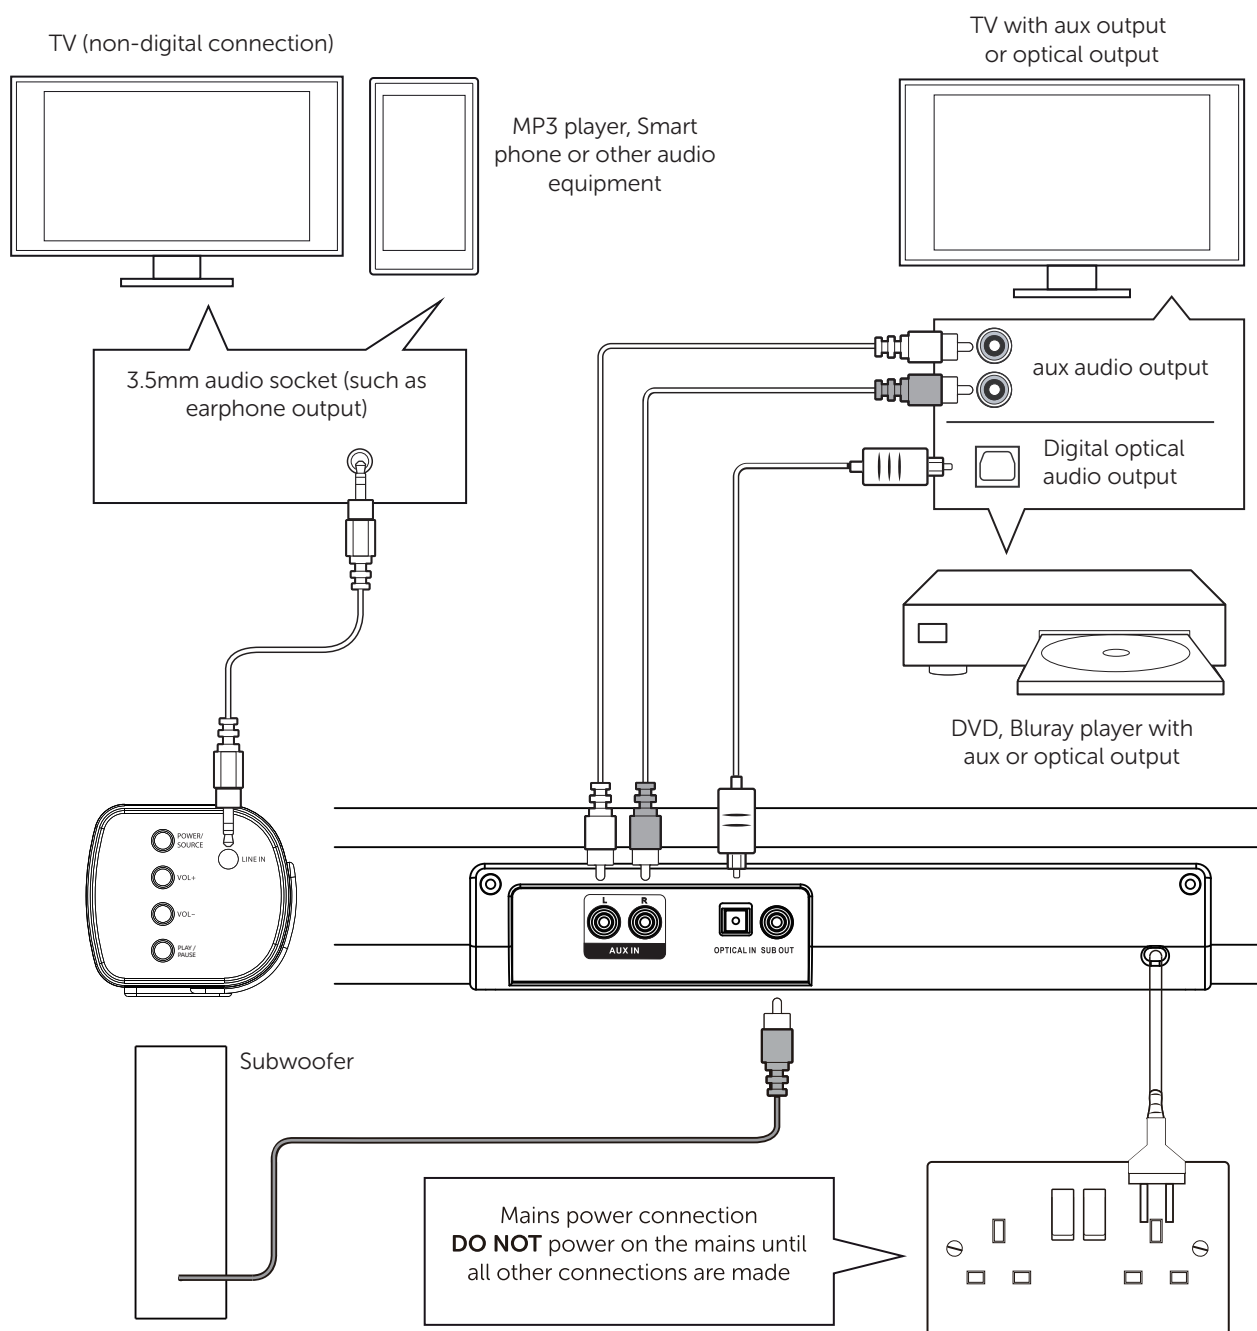


or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105.

Getting to know your Home Theatre

You'll be up and running in no time

Connecting the sub woofer

 
Follow the below instructions to connect the wired subwoofer to the soundbar.

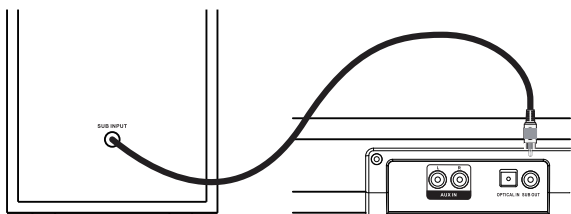

1. Use the RCA audio cable from the subwoofer to connect to the SUB OUT output on the soundbar.
2. When audio is played through any source, the speaker will automatically use the connected subwoofer.

Switching inputs


Follow the below steps to switch inputs between :- Line, Optical, Aux or Bluetooth.

1. Ensure the soundbar is powered ON. If not press the POWER/SOURCE button on the unit or the  button on the remote.
2. Press the POWER/SOURCE button on the unit repeatedly until you reach the required input mode or press mode buttons on remote control.

Soundbar Indicators

STATUS	INDICATOR
Standby	Red Light
Optical Mode	Yellow light
Aux In Mode	White Light
Line In Mode	Green Light
Bluetooth Pairing	Flashing Blue Light
Bluetooth Connected	Blue Light

 Installing the remote battery

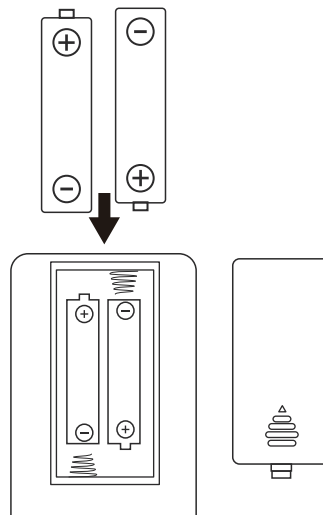


1. Press and slide the rear cover to open the battery compartment.
2. Insert 2x AAA size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) in battery compartment as indicated.
3. Close the battery compartment accordingly.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,



3

 Using your Soundbar

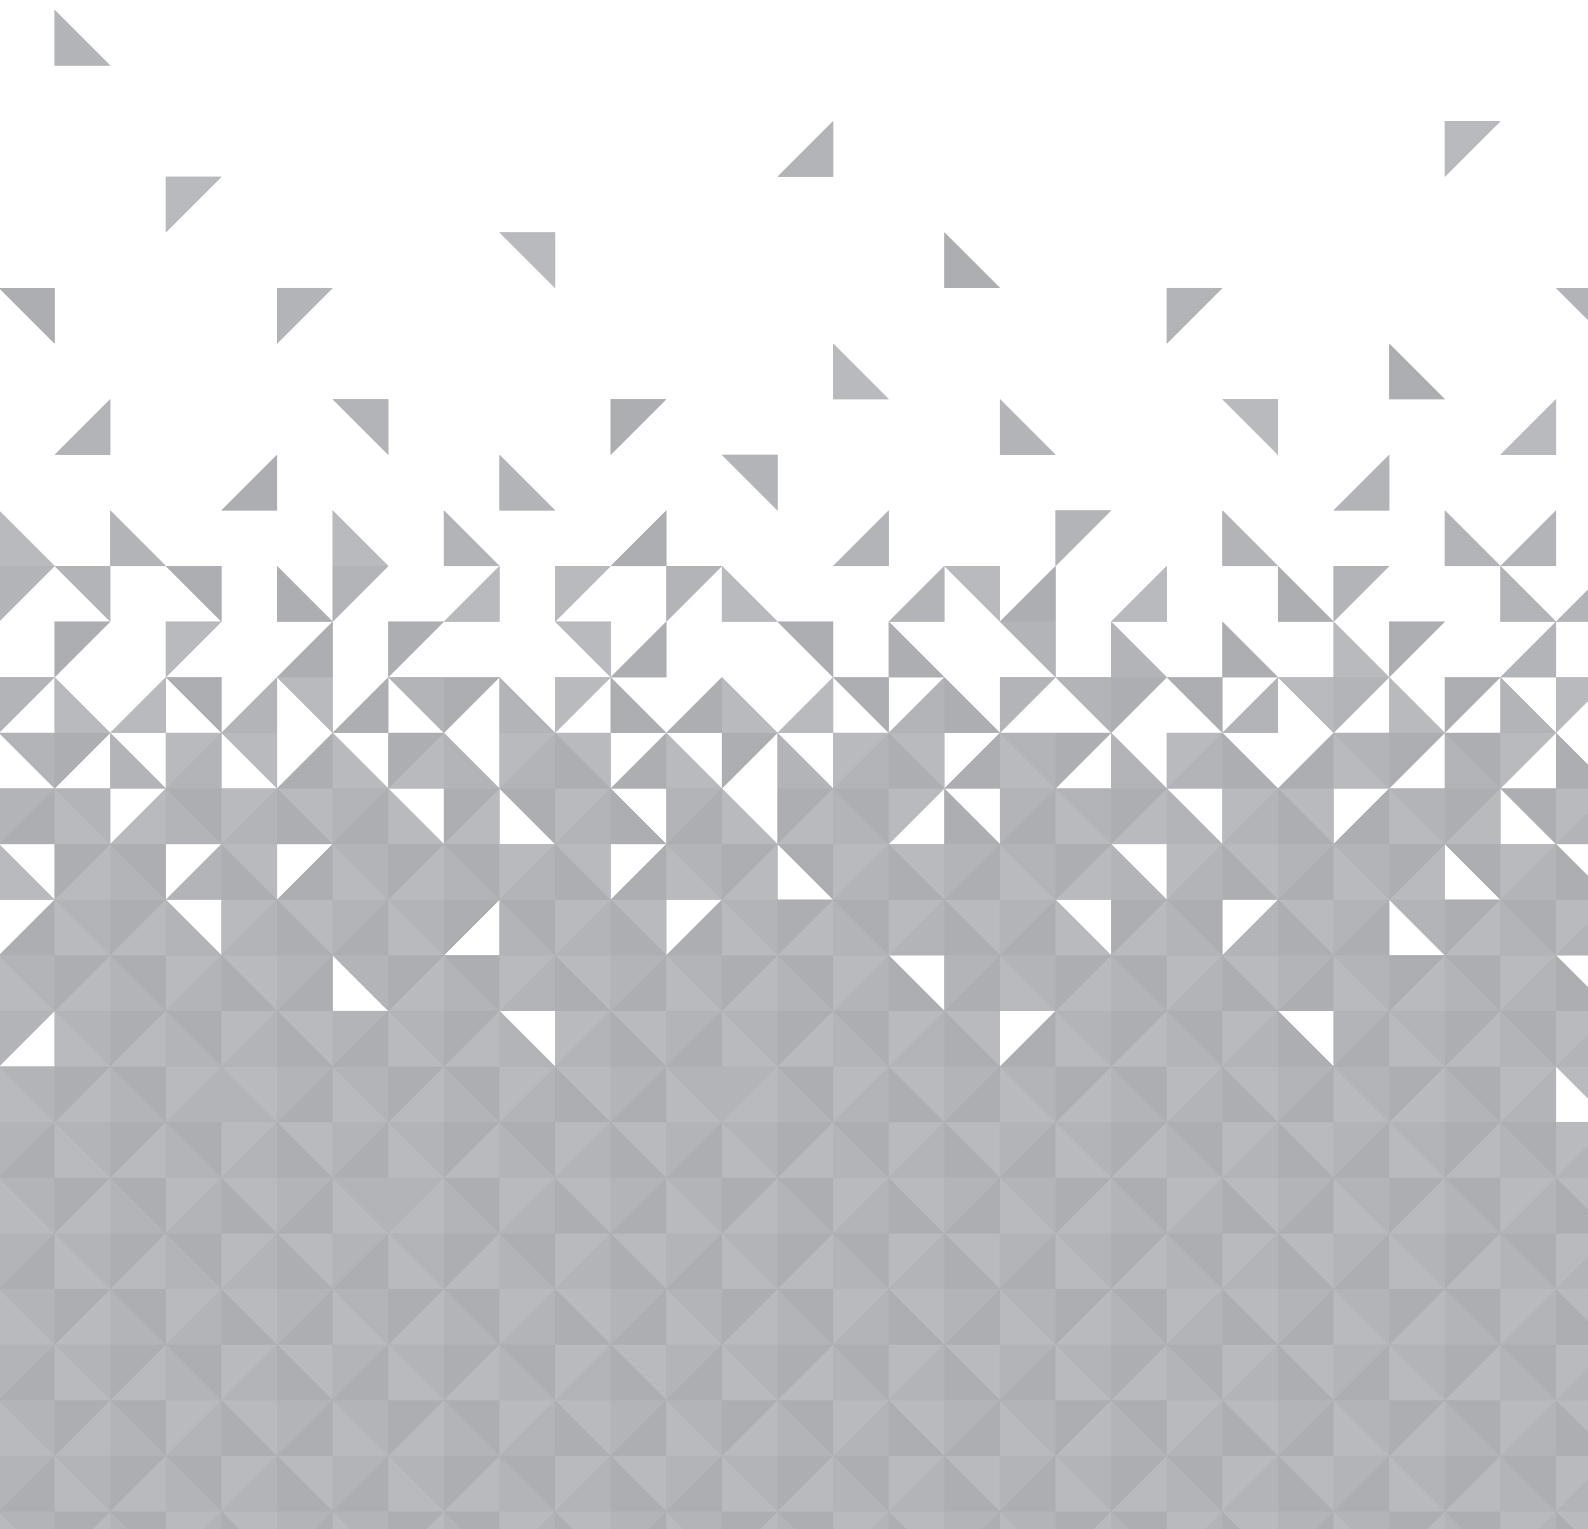


Using your Soundbar

Let's get started

USING THE STEREO RCA INPUTS

When connecting two products using an RCA cable, match the coloured ports with the same coloured connection. Before use, disconnect any cable connected to the Line in.

 1. Connect the RCA Cable (included) to the AUX IN stereo inputs located on the back of the unit, and to the audio outputs on the television.
2. Press and hold 2 seconds the POWER / SOURCE button on side panel or POWER button directly on the remote control to switch on the unit.
3. Press the AUX button on your remote control to enter AUX mode or one touch the POWER/ SOURCE button on the unit repeatedly to enter AUX mode, The mode indicator LED will turn white.
4. Audio played through the television will now be heard through the soundbar.

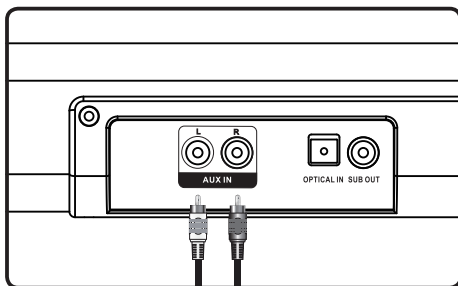


Using the Optical Input

You will need: An audio source with an Optical Audio Output and a Digital Optical Audio cable (included)


1. Connect the Digital Optical Audio cable to the optical output on the audio source and to the OPTICAL IN on the soundbar.
2. Press and hold 2 seconds the POWER/SOURCE button on side panel or POWER button directly on the remote control to switch on the unit.
3. Press the OPTICAL button on your remote control to switch to Optical Mode or one touch POWER/ SOURCE button on main unit repeatedly to select the Optical mode. The mode indicator LED will turn yellow.

 4. Using the native controls on your connected device, make sure the audio settings are set to PCM or Optical Audio and are turned On.
5. Audio from the connected audio source will now be played through the soundbar.

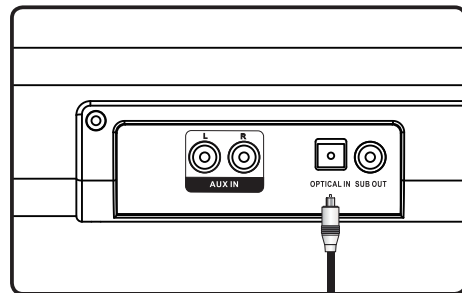

Using the LINE in

 1. Plug one end of a 3.5mm audio input cable (included) into the LINE IN on the unit. Before use, disconnect any cables connected to the Stereo RCA Inputs.
2. Plug the other end of the cable into the audio output/headphone output on an MP3 player or other audio source.
3. Press and hold 2 seconds the POWER/SOURCE button on side panel or POWER button directly on the remote control to switch on the unit.
4. Press the LINE button on your remote control to enter LINE in mode or one touch the POWER/ SOURCE button on the unit repeatedly to enter Line in mode. The mode indicator LED will turn green.
5. Audio played through the connected device will now be heard through the soundbar.

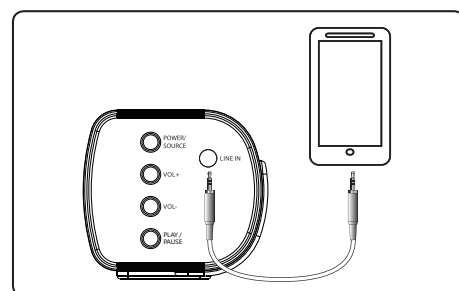

Using your Soundbar

Let's get started

Pairing a bluetooth device

Before you can use the soundbar with your phone or other bluetooth capable device you will need to pair the device to the soundbar.

Pairing a Bluetooth Device for the First Time

1. Press and hold 2 seconds the POWER/SOURCE button on the unit or the POWER button on the remote control to switch on the unit.
2. Press the BLUETOOTH button on the remote control to enter Bluetooth mode or press the POWER/SOURCE button repeatedly to enter Bluetooth mode, The mode indicator LED will turn blue.
3. Press the PAIR button on the remote control or the unit directly. The mode indicator LED will flash quickly. When pairing, remain within 3 feet of the unit.
4. Using the native controls on your Bluetooth device, select device "Bush B-3515A" in your Bluetooth settings to pair.
5. When successfully paired and connected, a beep will issue from the unit and the mode indicator LED will display a solid blue light. After initial pairing, the unit will stay paired unless unpaired manually by the user or until it is erased due to a reset of the device.

If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Controlling a paired device

Once connected you can either use the controls on the audio device to begin playback, skip tracks etc. or you can use the control buttons on the remote.

1. The ►|| button on the remote control or PLAY/PAUSE on unit when pressed will begin playback of the selected track on the audio device. Press again to pause playback.
2. To skip to the next track press the ►► button on the remote.
3. To skip to the previous track press the ◀◀ button on the remote.
4. Any further operations must be done from the audio device.

 
The volume output is effected by the volume level on the audio source EG: Phone or laptop, so make sure that is set to about 70-80% (not too loud to avoid distortion).

Bluetooth notes

- The operation range of bluetooth is approximately 10 metres (30 feet). Any obstacles in the path between devices may reduce this range.
- Only one Bluetooth device can be paired at a time.
- Not all Bluetooth devices are compatible.

Note: There are 40 volume levels. The LED indicator will flash at each press of VOL+ / VOL- until minimum or maximum volume level has been reached and LED indicator remains illuminated


Other information 4

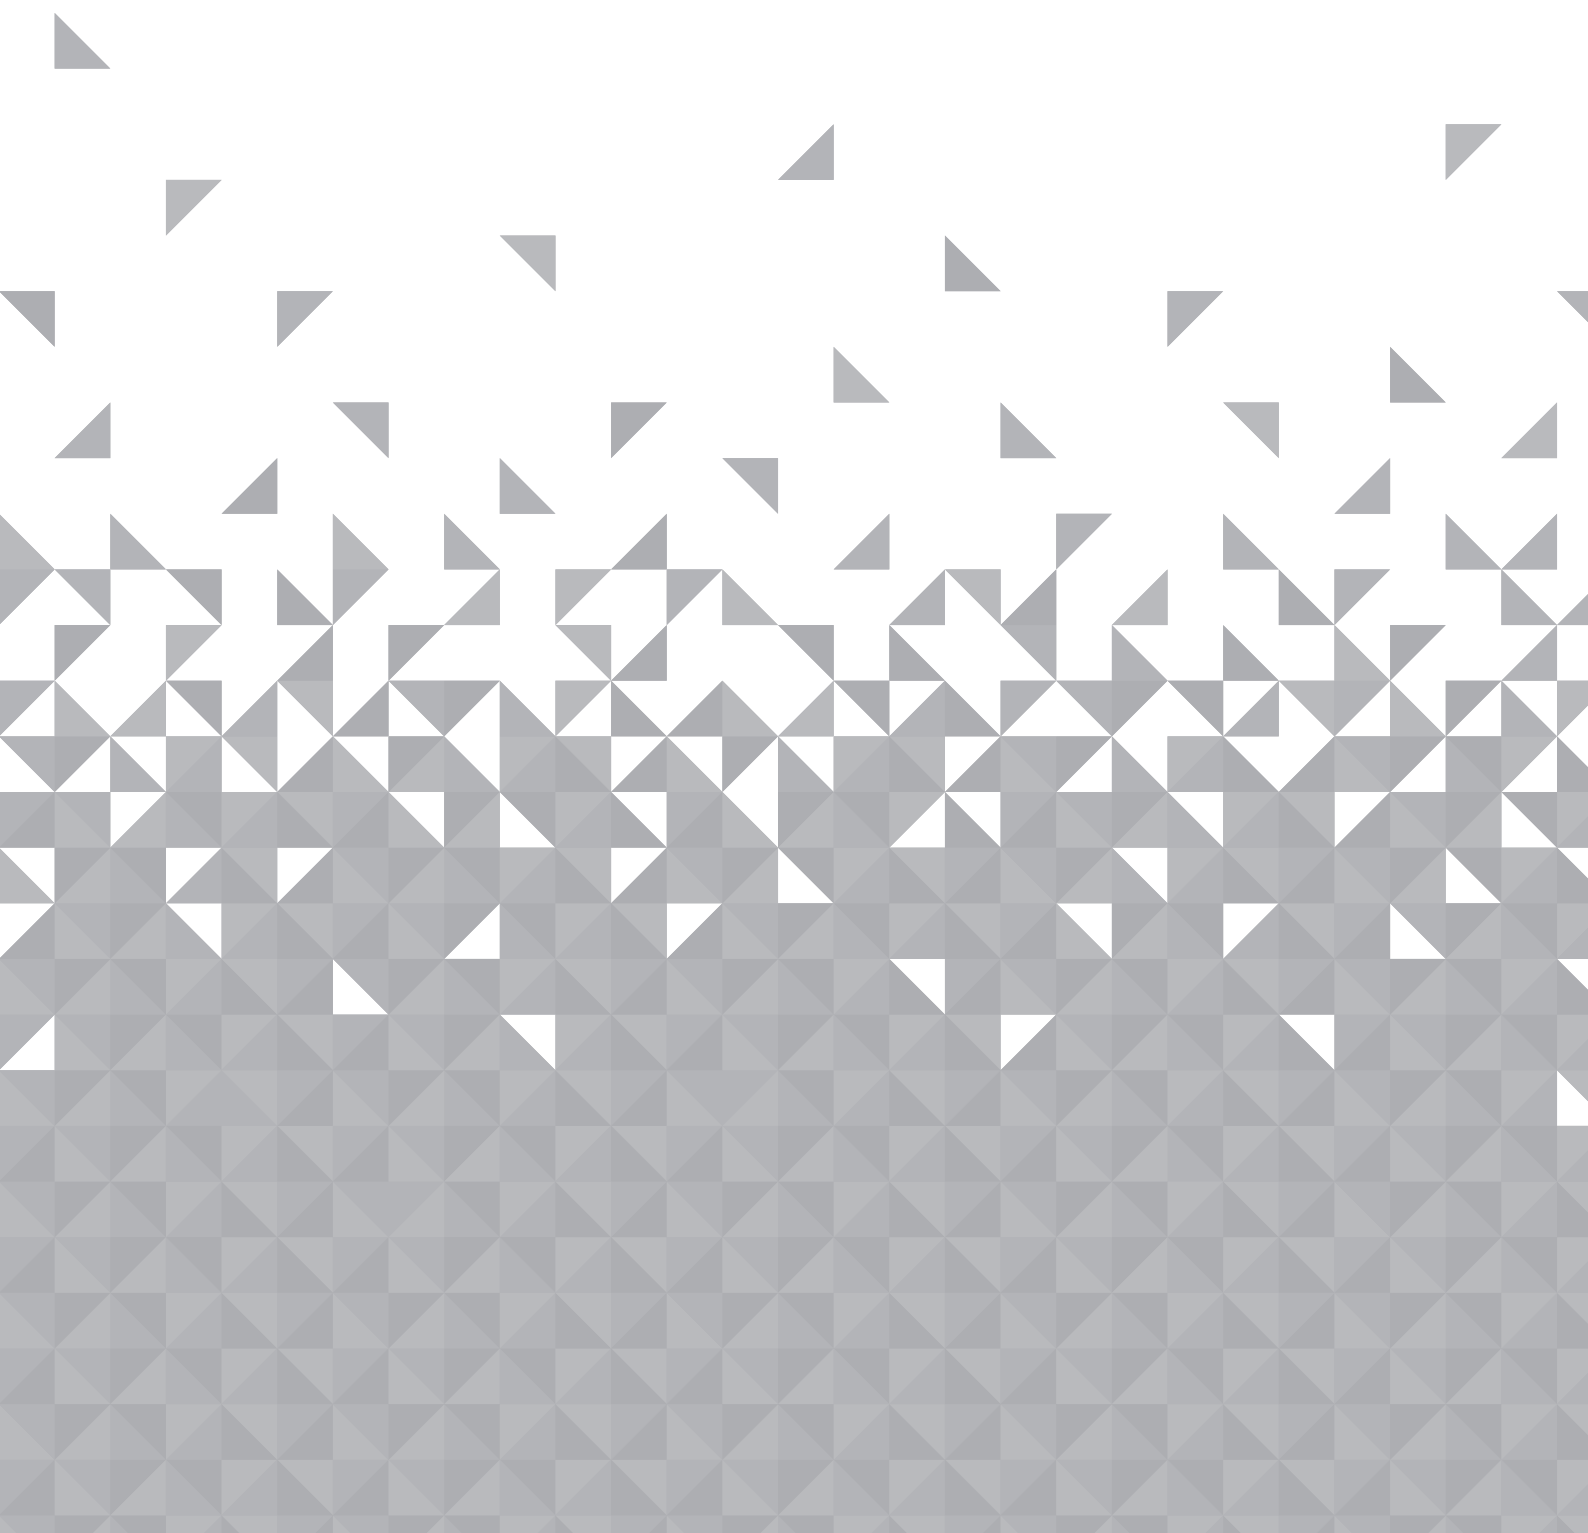



Other information

Helpful technical information

 Wall mounting the soundbar

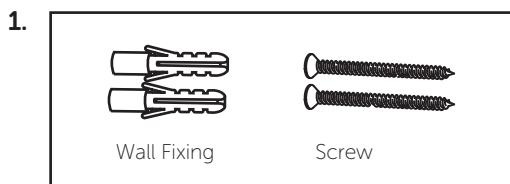

Accessories included

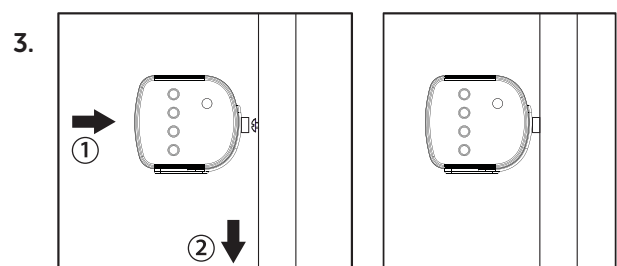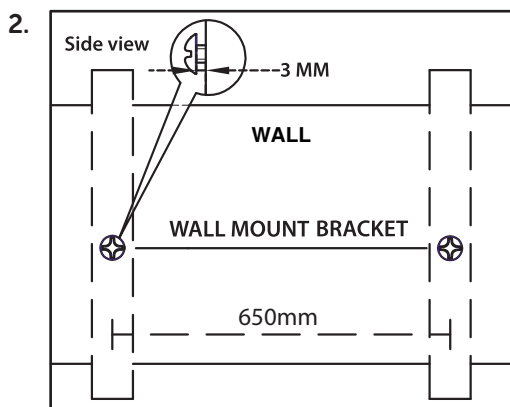  

- In order to avoid damage to the unit and personal injury you should get a qualified person to drill the fixing surface and fit the appropriate wall fixings.
- Take care not to allow the main unit to fall while attempting to hook onto the wall mount brackets.
- Before mounting, check the wall strength, if it is not clear then consult relevant qualified personnel.
- When drilling into walls, always check that there are no hidden wires or pipes etc.
- Make sure the screws & wall plugs are suitable for supporting the unit.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Other information

Helpful technical information

Technical specification

Amplifier	
Power output	80W RMS
Frequency response	38Hz - 20KHz
Input sensitivity	700mV
Main unit	
Power supply	INPUT: 110- 240V ~ 50/60Hz
Power consumption	40W
Standby power consumption	≤ 0.5W
Full range speaker drivers	Impedance: 8 Ohm, 50 x 90mm Frequency response: 180Hz ~ 20KHz
Subwoofer	Impedance: 4 Ohm, 120mm Frequency response: 35~2.5KHz
Dimensions	Soundbar: 820 x 64 x 60mm Sub woofer: 130 x 370 x 250mm
Sounobar net weight	1.32KG
subwoofer net weight	2.56KG
Mains cable length	1.5 metre
Remote control	
Battery	2 x AAA battery
Bluetooth	
Bluetooth Pairing Name	Bush B-3515A
Bluetooth compatibility	EDR, GFSK, $\pi/4$ -DQPSK, 8DPSK
Bluetooth version	V5.0
Temperature and Humidity	10 C to 35 C Relative humidity 40 to 85%
Bluetooth frequency range	2402MHZ - 2480MHZ

Care & maintenance

After using the soundbar

Set to Standby.

Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).

Avoid leaving the battery fitted in the remote control if you leave the unit unattended for long periods. It may leak and damage the remote control.

 
Care & cleaning

All care and cleaning operations should be carried out with the unit unplugged from the mains power.

Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.



5 **Product support**

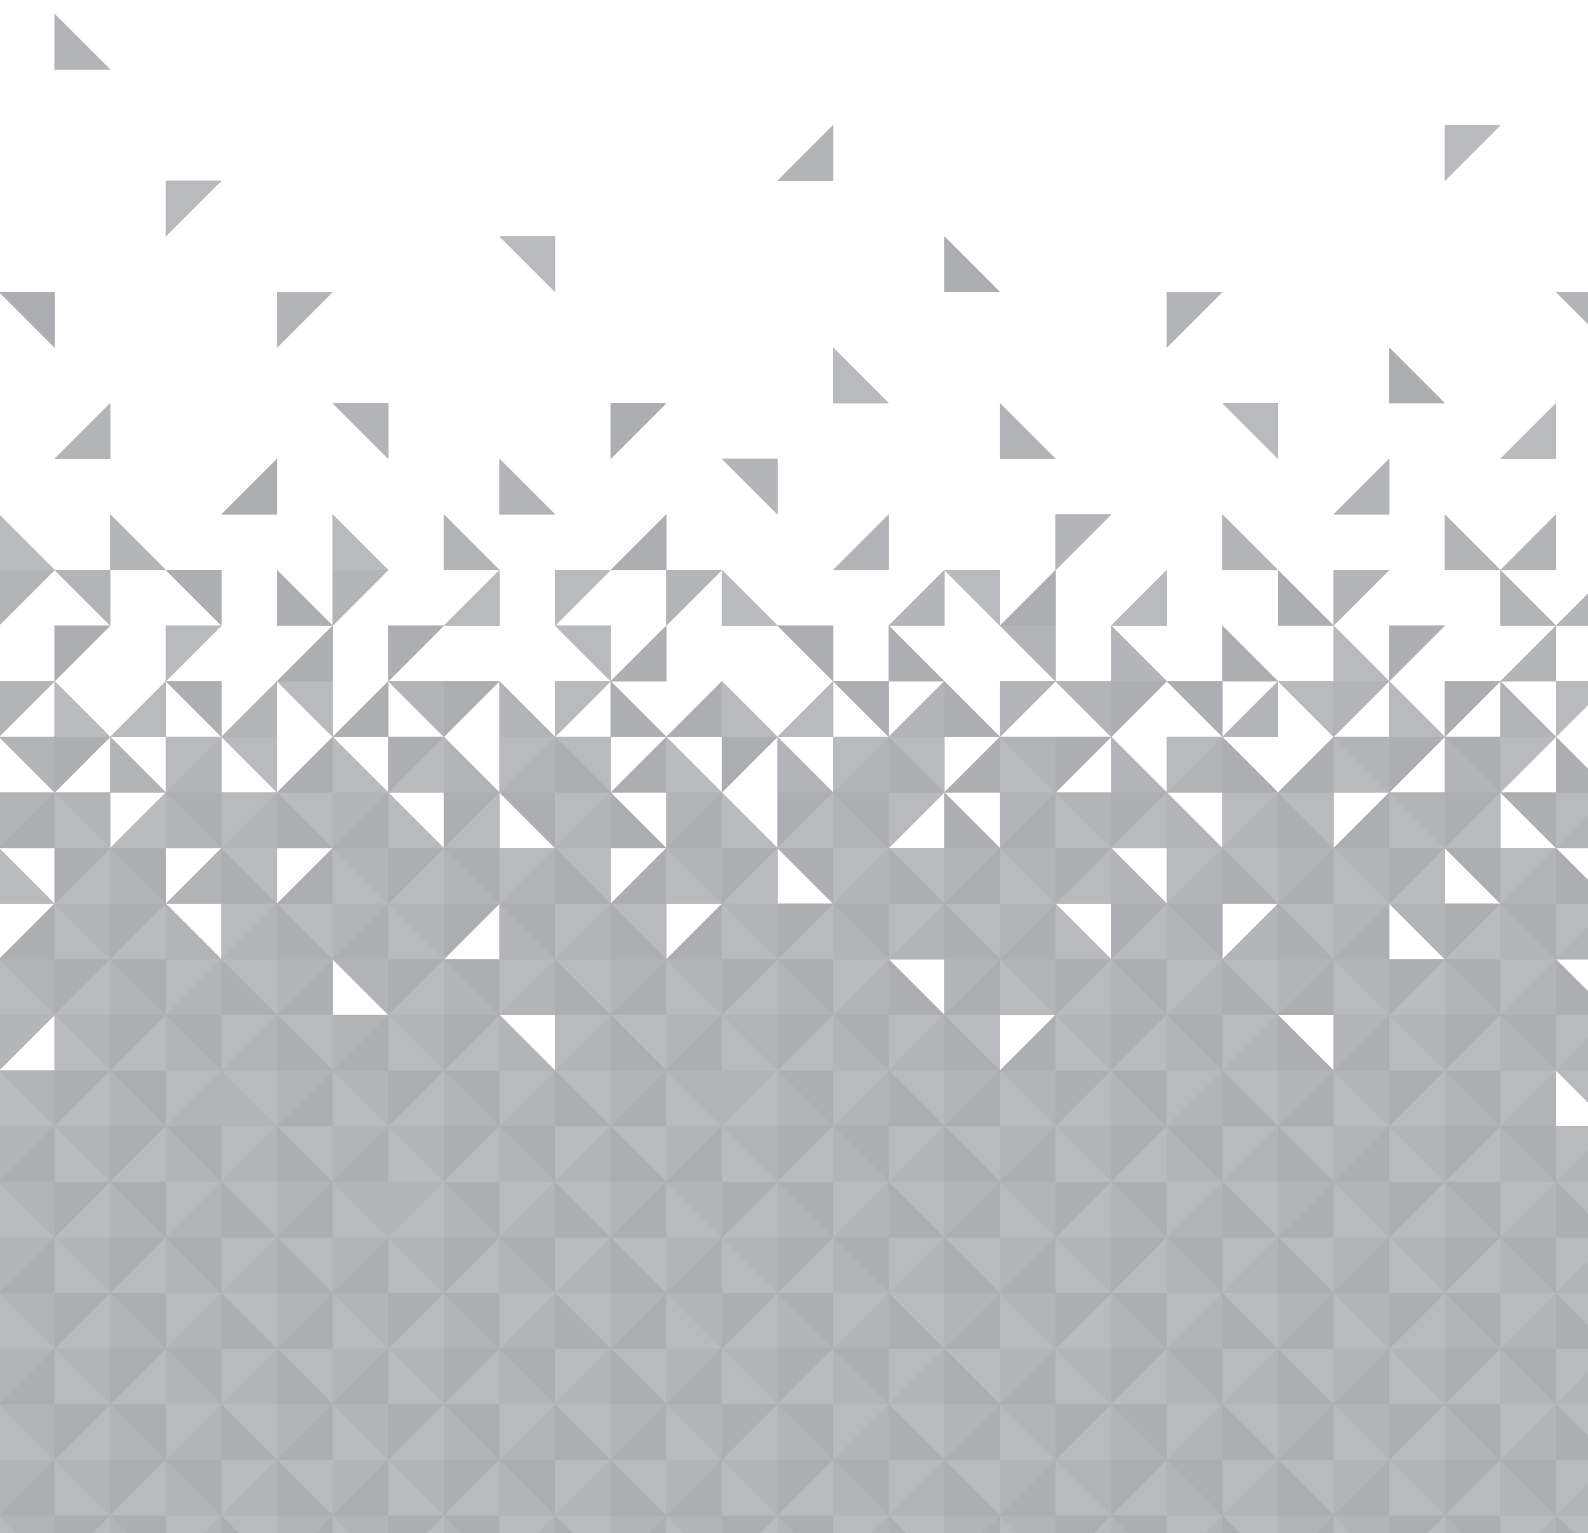

Product support

Help is always at hand

Troubleshooting

No power.

- Ensure the mains plug is connected to a power supply, and is switched ON.
- Make sure there is power to the mains socket.

No sound?

- Make sure if playing from the AUX input, the external source has the volume turned up and is outputting sound.
- Make sure the volume is turned up.
- If using the digital optical ensure the source DIGITAL output is set to PCM, LPCM, PCM 2Ch stereo or PCM downmix.
- Bluetooth device not paired. Check 'Pairing a bluetooth device'.

No response from the soundbar.

- Unplug the power cable for 1 minute then plug back in again.

Remote control does not work.

- Reduce the distance between the remote and main unit
- Check the batteries are installed correctly.
- Replace the batteries
- Aim the remote directly at the soundbar

Unit powers off after 15 minutes.

- This unit is designed to enter STANDBY mode automatically after 15 MINUTES of inactivity. Press the Power button on remote control or POWER/SOURCE button on soundbar to wake the unit.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your soundbar is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on **0345 604 0105**. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	<input type="text"/>	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product
Serial number	<input type="text"/>	
Date of purchase	<input type="text"/>	This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 604 0105**.

Product support

Help is always at hand

Disposal



Recycling electrical products You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Declaration of Conformance

Hereby Argos Ltd declares that this 2.1 Soundbar B-3515A is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com>

Bluetooth™

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sainsburys Argos is under license. Other trademarks and trade names are those of their respective owners.

CE This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive RED 2014/53/EC.

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistration.co.uk

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 604 0105**.

BUSH

Contact:

www.bush-support.com

Helpline: 0345 604 0105

Made in China

Imported for Argos Ltd, Milton Keynes, MK9 2NW

