

BUSH

Instruction manual.

4 INCH HANDHELD USB FAN

Model number DC-0408



Please read the instructions fully before use.

BUSH



Safety information important- please read the instructions fully before operating.

Do not use the appliance for any purpose other than its intended use.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- Use only the voltage specified on the rating plate of the appliance.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- **Children should be supervised to ensure they do not play with the appliance.**
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Only use the nominated charger with 5V 1A (equivalent 5V 1000mA) to charge this product. A charger of different rating may cause damage or compromise charge.
- Only use a UKCA or CE marked USB wall adapter from a reputable brand or retailer, with power output that matches the information above.
- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may

 
 
 
place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.

- This appliance is designed for household and light commercial use.
- Do not insert fingers or other objects into the fan during use, this can cause personal injury and damage.
- Do not place the appliance on an unsteady surface.
- Keep away from open flames such as lit candles, open fires, cooking, and other heating appliances.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking, or other heating appliance.
- Do not operate if the fan housing is damaged.
- Do not allow fan to be directed onto children, the elderly or infirm for a long period of time.
- Do not use the fan in areas of high humidity, very dusty, or in temperatures higher than 40°C.

Additional Battery information

- This fan contains a Lithium Ion battery, which should not be disposed of in the normal household waste but taken to appropriate local recycling facilities. Store the appliance away from direct sunlight and out of the reach of children.
- Please ensure the fan is turned off when charging. Do not leave the USB cord connected to the charger for longer than necessary. If the battery gives off an odour, generates heat, becomes discoloured or deformed, or in any way appear abnormal during usage, recharging or storage, turn off and stop using immediately.
- Do not operate the fan while charging.
- Do not leave this product in an unattended vehicle or charging in an unattended vehicle.

Getting to know your handheld fan

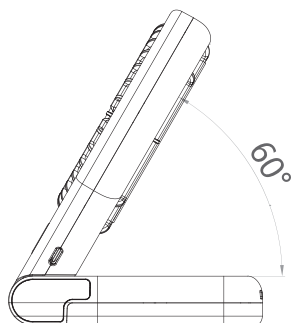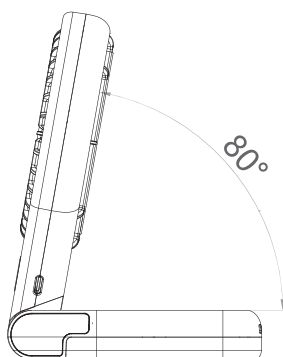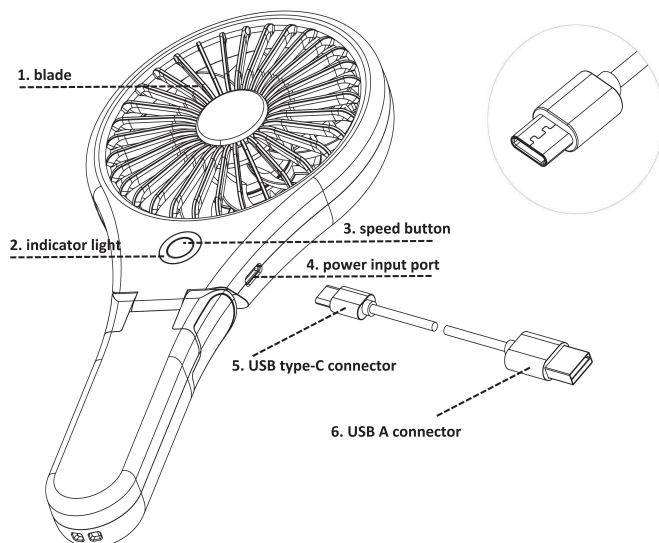

The fan is also foldable and should be positioned on a flat stable surface.

Using your handheld fan

The fan has 3 speed settings: low, medium and high.

- To Switch on your fan, press the Speed button once (3) this will start the fan in low speed, continue to press the button to cycle through the speed options Low-Medium-High- Off.

Indicator light

Colour	Reason
RED	Charging
GREEN	Fully charged
BLUE	Power on
BLUE FLASHING	Low power

Charge times

Battery life	Time (approx.)
Recharge	4 hours
Low speed	12 hours
Medium speed	6 hours
High speed	4 hours

Care and Maintenance

The fan requires little maintenance and contains no serviceable parts. Do not attempt to dismantle the fan motor body yourself. The fan is permanently lubricated and will not require additional lubrication.

- Always turn off and unplug the fan from the mains supply before cleaning.
- Use only a soft slightly damp cloth followed by a dry cloth, to gently wipe the outer surfaces on the fan to clean.
- Do not try to remove the fan grill. To clean between the bars, it is recommended using a vacuum cleaner or compressed air to gently remove the dust.

Storage

- When not in use, clean the fan before storing away in the original or similar sized box.
- Store the fan in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

Technical Specifications

BUSH 4 INCH HANDHELD USB FAN	
Model number	DC-0408
Power rating	DC 5V 3W
Dimensions	250x113x28mm
Weight	190g (fan only)
Battery spec	18650 - 3.65V 2600mAh
Bush careline	Customer helpline 0345 604 0105



Recycling electrical products



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

Product support



Help and assistance

If you require any technical guidance or find that your 4 Inch Handheld USB Fan is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

DC-0408

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

N/A

Date of purchase

This will be shown on your receipt

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105



Product support

Help is always at hand



Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited, Sainsbury's Supermarkets Ltd, London, EC1N 2HT, UK.
Argos (N.I.) Ltd and Sainsbury's (NI) Ltd, Forestside Shopping Centre,
Upper Galwally, Belfast, BT8 6FX, UK.

