

145 mm


CYBL20-9新款说明书2025.6.3-1小秋

BUSH

Instruction manual.

Oil Filled Radiator.

 Model number CYBL20-9 (2kW)

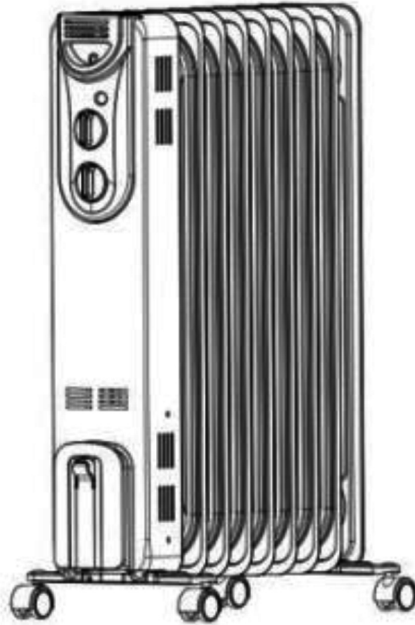

This product is only suitable for well insulated spaces or occasional use.

Please read the instructions fully before use.

BUSH

210 mm



Safety information important- please read the instructions fully before operating.

For household and indoor use only.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- Use only the voltage specified on the rating plate of the heater.

WARNING: in order to avoid overheating do not cover the heater.

WARNING: To reduce the risk of fire, keep textiles, curtains, or other flammable materials at least 1 m away from the air outlet.

- Only use this heater on a horizontal and stable surface.
- Do not place the heater immediately below a socket outlet .
- Do not use this appliance with a programmer, timer, separate remote-control system, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- To avoid risk of overloading your plug socket, the use of an extension lead with this heater is not recommended.
- Important- this heater is intended for floor use only. Do not mount on ceiling's or walls.
- Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
- Do not leave the appliance unattended.

WARNING: Do not use this heater in small rooms, when they are occupied by people unable to leave the room alone, unless constant supervision is provided.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Children less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION- some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Always switch off the heater before removing the plug from the power socket.
- Do not remove the plug from the power socket by pulling on the cord, always grip the plug to remove.
- Always unplug the appliance when not in use, when moving the appliance or before cleaning.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not twist, kink or wrap the cord around the appliance as this may cause the insulation to weaken and split.
- Do not run the power cord under carpets, rugs etc.
- Do not cover or restrict the airflow to the inlet or exhaust grilles, restricted airflow can cause the appliance to overheat and become a fire risk.
- Do not insert or allow any foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage the appliance.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Do not use the heater on deep pile carpets or long hair type rugs. Keep combustible materials sch as drapes and other soft furnishings away from the heater.
- This radiator is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak. Never attempt to repair yourself. Repairs to electrical

appliance should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee.

 
- When disposing of the radiator, follow the regulations concerning the disposal of oil.

Assembly


Before using your new heater, the feet, and castors (supplied) must be fitted.

The front foot must be fitted on the control panel, the rear foot must be fitted between the end two fins for stability.

1.

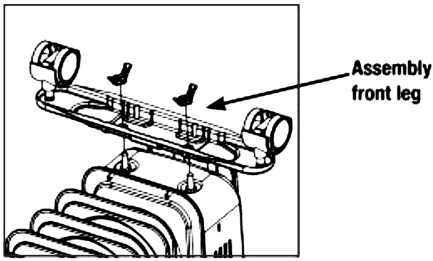

 
2.

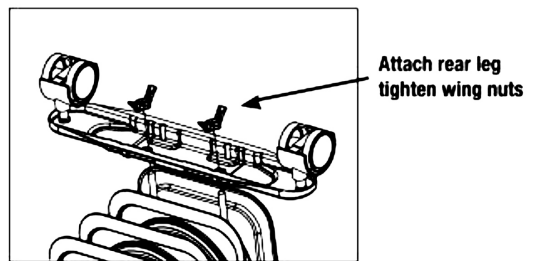

- Invert the heater and grip firmly, you may need help to do this.
- Place the front foot on the control panel end and secure in place using two butterfly nuts.
- Position the 'U' shaped bolt around the joint between the rear two fins, with the threads protruding from the bottom of the heater. Place the foot and secure in place using the remaining two wing nuts.

Note: Do not use the heater without the feet fitted.

 Fittings



Foot x2

 


U shaped bolt x1



Winged nut x4


Getting to know your heater.

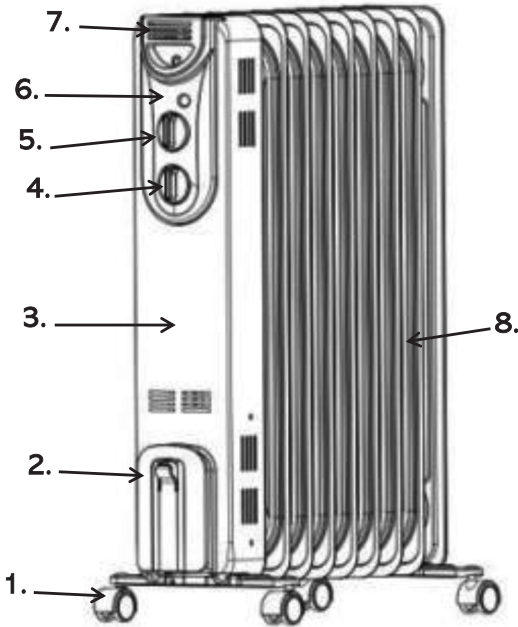

- 1. Castors/foot.
- 2. Cord Wrap
- 3. Front panel
- 4. Thermostat control
- 5. Power On/ heat setting control.
- 6. Indicator light.
- 7. Handle.
- 8. Fin body.

2kW 9 Fin Radiator

 - I Low 800W
- II Medium 1200W
- III High 2000W

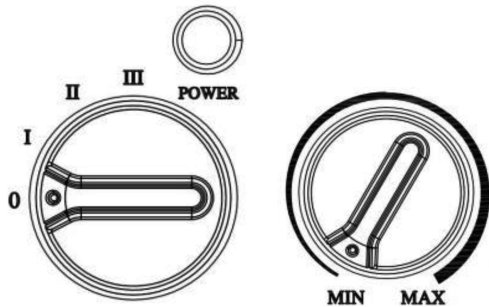

WARNING: in order to avoid overheating do not cover the heater.

Before using your heater.

Make sure you have read and fully Understood the safety instructions before operating the fan heater.

- Choose a safe, horizontal, stable surface to place your heater and position the power cord so not to create a trip hazard.
- Make sure the On/Off control is switched to Off 'O'
- Plug the power cord into a suitable power socket.

Operating instructions.

Once the heater is plugged into a suitable plug socket.

- Turn the thermostat control clockwise to the maximum setting.
- Turn the Power on/heat setting control to the desired setting. Low, medium, or high.

Thermostat control.

Setting the temperature is easy to do.

- Select the heat setting as above, then rotate the thermostat control to maximum position. Once the desired room temperature has been reached, turn the thermostat control anticlockwise until it clicks off and the light switches off, then turn the control clockwise slowly until it clicks back on. The thermostat will now maintain the set temperature.
- The heater will turn on and off automatically maintaining the room temperature that you have set.
- You may need to adjust the thermostat control to fine tune the ideal room temperature.

NOTE: it will take 5-10 minutes for the appliance to fully heat up.

NOTE: this radiator is oil filled and will cool down slowly after the power is shut off. Allow the radiator heater to cool prior to any movement/ the built-in handles should be used for easy movement.

Tip over switch.

The heater is fitted with a safety switch which cuts the heater off if it falls over. This switch is located under the base. The heater needs to be placed on a firm and level surface in order to operate. Standing the unit on the long pile carpet may not activate the switch.

Overheat safety cut-out.

Your heater is fitted with a safety device the switches off the heater in the event of overheating. Should the heater stop working, turn the heater off and inspect for blockage of air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater. If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service center for examination or repair.

Power Cord Storage.

When the appliance is not in use wrap the power cord around the storage hook to keep your appliance tidy and easy to store away. The power cord must be fully unwrapped when plugged into the plug socket or in use.

Care and Maintenance.

The heater requires regular cleaning to ensure trouble free operation:

- Always turn off and unplug the heater from the mains supply before cleaning.
- Make sure the appliance has cooled down completely before cleaning.
- Use a slightly damp cloth to wipe the exterior of the heater to remove dust and dirt.
- Ensure the heater is dry before plugging back into the mains supply.
- Do not immerse cord, plug or the appliance in any liquid or allow moisture to come into contact with the electrical parts.

Storage

- Do not store appliance while it is still hot.
- When not in use, clean the heater before storing away in the original or similar sized box.
- Store the heater in a safe, clean, and dry place, away from direct sunlight and out of reach of children.



Produced in China for Argos Limited. Sainsbury's Supermarkets Ltd, London, EC1M 6HA, UK. [Argos \(N.I.\) Ltd](#) and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

Technical Specifications.

2kW Oil filled radiator	
Model number	CYBL20-9
Input rated voltage	220-240V 50Hz
Output rated wattage	2kW
Weight	7.6kg
Dimensions	W355xD250xH640
Recommended room size	20m ²

Recycling electrical products.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Plug and wiring advice.

The wires in this mains lead are coloured in accordance with the following UK electrical code:

 
BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a "non-rewireable" plug. If you need to change the fuse in a "non-rewireable" plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.


Rewireable plug.

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

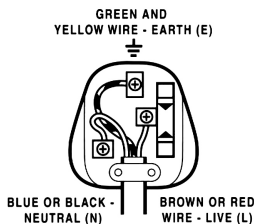

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol 

Information requirement for electrical space heaters

Contact details	Produced in China for Argos Limited.Sainsbury's Supermarkets Ltd, London,EC1M 6HA, UK. <u>Argos (N.I.) Ltd</u> and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally,Belfast, BT8 6FX, UK.				
Model identifier(s): CYBL20-9					
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat input/room temperature control (select one)		
Nominal heat output	Pnom	2.000	kW	single stage heat output and no room temperature control	No
Minimum heat output (indicative)	Pmin	0.800	kW	two or more manual heat stage, no room temperature control	No
Maximum continuous heat output	Pmax,c	2.000	kW	with mechanic thermostat room temperature control	Yes
Power consumption			with electronic room temperature control		
In off mode	Po	0.20	W	electronic room temperature control plus day timer	No
In standby mode	Psm	0.00	W	electronic room temperature control plus week timer	No
In idle mode	Pidle	0.00	W	Other control options (multiple selections possible)	
In network standby	Pnsm	0.00	W	room temperature control, with presence detection	No
Standby mode with display information or status			No	room temperature control, with open window detection	No
Seasonal space heater energy efficiency in active mode	$\eta_{S,on}$	85.0	%	distance control option	No
				adaptive start control	No
				working time limitation	No
				black bulb sensor	No
				self-learning functionality	No
				control accuracy	No

Test Data CYBL20-9

Description	Value
For electric local space heaters- $\eta_{th,nom}$	100%
The electric to primary energy 'conversion coefficient-CC	1.9
correction factor accounting for a positive contribution to the seasonal space heating energy efficiency due to adjusted contributions of controls of indoor heating comfort, the values of which are mutually exclusive, cannot be added to each other-F(2)	0.100
correction factor accounting for a positive contribution to the seasonal space heating energy efficiency due to adjusted contributions of controls for indoor heating comfort, the values of which can be added to each other-F(3)	0.000
Seasonal space heating energy efficiency in active mode- $\eta_{S,on}$ $\eta_{S,on} = \eta_{th,nom} \cdot [0.75+F(2)+F(3)] \eta_s = \eta_{S,on}/CC$	85.0%
Seasonal space heating energy efficiency - η_s , for electric local space heaters $\eta_s = \eta_{s,on}/CC$	44.7%
Verdict	Pass

Product support



Help and assistance

If you require any technical guidance or find that your appliance is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105



Product support

Help is always at hand



Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk

Guarantor: Argos Limited, London, EC1M 6HA, UK. [Argos \(N.I.\) Ltd](http://www.argos.co.uk), Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

