


everlux

INSTRUCTION MANUAL

Hair Dryer

MODEL NO.: BY-517

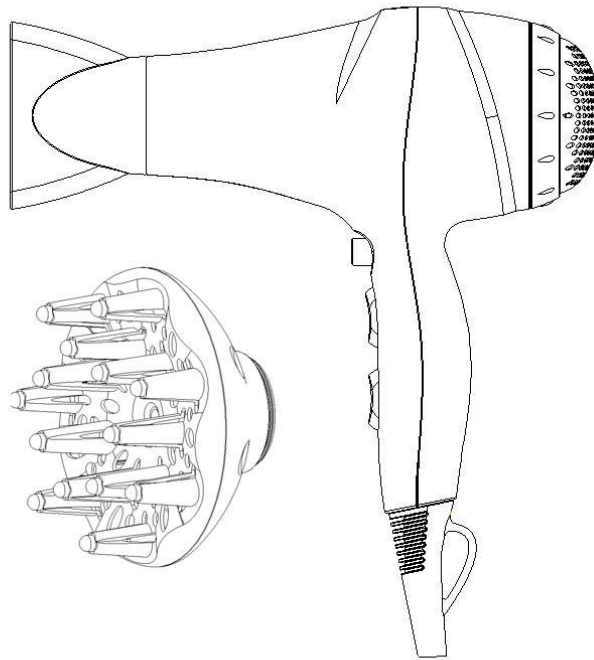

Please read before use and retain for future reference

FOR HOUSEHOLD AND INDOOR USE ONLY



IMPORTANT SAFETY INFORMATION

Please read the instructions fully before using the appliance
Do not use this appliance for any purpose other than its intended use.
Use only the voltage specified on the rating plate of the appliance.


WARNING:

- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- **Children should be supervised to ensure they do not play with the appliance.**
- For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.
- ALWAYS unplug this appliance immediately after use.
- DO NOT USE THIS APPLIANCE NEAR BATH TUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER
- Always ensure hands are dry before using the appliance, touching the plug or the socket.
- Do not use while bathing

WARNING: THIS APPLIANCE BECOMES VERY HOT DURING USE

- To prevent burns or injury, do not allow the face, neck, or scalp to come into contact with the unit's hot surfaces while using the appliance. Ensure that the airflow is directed away from the eyes, ears, face, and neck at all times
- Do not use any other accessories than those supplied with the unit.
- Never leave the appliance unattended while it is switched on or cooling down
- ALWAYS check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- Ensure the air inlet grille is free from lint, dirt and dust.
- Keep the appliance and cable away from heat, sharp objects or anything that may cause damage. Do not pull, twist, or kink the cord.
- The product is not to be used if it has been dropped or there are visible signs of damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance must be positioned so that the plug is accessible, and the plug socket is within easy reach of the power cord

Parts

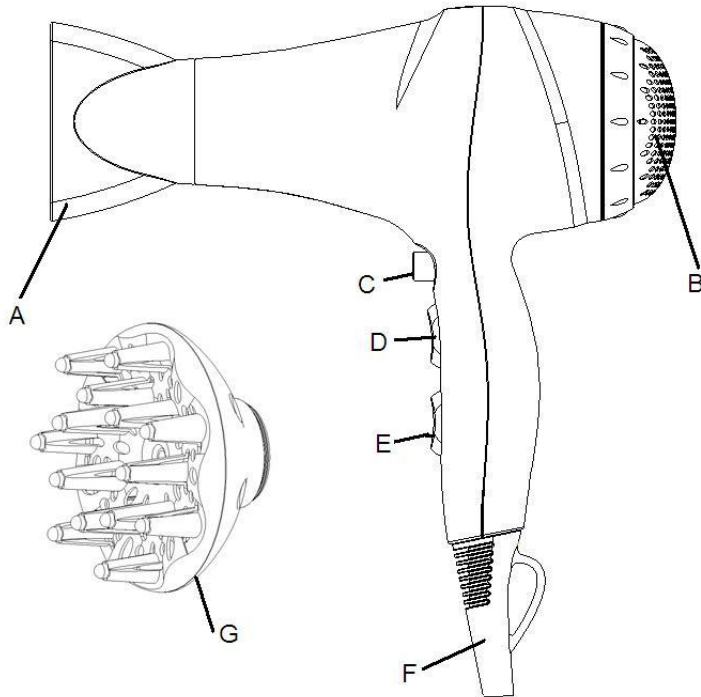




- A. Concentrator nozzle
- B. Air inlet cover
- C. Cool shot button
- D. Heat switch button
- E. Speed switch button
- F. Hanging loop
- G. Diffuser



How to use your hairdryer

- Towel dry your wet hair to remove excess water.
- Always ensure that your hands are dry and the switch is set to OFF position before plugging the hair dryer into the mains supply.
- Select the right temperature (D) and speed (E) setting.

Heat switch button (D):

		
High temperature	Medium temperature	Low temperature

Speed switch button (E):

		0
Strong air flow	Medium air flow	OFF

- Use the concentrator nozzle (A) to direct airflow for smoother hair.
- Use the diffuser attachment (G) to add body and volume to your hair or enhance natural curls and waves. Keep a safe distance or gently hover the diffuser over your hair as it may become hot during use.
- To finish styling your hair, press the cool air shot button (C). Once the button is released, the appliance returns to a hot air flow at the selected level.
- To switch the hair dryer off, move the speed switch button to “0” position.

IMPORTANT: If overheating occurs, an automatic safety device will shut down the appliance to prevent damage or personal injury. Unplug from the mains supply and allow the appliance to cool for 10 to 15 minutes before using it again. Make sure the air vents are clean.

- Allow the unit to cool completely before storing.

Care and Maintenance

- Always turn off and unplug the hair dryer from the mains supply and allow to cool before cleaning.
- Use only a soft slightly damp cloth followed by a dry cloth, to gently wipe the outer surface of the hair dryer.
- Regularly clean blocked and clogged air inlet grille. Gently twist the air inlet cover (B) anticlockwise to remove it. Clean off any lint or dust using a soft brush. To reattach, align the cover and turn it clockwise until secure.

Storage

- Always unplug the hair dryer immediately after use and allow to cool before storing.
- Store the hair dryer in a safe, dry location, away from direct sunlight and out of reach of children.
- Do not wrap the power cord around the hair dryer.

Technical Specifications

Everlux Hair Dryer	
Model Number	BY-517 DC motor
Power Rating	220-240V~ 50-60Hz 2000W
Dimensions	183*88.2*262.6MM
Weight	579g



Recycling electrical products



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

Should you require any help call
Argos Customer Helpline: 0345 604 0105
argos.co.uk/help/contact-us

Produced in China for
Argos Limited, London, EC1M 6HA, UK.
Argos (N.I.) Ltd, Forestside Shopping Centre,
Upper Galwally, Belfast, BT8 6FX, UK.

Guarantee

This product is selected for DOMESTIC USE ONLY and not for business use.
This product is guaranteed against manufacturing defects for a period of 24 months. This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use. In the event of a problem with the product within the guarantee period please return it to your nearest store. If the item is shown to have an inherent defect present at the time of sale, the store will provide you with a replacement. Your statutory rights remain unaffected.

Issue, 08/2025