



VAX SpotWash

Home Series

Spot Cleaner



Safety information

This machine is intended for household use only, not for commercial or industrial use.
Please keep instructions for future use and use only as instructed in this guide.

Basic Safety Precautions

- This machine is intended for indoor cleaning and vehicle interiors during dry weather conditions.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Before using the machine test your carpets/rugs/upholstery for colourfastness and pile distortion.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only VAX recommended tools and solution should be used with this machine. Using other solutions may invalidate the guarantee.

Don'ts

- Don't leave the machine plugged in when unattended.
- Don't use the machine if it has been dropped, damaged or left outdoors.
- Don't use the machine if the power cord or plug is damaged. If the power cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
- Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine outside during wet weather conditions.
- Don't handle the plug or use the machine with wet hands.
- Don't pull or carry the machine by the power cord.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord.
- Don't unplug the machine by pulling on the power cord.
- Don't carry the machine while it's switched on.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine. Remove blockages only as instructed in this guide.
- Don't use the machine with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- Don't over saturate your flooring/surface. Always finish on a dry stroke.
- Don't use on a surface that is damaged, uneven or incorrectly fitted.

Do's

- Refer to the floor/surface manufacturer's care recommendations before use. Test your flooring/surface - run the machine over a small hidden area, if no damage or discolouration occurs continue cleaning. Not suitable for use on water sensitive flooring/surfaces.
- The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee. Always use the machine with all water tanks and filters in place.
- Always keep the area you're cleaning well lit.
- Only replace the fuse in the plug with a British standard 13amp fuse.
- Always unplug the machine before carrying out any maintenance and before connecting or disconnecting the accessories.
- Take extra care when cleaning on the stairs.
- Turn off all controls on the machine before disconnecting or connecting the power cord. After use always wrap the power cord around the cord clips provided.
- Always protect the power cable from heated surfaces and near open flames.
- Use only CE/UKCA approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Keep all openings clear and free from debris as this may affect the airflow/suction/water pick up.
- Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side.
- Keep the machine away from direct sunlight and store in a cool, dry area. Before storing the machine please ensure all water/solutions tanks are empty and filters are thoroughly clean and dry.

Welcome to the Vax family!

You're now the proud owner of a VAX SpotWash Home. Here you'll find everything you need to know about your machine and, most importantly, instructions on how to get started so that you can get cleaning!

Contents

Safety information	2 - 3
Introduction	4
Machine overview	5
Quick start	6
Getting started	7
Using your machine	8 - 9
Cleaning and maintenance	10 - 12
Troubleshooting	13
Guarantee and technical	14

Register your product to activate your free 2 year guarantee



Bought your product directly from vax.co.uk?

Relax - your guarantee will be automatically emailed to you. Contact us if you haven't received this and we'll be happy to help.

Bought elsewhere? Registering is quick and easy. Scan this QR code or visit vax.co.uk/registration

Please see the back cover of this User Guide for more detail.

Machine overview



- 1 Carry handle
- 2 On/Off button (located under handle)
- 3 Clean water/solution tank
- 4 Dirty water tank
- 5 Wash tool
- 6 Wash tool release button
- 7 Clean water/solution tank handle
- 8 Quick release cord hooks
- 9 Hose storage clip
- 10 Hose
- 11 Crevice tool storage
- 12 Extra wide 2-in-1 tool
- 13 Messy clean up tool
- 14 Crevice tool
- 15 SpinScrub hand tool*
- 16 250ml Pet Stain & Odour Remover*
- 17 250ml SpotWash Spot Cleaning Solution



Weight 4.47kg. Dirty water tank capacity 0.72L.
Clean water/solution tank capacity 1.1L. Cord length 5.5m.

*Included with selected models only.
Subject to technical change without notice.
Images are illustrative only.



SCAN HERE TO GET TO KNOW YOUR MACHINE
visit www.vax.co.uk
for help and support with setting up your machine

MODEL NO. CDSW-	MPXP	MPXA	MPDP	MPDC
Extra wide 2-in-1 tool*	✓	✓		
Messy clean up tool	✓	✓	✓	✓
Crevice tool*	✓	✓	✓	✓
SpinScrub hand tool*		✓	✓	
Car Cleaning Kit*				✓

Quick start

1

Assembly

Slide the wash tool onto the hose end until it clicks into place.



2

Filling the tank

Fill the clean water/solution tank with warm water (max 40°C) and solution.



3

Operation

Press the On/Off button to switch the machine on.



4

Using the hand tool

Press the trigger on the wash tool to release water and solution.

Use the brush to agitate any stubborn stains.



SCAN HERE TO WATCH OUR HOW-TO VIDEOS
or visit support.vax.co.uk for help and support
with using your machine

PLEASE READ THE SAFETY PRECAUTIONS ON PAGES 2 & 3 BEFORE USE.

IMPORTANT: Test all carpets/rugs/upholstery/hard floors before use. Before using the machine to clean dried on stains and dirt, the surface should be vacuumed thoroughly.

Test for colourfastness - Wet a white absorbent cloth with the solution. In a small hidden area of the surfaces to be cleaned, gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. Check all surfaces to be cleaned and if the surface has more than one colour, check all colours.


Test the spot cleaner on a small hidden area - If no damage or pile distortion occurs continue cleaning. When using the spot washer, basic safety precautions should always be observed and don't over saturate your carpets/rugs/upholstery/hard floors. Not suitable for use on water sensitive flooring/surfaces. Only use with VAX SpotWash Spot Cleaning Solution or VAX SpotWash Antibacterial Spot Cleaning Solution. Using other solutions may cause excess foaming and will invalidate your guarantee. The clean water/solution tank should only be filled with warm water (max 40°C). Filling the clean water/solution tank with hot/boiling water will damage your spot washer and invalidate the guarantee.

Assembly



Wrap the cord around the quick release cord hooks.

Filling the clean water/solution tank

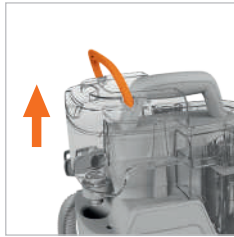


Lift the clean water/solution tank handle and pull to remove the tank.




Unscrew the cap off the base of the clean water/solution tank.



Fill the tank with warm water (max 40°C) and solution to the desired clean level, indicated by the lines on the tank.

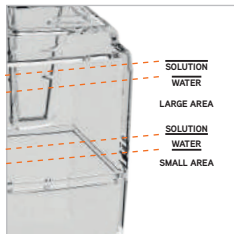

Screw the cap back tightly onto the clean water/solution tank.

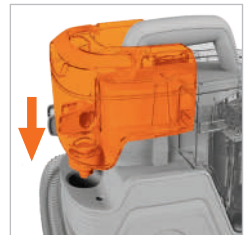

Refit the clean water/solution tank onto the machine so it clicks into place.

Using your machine

Operation



Turn the quick release hooks and remove the cord from the clips.




Plug the machine into the mains and switch on.



Pull to remove the wash tool and hose from the storage clip.

Using the tools

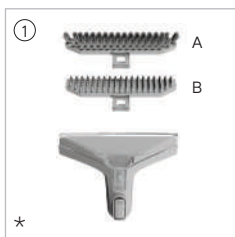

Select a tool/attachment. (*Included with selected models only).

1. Extra wide 2-in-1 wash tool* for cleaning carpets, rugs, sofas and upholstery

A) multi purpose brush for cleaning carpets, rugs, sofas and upholstery.

B) hard floor scrub attachment for cleaning tiles and sealed wooden floors.

2. Messy clean up tool

A smaller, spare cleaning tool to keep messy clean ups separate from every day cleaning.

3. Crevice tool*

For edge and tight spot/crevice cleaning.

4. SpinScrub hand tool*

For targeting stains and stubborn marks.



Press the tool lock button and slide the tool onto the end of the hose, over the nib. Release the button when in place.



To fit an attachment to the wash tool, fit the front of the selected attachment into the front of the wash tool and push the clip down to click into place.



Press the on/off button to switch the machine on.

Using the Extra wide 2-in-1 wash tool / Messy clean up tool




For spills, always pick up the excess liquid before using water/solution. Tilt the tool forward onto the spill and pull back.



Press the trigger on the wash tool to release water and solution.



Use the brush to agitate any stubborn stains, scrubbing back and forth.

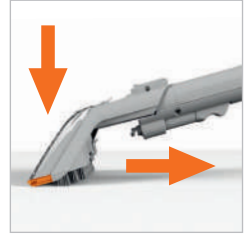

Tilt the nozzle forward so the nozzle is in contact with the surface. Pull back to recover the water and solution.



IMPORTANT: Over or under tilting the hand tool may result in poor water pick up.


Using the crevice tool



Press the trigger on the crevice tool to release water and solution.



Use the brush to agitate any stubborn stains, scrubbing back and forth.

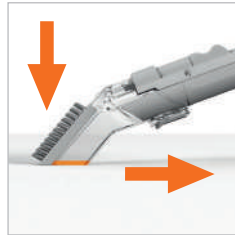

Turn the tool over and tilt the nozzle forwards so the nozzle is in contact with the surface. Pull back to recover the water and solution.

Using the SpinScrub hand tool



Slide the tool over the tab at the end of the hose until it clicks into place.



Press the trigger on the spinscrub hand tool to release water and solution.



Use the brush in a forwards/backwards motion to agitate any stubborn stains.



Tilt the nozzle forward so the nozzle is in contact with the surface. Pull back to recover the water and solution.

Cleaning and maintenance

Emptying and cleaning the dirty water tank

IMPORTANT: Unplug and switch off the machine before performing maintenance or troubleshooting checks.

The dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the machine. You will be able to hear if this has happened as the motor noise on the machine will increase. Once the float is activated, empty the dirty water tank if full.

If the dirty water tank is not full then turn off your machine at the power switch and wait for the float to settle.

Empty and rinse out the clean water/solution tank and dirty water tank and leave to air dry before refitting to store.



Press the dirty water tank release button. Pull to release the tank and lift by the carry handle to remove.



Pull and lift the lid to remove from the dirty water tank.



Empty the dirty water into the sink or toilet.



Rinse the dirty water tank and lid under water (max 40°C) to remove dirt/debris.



To refit the lid align the lid to the tank and firmly push into place.



Refit the dirty water tank onto the machine so it clicks into place.



**SCAN HERE TO GET TO
KNOW YOUR MACHINE**
visit www.vax.co.uk
for help and support with
setting up your machine

Cleaning the hose

IMPORTANT: Clean the hose after each use to remove any debris or water left in the hose.



Empty the dirty water into the sink or toilet.



Press the tool lock button and pull to remove the tool from the hose.



Press the button on the top of the SpinScrub tool and pull to remove from the hose.



Fill a bowl with 500ml of warm water (no solution).



Plug the machine into the mains and switch on.



Press the on/off button to switch the machine on.



Submerge the end of the hose into the bowl of water. Do not squeeze the trigger.



Once the bowl is empty, let the machine run for 10 seconds to remove residual water and dirt left in the hose. Repeat the process again if needed.



Press the on/off button to switch the machine off. Unplug the machine from the mains.



Press the dirty water tank release button. Pull to release the tank and lift by the carry handle to remove.



Pull and Lift the lid to remove from the dirty water tank.



Empty the dirty water into the sink or toilet.

Cleaning and maintenance

Removing and cleaning the wash tool and attachments



Press the tool lock button and pull to remove the tool from the hose.



Press the button on the top of the SpinScrub tool and pull to remove from the hose.



Pull and lift the clip to remove the attachment from the wash tool.



To remove the nozzle on the wash tool, push and lift the clear plastic clip up over the button on the end of the hose.



Rinse the tools, attachments and the nozzle under warm water (max 40°C) to remove dirt/debris.



To refit the nozzle, slide the nozzle into the wash tool until it clicks into place.



To refit, fit the front of the attachment into the front of the wash tool and push the clip down to click into place.

Cleaning the filter grill



Press the dirty water tank release button. Pull and lift to remove the tank.



Remove any dirt and debris from the filter grill located underneath the dirty water tank.



SCAN HERE TO GET TO
KNOW YOUR MACHINE
visit www.vax.co.uk
for help and support with
setting up your machine

WARNING: Always switch off and unplug the machine before performing any checks or maintenance.

There is an accessory missing

- Check the contents on the box.

Why does the machine have no power?

- The plug may not be fully pushed into the electrical socket.
- The fuse in the plug may need replacing. Always replace with a British 13amp fuse.
- The motor thermostat may have tripped. If this has happened, unplug the machine. Check the machine for blockages and clean the filter grill.

Why won't the water/solution dispense?

- Squeeze the trigger on the hose to release solution and water mix. **See Using the tools page 9.**
- Make sure the clean water/solution tank is fitted securely. **See Filling the clean water/solution tank page 7.**
- The clean water/solution tank is empty. Refill the tank. **See Filling the clean water/solution tank page 7.**
- The clean water/solution tank valve may be stuck, hold the tank over the sink and press the valve underneath to release.
- Air is trapped in the pump and hose. Switch on the machine, prime the pump by lowering the hose down to the floor and hold the trigger for up to 1 minute.

Why won't the machine pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before restarting your machine.
- The tool nozzle may not be in contact with the surface, tilt the nozzle forwards. **See Using the tools page 9.**
- Check the wash tool for blockages and clear. **See Removing and cleaning the wash tool and attachments page 12.**
- The dirty water tank may not be assembled correctly or the lid may not be fitted securely. **See Emptying and cleaning the dirty water tank page 10.**
- Check the wash tool nozzle is correctly fitted. **See Using the tools page 8.**
- Check the filter grill located under the dirty water tank for dirt and debris. **See Cleaning the filter grill page 12.**

Guarantee and technical

Guarantee

If a VAX machine is used in the way it is intended and it breaks down within the guarantee period, it's our responsibility to repair or replace it.

Here's what isn't covered:

- Functional parts, tools and accessories after 12 months that may suffer premature failure due to every day wear and tear.
- Consumables after 3 months such as filters, brushbars, fuses etc.
- Accidental damage.
- Cosmetic damage that does not affect the functioning of the product.
- Damage as a result of use not in accordance with the user guide.
- Damage caused by not carrying out regular maintenance.
- Damage to the cable.
- Blockages; please refer to the user guide.
- Poor product performance caused by:
 - Negligent use, misuse or careless operation of the machine.
 - Failure to clean or maintain the product in accordance with the user guide.
 - Use of the machine which is not in accordance with the user guide.
 - Use of a VAX product for anything other than normal domestic household purposes in the country in which it was purchased.
 - Use of parts, accessories and consumables, which are not genuine VAX components.
 - Faulty installation or repairs - unless carried out by a qualified electrician or engineer.

Making a claim?

If you wish to make a claim under your standard 1 year guarantee or extended guarantee, please contact us by visiting www.vax.co.uk/contact.

Technical

Statement of Compliance: Manufacturer/EU importer: Vax Limited, hereby on our own responsibility, declare that the **VAX SpotWash Home** series is manufactured in compliance with the following Legislation:

Safety: 2014/35/EU Low Voltage Directives/Electrical Equipment (Safety) Regulations 2016. EMC: 2014/30/EU Electromagnetic Compatibility Directive/ Electromagnetic Compatibility Regulations 2016.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

VAX is a trade mark of Techtronic Cordless GP.

© 2025 Techtronic Cordless GP. All rights reserved.

Vax Ltd, Artillery House, Heritage Way, Droitwich, WR9 8YB, UK.



PROTECT YOUR PRODUCT FOR LONGER, REGISTER TO ACTIVATE YOUR FREE 2 YEAR GUARANTEE*

Bought your product direct from vax.co.uk?

Sit back and relax - your free 2 year guarantee was automatically applied at the checkout.

Check your email for details of your guarantee*.
Please contact us if you haven't received this and we'll be happy to help.

Bought elsewhere?

All VAX products have a 1 year standard guarantee.
Register now to claim your additional 1 year guarantee (2 years in total).
Registering is quick and easy, just follow the steps below:

1 What you'll need

Grab your machine and proof of purchase and keep them handy.

2 Register

To get started scan the QR code, or visit vax.co.uk/registration



3 Congratulations!

You've now secured your free 2 year guarantee! (Keep an eye out for your confirmation email - you'll need to keep this safe).



Your guarantee is with Vax Limited. Please note that your statutory rights in relation to any VAX products will remain unaffected by these guarantees.

*All VAX products bought in the UK come with a standard 1 year guarantee from the date of purchase. Most VAX products are eligible for an "Additional Guarantee" by registering with Vax. Registration within 3 months from date of purchase is required to claim the additional guarantee and is subject to our terms and conditions (www.vax.co.uk/registration/guarantee-information)

If you need help registering, please visit www.vax.co.uk/contact.

CDSW-MPXP_MPXA_MPDP_MPDC SpotWash Home Series UG

REVISIONS

22.04.25

- “Spot Washer” changed to “Spot **Cleaner**”
- “Spot Washer Solution” changed to “**SpotWash** Cleaning Solution”
- Bottle changed to Pouch image
- BACK PAGE - updated to V1.5

30.04.25

- FRONT PAGE - Sprint sku codes added CDSW-MPDP and CDSW-MPDC
- Page 5 - Tools table added. *Included with selected models only.
No space for Car Kit images but the separate Kit UG for this is included in MPDC box.
- Page 8 - Asterisks and sentence added as per above.

16.05.25

- Page 5 - Ticks added to table:
MPXA - Messy + Crevice
MPXP - Crevice + SpinScrub

20.05.25

- Page 14 - copyright date changed to 2025