

BUSH

Instruction manual

24W RMS 2.0 Soundbar

B-3363A

SKU:136848861



You'll soon be enjoying your new Bush 24W RMS 2.0 soundbar.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Bush 24W RMS 2.0 soundbar. Should you require any guidance; a solution can often be found online at: <http://www.bush-support.com>

If you still require further assistance, call one of our experts on 0345 604 0105

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Contents

1 Safety information

Power source
Ventilation, heat and moisture
Battery safety
Care and maintenance

2 Getting to know your soundbar

Accessories
Soundbar
Indicators
Remote control
Connecting the soundbar

3 Using your soundbar

Using the soundbar via a wired connection
Using the soundbar with a Bluetooth device

 
4 Other information

Wall mounting
Technical specification

5 Product support

Troubleshooting
Help and assistance
Recycling electrical products
Declaration
Guarantee

Safety information **1**

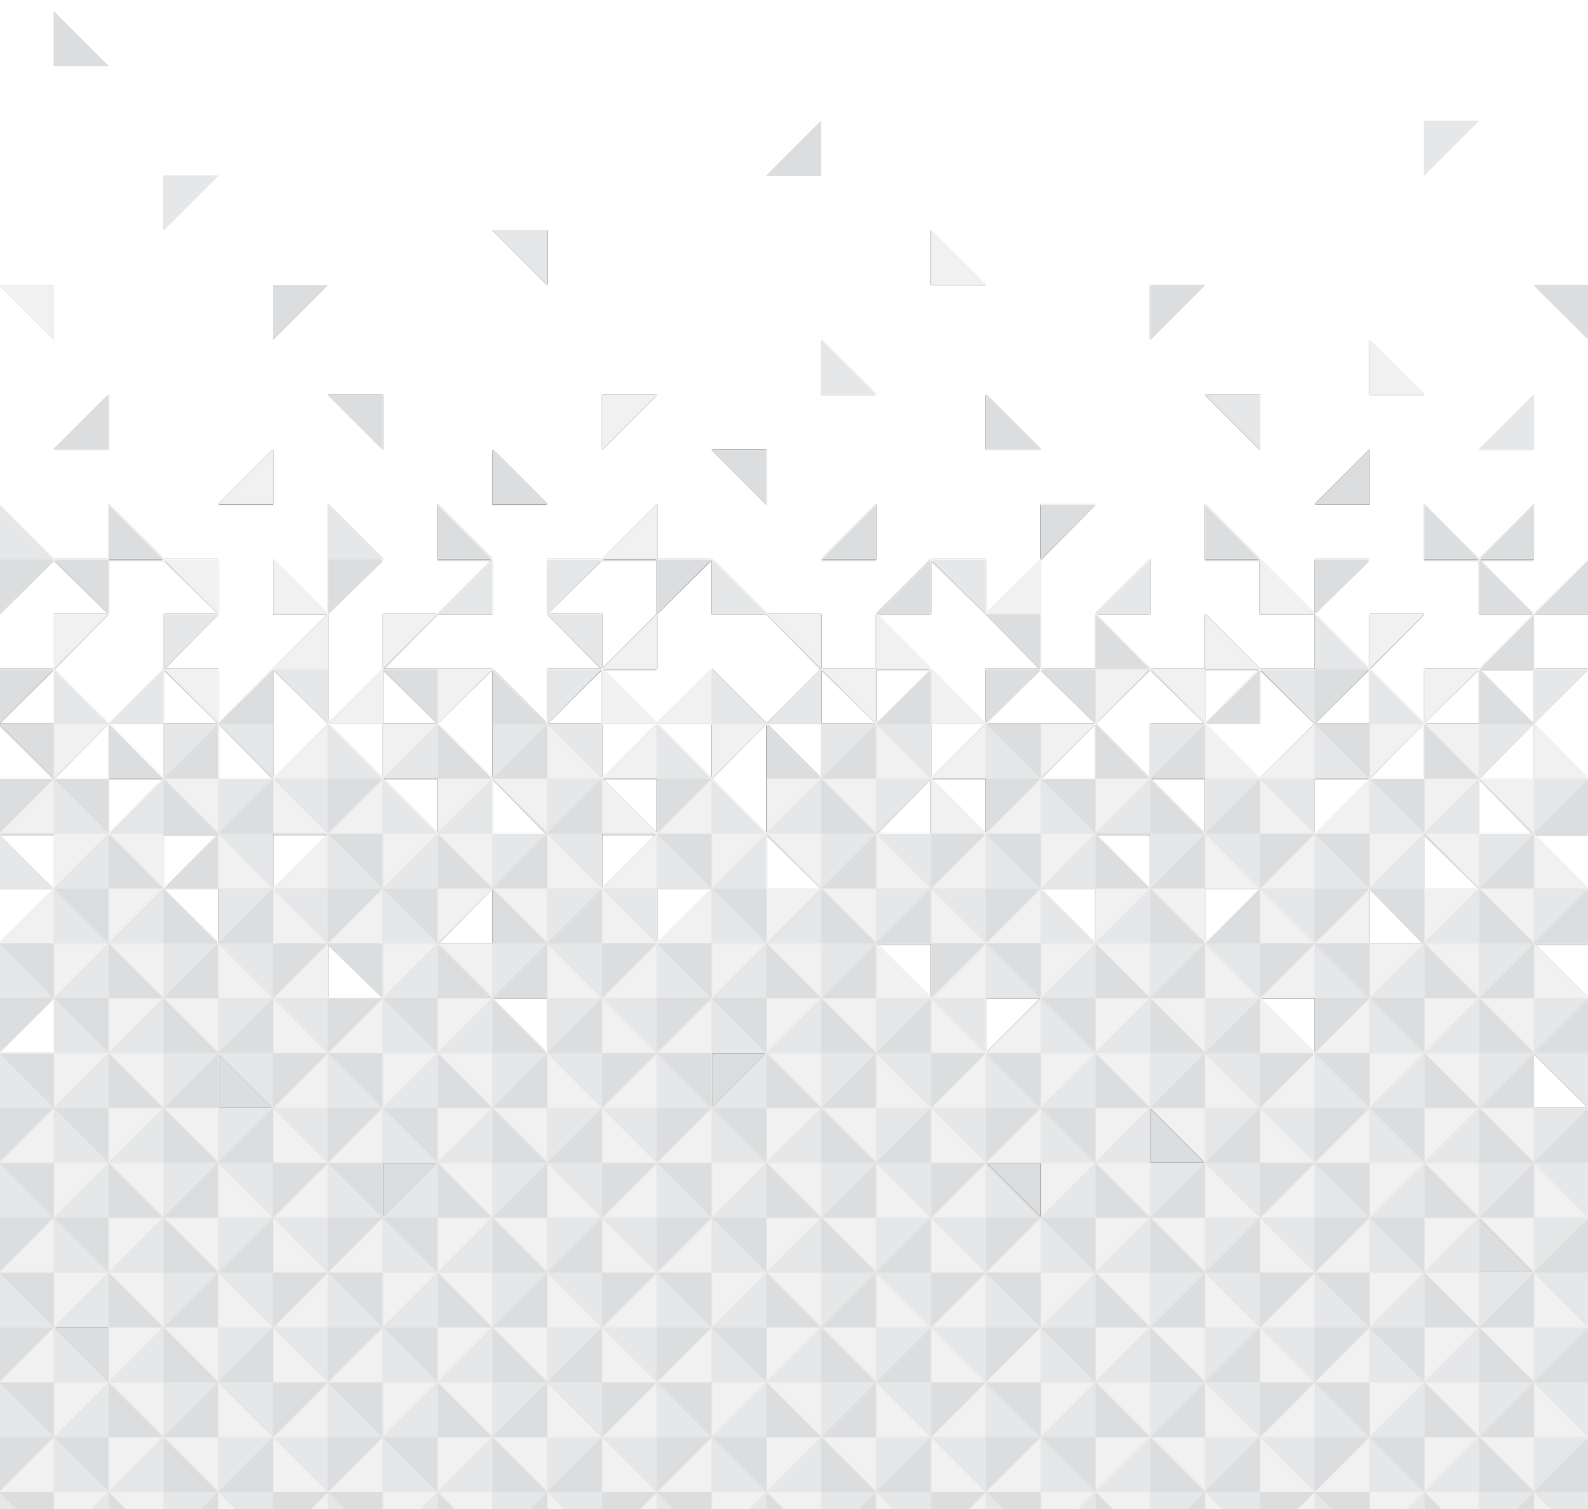



Safety information


Important - Please read these instructions fully before installing or operating

Power source

- For household and indoor use only
- Only use the power supply that came with the appliance. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Fully unwind the cable before plugging in and ensure the cable is positioned away from areas where it is likely to get damaged or cause a trip hazard.
- The output cord of the mains adaptor cannot be replaced. In the event of damage to the cable, jack plug or adaptor, the entire adaptor unit should be replaced.
- Connections must only be made via the mains adaptor supplied, never connect the appliance directly to the 240v mains supply.
- Never use the adaptor supplied with any other appliance.
- Remove mains adaptor from supply if appliance is unused for a long period of time, and during thunderstorms.
- Do not pull on the cable to disconnect from mains supply.
- Switch off and unplug when not in use and before cleaning or servicing the appliance. Servicing of this appliance must only be carried out by a qualified electrician. This product does not contain any user serviceable parts. Unauthorised handling of the product may damage it and will void your warranty.
- Always ensure the mains adaptor plug is readily unpluggable - do not use with 'lockable' sockets or permanently wire to mains.

Ventilation, heat and moisture

- Keep appliance, cable, mains adaptor plug dry and away from areas where it is likely to get splashed. Do not use this appliance near water or moisture. Avoid using in hot, humid environments.
- Place the appliance on a flat, stable surface with adequate ventilation and away from other sources of heat. Do not install this appliance in a confined space. Minimum distances around the appliance for adequate ventilation is 10cm. Do not cover or restrict ventilation openings. Keep appliance away from direct sunlight.
- Do not place items with naked flames or containers with liquids on near this appliance.
- The mains adaptor will become warm in use; do not cover or place on or near surfaces that could be affected by heat such as table tops and carpets.

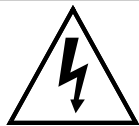

The lightning flash with arrow - head symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation mark within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Safety information

Important - Please read these instructions fully before installing or operating

Battery Safety



WARNING


DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD.

- The remote control supplied with this product contains a coin / button cell battery. Button cells are dangerous - if swallowed they can cause severe internal burns in just 2 hours and can lead to death. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Batteries should be installed by an adult. Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the remote and keep it away from children.
- CAUTION - Danger of explosion if battery is incorrectly fitted/replaced.
- Only use CR2025 lithium batteries in this remote control.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- Do not recharge non-rechargeable batteries.
- Never try to dismantle batteries.
- Do not short circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.
- Dispose of used batteries responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode.

Care and maintenance

Wipe with a soft lint free cloth. If the cabinet is very dirty, unplug from the mains and dampen the cloth with a weak solution of washing up liquid and water and wipe clean. Allow it to dry thoroughly before using. Never clean the appliance with liquids or solvents.

Getting to know your soundbar 2

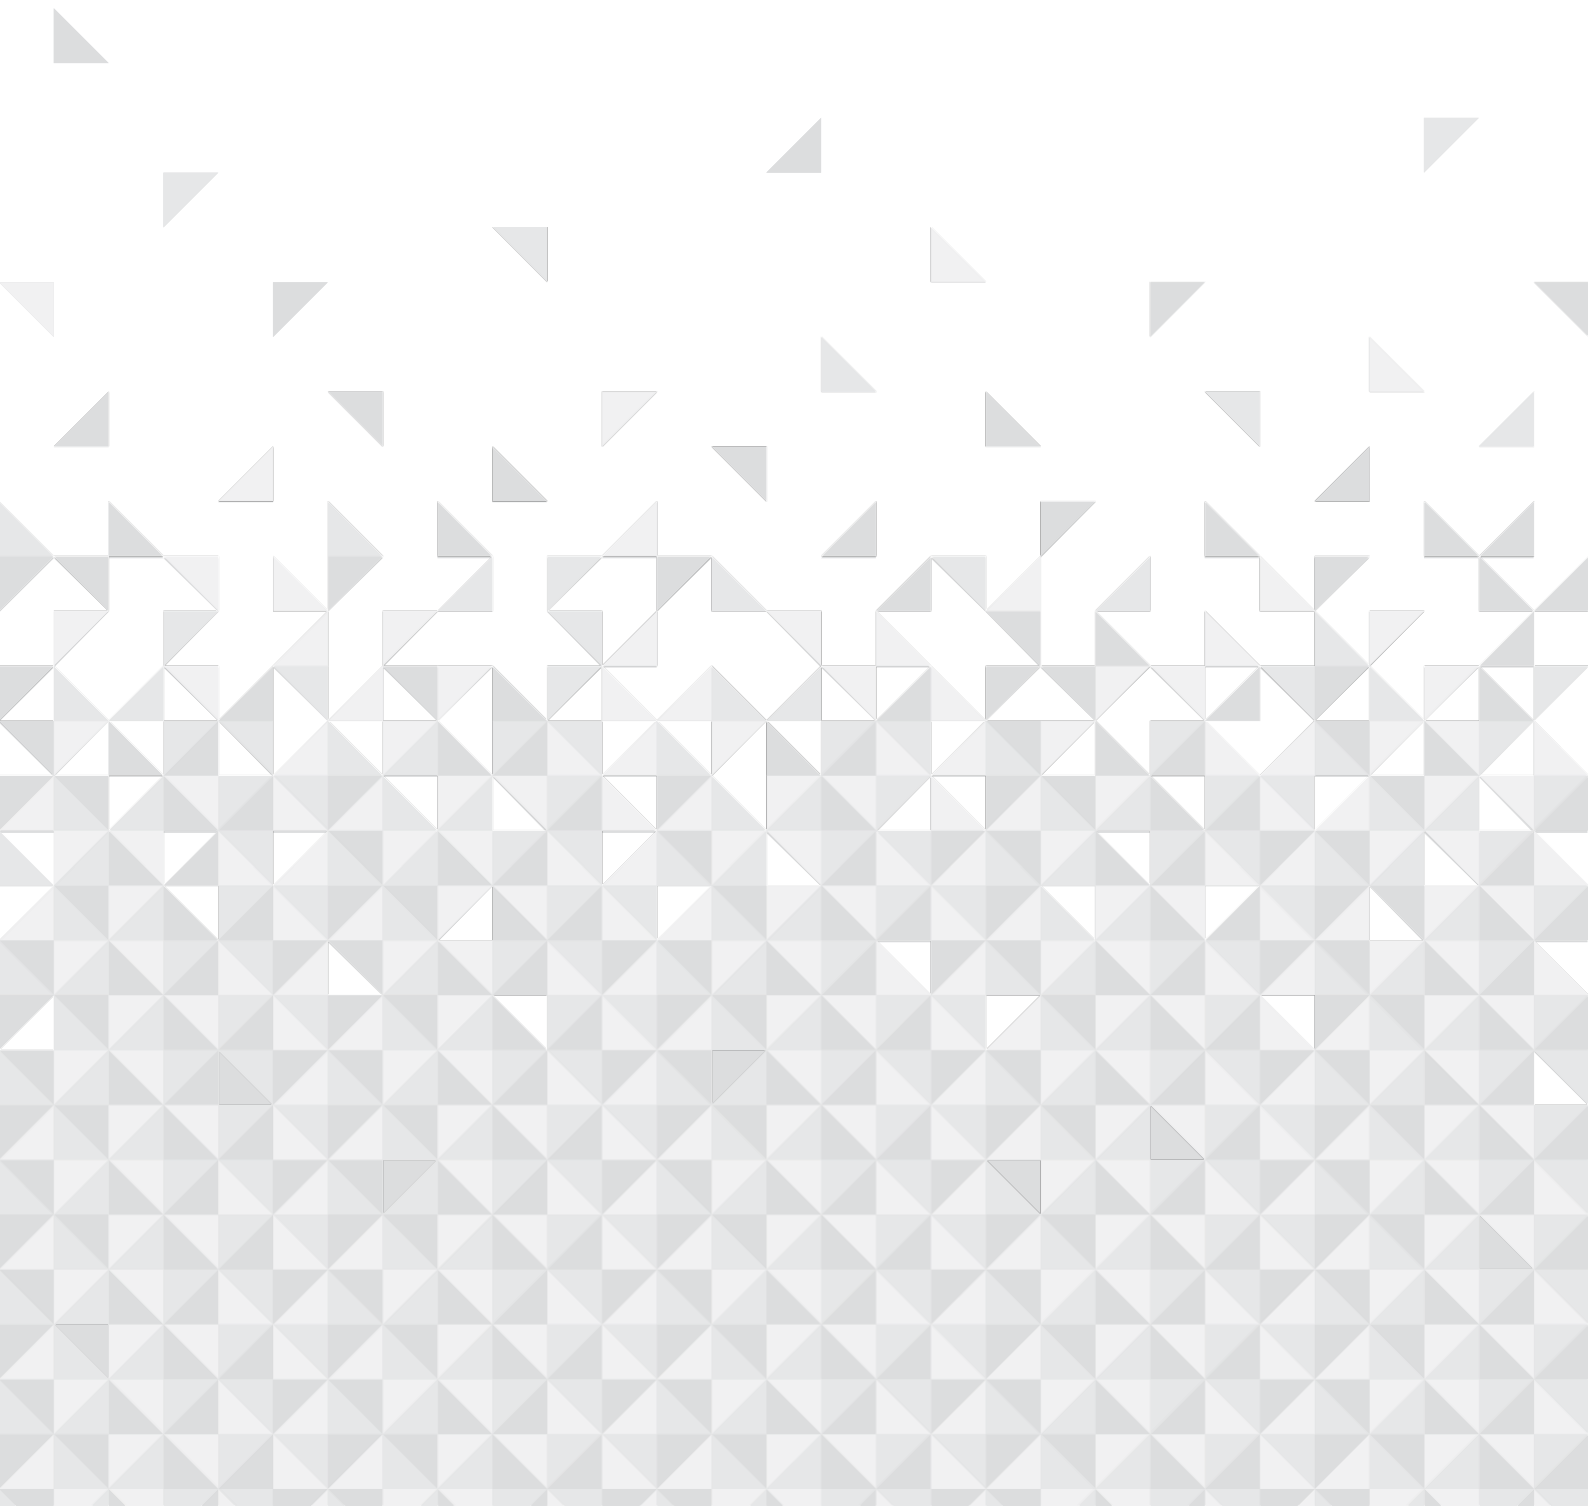

Getting to know your soundbar


You'll be up and running in no time

Ready? Let's begin...


Please read these instructions carefully. They contain important information which will help you get the best from your soundbar and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.


Accessories

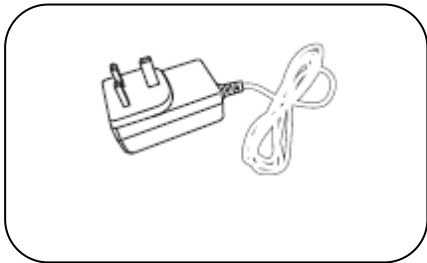


Adaptor

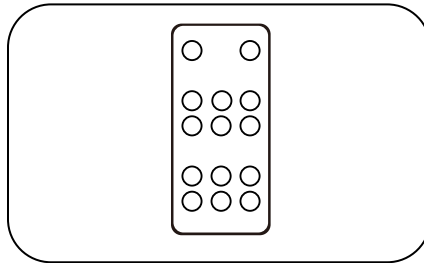


Remote control

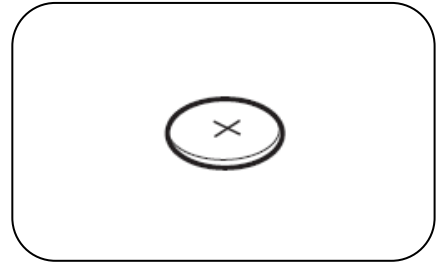 


CR2025 battery

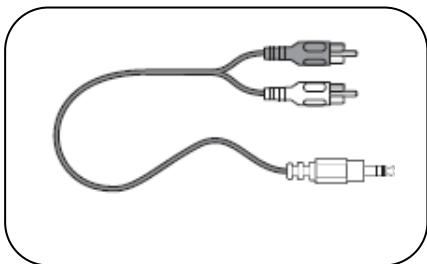 

 
3.5mm jack to twin phono cable

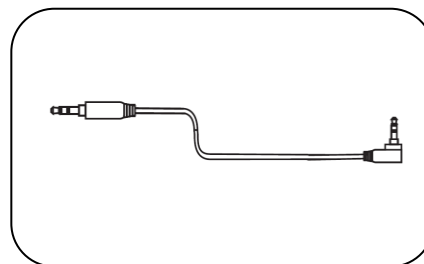

 
3.5mm jack to 3.5mm jack cable

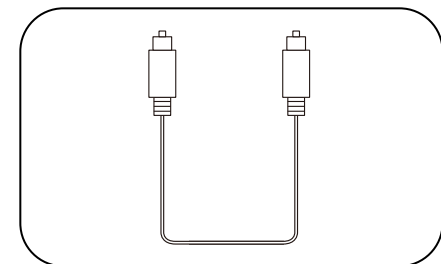

Audio optical cable

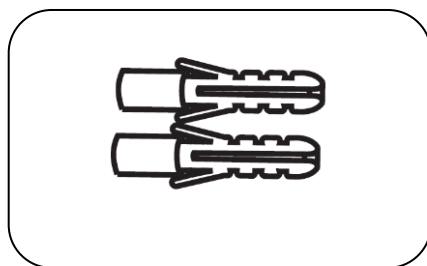 

6mm rawl plugs

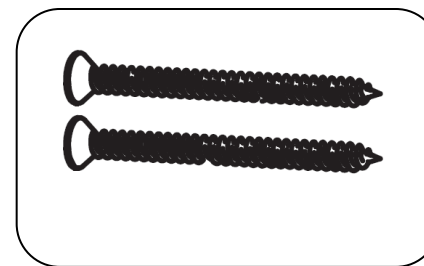 


Wall screws

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions

Getting to know your soundbar

You'll be up and running in no time

 Soundbar

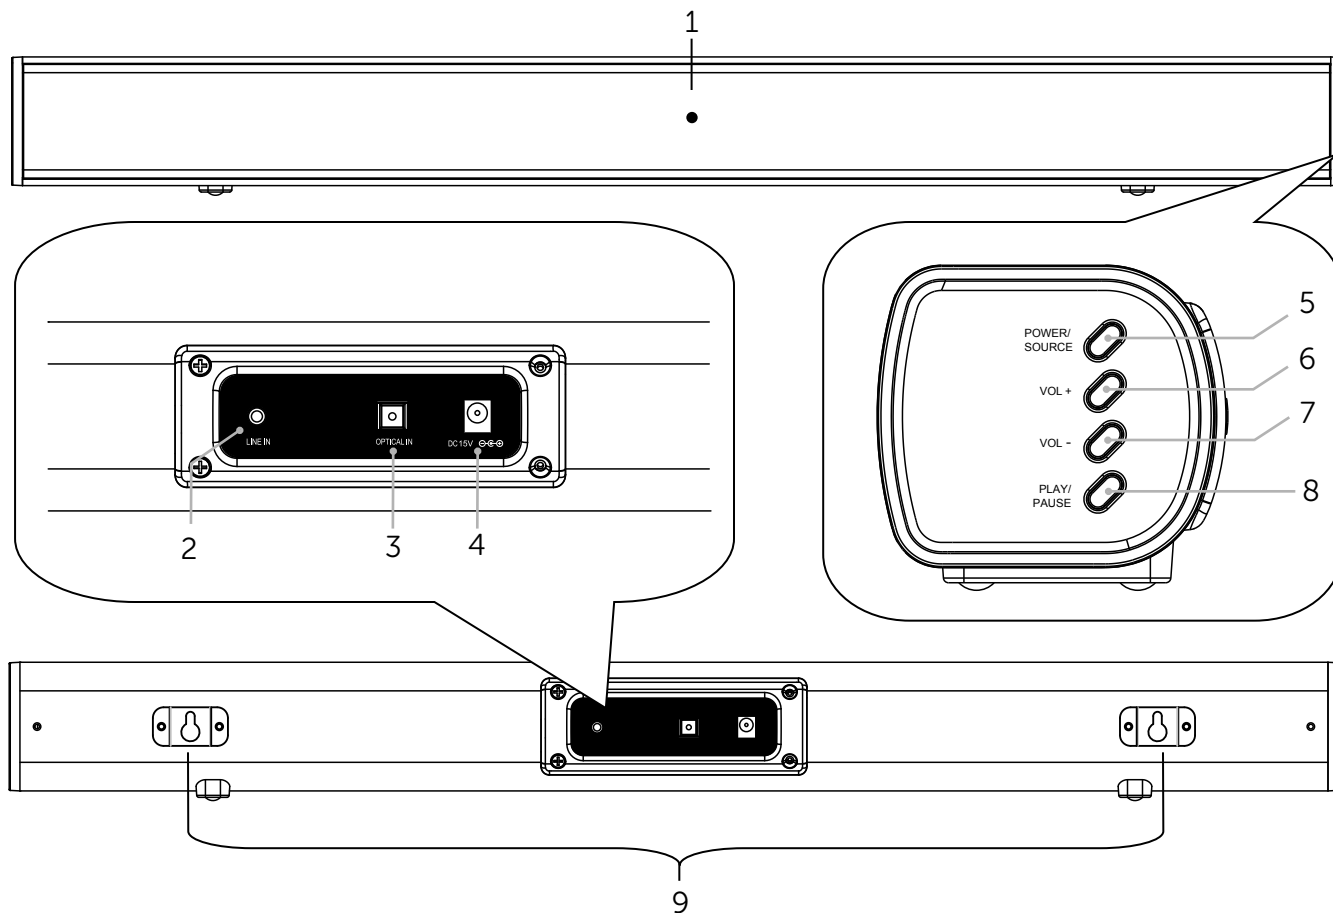

Rear view

- 1. Indicator light
- 2. Line in jack
- 3. Optical in socket
- 4. DC in jack
- 5. POWER/SOURCE
- 6. VOL +
- 7. VOL -
- 8. PLAY/PAUSE
- 9. Keyhole mounts

Indicators

Status	Indicator light
Standby	Red
Line in source	Green
Optical source	Yellow
Bluetooth (unpaired)	Flashing blue
Bluetooth (paired)	Blue (static)

 
Or by calling one of our experts on 0345 6040105

Getting to know your soundbar

You'll be up and running in no time

Remote control

- 10. Power (⏻) button
- 11. Line in mode button
- 12. BT mode Previous (⏮) button
Play / Pause (⏪) button
Next (⏭) button
- 13. EQ mode Standard button
Talk button
Movie button
Music button
- 14. Volume up (+) / down (-) buttons
- 15. Bluetooth mode (📶) button
- 16. Optical mode button
- 17. Mute button

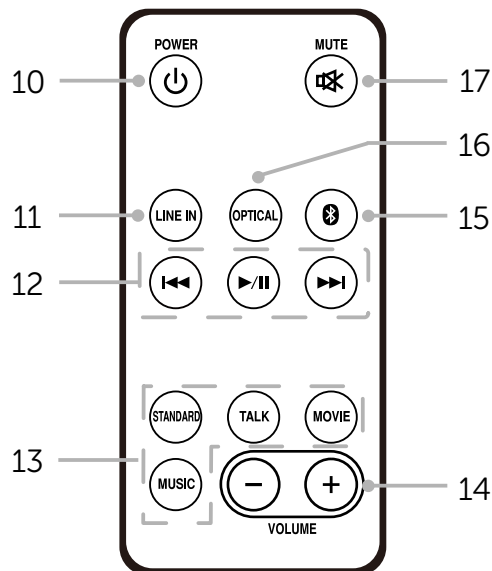

Before using remote for the first time - pull out the clear isolation strip from the battery compartment.

To replace the battery in the remote

1. Push the slider at the end of the remote control in the direction shown by arrow 1 and then slide out the battery holder (fig. 1) Remove the spent battery.
2. Insert 1 x CR2025 lithium battery in accordance with the diagram on the rear of the remote. Take care to observe the correct polarity (+/-). Refit the battery holder.
3. Do not expose the batteries or the installed batteries to excessive heat (e.g. fire, sunshine or position close to radiators etc.).

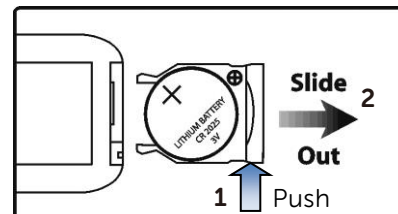


Fig. 1

Getting to know your soundbar

You'll be up and running in no time

Connecting the soundbar

Follow the connecton guide below. DO NOT switch on the mains power until all other connections are made.

TV and audio equipment (e.g. DVD, MP3 players etc.) can be connected and amplified via the soundbar.

1. Place the soundbar in the desired location within easy reach of a mains plug socket. If wall mounting the soundbar, see wall mounting Page 17.
2. If you are connecting to a DVD player, games console, satellite box or TV which has RCA phono AUDIO OUT sockets, then use Line in to twin phono lead (supplied) to connect to the AUDIO OUT sockets of the source and the other end to the 3.5mm Line In sockets of the soundbar. Ensure red plugs are inserted into the red sockets (fig.3).

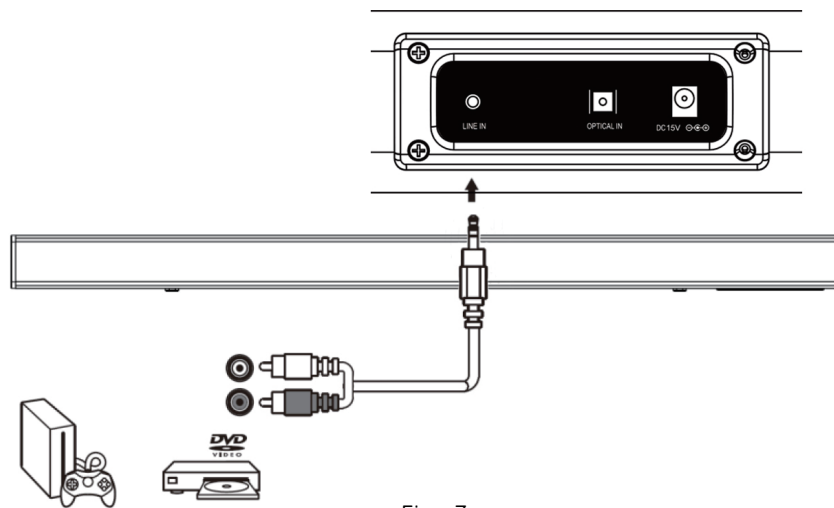


Fig. 3

3. The soundbar can be connected via an OPTICAL connection to a TV, DVD or Blu-ray player using an optical cable (supplied). Ensure any protective stoppers have been removed from the ends of the optical cable and the rear of the optical socket of the soundbar. Connect one end of the cable to the source optical out socket and the other end to the optical socket at the rear of the soundbar. (fig.4)

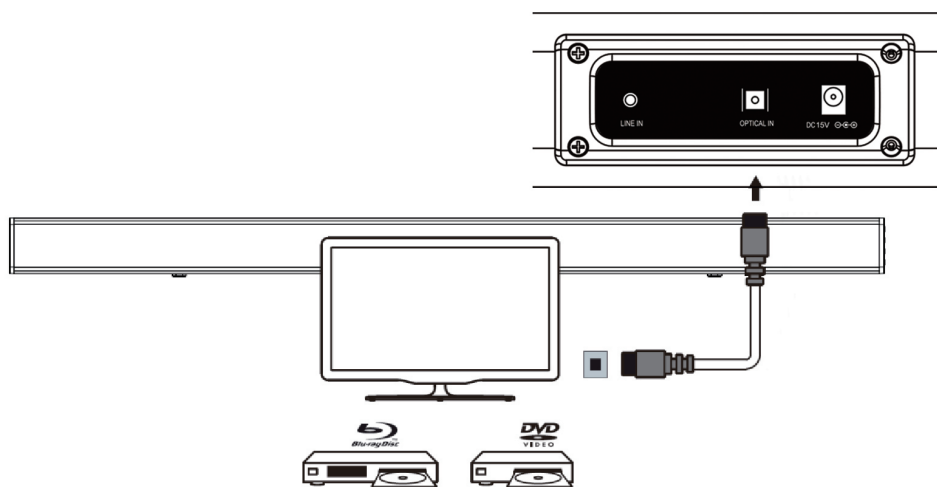


Fig. 4

Or by calling one of our experts on 0345 6040105

Getting to know your soundbar

You'll be up and running in no time

4. The soundbar can be connected to an MP3 player using the 3.5mm jack-to-jack lead supplied (fig. 5). Connect one end of the lead to the headphone 3.5mm audio output socket and the other end to the 3.5mm Line In socket of the soundbar at the rear of the soundbar.


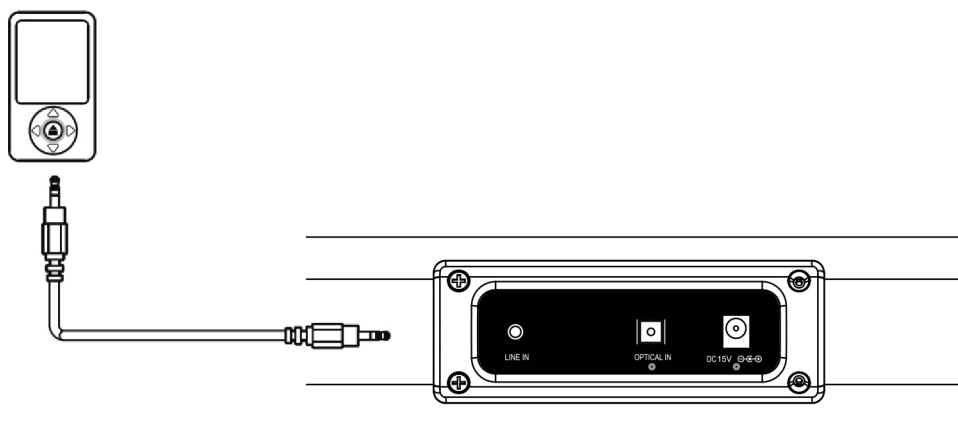


Fig. 5

Using your soundbar 3

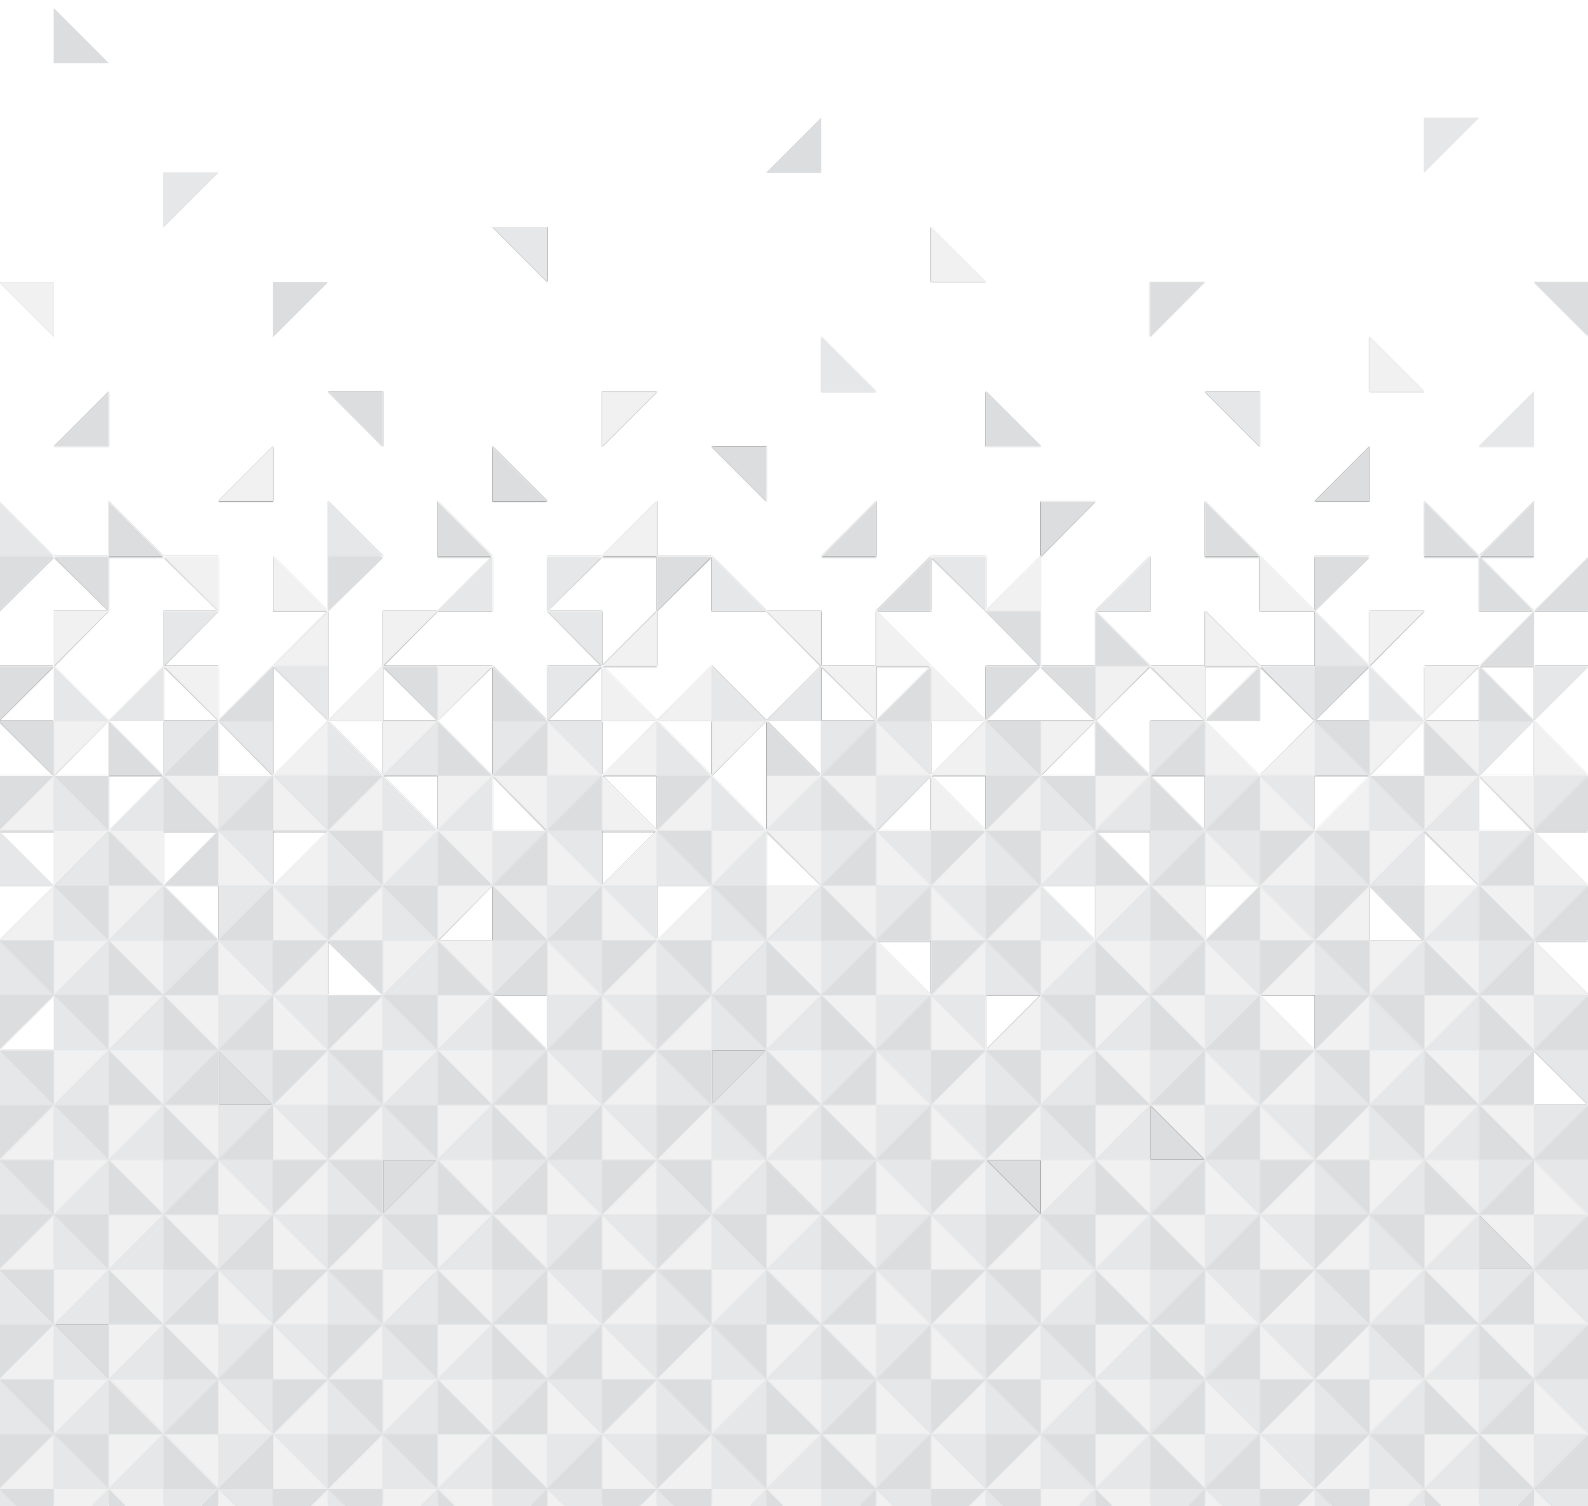

Using your soundbar

Let's get started

Using the soundbar via wired connection

1. Connect the equipment to the soundbar as described above and insert the adaptor cable into the DC jack at the rear of the soundbar. Plug into the mains supply and the red standby indicator light will illuminate to show that the soundbar is in standby mode.
2. Press the remote control POWER (⏻) button to switch on the unit or press and hold POWER / SOURCE button on soundbar.
3. Select the operating mode using one of the remote control mode buttons (LINE IN, OPTICAL) until the source indicator corresponding to the sockets being used is illuminated. Repeated pressing of the POWER / SOURCE button on the soundbar can also be used. The unit also gives an audio announcement of the selected mode.
4. Press play on the connected equipment.
5. Adjust the volume to the desired level by pressing the VOLUME (+ or -) buttons until the desired listening volume is achieved. The sound can be silenced by pressing the MUTE button, the sound will be silenced and the indicator will flash on unit to indicate that the sound has been muted. Press the MUTE button a second time to restore the sound.

Note: There are 32 volume levels. The indicator will flash at each press of VOLUME (+ or -) until minimum or maximum volume level has been reached and indicator remains illuminated.

6. If desired, use one of the sound equalizing buttons (MUSIC, MOVIE, TALK, STANDARD) to optimize the tone of the sound being listened to. See guide below. The indicator will flash once when the button is pressed to show that the function has been selected.
MOVIE – Bass and Treble boosted, for more dramatic sounds.
MUSIC – Level frequency response.
TALK – Midrange boosted, bass and treble cut to make speech programmes clearer.
STANDARD - Sound in standard mode.
7. Use the controls as usual on the connected equipment.
8. To place the soundbar into standby mode press the POWER (⏻) button on remote control or press and hold POWER / SOURCE button on unit and the red standby indicator will illuminate.
9. To switch off the soundbar, switch off at the mains or unplug from the supply.

Note : This product is designed to go into STANDBY mode automatically after 20 minutes (approximately) if it does not receive an audio signal. To switch soundbar back on press POWER (⏻) button on remote control or press and hold POWER / SOURCE button on unit.

Note : In Optical mode mark sure the audio settings are set to PCM or Optical Audio on your connected device and are turned On.

Using your soundbar

Let's get started

Using the soundbar with a Bluetooth device

Pairing a Bluetooth device

Before you can use the soundbar with your phone or other Bluetooth capable device you will need to pair the device to the soundbar.

Pairing a Bluetooth Device for the First Time

1. Press and hold 2 seconds the POWER/SOURCE button on the unit or the POWER button on the remote control to switch on the unit.
2. Select and press the Bluetooth (📶) SOURCE button on the remote control to enter Bluetooth mode or press the POWER/SOURCE button on the unit repeatedly to enter Bluetooth mode indicated by the blue indicator light that will flash whilst the unit searches for Bluetooth devices.
3. On the device that you would like to connect to your soundbar via Bluetooth (e.g. TV/phone/tablet/computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'. When connecting a device via Bluetooth, remain within 3 feet of the soundbar.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

4. When found on your device your soundbar will be displayed as 'Bush B-3363A'. Select this name on your device to begin pairing.
5. When successfully paired and connected, an audio announcement will issue from the unit and the indicator will display a solid blue light. After initial pairing, the unit will stay paired unless unpaired manually by the user or until it is erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Controlling a paired device

Once connected you can either use the controls on the audio device to begin playback, skip tracks etc. Or you can use the control buttons on the remote.


1. The ▶|| button on the remote control when pressed will begin playback of the selected track on the audio device. Press again to pause playback.
2. To skip to the next track press the ▶▶ button on the remote.
3. To skip to the previous track press the ◀◀ button on the remote.
4. Any further operations must be done from the audio device.

The volume output is effected by the volume level on the audio source EG: Phone or laptop, so make sure that is set to about 70-80% (not too loud to avoid distortion).

Bluetooth notes

- The operation range of Bluetooth is approximately 10 metres (30 Feet). Any obstacles in the path between devices may reduce this range.
- Only one Bluetooth device can be paired at a time.
- Not all Bluetooth devices are compatible.

Other information 4

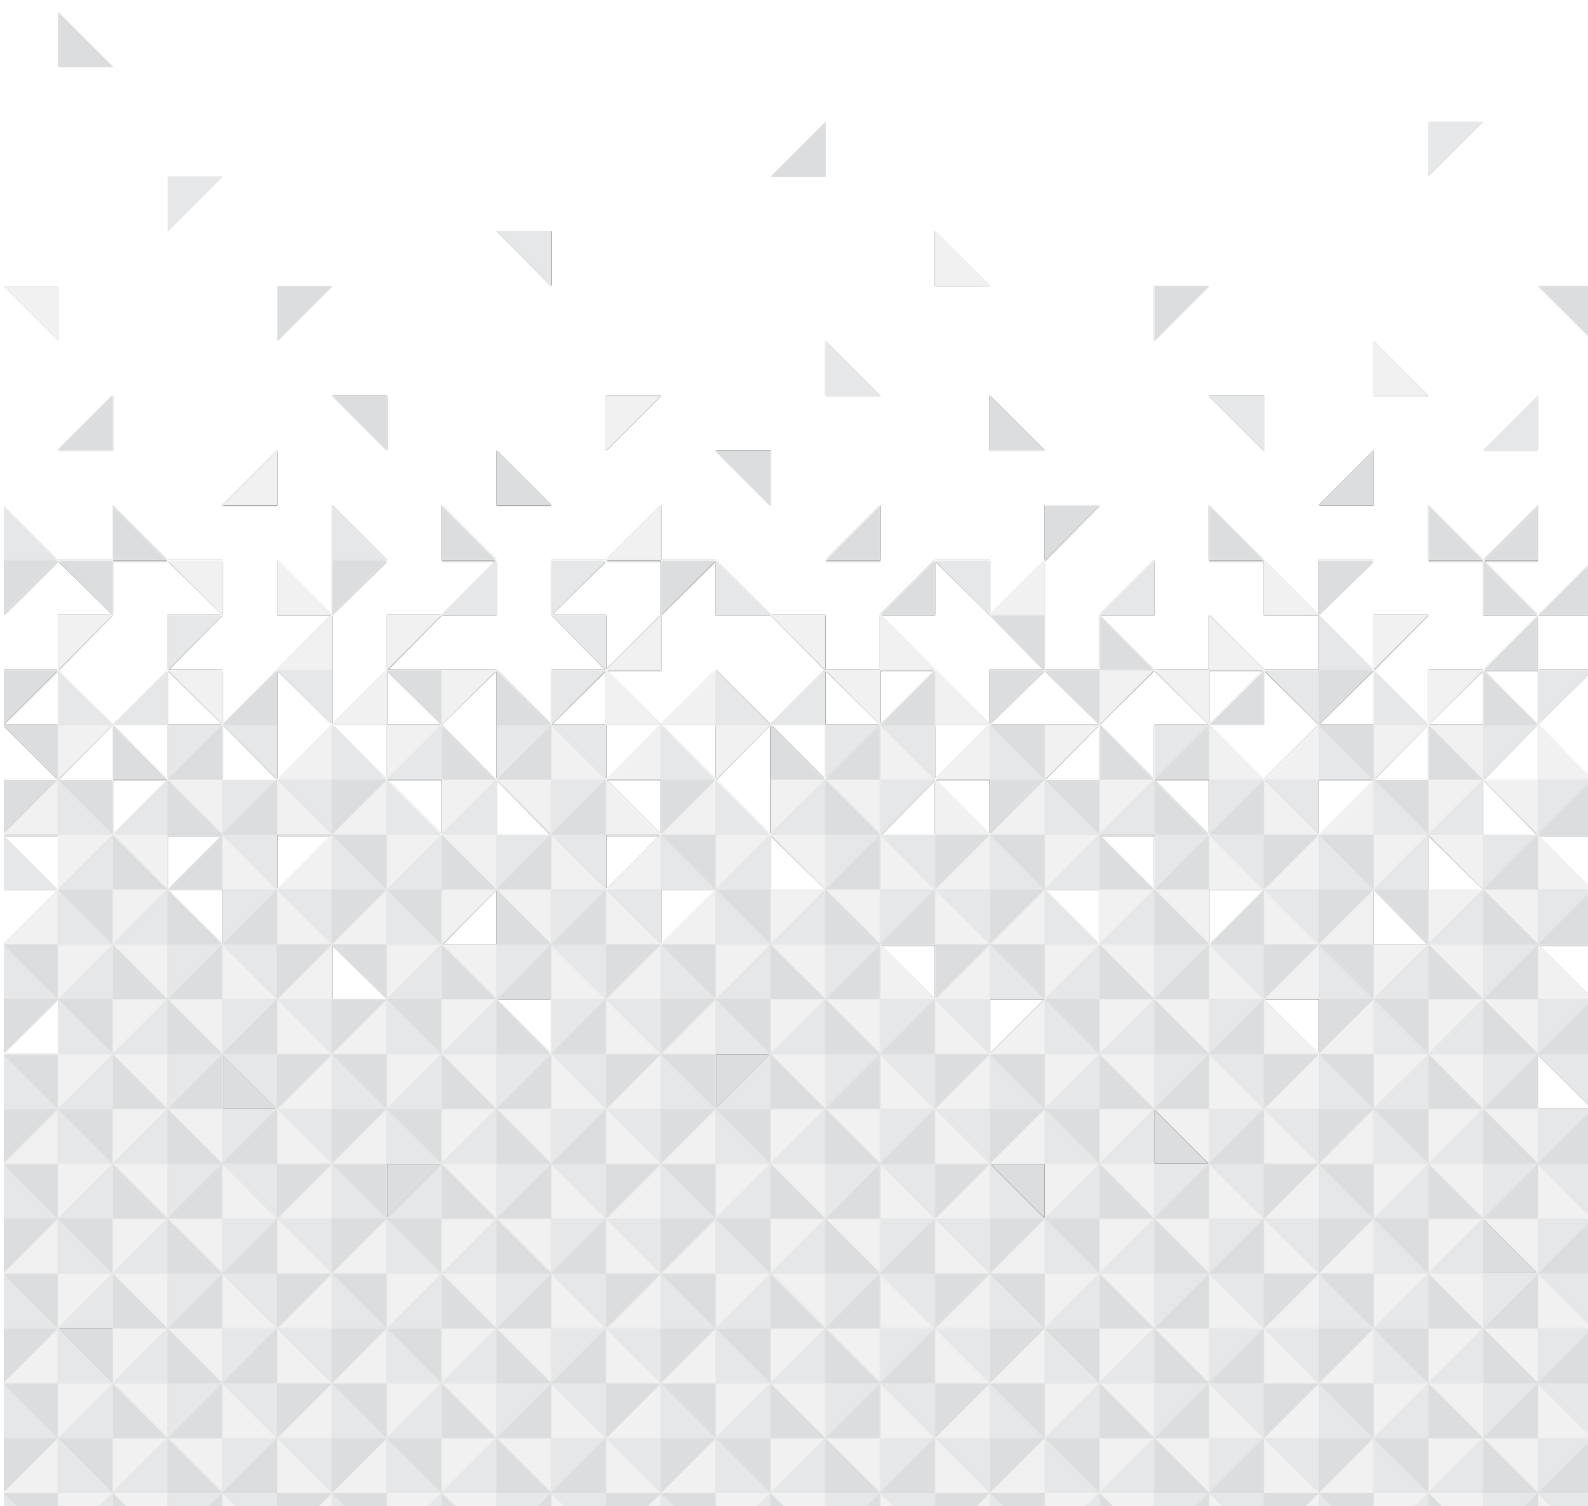

Other information

Wall mounting


Safety

- Before drilling into wall surface, check for hidden cables or pipes.
- Wear safety goggles and dust mask when drilling.
- The use of a residual current device (RCD) is recommended when working with power tools.


Tools required

- Drill fitted with masonry drill bit
- Screwdriver
- Pencil
- Ruler
- Spirit level

1. Choose a suitable location for the soundbar away from areas where it will get wet or knocked. Check that the audio cables will reach the connected device / TV, the supply cable will reach the electrical socket and that it will not become a trip hazard.
2. Place the soundbar in the desired position and using a spirit level check that the soundbar is level.
3. Make a light pencil mark on the wall at the top edge of both fixing brackets. The mark should be positioned directly above each bracket. Note the centres of the mounting brackets are 85mm from each end. Pitch between them 450mm. You can use the soundbar as a template to get the right mounting position.
4. Place the soundbar away from the work area and then mark two fixing points 5mm below the light pencil marks for the screws. These marks should be 450mm apart and level. Before drilling, use a spirit level to check that the fixing points marked are level.

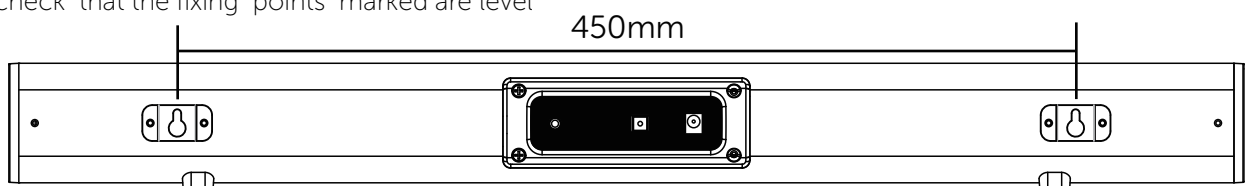

5. If fixing to a solid masonry wall, use a masonry drill bit, drill holes to a depth of approximately 39mm and insert the rawl plugs. Insert the screws into the rawl plugs and drive home the screws until the heads stand proud of the wall by about 1mm.

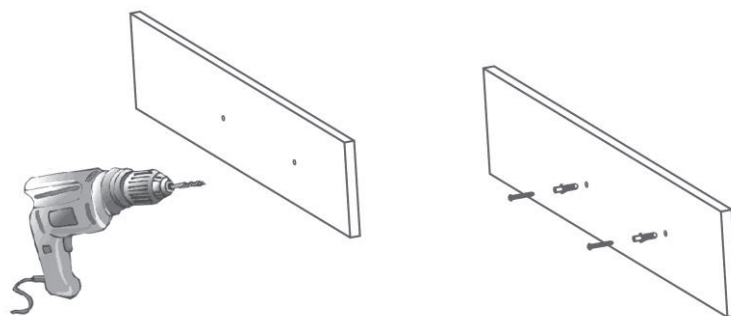


6. If fixing to timber, follow the directions above, but only drill a small pilot hole for each screw and do not use the rawl plugs provided.
7. If fixing to hollow plaster board walls, use a drill bit suitable for wood and replace the rawl plugs with wall anchors appropriate for the application. Locate the fixing points into wall studs and cross braces where possible.
8. Locate the soundbar onto the screw heads and check that the screws are fully engaged into the keyhole mount before releasing your hold.

Other information

Technical Specification

Model	B-3363A
Rated voltage (adaptor)	110-240V~50/60Hz
Adaptor output	DC 15V  1.5A
Class rating(adaptor)	II (double insulated)
Power consumption (rated max)	17W
Power consumption (standby)	<0.5W
Audio output (max @10% THD)	2x 12W RMS
Remote battery	CR2025
Bluetooth supporting profiles	Advanced Audio Distribution Profile (A2DP) Audio Video Remote Control Profile (AVRCP)
Bluetooth Pairing Name	Bush B-3363A
Operating conditions	Temperature: 5 °C to 35 °C Humidity 5% to 90%
Operating position	Horizontal
Net Weight	1 KG
Dimemnsions	620(W) x 67(D) x 65(H) mm

Product support 5

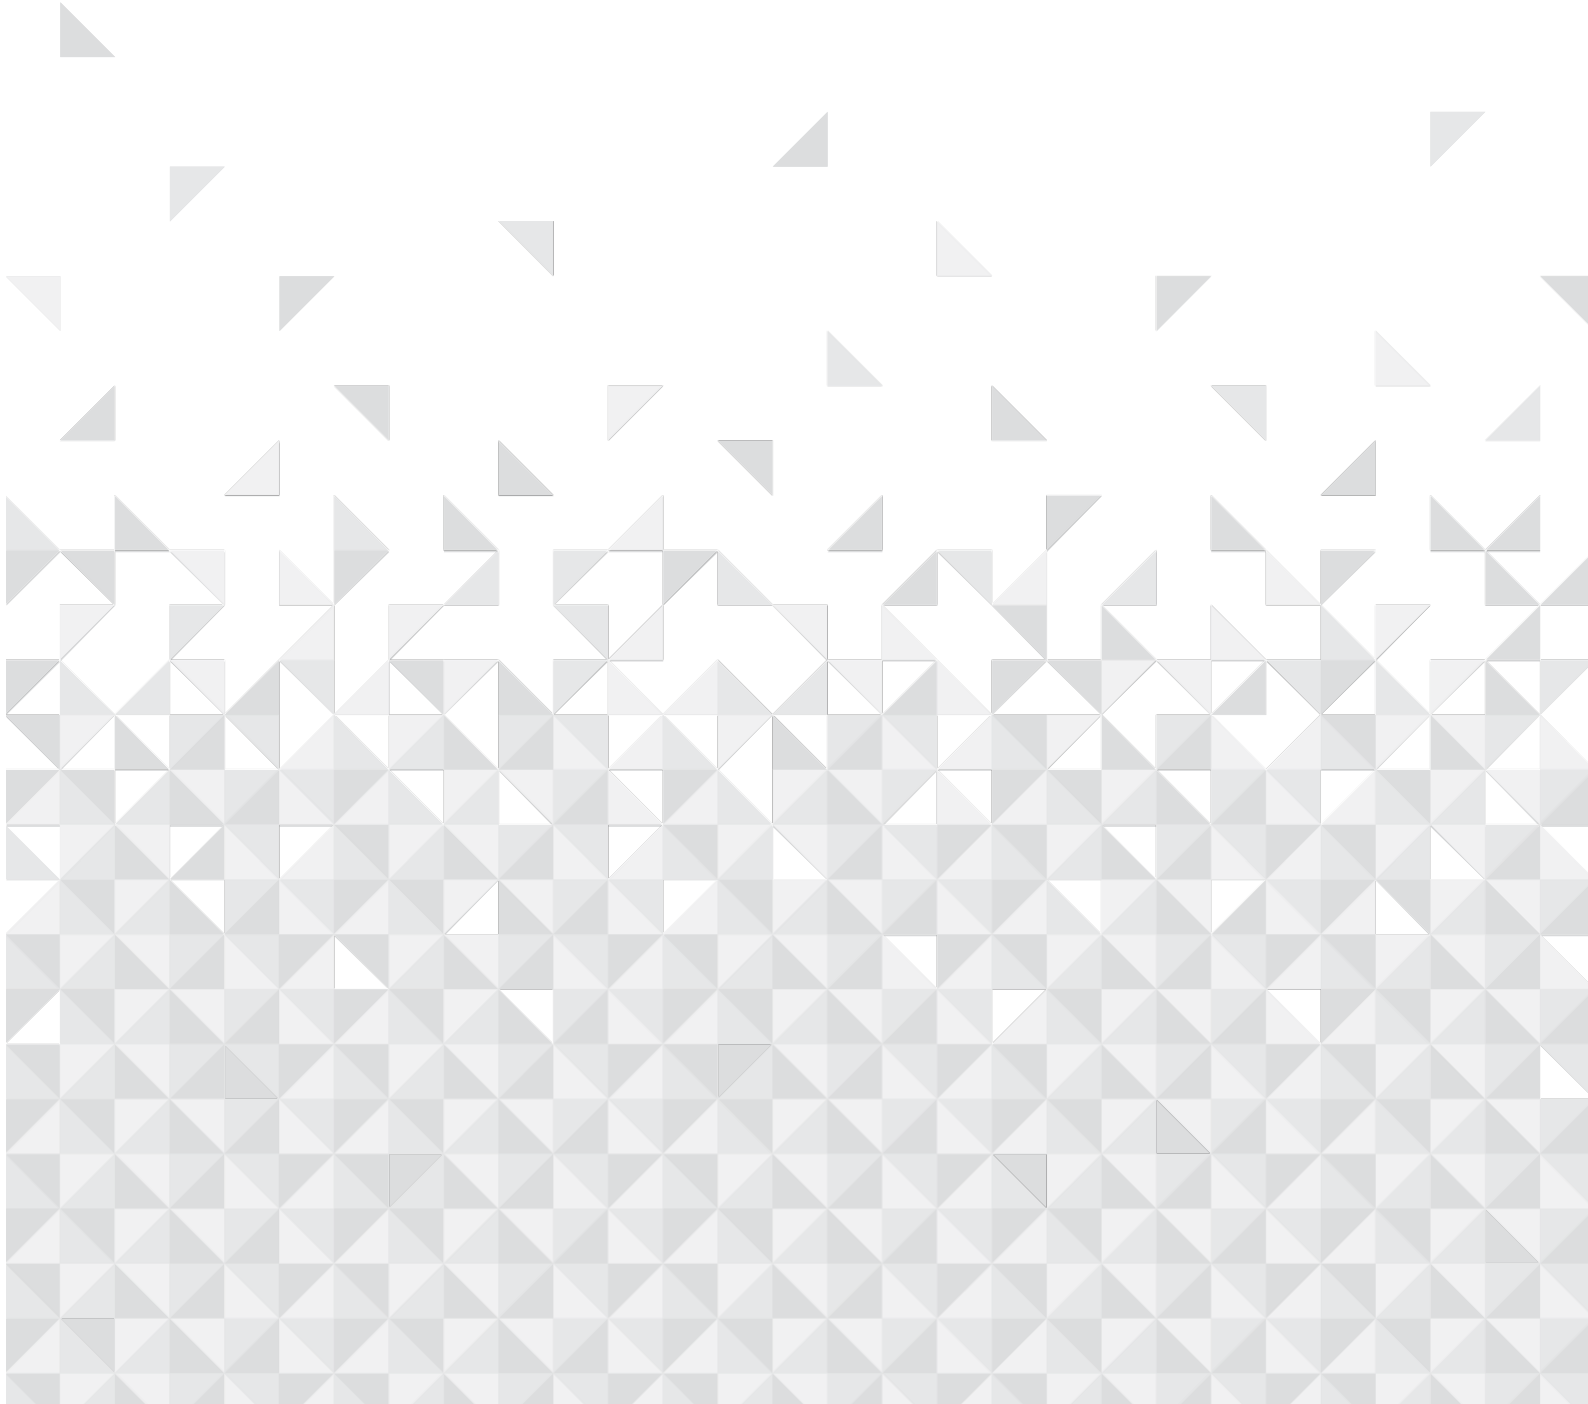

Product support

Help is always at hand

Troubleshooting

Observation	Potential cause / solution
The unit does not work (indicator not illuminated)	Has the power cable been correctly plugged into the mains? Has the POWER Button been pressed? Does the socket that is being used have power?
The remote control does not work	Is the battery exhausted? Has the battery been correctly fitted? Are there obstacles in the between the remote and the sensor on the main unit? Is the remote too far away from the sensor?
No sound (source indicator lit)	Is the volume on the connected device set at minimum or muted? Has the correct operating mode been selected using the source / mode buttons? The indicator should be blue for Bluetooth, yellow for optical and green for Line in source. Check that any Bluetooth device is correctly paired.
Bluetooth device not detected / will not pair	Have you selected correct SEARCH mode on your Bluetooth device? Has Bluetooth mode been correctly selected on soundbar using the BT button? Have you delayed searching? Try to pair within 2 minutes of switching on soundbar. Is another device already paired with the soundbar? Have you found 'Bush B-3363A' on your Bluetooth device and then selected "pair with this device"? Does your Bluetooth device support A2DP connection?
Poor sound tone / crackling when using Bluetooth	Is the Bluetooth device positioned over 8 – 10m from the speaker? Are there solid objects between the Bluetooth device and the speaker?
Sound is not synchronised with picture when using Bluetooth	This is normal and because of the way Bluetooth transmits the sound. For applications where picture and sound need to be played together, use one of the wired connection options.
Line in source does not play	Is the line in source equipment correctly connected to the soundbar? Has the line in source been selected using the LINE IN button? The source indicator will be green when line in mode selected. Has the play button been pressed on the line in source?
Optical source does not play	Is the optical source equipment correctly connected to the soundbar? Has the line in source been selected using the OPTICAL button? The source indicator will be yellow when optical mode selected. Has the play button been pressed on the optical source?

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bush 24W (RMS) 2.0 soundbar is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or by calling one of our experts on 0345 6040105

To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product

This will be shown on your receipt

Lines open 8am-7pm Monday to Saturday and Sunday 10am-4pm.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

Calls from Republic of Ireland will attract international call charges.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored.

Or by calling one of our experts on **0345 6040105**

Product support

Help is always at hand

Recycling electrical products



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal.

Visit www.recycle-more.co.uk, click on 'bank locator' and enter your postcode to find your nearest recycling site.



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU

Declaration of Conformance

Hereby Argos Ltd declares that this 2.0 Soundbar B-3363A is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com>



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sainsbury's Argos is under license. Other trademarks and trade names are those of their respective owners.

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistration.co.uk

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

Or by calling one of our experts on **0345 6040105**

BUSH

Contact
www.bush-support.com
Helpline: 0345 6040105

Made in China

Imported for Argos Ltd, Milton Keynes MK9 2NW

Guarantor: Argos Limited 489-499 Avebury Blvd. Milton Keynes MK9 2NW
All other brand names are registered trademarks of their respective owners.

Issue 1b 12/19