
Holsted

180cm Sliding Wardrobe

882/6712 882/8033 893/9458 915/9244 916/1359 917/4906 917/7453 918/4233 920/6867 206/3313 456/9815 206/6138

199/0937 193/3262 202/8004

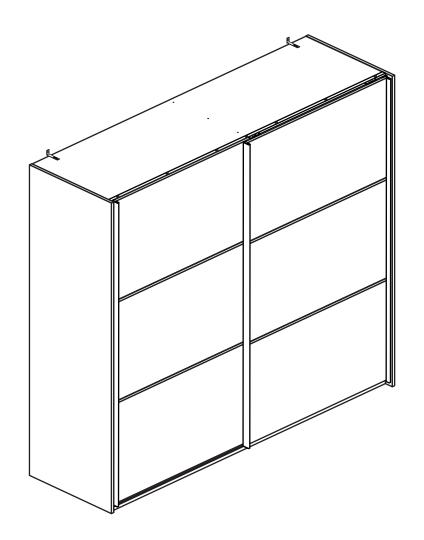

Spare Parts

Visit: www.argos-support.co.uk

Email: Help@ClickSpares.co.uk

Call: 0370 112 1928

Customer Support


Call: 0345 640 2020




Important - Please read these instructions fully before starting assembly

- · Warning: This unit weighs approximately 122kgs. Please lift with care.
- During assembly children should be kept away from the product due to possible risk of injury.
- Installation shall only be carried out exactly according to the manufacturer's instructions otherwise a safety risk can occur if incorrectly installed.
- Do not use this item if any components are missing or damaged.

- WARNING: To prevent possible overbalancing this unit must be secured to a wall using the 2 overbalance protector kits supplied.
- A unit that is allowed to topple can cause serious or fatal injury. In addition to wall fixing the unit, place heavy items on the lower shelves, do not put any heavy objects on top of the unit and never allow children to climb or hang on drawers, doors or shelves.
- Refer to guide after section 32 for wall fixing information.

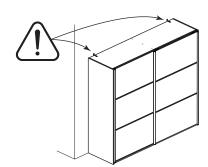

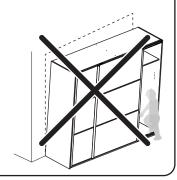

Care Advice

- Check you have all the components and tools listed on relevant pages.
- Remove all fittings from the specified plastic bag and separate them into their groups.
- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



■ Assembly videos are available throughout these instructions by scanning in the QR codes.



• We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- Only clean with a damp cloth.

Tools


















Only used for drilling walls

Cabinet Panels

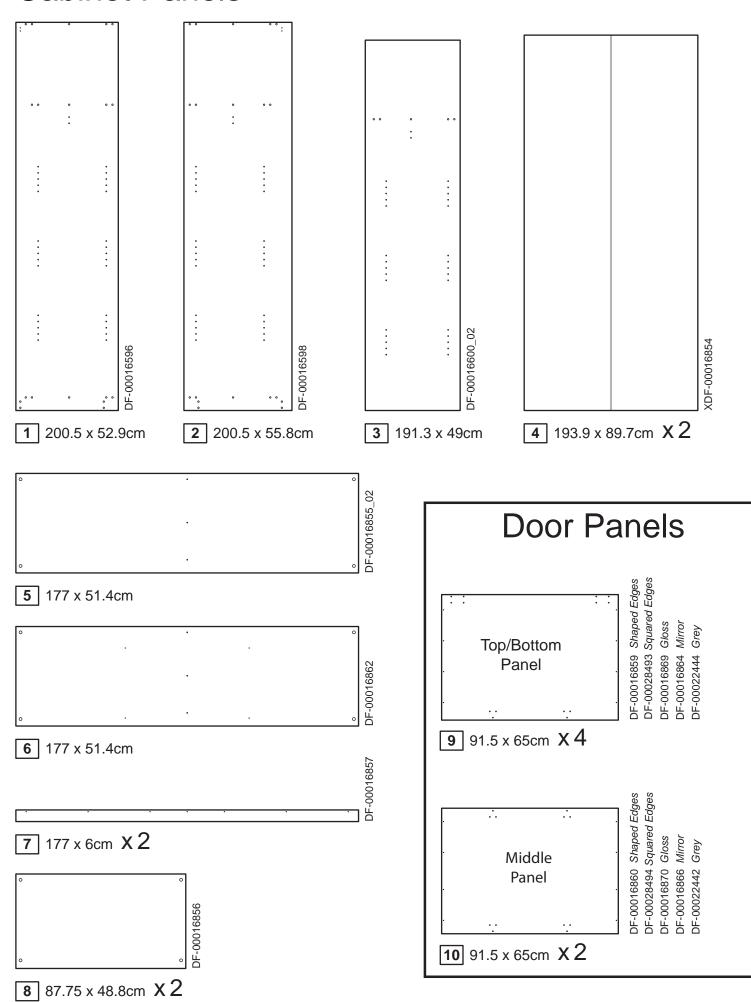


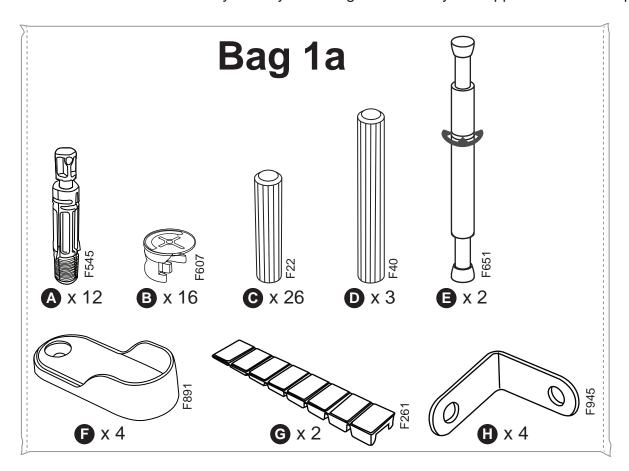




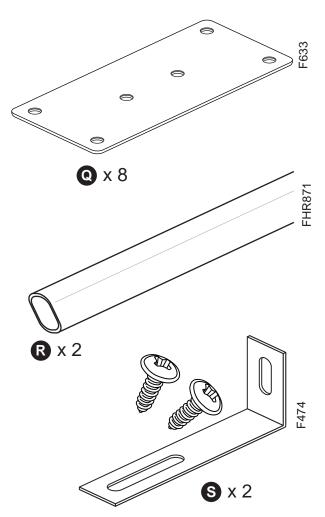


Tracks, Handles and Door Trim

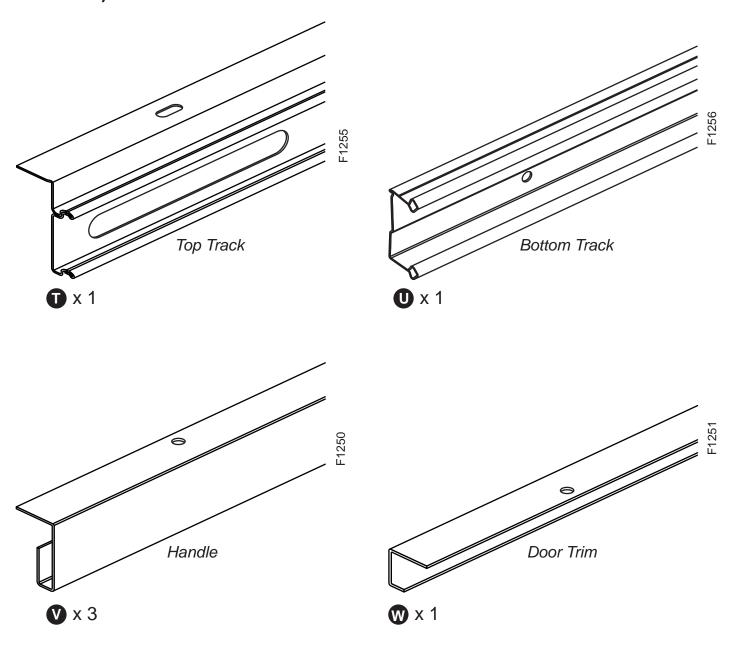


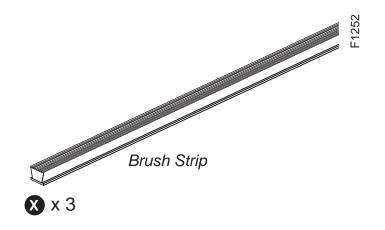



Fittings Box for Doors

 
NOTE: In some cases more fittings may be supplied than are required

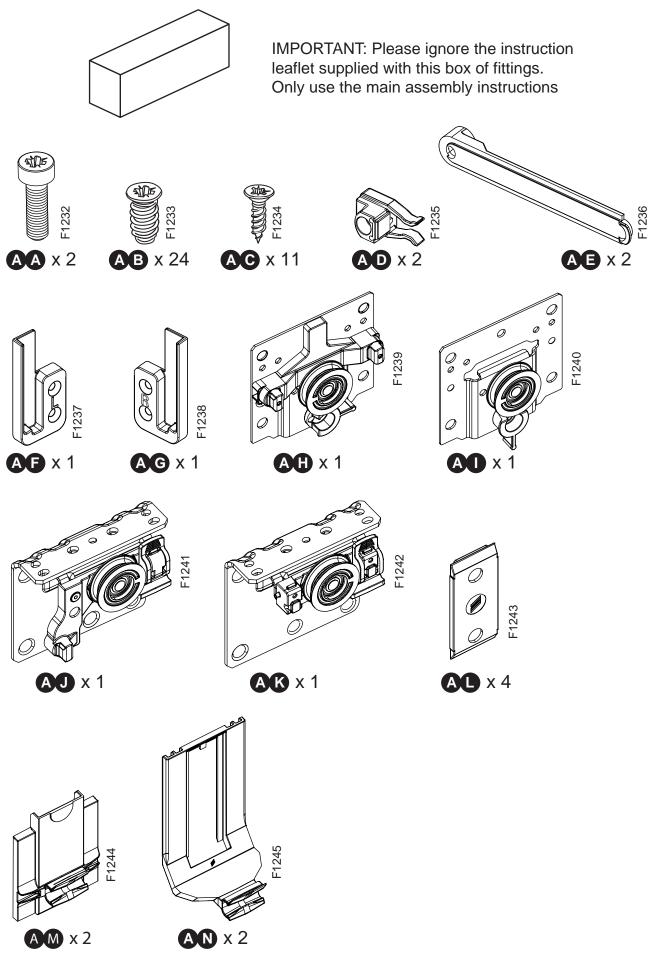


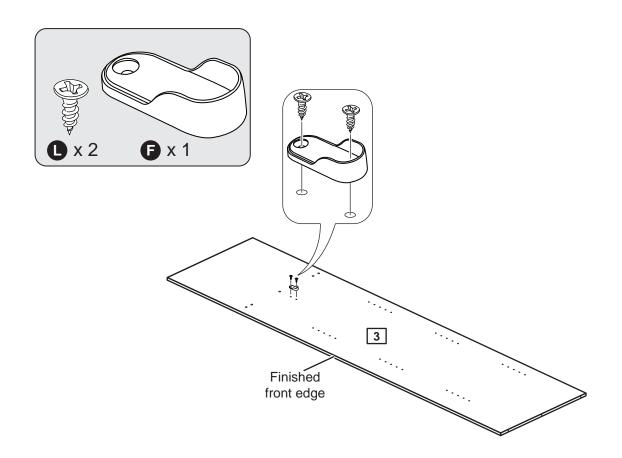

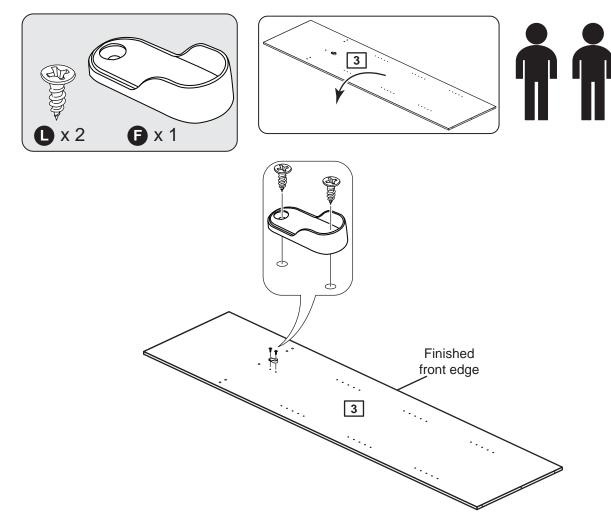



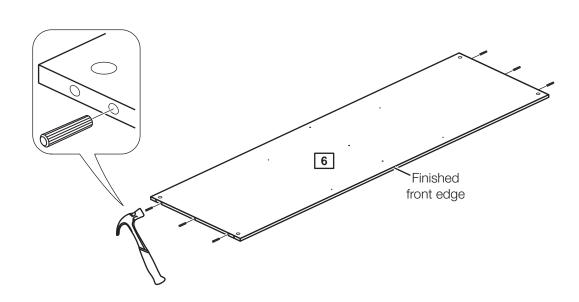


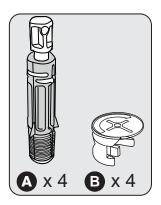






Panel Assembly


https://www.youtube.com/watch?v=33kDsSSfxjw

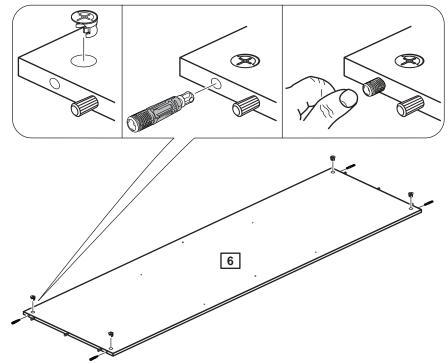


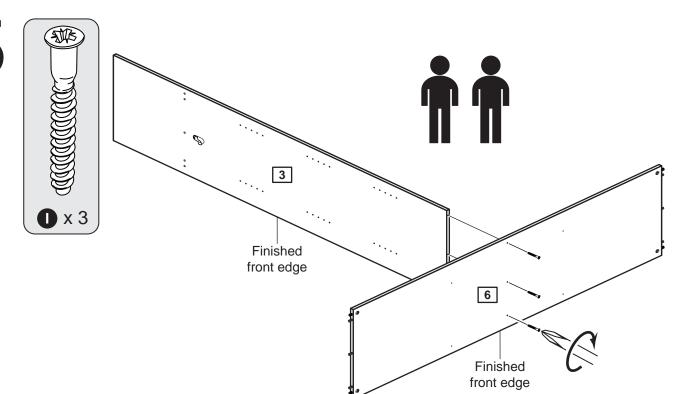


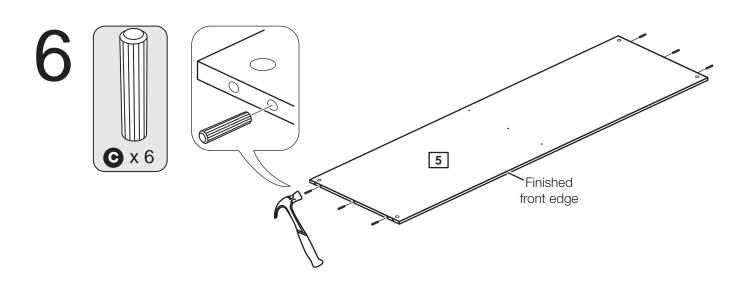


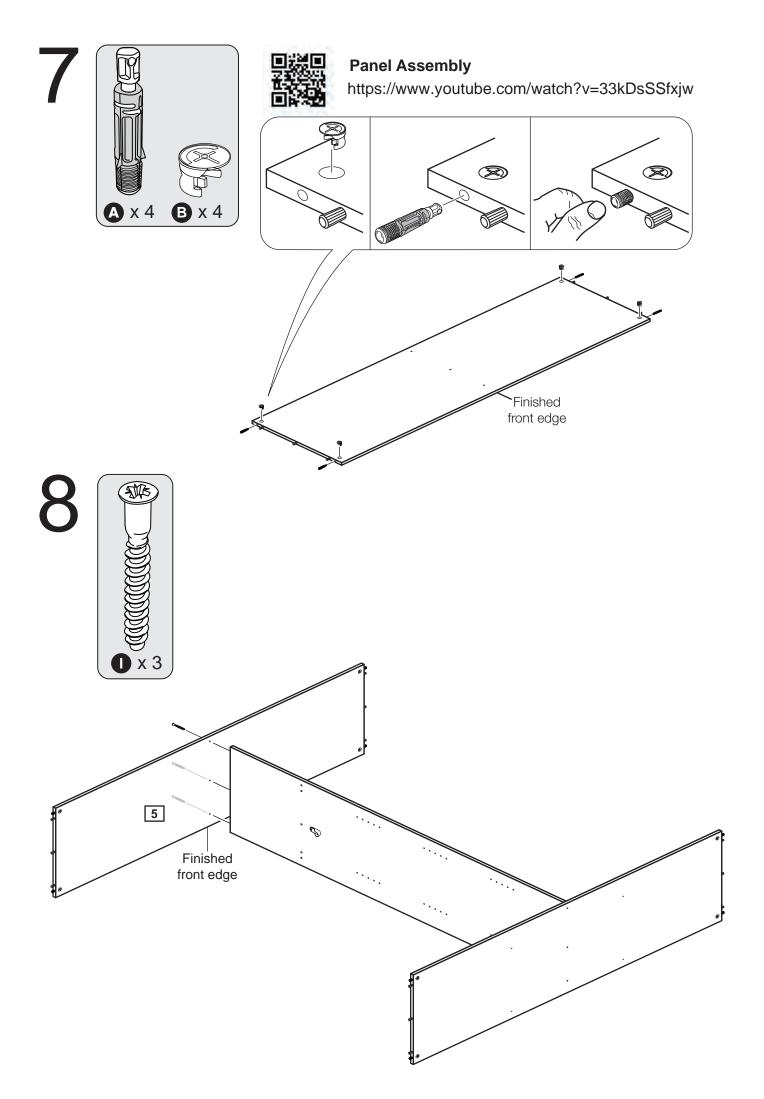


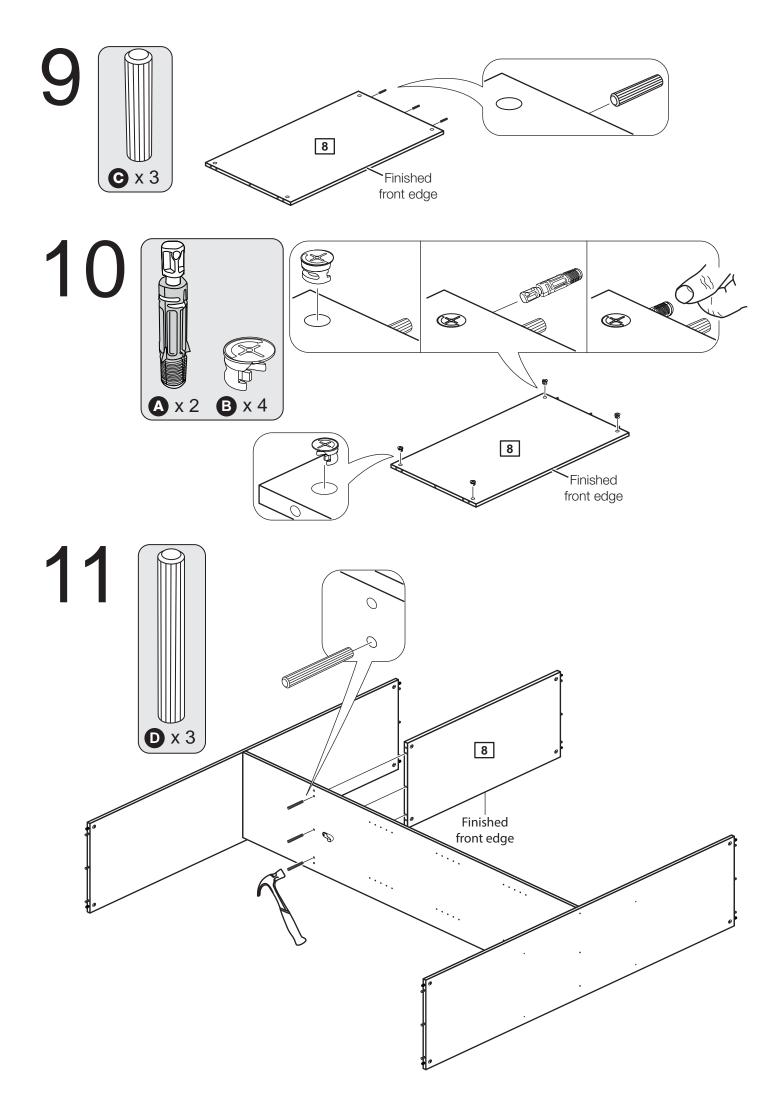

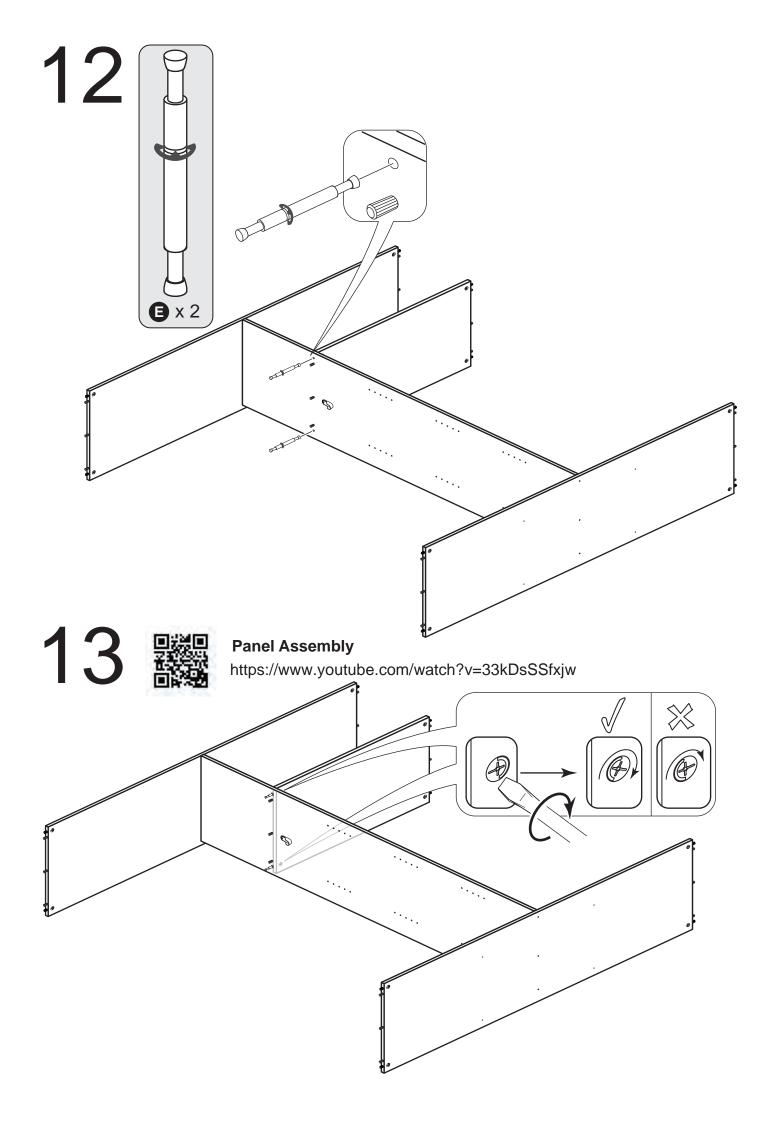

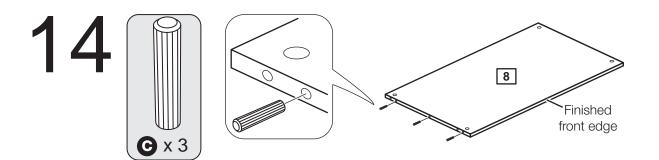

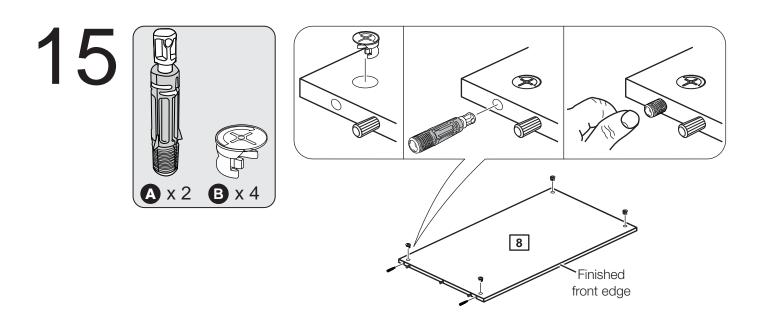


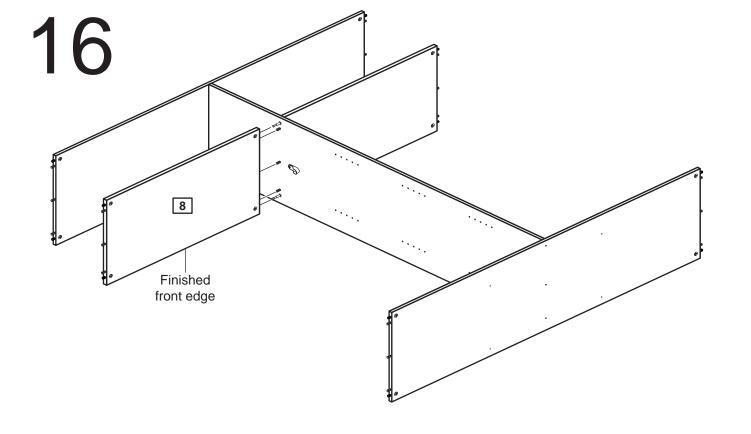






Panel Assembly

https://www.youtube.com/watch?v=33kDsSSfxjw

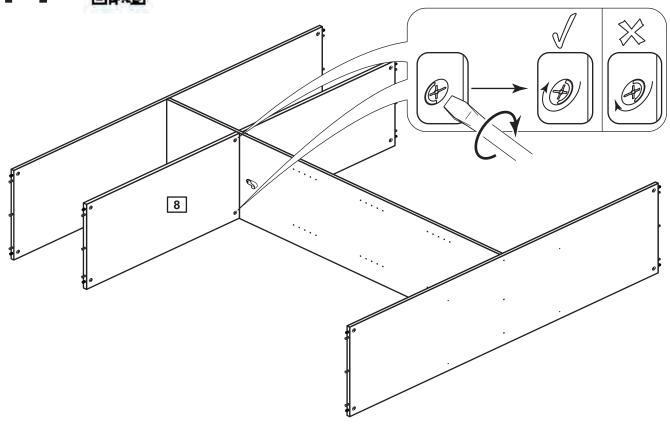

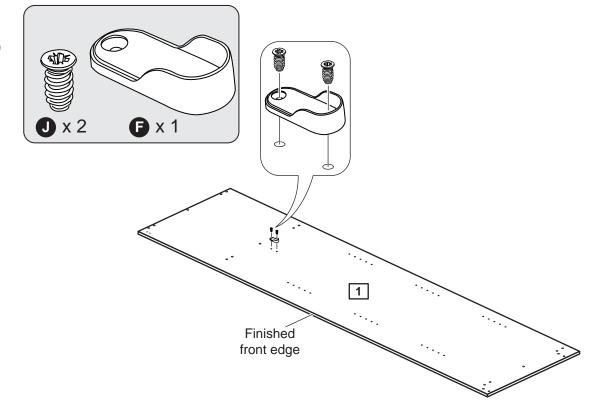

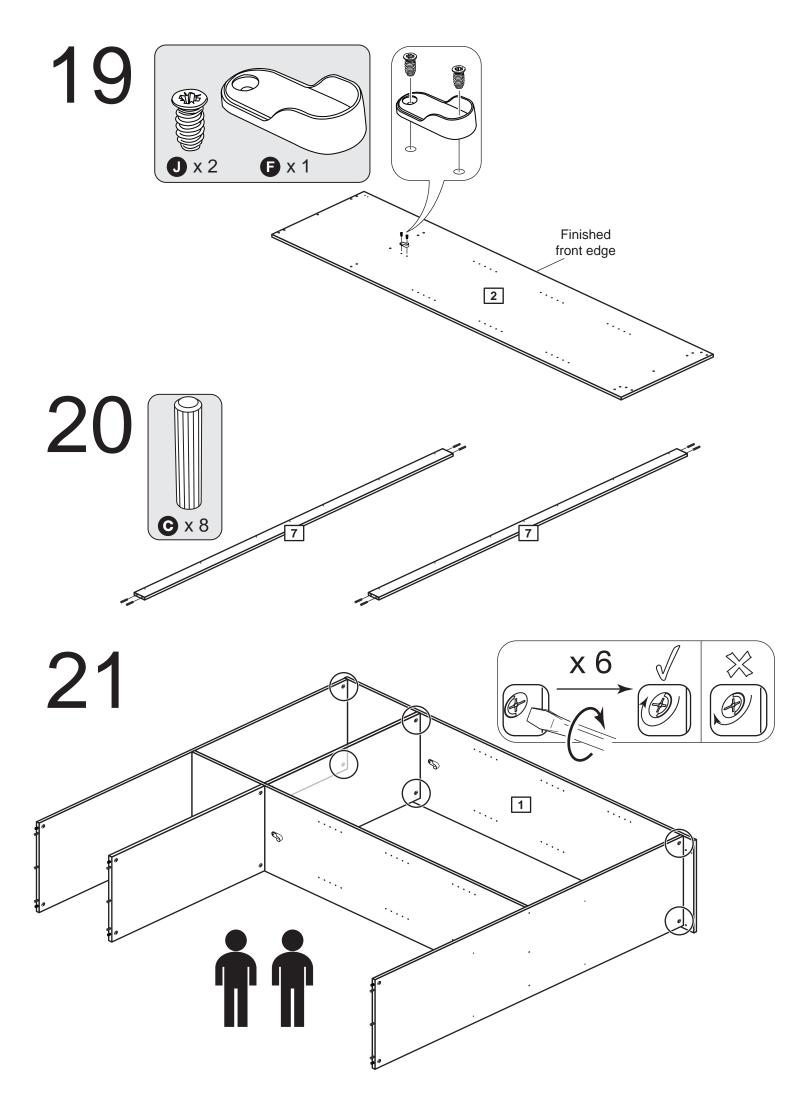


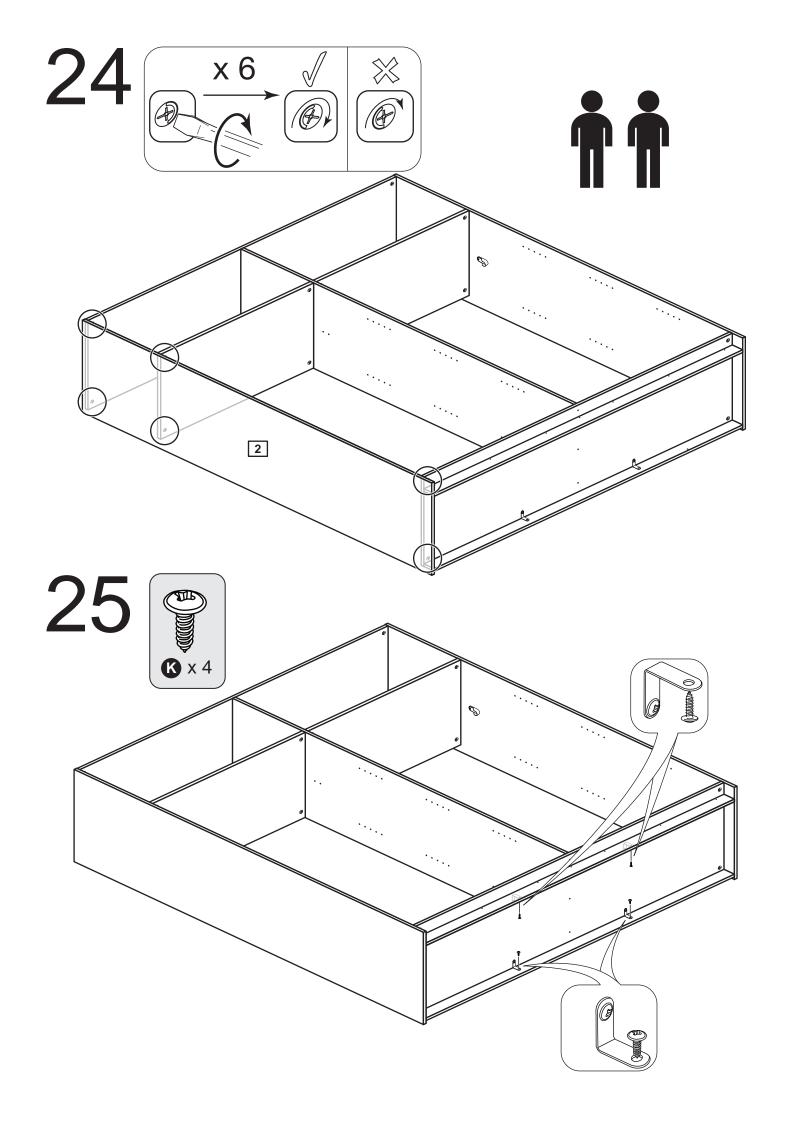






Squaring up a Robe and fitting the Back Panel

www.youtube.com/watch?v=udEKmXmPEW0

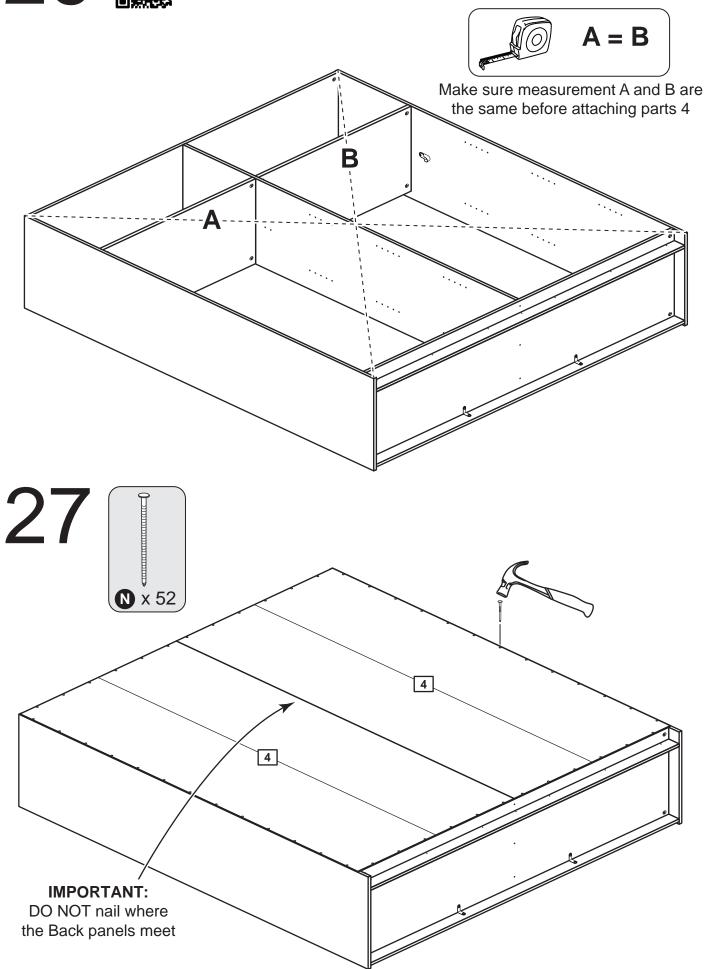

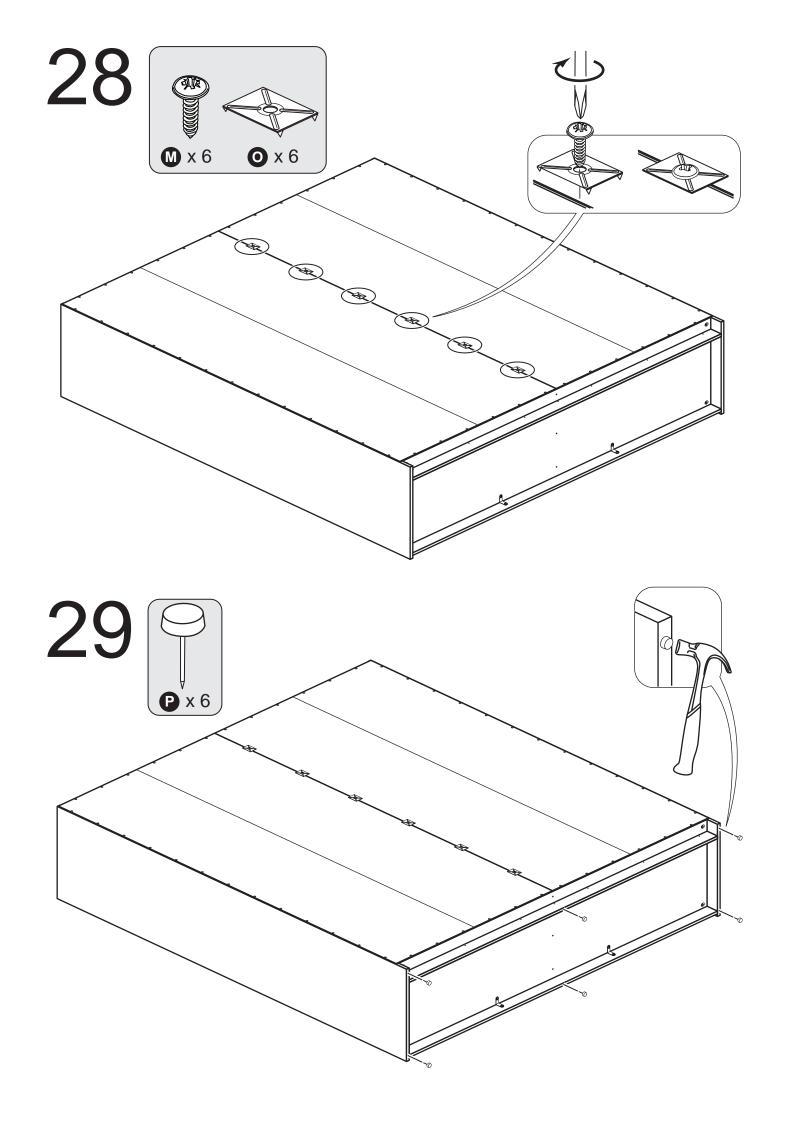


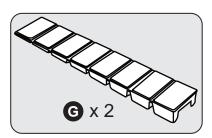

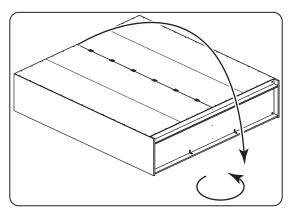



 
PLACE YOUR UNIT INTO ITS FINAL POSITION AND LEVEL IT UP



If the unit is not level, use the plastic wedges we have supplied.

Push the wedge(s) under the ends of the panel(s), where required.

The unused portion of the wedge can then be snapped off flush with the edge of the panel.

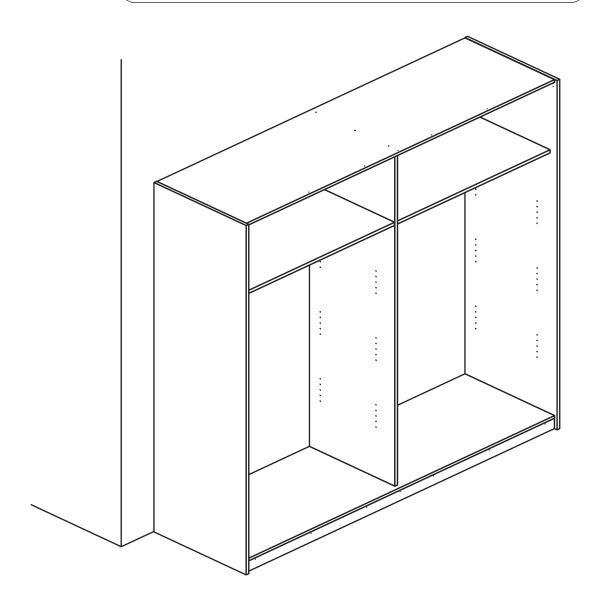



WARNING!

In order to prevent overturning this product must be used with the 2 wall attachment devices provided

See the next section for a guide to wall mounting and fixings

Loosely fit the 1st screw through the brackets into the top panel.


Slide the brackets against the wall and mark the slot at the back of the brackets for drilling into the wall.

Swivel the brackets away from the wall and drill the wall using a suitable drill-bit and fit your wall fixings (wall fixings are not supplied as they will need to suit the wall type).

Swivel the brackets back and fix them to the wall.

Fit the 2nd screw into top panel and tighten both screws from the kits.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

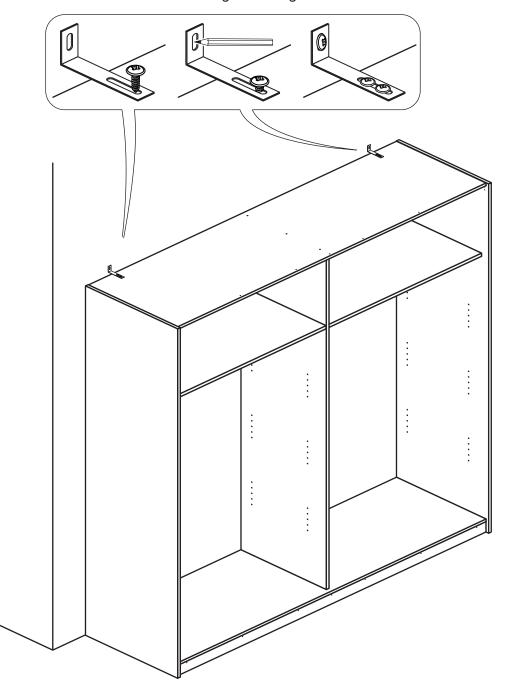

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifled tradesperson if you are unsure.

 
Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug




For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads





For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.




Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

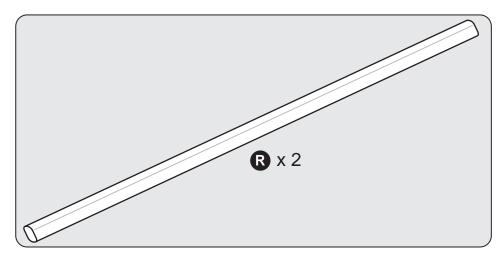


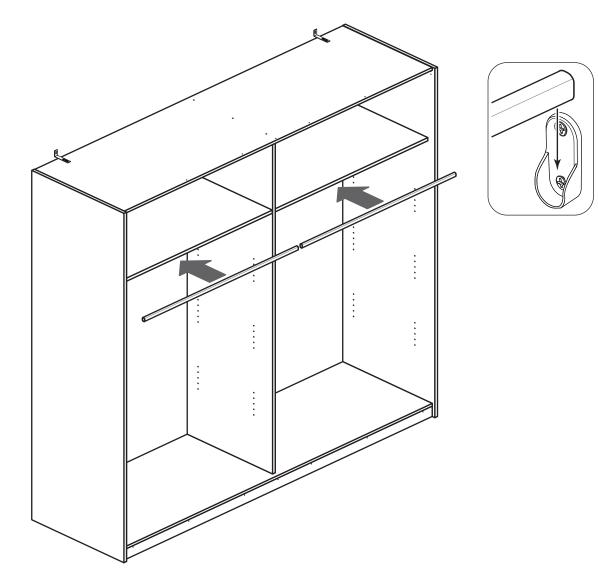


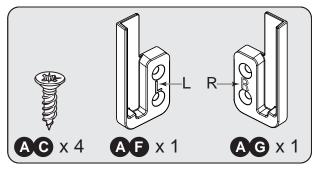



Marked as 'R'

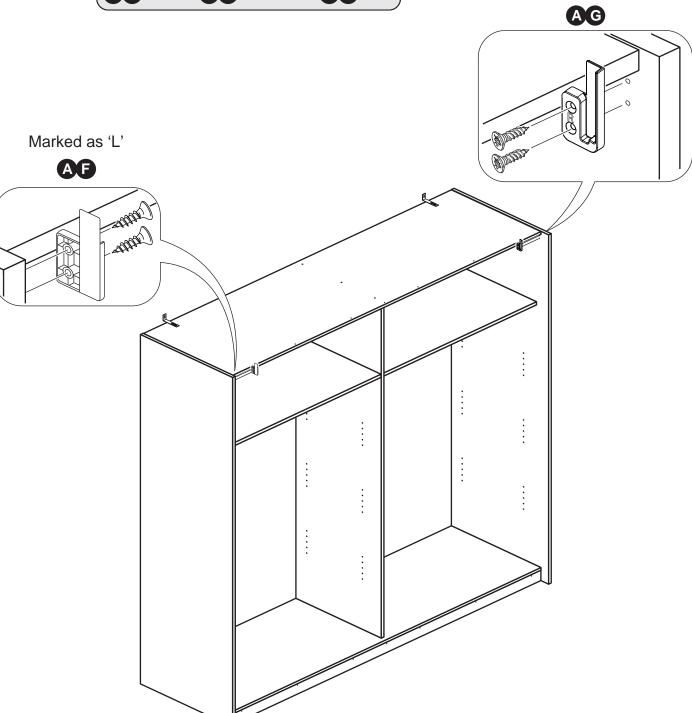


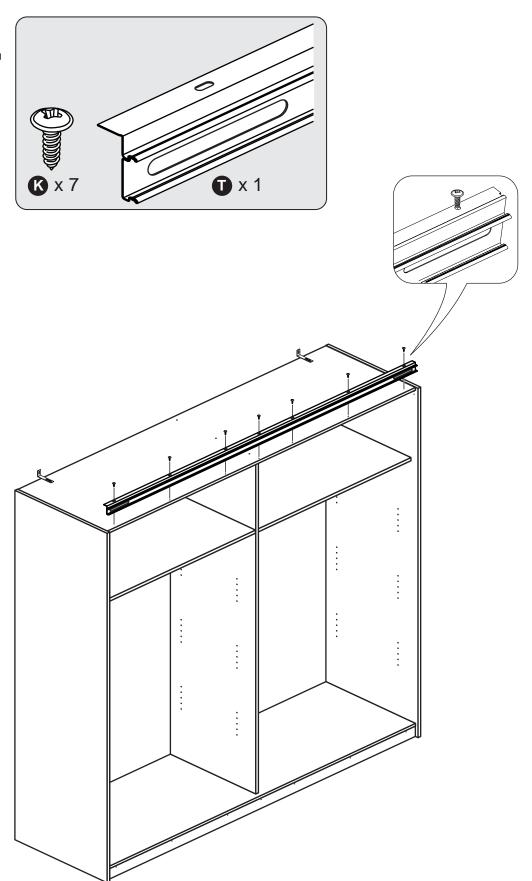


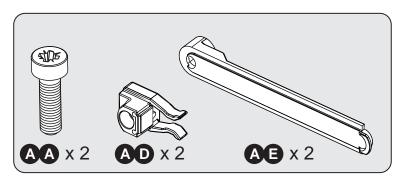


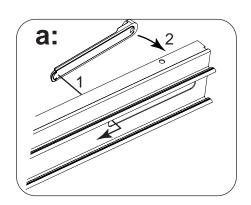


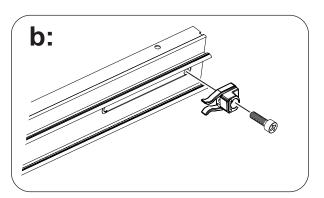


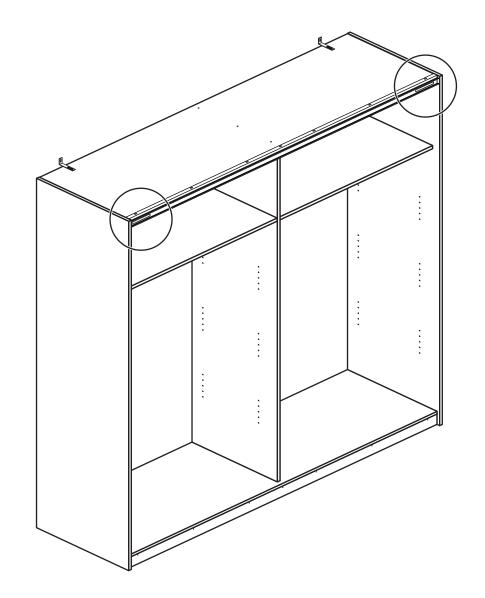


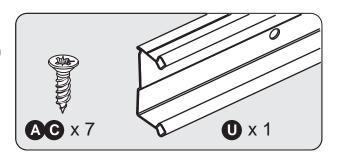


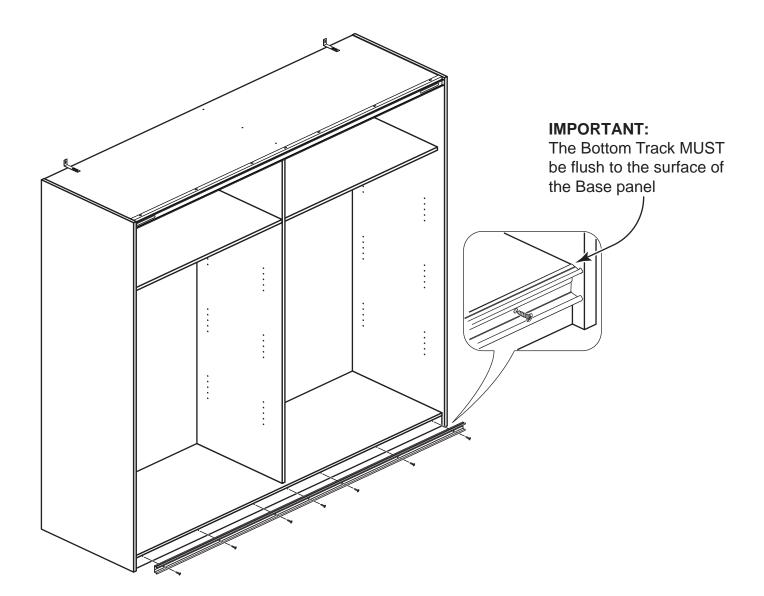

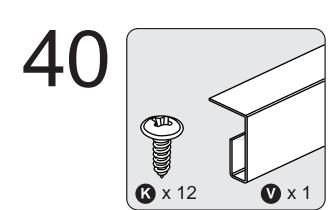


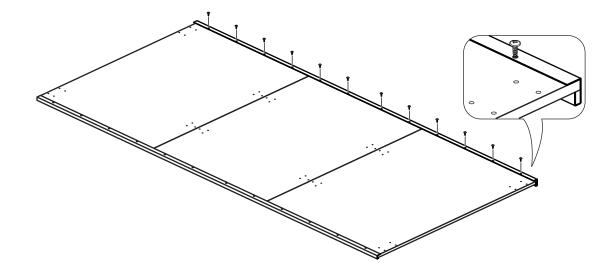


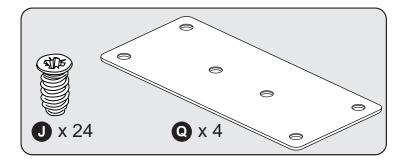


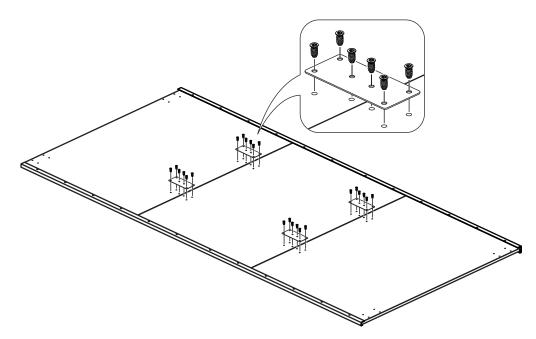


42 ×1

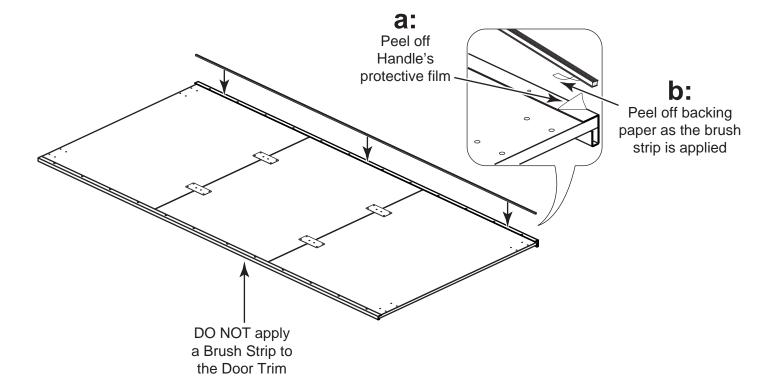

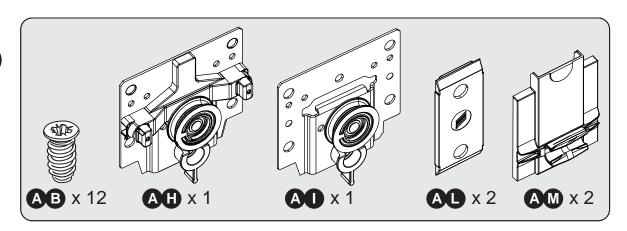

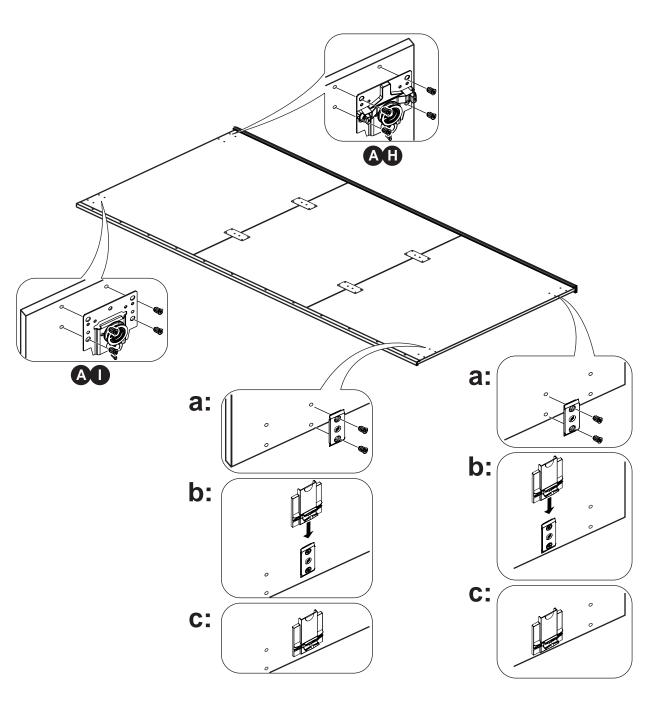




 

IMPORTANT:

Before you fit the Door, the yellow lock on both Rollers must be pointing down in the unlocked position

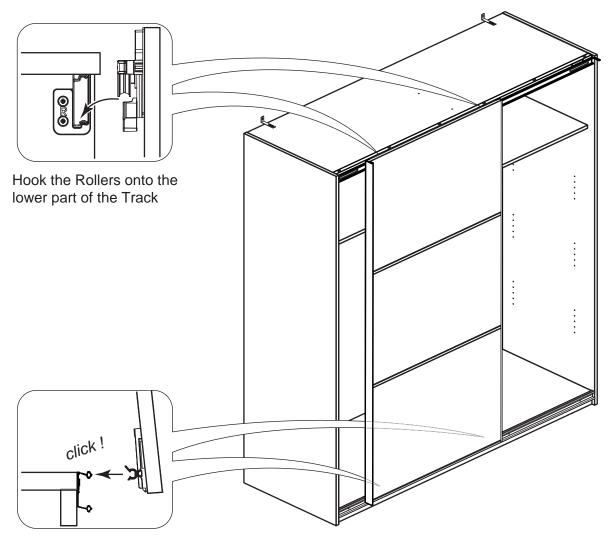



Line up the Bottom Guides with the top part of the Track and push the Door in until it clicks into place





IMPORTANT:


When the Door has been fitted, the yellow lock on both Rollers must be pushed up into the locked position

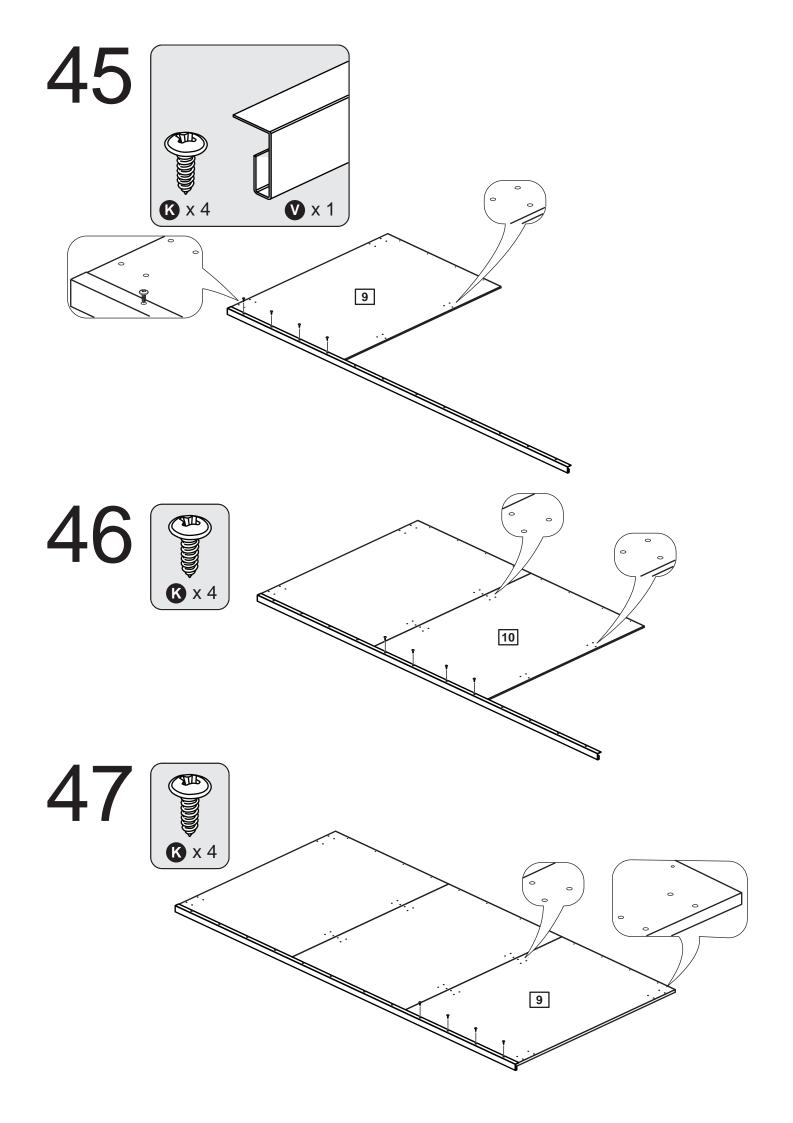

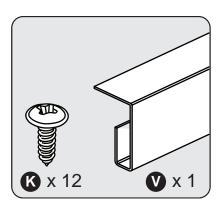


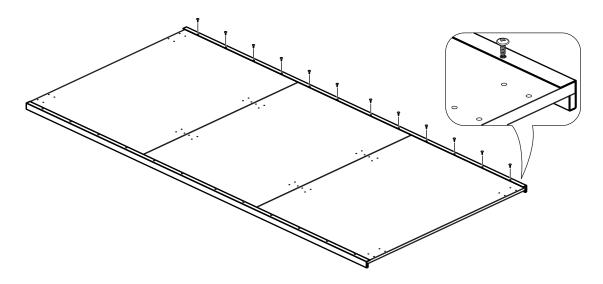


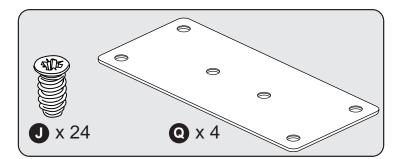


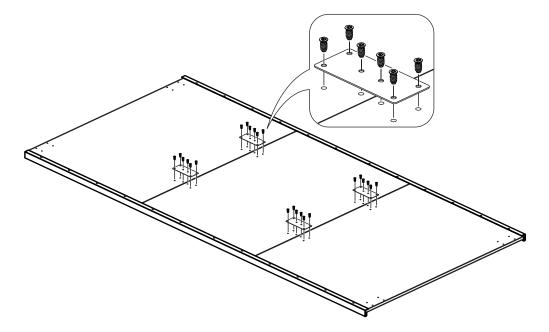

50 ×1

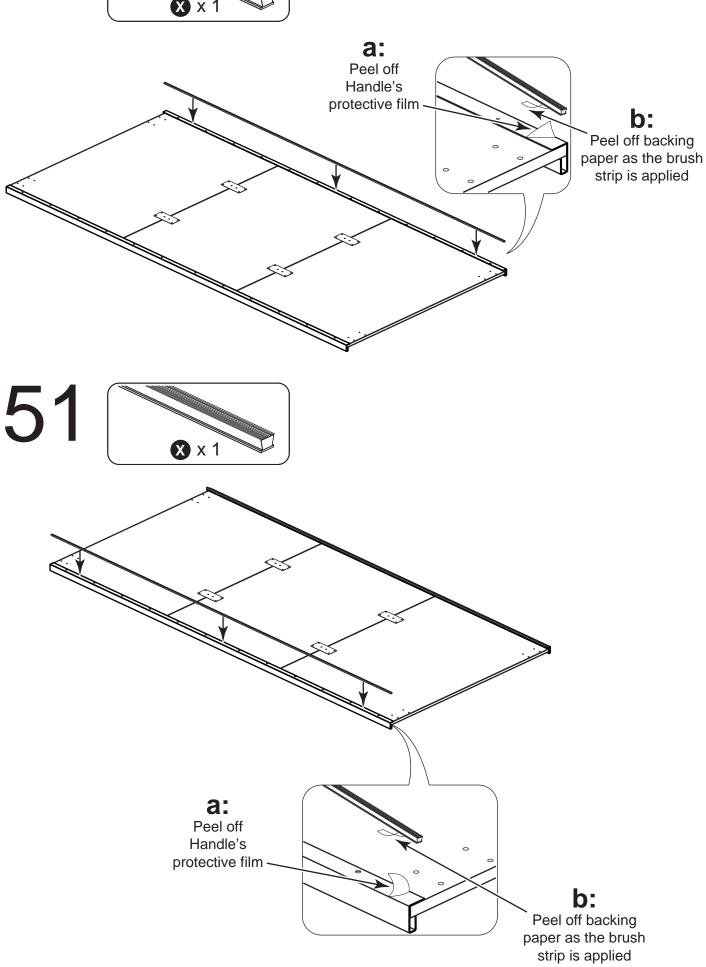

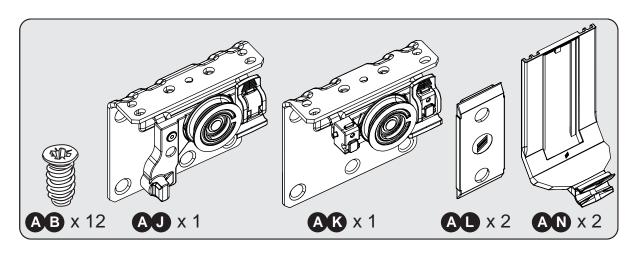

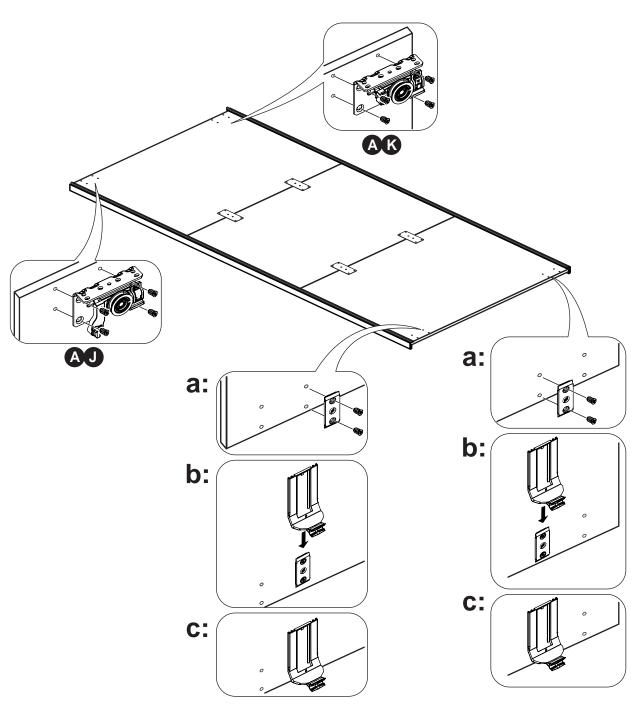








IMPORTANT:

Before you fit the Door, press in the base of the locks to unlock them

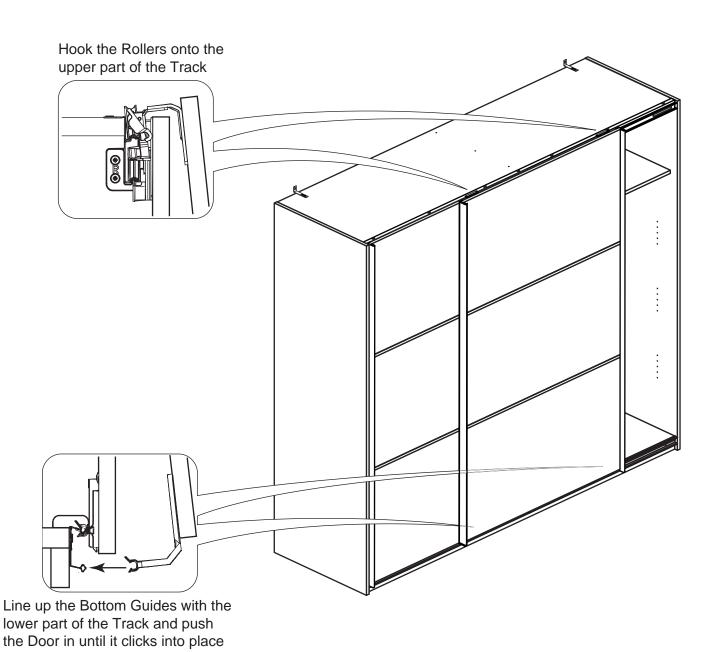

IMPORTANT:

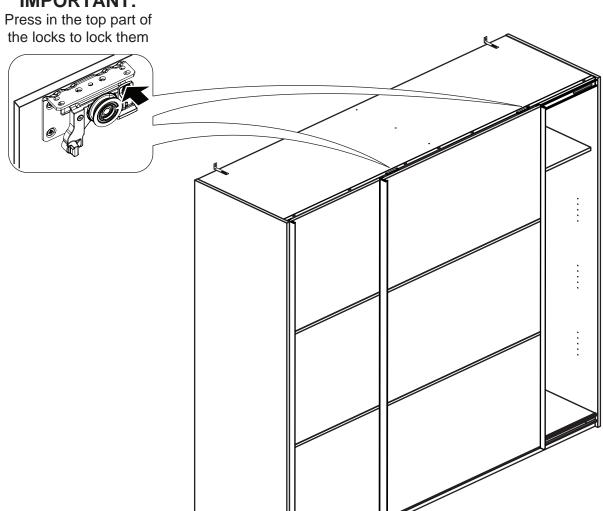

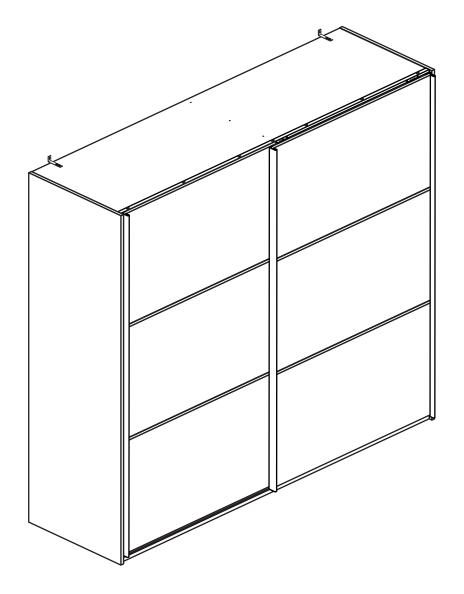

Assembly is complete

For Gloss Doors please remove any blue protective film and clear protective film

For Mirrored Doors please remove any blue protective film and clear protective film and clean the Mirrors