 


Alba Feature Phone

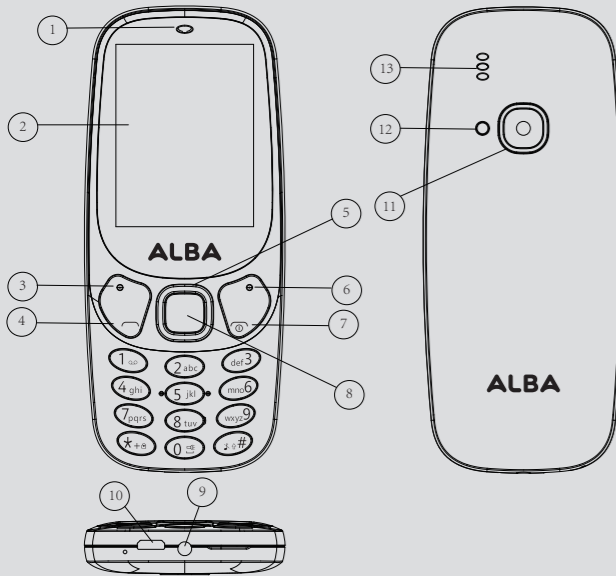

Device buttons

1 Receiver/Loudspeaker	8 OK key
2 Screen	9 Earphone jack
3 Left soft key	10 USB/Charging interface
4 Dial key	11 Camera
5 Navigation key	12 Flash
6 Right soft key	13 Loudspeaker
7 End/Power key	

Button description

Left/Right soft key: press to perform the function currently displayed in the bottom left/right corner of the screen. In standby mode, press left soft key to wake phone.

Dial key: answer all calls, make calls from SIM1/SIM2 card.

Navigation key: within a menu, press Up, Down, Left or Right to scroll through menu options. From the home screen up=camera, Right=calendar, down=audio player, left=Text

End/Power key: press and hold to turn on/off the device, end a call or reject an incoming call.

OK key: press to access the main menu from home screen.

Special functions of buttons

Unlock phone from keypad lock

Press Left Soft Key and right soft key to unlock keypad, Torch

A long press of the Zero key (in the home screen) activates the torch

Icon description

Vertical bars indicate the signal strength of the GSM network signal. Five bars indicate that your current position has the best reception.

Indicates the battery charge level.

Indicates you have one or more unread messages.

Indicates there is a missed call.

Indicates that the alarm clock is on.

Indicates your phone uses the alert type of "Silent".

Indicates your phone uses the alert type of "Earphone".

Indicates you are using Bluetooth.

Changing the auto keypad lock time

1. Select the OK button to open Menu.
2. Inside Menu, select Settings > Display.
3. Select Auto keypad lock, then the desired duration.
4. Press the OK button to confirm.

Changing the wallpaper

1. Select the OK button to open Menu.
2. Inside Menu, select Settings > Display settings > Wallpaper settings.

To move the cursor, press the Navigation key.
To delete characters one by one, press Clear.
To delete words quickly, press and hold Clear.
To insert a space between characters, press 0.

Mobile tracker

Mobile tracker is used for getting the phone number of the new user of your stolen phone.

1. Go to App Zone and select Mobile tracker.
2. Type the password "1234" and make the status ON.
3. Set 5 receiver numbers.

When a new SIM is entered into your phone, a SMS will be sent from the new SIM to the numbers set above containing the number of the new SIM.

Default password

The default password for your data protection is: 1234

Transferring files to/from your computer

1. Connect the phone to a PC using a micro-USB cable (not provided). The PC will auto detect the phone as a removable disk
 2. You can access the device memory to transfer files.
- To have a large capacity of storage, you need to install a microSD card (not provided).**

Troubleshooting

Note that this phone will not work with a 3 UK SIM in the UK. At the time of writing (2017) 3's UK network does not support 2G. This is a 2G phone.

3. Select one wallpaper among "Static wallpaper" or select "More pictures" for more choices of wallpaper.
Note : You need to insert a microSD card before using the option "More pictures".

Setting up shortcuts

1. Select the OK button to open Menu.
2. Inside Menu, select Settings > Phone settings > Shortcut settings.
3. Define the desired shortcuts.

Setting a password


1. Select the OK button to open Menu.
2. Inside Menu, select Settings > Security settings.
3. Modify any desired password. The phone default password is 000.

Call blocking and whitelisting

1. Select the OK button to open Menu.
2. Inside Menu, select Settings > Security settings.
3. Scroll down to select Blacklist or Whitelist.
4. To each category, add the desired numbers.

Charging the battery

If the battery is completely discharged, you cannot turn on the phone, even with the charger connected. Allow a depleted battery to charge for a few minutes before you try to turn on the phone. To save energy, unplug the travel adapter when not in use.

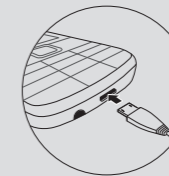

Unable to turn on: press the power ON key for over 1 second. Check that the battery is properly connected. Remove and install it again, retry to turn on. Check if battery is charged.

Unable to connect network: weak signal. Move to a location with strong signal and try connecting to the network again. Ensure that you are not beyond the network coverage of service providers. Ensure you have a valid SIM card and that you have credit. Please contact your network provider for further information.

Poor quality of calling: Check the sound volume. In an area with poor signal, (e.g. warehouse, supermarket, parking structure) try moving to a location with stronger signal and call again. While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.

Launching the camera

Before starting to make pictures, insert a microSD card.
1. From the home screen, press OK, scroll to multimedia and select camera.
2. Inside the camera app, press the Left Soft key to show options and define the desired settings.

Audio player

Before starting to use the Multimedia section, insert a microSD card with mp3 files on it.
1. Select the OK button to open Menu.
2. Select Audio Player and add music or go directly to the audio files in My Files. After selecting, the music will appear in audio player automatically

Turning ON/OFF

- To turn your phone on,
5. Press and hold
6. Enter your PIN and press OK if necessary.
7. When the setup wizard opens, customise your phone as desired by following the screen.
If the battery remains fully discharged or removed from the phone, the time and date will be reset.
To turn your phone off, press and hold

Making a call

1. In the device's homescreen, enter a phone number.
For an international call, do not forget to enter the country code.
2. Press to dial the number.
3. To end the call, press .

Answering a call

1. When a call comes in, press .
2. To end the call, press .

Adjusting the volume during a call

During a call, press the Navigation key UP to increase the volume and the Navigation key Down to decrease it.

Accessing all menus

1. From the homescreen, press the OK Key .
2. Use the Navigation Key to choose desired operation and press the OK Key to enter the selected operation.
3. You can exit a menu and return to standby mode by pressing the Right Soft Key (back) or the End Key.

Phonebook	Call History	Organizer
Multimedia	Messages	File Manager
Profiles	Audio player	Camera
Services	App Zone	Settings

Changing your ringtone and ringtone volume

1. From the homescreen, press the OK key.
2. Select Profiles.
3. Select the desired profile and select Options with the Left soft key.
4. Scroll down to select Settings and press the OK key.
5. Select Ring settings to change your ringtone.
Note that you need to load new ringtones to a micro SD card to use 'more ringtones'
6. To adjust ringtone volume, call volume, power on/off ringtone volume etc., (in Profiles- options – settings) scroll down to Adjust volume. Select the ringtone you want to adjust and adjust volume up and down with the navigation key (5).

Calling a recently dialed number

1. In the device's homescreen, press .
2. Scroll left or right to a call type.
3. Scroll up or down to a number or name.
4. Press the OK key to view details of the call or to dial the number.

Adding a new contact

1. From the home screen, select the OK key to access Menu and scroll up to select Contacts.
2. Press the Left soft key to open Options, then New.
3. Select the storage location.
4. Enter the contact information and press the Left soft key to save.

Creating an SMS


1. From the home screen, press the OK key and select Messages.
 2. Select Write Message and select the OK key to choose a recipient or type the phone number.
 3. Press the Navigation key Down to enter text.
 4. To switch between the input methods, press # and select an option.
 5. Type your text.
 6. Press the Left soft key to select Options, then Send.
- ABC, Abc, abc modes**
Press an appropriate alphanumeric key until the character you want appears on the display.
123 mode
Press an appropriate alphanumeric key to enter a number.
To use other features for text input

Install the SIM & micro SD cards & battery


SIM cards: carefully slide in your standard size (25mmx15mm) SIM card into the SIM slot 1 or 2 as shown in the diagram.

Micro SD: the Micro SD slot is smaller than the SIM slots. Open the micro SD slot by putting your thumb-nail into the slot and pushing gently up until it clicks, then hinge open the metal gate by putting your thumb nail under the bottom of the gate and lifting it open. Place your micro SD card in the molded slot, you will see that it can only fit the correct way up. Then close the gate onto the card, put your thumb-nail in the slot again and pull it gently down until it clicks.


1. Remove the bottom casing

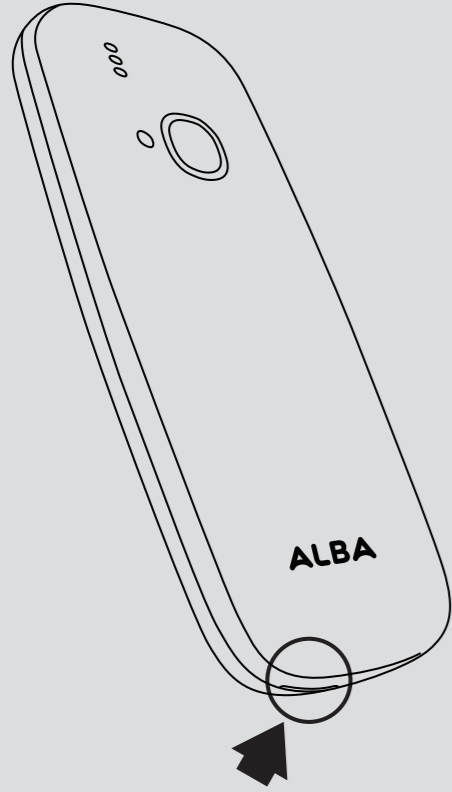


2. Remove the battery pack

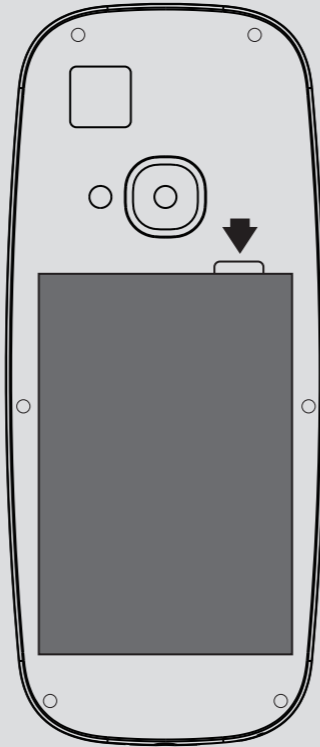

3. Insert the SIM cards and TF card

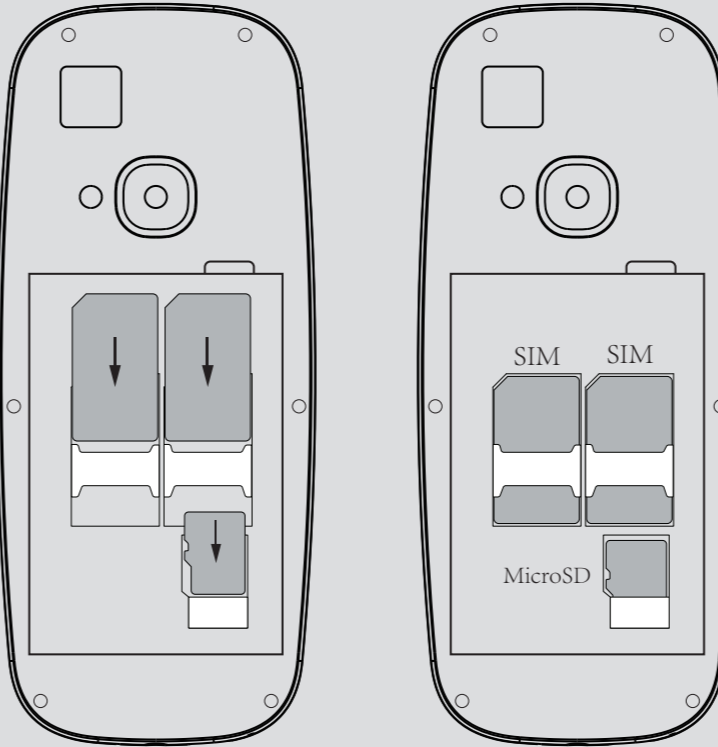

4. Put back the battery pack

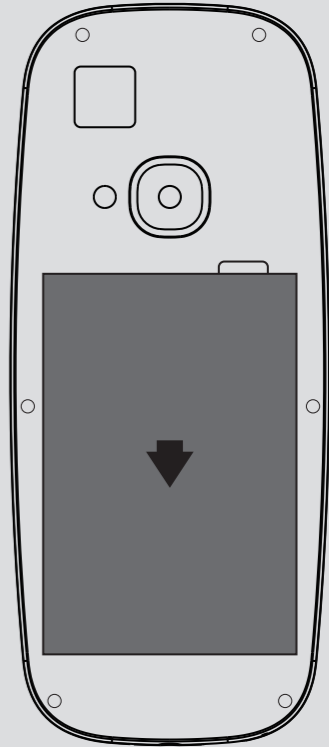

Argos declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

A copy of the declaration of conformity can be obtained from: Argos Ltd. 489-499 Avebury Boulevard Milton Keynes, MK9 2NW, UK

SAR value : Head Max:0.978W/Kg; Body Max:1.008W/Kg

Alba Phones Helpline

For detailed advice on this or any other issue concerning your Alba phone you can consult with the technical support helpline – 020 8068 1044



PN:116463

WMAN		
Frequency band	Maximum output power	
GSM B2/B3	26~ 32dBm	
GSM B5/B8	29~ 34dBm	
Bluetooth		
Bluetooth Version	Frequency Range	Avg. Power (dBm)
EDR	2.402~ 2.480GHz	-3.41 ~ -2.51dBm
BLE	2.402~ 2.480GHz	NA